

## Before Using the Product

Before using the product, please read this manual. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

### ■ Relevant manuals

Before using the product, please read the Safety Guidelines included with the base unit used, especially the following sections.

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

The product details are described in the following manual.

Please develop familiarity with the functions and performance of the product to handle the product correctly.

- MELSEC iQ-R Ethernet/CC-Link IE User's Manual (Startup)  
SH-081256ENG
- MELSEC iQ-R Ethernet User's Manual (Application)  
SH-081257ENG
- MELSEC iQ-R CC-Link IE Controller Network User's Manual (Application)  
SH-081258ENG
- MELSEC iQ-R CC-Link IE Field Network User's Manual (Application)  
SH-081259ENG

### ■ Manuels correspondants

*Avant d'utiliser ce produit, prière de lire les "Safety Guidelines" (directive de sécurité) fournies avec l'unité de base, en particulier dans les sections suivantes.*

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE

### ■ Packing list

Check that the following items are included in the package of the product.

Item	Quantity
Module	1
Before Using the Product (this manual)	1

### ■ Mounting modules

When installing the programmable controller in a control panel, fully consider its operability, maintainability, and environmental resistance.

Securely mount all the MELSEC iQ-R series modules used on the base unit.

For details on the mounting method, refer to the MELSEC iQ-R Module Configuration Manual.

### ■ Montage des modules

*Pour installer l'automate programmable dans un tableau de commande, prendre en compte tous les aspects d'opérabilité, de maintenabilité et de résistance à l'environnement.*

*Monter fermement sur l'unité de base tous les modules de la série MELSEC iQ-R à utiliser.*

*Pour le détail de la méthode de montage, voir le MELSEC iQ-R Module Configuration Manual (Manuel de configuration du module MELSEC iQ-R).*

### ■ Operating ambient temperature

Use the product within the range of 0 to 55°C.

### ■ Température ambiante de fonctionnement

*Ce produit doit être utilisé entre 0 et 55°C.*

### ■ Information and services

For further information and services, please consult your local Mitsubishi representative.