

Q Corresponding MELSECNET/H  
Network System

Reference Manual

**mitsubishi**

(Remote I/O network)

**Q series**  
**Q series**

Mitsubishi  
Programmable Controller

**MELSEC-Q**

<b>QJ71LP21</b>	<b>QJ71BR11</b>
<b>QJ71LP21-25</b>	<b>QJ72LP25-25</b>
<b>QJ71LP21S-25</b>	<b>QJ72LP25G</b>
<b>QJ71LP21G</b>	<b>QJ72LP25GE</b>
<b>QJ71LP21GE</b>	<b>QJ72BR15</b>



## • SAFETY PRECAUTIONS •

(Always read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The instructions given in this manual are concerned with this product. For the safety instructions of the programmable controller system, please read the CPU module user's manual.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the CAUTION level may lead to a serious consequence according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please store this manual in a safe place and make it accessible when required. Always forward it to the end user.

### [Design Precautions]

#### DANGER

- When the network develops a communication error, the station with the communication error will enter into the following status.  
Use the communication status data to form an interlock circuit in the sequence program that will operate the system on the safe side. Erroneous output or malfunctioning could cause accidents.
  - (1) The remote master station will hold the data from before the communication error.
  - (2) The remote I/O station turns off all outputs. The output module of the remote I/O station can clear/hold the output status at the time of error by using the remote I/O module parameters. As the parameters are set to "clear" by default, the output module turns off the outputs at the time of error. If it is required to hold the output in order to operate the system safely, set the parameters to "hold".
- If a coaxial cable is disconnected, this may destabilize the line, and a data link communication error may occur in multiple stations. Make sure to create an interlock circuit in the sequence program so that the system will operate safely even if the above error occurs. Failure to do so may result in a serious accident due to faulty output or malfunctions.

## [Design Precautions]

### DANGER

- When performing control operations to a programmable controller (modifying data) in operation by connecting GX Developer to the CPU module or connecting personal computers to the intelligent functional modules, configure an interlocking circuit in a sequence program so that the safety of the overall system is maintained. Also, before performing other control operations (program modifications and operating status modifications (status control)) on the programmable controller in operation, be sure to read the manual thoroughly and confirm the safety. Especially if the above mentioned control operations are performed from an external device to a remote programmable controller, problems arising on the programmable controller side may not be dealt with immediately due to abnormal data communication. Thus, in addition to configuring an interlocking circuit in a sequence program, determine how the system should handle data communication errors between the programmable controller CPU and external devices.

### CAUTION

- Always reset the CPU module after changing the parameters for the CPU module or the remote I/O module. If this is not done, data from before the change could cause malfunctioning.
- Do not bundle the control wires and communication cables with the main circuit or power wires, or install them close to each other. They should be installed at least 100 mm (3.94 in.) away from each other. Failure to do so may generate noise that may cause malfunctions.

## [Installation Precautions]

### CAUTION

- Use the programmable controller in the operating environment that meets the general specifications given in the CPU module used. Using this programmable controller in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- While pressing the installation lever located at the bottom of module, insert the module fixing tab into the fixing hole in the base unit until it stops. Then, securely mount the module with the fixing hole as a supporting point.  
Incorrect loading of the module can cause a malfunction, failure or drop.  
When using the programmable controller in the environment of much vibration, tighten the module with a screw.  
Tighten the screw in the specified torque range.  
Undertightening can cause a drop, short circuit or malfunction.  
Overtightening can cause a drop, short circuit or malfunction due to damage to the screw or module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module. Not doing so could result in damage to the product.  
For remote I/O stations of function version D or later, online module change can be performed. However, the modules which can be replaced online are limited, and replacement procedures are determined for each module. For details, refer to the section of online module replacement in this manual.

## [Installation Precautions]

### CAUTION

- Do not directly touch the module's conductive parts or electronic components. Touching the conductive parts could cause an operation failure or give damage to the module.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body, etc. Not doing so can cause the module to fail or malfunction.

## [Wiring Precautions]

### DANGER

- Completely turn off the externally supplied power used in the system when placing wiring. Not completely turning off all power could result in electric shock or damage to the product.

### CAUTION

- Be sure to ground the FG terminals independently for programmable controller by class D (class 3) or higher. Failure to do so may cause malfunctions.
- When connecting cables to the terminal block for external power supply, check the rated voltage and terminal layout of the product for correct wiring. Connecting a cable to power supply of different rating or incorrect wiring may cause a fire or fault.
- Tighten the terminal screws with the specified torque. Loose tightening may lead to a short circuit, fire or malfunction.
- Solder coaxial cable connectors properly. Incomplete soldering may result in malfunctioning.
- Be sure there are no foreign substances such as sawdust or wiring debris inside the module. Such debris could cause fires, damage, or erroneous operation.
- The module has an ingress prevention label on its top to prevent foreign matter, such as wire offcuts, from entering the module during wiring. Do not peel this label during wiring. Before starting system operation, be sure to peel this label because of heat dissipation.
- Make sure to place the communication and power cables to be connected to the module in a duct or fasten them using a clamp. If the cables are not placed in a duct or not fastened with a clamp, their positions may become unstable and may move, or they may be pulled inadvertently. This may damage the module and the cables or cause the module to malfunction because of faulty cable connections.
- When disconnecting the communication and power cables from the module, do not pull the cables by hand. When disconnecting a cable with a connector, hold the connector to the module by hand and pull it out to remove the cable. When disconnecting a cable connected to a terminal block, loosen the screws on the terminal block first before removing the cable. If a cable is pulled while being connected to the module, it may cause the module to malfunction or damage the module and cables.
- Install our programmable controller in a control panel for use. Wire the main power supply to the power supply module installed in a control panel through a distribution terminal block. Furthermore, the wiring and replacement of a power supply module have to be performed by a maintenance worker who acquainted with shock protection. (For the wiring methods, refer to QCPU User's Manual (Hardware Design, Maintenance and Inspection).)

## [Setup and Maintenance Precautions]

### CAUTION

- Please read this manual thoroughly and confirm the safety enough before starting online operations (especially, program modifications, forced outputs, and operating status modifications), which are performed by connecting GX Developer via the MELSECNET/H network system to a CPU module running on another station. Performing incorrect online operations may damage the machinery or result in accidents.
- Never disassemble or modify the module. This may cause breakdowns, malfunctions, injuries or fire.
- Use any radio communication device such as a cellular phone or a PHS phone more than 25cm (9.85 inch) away in all directions of the programmable controller.  
Not doing so can cause a malfunction.
- Completely turn off the externally supplied power used in the system before mounting or removing the module. Failure to do so may damage the module or result in malfunctions.  
For the remote I/O network systems of function version D or later, online module change can be performed. However, the modules which can be replaced online are limited, and replacement procedures are determined for each module. For details, refer to the section of online module replacement in this manual.
- Do not install/remove the module to/from the base unit more than 50 times after the first use of the product. (IEC 61131-2 compliant)  
Failure to do so may cause malfunction.
- Do not touch the terminals while the power is on. This may cause breakdowns, malfunctions, injuries or fire.
- Be sure to shut off all phases of the external power supply used by the system before cleaning or retightening the terminal screw or module mounting screw.  
Not doing so may result in a failure or malfunction of the module.  
If the screw is too loose, it may cause a drop, short circuit or malfunction.  
Excessive tightening may cause damage to the screw and/or module, resulting in a drop, short circuit or malfunction.
- Before handling the module, always touch grounded metal, etc. to discharge static electricity from the human body.  
Not doing so may cause a failure or malfunction of the module.

## [Disposal Precautions]

### CAUTION

- When disposing of this product, treat it as industrial waste.

REVISIONS

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Oct., 2000	SH (NA) -080124-A	First printing
May., 2001	SH (NA) -080124-B	<p><b>Model addition</b></p> <p>QJ71LP21G, QJ72LP25G, QJ71LP21GE, QJ72LP25GE</p> <p><b>Correction</b></p> <p>Product Components, About The Generic Terms And Abbreviations, Chapter 1, Section 1.2, 2.4, 3.1.1, 3.1.2, 3.2.1, 3.2.2, 3.3.2, 4.2.1, 4.2.2, 4.8.2, Chapter 5, Section 5.1.5, 5.2.1, 6.1.2, 6.2.1, 6.3, 6.4, 7.1.1, 7.8, 8.1, 8.1.1, 8.1.4, 8.3.1, 8.3.2, Appendix 2, 3, 4, 5, Index</p> <p><b>Addition</b></p> <p>Section 8.2.6</p>
Apr., 2002	SH (NA) -080124-C	<p><b>Correction</b></p> <p>Section 1.2, 1.3, 2.3.1, 2.3.2, 2.3.3, 2.5, 3.1.1, 3.1.2, 3.2, 3.3.2, 4.2.1, 6.1.1, 6.4, Chapter 7, Section 8.4, Appendix 2, 3</p> <p><b>Changed item numbers</b></p> <p>Section 2.3 → Section 2.4, Section 2.4 → Section 2.5</p> <p><b>Addition</b></p> <p>Section 7.10</p>
Nov., 2002	SH (NA) -080124-D	<p><b>Model addition</b></p> <p>QJ71LP21S-25</p> <p><b>Correction</b></p> <p>SAFETY PRECAUTIONS, CONTENTS, Generic Terms And Abbreviations, Product Components, Section 1.1, 1.2, 3.1.1, 3.1.2, 4.1.2, 4.8.1, 4.8.2, 7.1.1, 8.1.4, Appendix 2, 3</p>
Apr., 2003	SH (NA) -080124-E	<p><b>Correction</b></p> <p>SAFETY PRECAUTIONS, About Manuals, Section 1.2, 2.1.2, 2.2.2, 2.3.2, 2.5, 3.1.1, 3.1.2, 3.2.2, 3.3.1, Chapter 5, Section 5.1.3, 5.1.5, 6.2, 6.3, 6.4, 6.5, 8.1, 8.2, 8.2.1, 8.2.5, 8.3.1</p>

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Jun., 2004	SH (NA) -080124-F	<p><b>Correction</b></p> <p>SAFETY PRECAUTIONS, Manuals, Generic Terms And Abbreviations, Section 1.2, 2.1.2, 2.2.2, 2.3.2, 2.4.2, 2.5, 3.1.1, 3.1.2, 3.1.3, 3.1.4, 3.2, 3.2.2, 4.2.2, 4.9.1, 4.10, 4.10.1, 4.10.2, 4.10.3, Chapter 5, Section 5.1.1, 5.2, 5.2.1, 6.4, 6.5, Chapter 7, Section 8.1, 8.1.1, 8.1.2, 8.1.3, 8.1.4, 8.2.1, 8.2.3, 8.2.5, 8.2.7, 8.3.1, 8.3.2, Appendix 2, 3</p> <p><b>Addition</b></p> <p>Section 1.4, 2.4, 2.7, 3.3.3, 3.3.4, 7.11, 7.12, 8.2.7, Appendix 7</p> <p><b>Changed section No.</b></p> <p>Section 2.4 → Section 2.5, Section 2.5 → Section 2.6</p>
Mar., 2005	SH (NA) -080124-G	<p><b>Correction</b></p> <p>Safety Precautions, Conformation to the EMC Directive and Low Voltage Instruction, Product Configuration, Section 1.1, 1.2, 2.6, 2.7, 3.1.1, 3.1.2, 3.1.4, 3.2.2, 3.3.2, 4.2.1, 4.2.2, 4.3, 4.4, 4.8.1, 4.8.2, 4.9.1, 4.10.1, 5.1.4, 6.1.1, 6.2, 6.2.2, 6.3, 7.4, 8.1, 8.1.2, 8.1.3, 8.2, 8.2.1, 8.3.1, 8.3.2, Appendix 2, 3, 4, 5, 7</p> <p><b>Addition</b></p> <p>Section 8.2.8</p>
Sep., 2005	SH (NA) -080124-H	<p><b>Correction</b></p> <p>Generic Terms And Abbreviations, Section 1.2, Section 2.5, Section 3.2, 3.2.2, 3.3.2, Section 5.1.5, 5.2.1, Section 6.3, 6.5, Section 7.12, Section 8.2, 8.2.5, 8.3.1, 8.3.2, Appendix 3, 4, 5</p>
May, 2006	SH (NA) -080124-I	<p><b>Correction</b></p> <p>Generic Terms And Abbreviations, Section 1.1, Chapter 2, Section 2.2.1, 2.5, 3.1.1, 3.1.4, 4.2.1, 4.2.2, 5.1.3, 5.1.4, 5.1.5, 6.3, 6.4, 7.1.1, 8.1.2, 8.3.2, Appendix 5</p> <p><b>Addition</b></p> <p>Section 2.5.1, 2.5.2</p>
Sep., 2006	SH (NA) -080124-J	<p><b>Correction</b></p> <p>Section 2.1.2, 2.2.2, 2.3.2, 2.4.2, 4.2.1, 4.2.2, 8.3.2</p>

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Nov., 2006	SH (NA) -080124-K	<p>[Addition]</p> <p>SAFETY PRECAUTIONS</p> <p>[Correction]</p> <p>Section 2.5.2, 3.2.2, 4.2.1, 4.2.2, 4.3, 4.8.1, 4.8.2, 5.1.5, 8.1.2, 8.2, 8.2.4, 8.3.2, Appendix 2, 3, 5</p> <p>[Sections added]</p> <p>Section 8.2.8, 8.4, 8.5</p> <p>[Changed section No.]</p> <p>Section 8.2.8 → Section 8.2.9, Section 8.4 → Section 8.6</p>
Oct., 2007	SH (NA) -080124-L	<p>[Addition]</p> <p>Chapter 1, Section 2.1.2, 2.2.2, 2.3.2, 2.4.2, 2.5.1, 2.5.2, 2.7, 3.3.1, 3.3.2, 4.8.2, Chapter 5, Section 5.1.4, 5.1.5, 8.2.1, 8.3.1, Appendix 2, 4, 5</p> <p>[Correction]</p> <p>SAFETY PRECAUTIONS , Generic Terms And Abbreviations, Section 2.2.1, 2.3.1, 2.4.1, 4.2.1, 4.7.1, 4.7.2, 4.7.3, 4.9.1, 5.1.1, 5.1.3, 6.1.1, 6.2, 6.3, 6.5, 6.6, 7.1.1, 7.12, 8.1, Appendix 3</p> <p>[Sections added]</p> <p>DEFINITIONS OF TERMINOLOGY, Section 6.4</p> <p>[Changed section No.]</p> <p>Section 6.4 to 6.5 → Section 6.5 to 6.6, Appendix 7 → Appendix 6</p>
Feb., 2008	SH (NA)-080124-M	<p>[Correction]</p> <p>Generic Terms And Abbreviations, Section 1.2, 2.1.2, 2.2.2, 2.3.2, 2.4.2, 2.5, 3.2.2, 3.3.2, 4.7, 4.8, 4.9.1, 5.1.1, 5.1.4 to 5.1.6, 5.2.1, 6.1.1, 6.5, 6.6, 7.1.1, 7.8, 7.11.4, 8.1, 8.3, 8.4, Appendix 2, 3, 5</p>
Sep., 2008	SH (NA)-080124-N	<p>[Correction]</p> <p>SAFETY PRECAUTIONS, Compliance with the EMC and Low Voltage Directives, Generic Terms And Abbreviations, DEFINITIONS OF TERMINOLOGY, Chapter1, Section 1.2, 1.3, 2.1.2, 2.1.3, 2.2, 2.2.1, 2.2.3, 2.3, 2.4.2, 2.4.3, 2.5.1, 2.6, 3.1.4, 3.2, 3.3.2, 3.3.4, 4.2.1, 4.2.2, 4.8, 4.9.1, Chapter 5, Section 5.1.3 to 5.1.5, 6.1.2, 6.5, 6.6, Chapter 7, 7.1.1, 7.10, 7.11, 7.11.1, 7.11.3, 7.11.4, Chapter 8, 8.1, 8.2, 8.2.5, 8.2.7, 8.3.1, 8.3.2, Appendix 2 to 6</p>

Japanese Manual Version SH-080123-R

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2000 MITSUBISHI ELECTRIC CORPORATION

## INTRODUCTION

Thank you for purchasing the MELSEC-Q series programmable controller.  
Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Q series programmable controller you have purchased, so as to ensure correct use. Please forward a copy of this manual to the end user.

## CONTENTS

SAFETY PRECAUTIONS.....	A- 1
REVISIONS .....	A- 5
CONTENTS.....	A- 8
About Manual .....	A-13
Compliance with the EMC and Low Voltage Directives.....	A-13
Generic Terms And Abbreviations.....	A-14
DEFINITIONS OF TERMINOLOGY.....	A-16
Product Components .....	A-17

<b>1 OVERVIEW</b>	<b>1- 1 to 1-11</b>
-------------------	---------------------

1.1 Overview.....	1- 2
1.2 Features .....	1- 3
1.3 Abbreviations Used in the Text, Tables and Diagrams of This Manual.....	1-10
1.4 Functions Added/Changed with Upgrade to Function Version D.....	1-11

<b>2 SYSTEM CONFIGURATION</b>	<b>2- 1 to 2-22</b>
-------------------------------	---------------------

2.1 Single Remote I/O Networks .....	2- 1
2.1.1 Configuration .....	2- 1
2.1.2 Setting items.....	2- 2
2.1.3 Available device ranges.....	2- 3
2.2 Multiple Remote I/O Network (Process CPU).....	2- 4
2.2.1 Configuration .....	2- 4
2.2.2 Setting items.....	2- 5
2.2.3 Available device ranges.....	2- 6
2.3 Multiplexed Remote I/O Network for Redundant System (Redundant CPU) .....	2- 7
2.3.1 Configuration .....	2- 7
2.3.2 Setting items.....	2- 8
2.3.3 Available device ranges.....	2- 9
2.4 Multiple Remote I/O Network.....	2-10
2.4.1 Configuration .....	2-10
2.4.2 Setting items.....	2-11
2.4.3 Available device ranges.....	2-12
2.5 Applicable Systems.....	2-13
2.5.1 Applicable systems for remote master stations .....	2-13
2.5.2 Applicable systems for remote I/O stations.....	2-15
2.6 When Using a Multiple CPU System.....	2-18
2.7 Checking Function Version and Serial No. ....	2-21

3.1 Performance Specifications .....	3- 1
3.1.1 Optical loop system performance specifications .....	3- 1
3.1.2 Coaxial cable system performance specifications .....	3- 3
3.1.3 Optical fiber cable specifications .....	3- 4
3.1.4 Coaxial cable specifications.....	3- 5
3.2 Function Specifications .....	3- 8
3.2.1 Cyclic transmission function (Periodic communication).....	3- 9
(1) Communicating with I/O modules .....	3- 9
(2) Communicating with intelligent function modules.....	3-10
3.2.2 RAS functions.....	3-15
(1) Output reset function for communication errors .....	3-15
(2) Hardware error time CPU operation mode setting .....	3-15
(3) Automatic return function.....	3-16
(4) Loopback function (optical loop system).....	3-17
(5) Station detach function (coaxial bus system) .....	3-19
(6) Transient transmission enabled even at CPU module error .....	3-20
(7) Checking the transient transmission abnormal detection time .....	3-21
(8) Diagnostic function .....	3-22
(9) Redundant power supply on a remote I/O station .....	3-23
(10) Online module change on a remote I/O station.....	3-26
3.3 Link Data Send/Receive Processing Time Specifications.....	3-32
3.3.1 Link data send/receive processing .....	3-32
3.3.2 Transmission delay time .....	3-36
3.3.3 Switching time from the multiplexed remote master station to the multiplexed remote sub-master station in a multiplexed remote I/O network.....	3-55
3.3.4 Output holding time during system switching in the multiplexed remote I/O network for redundant system.....	3-56

4.1 Procedures Before Starting the Operation.....	4- 1
4.2 Network Module Names and Settings.....	4- 2
4.2.1 QJ71LP21, QJ71LP21-25, QJ71LP21G, QJ71LP21GE, QJ71BR11 (Remote master station)...	4- 2
4.2.2 QJ72LP25-25, QJ72LP25G, QJ72LP25GE, QJ72BR15 .....	4- 5
4.3 Installing and Uninstalling the Module.....	4- 8
4.4 Stopping the CPU (Unintentional Output Prevention) .....	4-10
4.5 Checking the Input Power Supply Voltage.....	4-10
4.6 Powering On.....	4-10
4.6.1 Checking the on status of the POWER LED of the power supply module .....	4-10
4.6.2 Checking the on status of the RUN LED of the network module .....	4-10
4.7 Standalone Check of the Network Module (Offline Tests) .....	4-11
4.7.1 Self-loopback test.....	4-12
4.7.2 Internal self-loopback test .....	4-14
4.7.3 Hardware test .....	4-16
4.8 Cable Connections.....	4-18
4.8.1 Optical loop system.....	4-18
4.8.2 Coaxial bus system .....	4-20

4.9 Offline Tests from GX Developer.....	4-25
4.9.1 Forward loop/reverse loop test (Remote master station only) .....	4-25
4.10 Network Diagnostics from GX Developer (Online Tests) .....	4-29
4.10.1 Loop test (optical loop system only) .....	4-30
4.10.2 Setup confirmation test .....	4-31
4.10.3 Station order check test (optical loop system only) .....	4-32
4.10.4 Communication test .....	4-33

<b>5 PARAMETER SETTINGS</b>	<b>5- 1 to 5-37</b>
-----------------------------	---------------------

5.1 Remote Master Station Parameter Setting .....	5- 5
5.1.1 Setting the number of modules (Network type) .....	5- 5
5.1.2 Network settings.....	5- 6
(1) Starting I/O No. ....	5- 6
(2) Network No. ....	5- 6
(3) Total stations.....	5- 6
(4) Group No. (Available for multiplexed remote master/sub-master station only) .....	5- 7
(5) Mode .....	5- 7
(6) Parameter setting example .....	5- 8
5.1.3 Common parameter .....	5- 9
(1) LX/LY setting.....	5- 9
(2) LB/LW setting.....	5-12
(3) Specify reserved station .....	5-13
(4) Remote sub-master station .....	5-13
5.1.4 Supplementary settings .....	5-15
5.1.5 Refresh parameters .....	5-19
5.1.6 Valid Module During Other Station Access .....	5-31
5.1.7 Redundant settings .....	5-32
5.2 Remote I/O Station Parameter Settings.....	5-33
5.2.1 Remote I/O station possible parameter settings .....	5-33

<b>6 PROGRAMMING</b>	<b>6- 1 to 6-40</b>
----------------------	---------------------

6.1 Programming Precautions .....	6- 1
6.1.1 Interlock related signals .....	6- 1
6.1.2 Program example.....	6- 4
6.2 Cyclic Transmission .....	6- 6
6.2.1 32-bit data guarantee .....	6- 6
6.2.2 Block guarantee of cyclic data per station.....	6- 7
6.3 Communications with I/O Modules.....	6- 8
6.4 Communications with Intelligent Function Modules.....	6- 9
6.4.1 Program example when using GX Configurator .....	6-10
6.4.2 Program example when not using GX Configurator .....	6-14
6.5 Link Dedicated Instruction List.....	6-17
6.6 Using the Link Special Relays (SB)/ Link Special Registers (SW) .....	6-22

<b>7 APPLICATION FUNCTIONS</b>	<b>7- 1 to 7-42</b>
--------------------------------	---------------------

7.1 Transient Transmission Function (Non-Periodical Communication).....	7- 2
---	------

7.1.1 Link Dedicated instruction.....	7- 3
(1) Reading/writing remote I/O station intelligent function module buffer memory (Z(P).REMFR/ Z(P).REMTO).....	7- 3
7.2 Remote I/O Station System Monitor.....	7- 9
7.3 Device Test for Remote I/O Station.....	7-10
7.4 Multiplex Transmission Function (Optical Loop System).....	7-12
7.5 Return Sequence Station Number Setting Function.....	7-13
7.6 Reserved Station Function.....	7-13
7.7 Interrupt Settings.....	7-14
7.8 I/O Assignment Function.....	7-15
7.9 Stopping/Restarting the Cyclic Transmission and Stopping Link Refreshing (Network Test).....	7-16
7.10 Multiplexed remote master function (Process CPU).....	7-17
7.11 Multiplexed remote master function for redundant system (Redundant CPU).....	7-32
7.11.1 Backup function of master operation on system switching between control system and standby system.....	7-33
7.11.2 Master operation by the station that has started up as the control system.....	7-34
7.11.3 System switching request function of control system.....	7-35
7.11.4 Access function by specifying the control system or standby system.....	7-38
7.12 Remote password.....	7-39

<b>8 TROUBLESHOOTING</b>	<b>8- 1 to 8-59</b>
--------------------------	---------------------

8.1 Network Diagnostics (Network Monitor).....	8- 2
8.1.1 Host information.....	8- 5
8.1.2 Other station information.....	8- 7
8.1.3 Network monitor details.....	8- 9
8.1.4 Error history monitor.....	8-12
8.2 Troubleshooting.....	8-15
8.2.1 Items to be checked first.....	8-21
8.2.2 Unable to perform data link in the entire system.....	8-21
8.2.3 Data link was disabled by resetting or powering off a station.....	8-22
8.2.4 Unable to perform data link of a specific station.....	8-22
8.2.5 Transmitted/received data are abnormal.....	8-23
8.2.6 Link Dedicated instruction execution is not complete.....	8-23
8.2.7 Multiplexed remote I/O network for redundant system does not operate normally.....	8-24
8.2.8 Unable to detect a minor error (continue error) on a remote I/O station.....	8-24
8.2.9 Checking online for incorrect optical fiber cable connection.....	8-25
8.3 Error Codes.....	8-27
8.3.1 MELSECNET/H error code list.....	8-27
8.3.2 Error codes detected on remote I/O stations and equivalent to CPU module error codes.....	8-39
8.4 Canceling a Minor Error (Continue Error) on a Remote I/O Station.....	8-50
8.4.1 Canceling a specific remote I/O station error.....	8-51
8.4.2 Canceling errors of all remote I/O stations.....	8-52
8.5 Procedure for Replacing a Normally Operating Redundant Power Supply Module.....	8-57
8.6 H/W Information.....	8-58

APPENDIX

App- 1 to App-53

Appendix 1 Precautions when Changing Over from a MELSECNET/10 Remote I/O Network to  
a MELSECNET/H Remote I/O Network.....App- 1

Appendix 2 Link Special Relay (SB) List .....App- 3

Appendix 3 Link Special Register (SW) List.....App-13

Appendix 4 Special Relay (SM) for Remote I/O Modules List.....App-32

Appendix 5 Special Register (SD) for Remote I/O Module List.....App-35

Appendix 6 External Dimensions.....App-49

INDEX

Index- 1 to Index- 2

## About Manual

The following manual is also related to this product.  
In necessary, order it by quoting the details in the table below.

### Related Manual

Manual Name	Manual Number (Model Code)
Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network) This manual describes the specifications for a MELSECNET/H network system for PLC to PLC network. It explains the procedures and settings up to operation, setting the parameters, programming and troubleshooting. (Sold separately)	SH-080049 (13JF92)

## Compliance with the EMC and Low Voltage Directives

### (1) For programmable controller system

To configure a system meeting the requirements of the EMC and Low Voltage Directives when incorporating the Mitsubishi programmable controller (EMC and Low Voltage Directives compliant) into other machinery or equipment, refer to Chapter 9 "EMC AND LOW VOLTAGE DIRECTIVES" of the QCPU User's Manual (Hardware Design, Maintenance and Inspection).

The CE mark, indicating compliance with the EMC and Low Voltage Directives, is printed on the rating plate of the programmable controller.

### (2) For the product

For the compliance of this product with the EMC and Low Voltage Directives, refer to Section 9.1.3 "Cables" in Chapter 9 "EMC AND LOW VOLTAGE DIRECTIVES" of the QCPU User's Manual (Hardware Design, Maintenance and Inspection).

## Generic Terms And Abbreviations

Generic term/abbreviation	Description of generic term/abbreviation
QJ71LP21	Abbreviation for QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ71LP21G, QJ71LP21GE MELSECNET/H network module. However, especially in cases to show different models, QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ71LP21G and QJ71LP21GE are printed.
QJ71BR11	Abbreviation for QJ71BR11 MELSECNET/H network module.
QJ72LP25	Abbreviation for QJ72LP25-25, QJ72LP25G, QJ72LP25GE MELSECNET/H network module. However, especially in cases to show different models, QJ72LP25-25, QJ72LP25G and QJ72LP25GE are printed.
QJ72BR15	Abbreviation for QJ72BR15 MELSECNET/H network module.
Master module	General term for QJ71LP21 and QJ71BR11.
Remote I/O module	General term for QJ72LP25 and QJ72BR15.
Network module	General term for master module and remote I/O module.
Ethernet module	Abbreviation for QJ71E71-100, QJ71E71-B5, and QJ71E71-B2 Ethernet interface modules.
Serial communication module	Abbreviation for QJ71C24N, QJ71C24N-R2, QJ71C24N-R4, QJ71C24, and QJ71C24-R2 serial communication modules.
CC-Link IE controller network module	Abbreviation for the QJ71GP21-SX or QJ71GP21S-SX CC-Link IE controller network module.
MELSECNET/H	Abbreviation for Q series MELSECNET/H network system.
MELSECNET/10	Abbreviation for AnU series MELSECNET/10 network system and QnA/Q4AR series MELSECNET/10 network system
QCPU	Generic term for Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q02PHCPU, Q06PHCPU, Q12PHCPU, Q25PHCPU, Q12PRHCPU, Q25PRHCPU, Q02UCPU, Q03UDCPU, Q04UDHCPU, Q06UDHCPU, Q13UDHCPU, Q26UDHCPU, Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q13UDEHCPU, and Q26UDEHCPU modules.
Basic model QCPU	Generic term for Q00JCPU, Q00CPU, and Q01CPU modules.
High Performance model QCPU	Generic term for Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, and Q25HCPU modules.
Process CPU	Generic term for Q02PHCPU, Q06PHCPU, Q12PHCPU, and Q25PHCPU modules. (Indicated as QnPHCPU in the tables).
Redundant CPU	Generic term for Q12PRHCPU and Q25PRHCPU modules. (Indicated as QnPRHCPU in the tables)
Universal model QCPU	Generic term for Q02UCPU, Q03UDCPU, Q04UDHCPU, Q06UDHCPU, Q13UDHCPU, Q26UDHCPU, Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q13UDEHCPU, and Q26UDEHCPU modules.
Built-in Ethernet port QCPU	Generic term for Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q13UDEHCPU, and Q26UDEHCPU modules.
Safety CPU	Generic term for QS001CPU module.
QnACPU	Generic term for MELSEC-QnA series CPU modules.
ACPU	Generic term for MELSEC-A series CPU modules.
AnUCPU	Generic term for MELSEC-A series A2UCPU, A2UCPU-S1, A3UCPU, A4UCPU, A2USCPU, A2USCPU-S1, and A2USHCPU-S1 CPU modules.
Q3□B	Generic term for Q33B, Q35B, Q38B and Q312B main base units.
Q3□SB	Generic term for Q32SB, Q33SB and Q35SB slim type main base units.
Q3□RB	Generic term for Q38RB main base units for the redundant power supply system.
Q5□B	Generic term for Q52B and Q55B extension base units.

Generic term/abbreviation	Description of generic term/abbreviation
Q6□B	Generic term for Q63B, Q65B, Q68B and Q612B extension base units.
Q6□RB	Generic term for Q68RB extension base units for the redundant power supply system.
Q6□WRB	Generic term for Q65WRB redundant type extension base units.
QA1S6□B	Generic term for QA1S65B and QA1S68B extension base units.
Q6□P	Generic term for Q61P, Q61P-A1, Q61P-A2, Q62P, Q63P, Q64P, and Q64PN power supply modules.
Q6□RP	Generic term for Q61P, Q63RP and Q64RP power supply modules for the redundant power supply system.
Redundant power supply module	
GX Developer	Generic product name for SWnD5C-GPPW-E, SWnD5C-GPPW-EA, SWnD5C-GPPW-EV, and SWnD5C-GPPW-EVA. ("n" means version 4 or later.) "-A" and "-V" mean "volume license product" and "version-upgrade product" respectively.
GX Configurator	Abbreviation for GX Configurator software package.
REMFR	Abbreviation for Z.REMFR or ZP.REMFR.
REMTO	Abbreviation for Z.REMTO or ZP.REMTO.
Tracking cable	Abbreviation for QC10TR and QC30TR tracking cables.

## DEFINITIONS OF TERMINOLOGY

Term	Description
Cyclic transmission	Function by which data communications are performed periodically between a remote master station and remote I/O stations using link devices (LB/LW/LX/LY) of network modules.
Transient transmission	This function allows communication with another station's programmable controller when a request is made with a link dedicated instruction or from GX Developer. Communications can be made with programmable controllers on the same or other networks.
Link dedicated instruction	Dedicated instruction used for transient transmission.
RAS	Abbreviation for Reliability, Availability, and Serviceability. This term is used to express the overall usability of automation systems.
Remote master station	Only one station that controls the network to which it is connected. Each station's send range for cyclic transmission is assigned to the remote master station.
Remote I/O station	Station that performs cyclic transmission according to the range assignment of the remote master station.
Reserved station	Station that is not actually connected to the network. It must be included in the total number of stations in the network, since it is to be connected in the future.
Relay station	Station that relays transient transmission data to another network. Link device data of a network module are transferred to another network module via this station. Multiple network modules are connected to one programmable controller.
Reconnection	Processing of restarting data link when a faulty station becomes normal.
Disconnection	Processing of stopping data link when a data link error occurs.
Device	Devices (X, Y, M, D, etc.) that are contained in a CPU module.
Link Device	Devices (LB/LW/LX/LY) that are contained in a network module.
Link scan time	Time required for data of each station to be sent in order and to make one rotation in the network. The link scan time changes depending on the data volume or transient transmission request.
Link refresh	On the remote master station, data are transferred between the master module's link devices and the CPU module's devices. Link refresh means this processing. Link refresh is performed in "END processing" of the sequence scan of the CPU module.
I/O refresh	On a remote I/O station, data are transferred between remote I/O module's link devices and the following devices. I/O refresh means this processing. <ul style="list-style-type: none"> <li>• I/O module's devices</li> <li>• Intelligent function module's devices</li> </ul>
Automatic refresh	On a remote I/O station, data are transferred between remote I/O module's link devices and intelligent function module's devices. Automatic refresh means this processing.
Buffer memory	Memory area in an intelligent function module, in which data are temporarily stored. The network module does not have any buffer memory area that is offered to the user.
Baton pass	A control mechanism in which transmission right (token) is passed around the network for data transmission.
Group No.	Number that is assigned for transient transmission to any given stations. By specifying a group of stations as transient transmission target, data can be sent to the stations of the same group No.

Product Components

Model name	Part name	Quantity
QJ71LP21	QJ71LP21 MELSECNET/H Network Module (optical loop type)	1
QJ71LP21-25	QJ71LP21-25 MELSECNET/H Network Module (optical loop type)	1
QJ71LP21S-25	QJ71LP21S-25 MELSECNET/H Network Module (optical loop type, with external power supply function)	1
QJ71LP21G	QJ71LP21G MELSECNET/H Network Module (optical loop type)	1
QJ71LP21GE	QJ71LP21GE MELSECNET/H Network Module (optical loop type)	1
QJ71BR11	QJ71BR11 MELSECNET/H Network Module (coaxial bus type)	1
	F-type connector (A6RCON-F)	1
QJ72LP25-25	QJ72LP25-25 MELSECNET/H Network Module (optical loop type)	1
QJ72LP25G	QJ72LP25G MELSECNET/H Network Module (optical loop type)	1
QJ72LP25GE	QJ72LP25GE MELSECNET/H Network Module (optical loop type)	1
QJ72BR15	QJ72BR15 MELSECNET/H Network Module (coaxial cable bus type)	1
	F-type connector (A6RCON-F)	1

**REMARKS**

For the coaxial bus system, terminal resistors (75 Ω) are required in the network terminal stations.

Terminal resistors are not included with the QJ71BR11, QJ72BR15; they must be purchased separately.

For a list of the model and how to use the terminal resistors, refer to Section 4.8.2.

## 1 OVERVIEW

1

The MELSECNET/H system includes the following 2 types of networks:

- 1) PLC to PLC network for communications between a control station and normal stations
- 2) Remote I/O network for communications between a remote master station and remote I/O stations

This is the manual to read when building a remote I/O network for MELSECNET/H systems (hereinafter referred to as MELSECNET/H). For building a MELSECNET/H PLC to PLC network, please refer to the Q Corresponding MELSECNET/H Network System Reference Manual. (PLC to PLC network) (SH-080049)

**POINT**

The Basic model QCPU and safety CPU cannot configure a remote I/O network in a MELSECNET/H network system.

**REMARKS**

- (1) The previous network, called MELSECNET/10H is now called MELSECNET/H.
- (2) A network module installed on the remote master station is referred to as a master module.  
A network module installed on a remote I/O station is referred to as a remote I/O module.

1.1 Overview


The MELSECNET/H remote I/O network system has more functionality and capacity than the former network system, MELSECNET/10 network system (hereafter referred to as MELSECNET/10).

As the MELSECNET/H remote I/O network adopts the same module mounting method as the usual one (mounting I/O modules and intelligent function modules onto the main and extension base units), each module mounted on the remote I/O stations can be handled in the similar way as the basic one.

In addition, the usability of the MELSECNET/10 remote I/O network has been further enhanced so that networks can be easily configured for factory automation systems. For the optical loop system in the MELSECNET/H remote I/O network, the communication speed can be set to 25 Mbps or 10 Mbps.

	Network system	Communication speed
MELSECNET/H	Optical loop *1	25 Mbps
	Optical loop, coaxial cable	10 Mbps

\*1: QJ71LP21-25, QJ71LP21S-25, and QJ72LP25-25 only

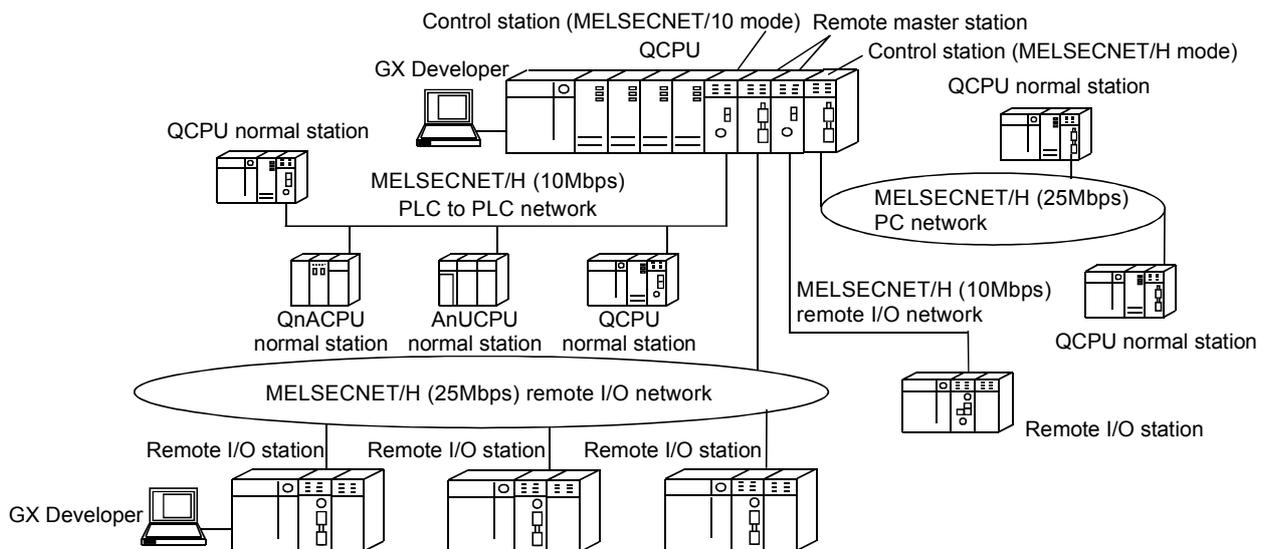

POINT
(1) Select QCPUs for MELSECNET/H remote I/O networks.
(2) Remote I/O networks and PLC to PLC networks cannot be mixed on the same MELSECNET/H network. Always build separate networks.
(3) Only MELSECNET/H network modules can be connected to a MELSECNET/H remote I/O network. Any MELSECNET/10 network modules (AJ72LP25, A1SJ72QLP25, etc.) are not connectable.

The following table shows the types of networks the CPU modules can be connected to.

CPU module	Type of networks that can be used with CPU	Network to be connected			
		MELSECNET/10		MELSECNET/H	
		PLC to PLC network	Remote I/O network	PLC to PLC network	Remote I/O network
QCPU	MELSECNET/H (10 Mbps)	○ (MELSECNET/10 mode)	×	○ (MELSECNET/H mode, MELSECNET/H Extended mode)	○
	MELSECNET/H (25 Mbps)	×			
AnUCPU	MELSECNET/10	○	○	×	×
QnACPU	MELSECNET/10				

○: Can be used ×: Cannot be used

## 1.2 Features

The MELSECNET/H remote I/O network has the following features.


### (1) Realization of a high-speed communication system

- (a) High-speed data communication at 10 Mbps/25 Mbps is possible. (25Mbps is available for only the optical loop type QJ71LP21-25, QJ71LP21S-25 and QJ72LP25-25.)

### (2) Large-scale and flexible system configuration

- (a) The link device has a larger capacity: 16384 points for the link relay (LB), 16384 points for the link register (LW), and 8192 points for the link inputs (LX)/link outputs (LY). (Refer to Section 2.1.3, "Available device range settings.")
- (b) A maximum of 4096 I/O points can be set for each remote I/O station. The link points between a remote master station and a remote I/O station can be set up to 1600 bytes. The link points of up to 2000 bytes can be set between a master station and a sub-master station on a multiplexed remote I/O network.
- (c) Either of the following systems can be chosen: the optical loop system which allows a long station-to-station distance and total distance (up to 30 km (98430 ft.)) and is resistant to noise, or the coaxial bus system (maximum cable distance of 500 m (1640.5 ft.)) which can be wired easily. (Refer to Section 3.1, "Performance Specifications.")


- (d) The following functions facilitate network connection:
- 1) Any station to be connected in the future can be specified as a reserved station.  
Specifying a station not actually connected as a reserved station prevents a communication error. (Refer to Section 5.1.3 "Common parameter.")
  - 2) It is not necessary to connect stations in order of the station Nos. in the network. (Refer to Section 4.2.1, 4.2.2.)
- (e) The parameters can be written to remote I/O modules using GX Developer in the same way as to CPU modules.  
The parameters of the remote I/O module can be used to change the detailed settings (response time, error time output mode) for I/O modules on the remote I/O station, intelligent function module switch settings and I/O assignments, and remote password settings.  
(Refer to Section 5.2 "Remote I/O Station Parameter Settings".)
- (f) Setting up a master station ( $DM_R$ ) and a sub-master station ( $DSM_R$ ) on the multiplexed remote I/O network allows the sub-master station to take over the control of remote I/O stations (R) in case of the master station's failure. (The Process CPU should be used for the multiplexed remote master station and sub-master station.)  
By making a parameter setting, the multiplexed remote sub-master station can continue the control of the remote I/O stations even if the master station has recovered to normal and rejoined to the system. (Setting for the recovered master station to control the remote I/O stations is also available.)  
(Refer to Section 7.10 "Multiplex Remote Master Function (Process CPU)".)

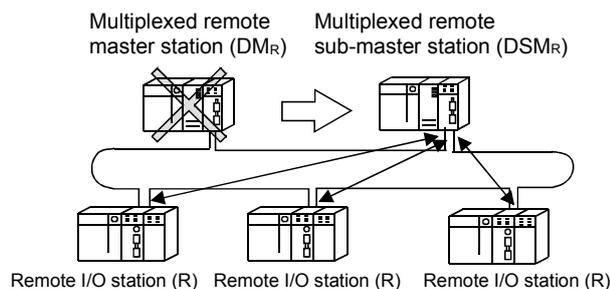

- (g) The redundant system uses the multiplex remote master function to control I/O modules and intelligent function modules. (The Redundant CPU should be used in the redundant system.)

If the multiplexed master station (control system) fails, the multiplex remote master function will switch the master station from "control system" to "standby system". At this time, the multiplexed remote sub-master station is switched from "standby" to "control", continuing the remote I/O control. The sub-master station (control system) that is controlling the remote I/O stations will keep its control even if the master station (standby system) has returned to normal status.

(Refer to Section 7.11 "Multiplex Remote Master Function for Redundant System (Redundant CPU)".)

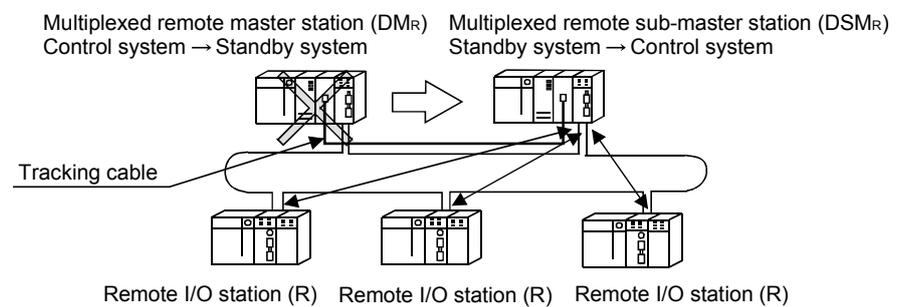

- (h) A maximum of 7 extension base units can be connected to the remote I/O module (eight base units including the main base unit), allowing the installation of up to 64 modules.


The maximum overall length of extension cables is 13.2m, ensuring a flexible layout of extension base units.

(3) Providing versatile communication services

(a) Reading data from and writing data to intelligent function modules mounted on remote I/O stations are easy.


There are four methods available for reading and writing.

- 1) Use GX Configurator to make the initial settings and automatic refresh settings with intelligent function module parameters, and write them into the remote I/O module in the remote I/O station. By refreshing the intelligent function module data to the link register W of the remote I/O module based on the auto refresh settings, the remote master station can read/write refreshed data by cyclic transmission.

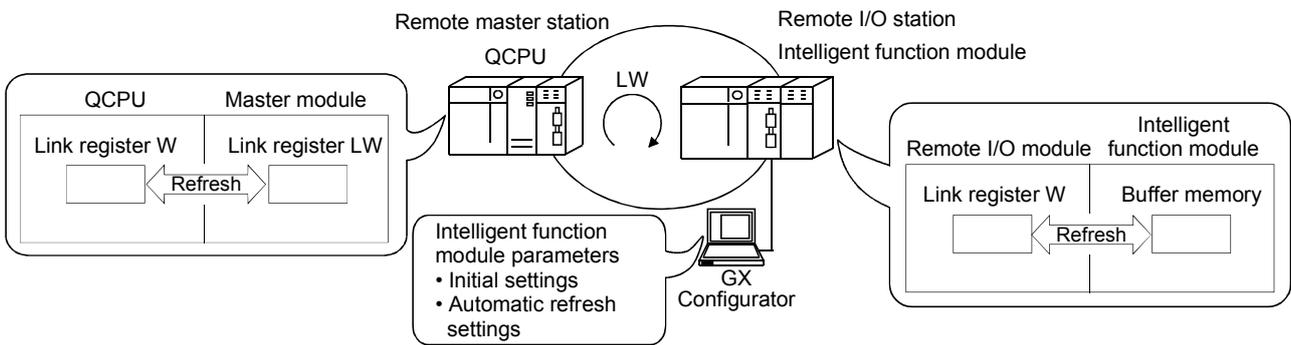


2) Link dedicated instructions can be used to directly read from or write to the buffer memory of the intelligent module.

- REMFR instruction: Reads data from the buffer memory of the remote I/O station intelligent function module.
- REMTO instruction: Writes data to the buffer memory of the remote I/O station intelligent function module.

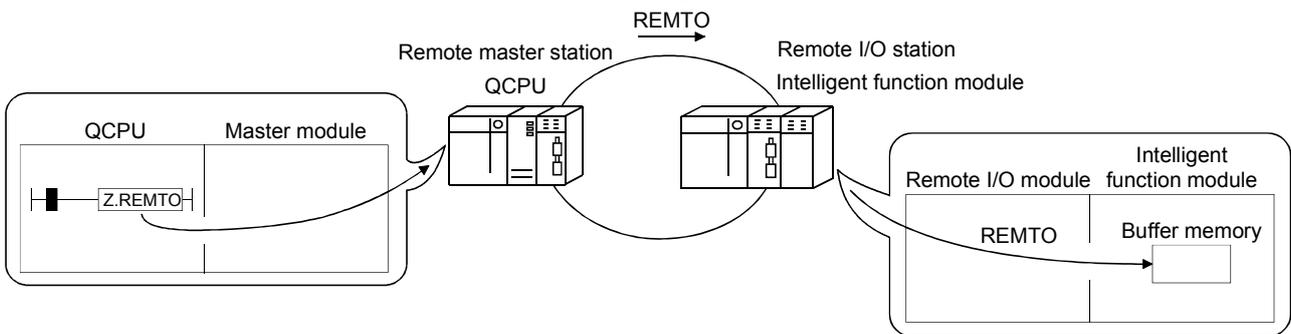


- 3) By refreshing the intelligent function module data into the remote I/O module's data register D by the automatic refresh setting of the intelligent function module parameters, the remote master station can read/write data from/to the data register D with READ or WRITE instruction.

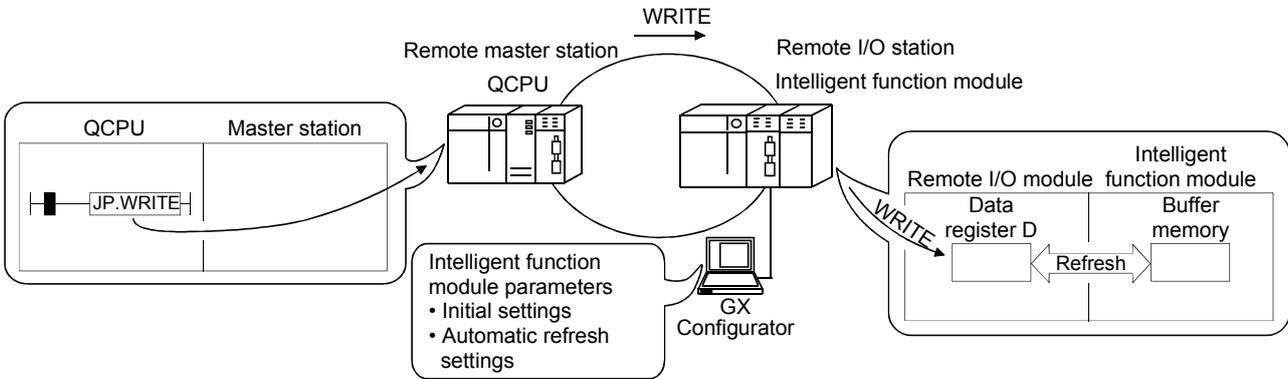


- 4) The automatic refresh setting of the intelligent function parameters enables the intelligent function module data to be refreshed into the remote I/O module's data register D. By refreshing the data register D to the link register W with the parameter of the remote I/O module, the remote master station can read/write the intelligent function module data by cyclic transmission.

This method has the advantage that the intelligent function module parameters created for QCPU can be applied to the remote I/O module without making any modifications.

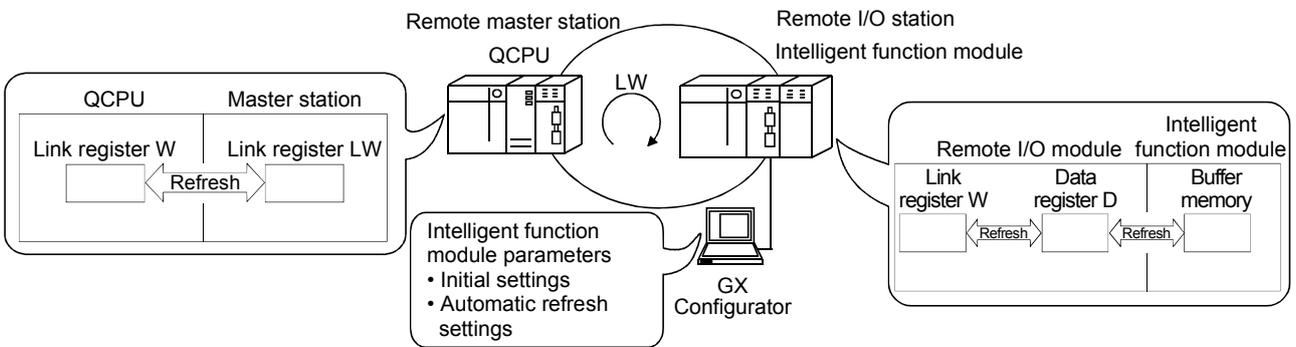

- (b) The interrupt sequence program of the host's CPU module can be started up using the event issue function. This function reduces the response time of the system and enables real-time data reception.

(Refer to Section 7.7, "Interrupt Settings")

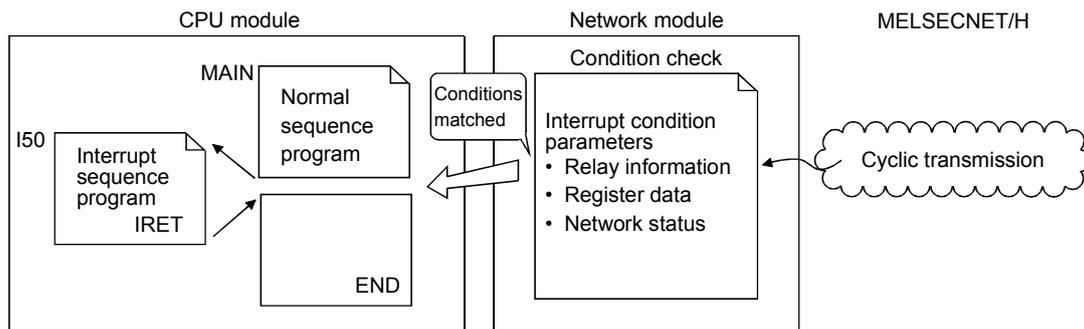

- (4) Enhanced RAS functions (Refer to Section 3.2.2 "RAS functions")
- (a) When a faulty station recovers and can resume normal operation, it automatically returns to the network to resume the data communication using the automatic return function.
  - (b) By using the loopback function (in the optical loop system), it is possible to continue data transmission among operational stations by disconnecting faulty areas such as a part of the network where there is a cable disconnection, a faulty station, etc.
  - (c) By using the station detach function (in the coaxial bus system), even when some of the connected stations are down due to power off, etc., the normal communication can be continued among other operational stations.
  - (d) The network module can continue the transient transmission even if an error, which stops the CPU module, occurs during system operation.
  - (e) The time of transient error occurrence can be checked.
  - (f) By mounting 2 power supply modules on a remote I/O station, either of them can be replaced without powering off the station. (Redundant power supply on remote I/O station)  
The redundant power supply base unit is required for mounting 2 power supply modules.
  - (g) When an input module, an output module or an intelligent function module mounted on a remote I/O station fails, the faulty module can be replaced without stopping the system operation. (Online module change)  
Online module change is executable for the Q series I/O modules and modules of function version C and later, such as analog-to-digital converter modules, digital-to-analog converter modules, channel isolated thermocouple input modules, and temperature control modules.

REMARKS
---------

The following faults make the RAS functions valid.

- Break in cable
- Power-off of slave station
- Network setting error
- Fault detectable by self-diagnostics of CPU module


If the network module has become faulty, the RAS functions may not be activated depending on the fault.

- (5) Control of external connection to remote I/O stations (refer to Section 7.12)

Setting a remote password for a remote I/O station restricts access from the outside via an Ethernet interface module or serial communication module.  
(Remote password)

(6) Improved network functions

- (a) Intelligent function modules mounted to remote I/O stations can be diagnosed using the GX Developer system monitor.  
Intelligent function modules mounted to remote I/O stations can be diagnosed using the system monitor of GX Developer, which is connected to a remote master station or directly connected to a remote I/O station.

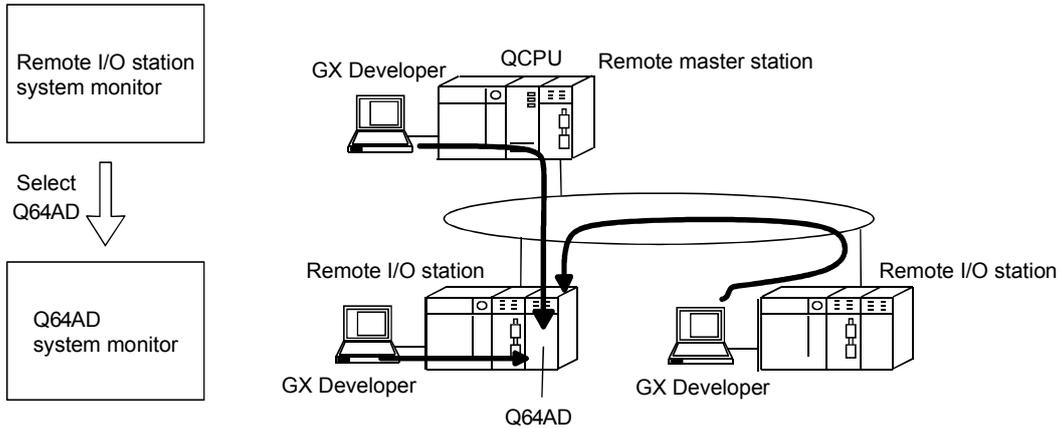

When the network seems to be faulty, it can be diagnosed through GX Developer connected to the remote master station or any remote I/O station.

- (b) If the GX Developer is connected to a remote I/O station, it will not affect the system operating so user program network function testing can be done online. It shuts out input (X) from the input module on the remote I/O station and can turn input (X) on or off using the GX Developer test. This allows testing of the remote master station input program to be performed. In addition, it shuts of output (Y) form the remote master station and can turn remote I/O station output (Y) on and off using the GX Developer test. This allows testing of the wires for the output module on the remote I/O station to be performed.

(7) Increased ease of network configuration in combination with GX Developer

- (a) The network parameters can easily be set by visualising them as pull-down menus, dialogue boxes, etc.
- (b) The settings of network Nos., group numbers and operation modes have been simplified so that these values can be designated only through software settings.

(Network parameters)

	Module 1	Module 2
Network type	MNET /H(Remote master)	None
Starting I/O No.		0000
Network No.		None
Total stations		5
Group No.		MNET /H mode (Control station)
Station No.		MNET /H mode (Normal station)
		MNET /10 mode (Control station)
		MNET /10 mode (Normal station)
		MNET /H(Remote master)
Mode	On line	Ethernet
	Network range assignment	MNET /H Ext. mode (Control station)
		MNET /H Ext. mode (Normal station)
	Refresh parameters	
	Interrupt settings	

Abbreviations {


Pull-down menu

1.3 Abbreviations Used in the Text, Tables and Diagrams of This Manual

(1) Abbreviations

Abbreviation	Name
M <sub>R</sub>	Remote master station
R	Remote I/O station
DM <sub>R</sub>	Multiplexed remote master
DSM <sub>R</sub>	Multiplexed remote sub-master

(2) Marking format

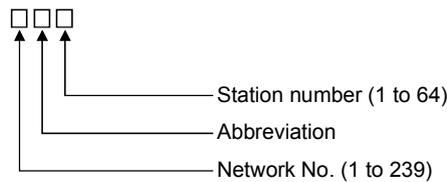

[Example]

- 1) Network No. 3 and remote master station ······ 3M<sub>R</sub>  
\* : Station number "0" is not attached to the remote master station.
- 2) Network No. 5, remote I/O station, station number 3 ······ 5R3
- 3) Network No. 7, Multiplexed remote sub-master,  
station number 4 ······ 7DSM<sub>R</sub>4

(3) Generic terms and abbreviations for CPU modules

Generic terms and abbreviations for CPU modules	CPU model							
	Q00J Q00 Q01	Q02 Q02H Q06H Q12H Q25H	Q02PH Q06PH Q12PH Q25PH	Q12PRH Q25PRH	Q02U Q03UD Q04UDH Q06UDH Q13UDH Q26UDH	Q03UDE Q04UDEH Q06UDEH Q13UDEH Q26UDEH	QS001	Q06CCPU-V Q06CCPU-V-B
Basic model QCPU	○							—
High Performance model QCPU	—	○						—
Process CPU	—		○					—
Redundant CPU		—		○				—
Universal model QCPU			—			○		—
Safety CPU				—			○	—
C Controller module								○
Other than Process CPU	○		—			○		—
Other than Redundant CPU		○		—		○		—
Other than Universal model QCPU			○			—	○	—

## 1.4 Functions Added/Changed with Upgrade to Function Version D

The following table lists the additional/altered functions for network modules of function version D.

Function	Function version	Description	Reference
Multiplexed remote I/O network for redundant system	Function version D	Allows construction of a multiplexed remote I/O network that includes the redundant system as the master station.	Section 7.11
Power supply redundancy on remote I/O station	Function version D	Allows the construction of the system that includes a remote I/O station in which 2 power supply modules are mounted for power supply redundancy.	Section 3.2.2 (9)
Online module change on remote I/O station	Function version D	Allows the faulty I/O module or intelligent function module on a remote I/O station to be replaced online while the remote I/O station is running.	Section 3.2.2 (10)
Remote password on remote I/O station	Function version D	Limits the access made from GX Developer via an Ethernet module or serial communication module mounted on a remote I/O station, by setting at password.	Section 7.12

## 2 SYSTEM CONFIGURATION

This introduces a system comprised of remote I/O networks.

POINT
(1) Remote I/O networks and PLC to PLC networks cannot be mixed on the same MELSECNET/H network. Always build separate networks.
(2) Only MELSECNET/H network modules can be connected to a MELSECNET/H remote I/O network. They cannot be mixed with MELSECNET/10 network modules (AJ72LP25, A1SJ72QLP25, etc.).


2

### 2.1 Single Remote I/O Networks

#### 2.1.1 Configuration


##### (1) Optical loop system

Up to 64 remote I/O modules can be connected to a remote master station. Always set the station number of the remote master station to 0.

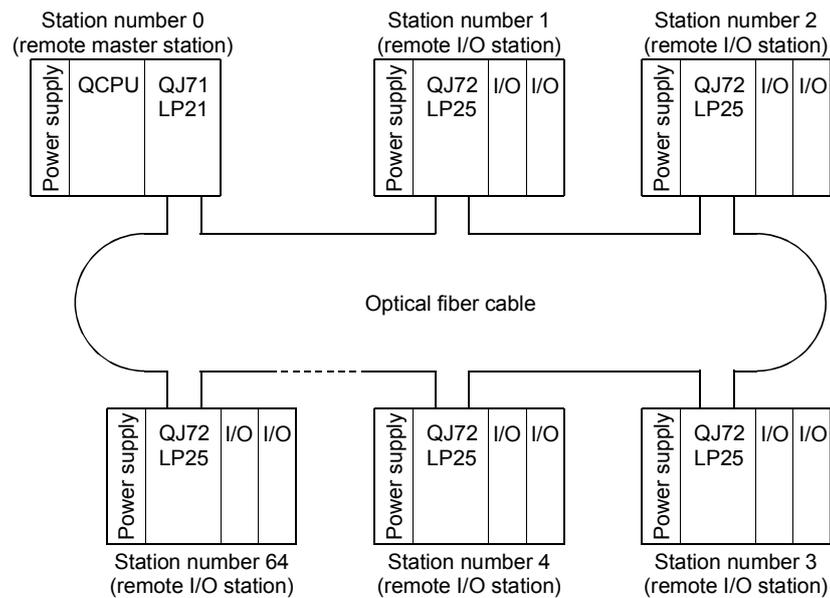

##### (2) Coaxial cable bus system

Up to 32 remote I/O stations can be connected to a remote master station. Always set the station number of the remote master station to 0.

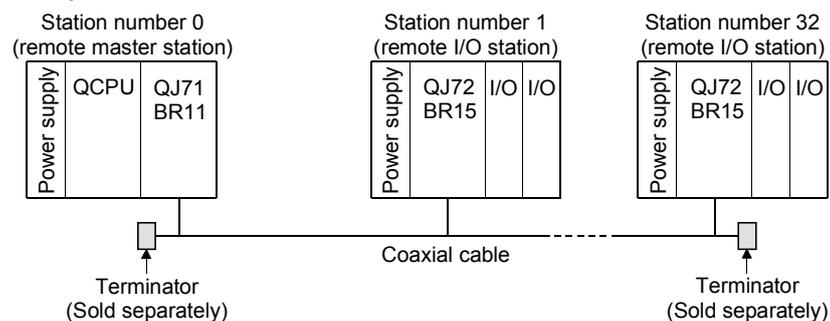

## 2.1.2 Setting items

- (1) Table 2.1 shows the setting items on the master module of the remote master station (MR) and the parameter setting items on GX Developer.

Table 2.1 Remote master station setting items

Setting items	Remote master station (MR)	Reference
Network module switch		
STATION NO.	0	Section 4.2.1
MODE	●	Section 4.2.2
Parameter setting on GX Developer		
Setting the number of Ethernet/CC IE/MELSECNET cards		
Network type	MELSECNET/H (Remote master station)	Section 5.1.1
Starting I/O No.	●	Section 5.1.2
Network No.	●	Section 5.1.2
Total stations	●	Section 5.1.2
Group No.	×	—
Mode	●	Section 5.1.2
Common parameters	●	Section 5.1.3
Supplementary setting	△	Section 5.1.4
Station specific parameters	×	—
Refresh parameters	● *1 *2	Section 5.1.5
Valid module during other station access	△	Section 5.1.6
Interlink transmission parameters	×	—
Routing parameters	△	*3

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*1: Default value is not set in LX/LY. Set refresh parameters.

\*2: Default values are preset for LB/LW.

The CPUs other than the Universal model QCPU may operate even if refresh parameters have not been set.

For the operation and precautions, refer to Section 5.1.5 (3).

\*3: Refer to the "Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC Network) (SH-080049)".

(2) Table 2.2 shows the setting items on the remote I/O module of the remote I/O station (R) and the parameter setting items on the GX Developer.

Table 2.2 Remote I/O station setting items

Setting items	Remote I/O station (R)	Reference
Network module switch		
STATION NO.	1 to 64	Section 4.2.2
MODE	●	Section 4.2.2
Parameter setting on GX Developer		
PLC system	▲	* 3
PLC RAS	▲	* 3
I/O assignment	△	* 3
Operation setting	△	Section 5.2.1
Ethernet setting	△	* 4
CC-Link setting	△	* 5
Remote password setting	△	Section 7.12
GX Configurator setting		
Initial setting	△	* 6
Auto refresh setting	△	* 6

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*3 : Refer to "QCPU User's Manual (Functional Explanation: Program Fundamentals) (SH-080484ENG)".

\*4 : Refer to "Q Corresponding Ethernet Interface Module User's Manual (Basic) (SH-080009)". Note that interrupt setting is not available.

\*5 : Refer to "CC-Link System Master/Local Module User's Manual (SH-080394E)". Note that interrupt setting is not available.


\*6 : Refer to the user's manual of the corresponding intelligent function module.

### 2.1.3 Available device ranges

The remote I/O network can use the following device ranges within each network module.

These device ranges indicate the remote master station.

Device	Range setting	Other
LB	0 <sub>H</sub> to 3FFF <sub>H</sub> (16384 points)	The device range (excluding that of I/O module mounted on the host station) should be assigned to each network module.
LW	0 <sub>H</sub> to 3FFF <sub>H</sub> (16384 points)	
LX	0 <sub>H</sub> to 1FFF <sub>H</sub> (8192 points)	
LY	0 <sub>H</sub> to 1FFF <sub>H</sub> (8192 points)	

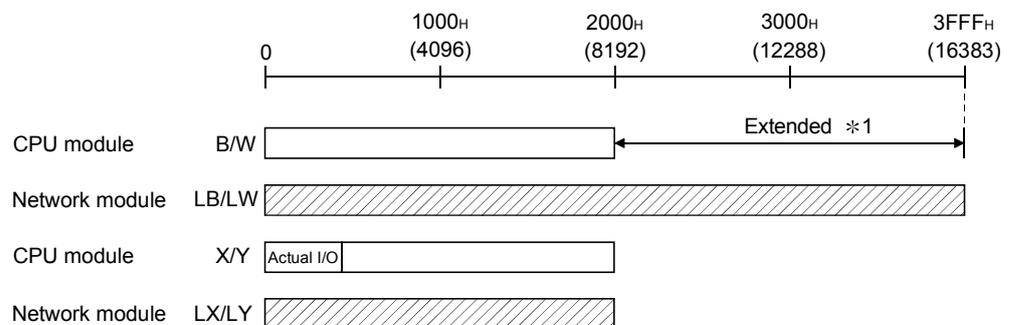

▨ : Available device range

\*1: Expandable by changing from [PLC parameters] - [Device settings]

2.2 Multiple Remote I/O Network (Process CPU)

2.2.1 Configuration


A multiplexed remote I/O network system includes a multiplexed remote master station and a multiplexed remote sub-master station. The multiplexed remote sub-master station takes control of remote I/O stations when the multiplexed remote master station fails.

Always assign station No. 0 to the multiplexed remote master station.

It is allowed to assign any of station number 1 to 64 to the multiplexed remote sub-master station, provided that the number does not overlap with that of remote I/O station.

63 remote I/O stations can be connected in an optical loop system, 31 stations in a coaxial bus system.

<b>POINT</b>
<p>Only the Process CPU is the CPU module that works as a multiplexed remote master station and multiplexed remote sub-master station.</p> <p>The CPUs other than the Process CPU do not work as a multiplexed remote master station and multiplexed remote sub-master station.</p>

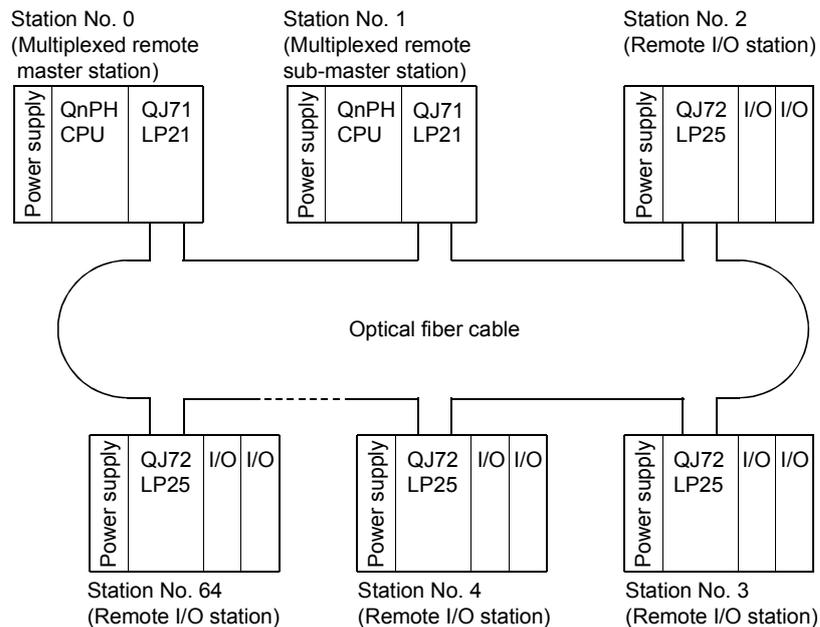

Up to 63 remote I/O stations can be connected in an optical loop system.

Up to 31 stations can be connected in a coaxial bus system.

2.2.2 Setting items

- (1) Table 2.3 lists the parameter setting items of the multiplexed remote master station (DM<sub>R</sub>) and multiplexed remote sub-master station (DSM<sub>R</sub>).

Table 2.3 Setting Items of Multiplexed Remote Master Station and Multiplexed Remote Sub-Master Station

Setting item	Multiplexed remote master station (DM <sub>R</sub> )	Multiplexed remote sub-master station (DSM <sub>R</sub> )	Reference
Network module switch			
STATION NO.	0	1 to 64	Section 4.2.1
MODE	●	●	Section 4.2.1
Parameter setting on GX Developer			
Setting the number of Ethernet/CC IE/MELSECNET cards			
Network type	MELSECNET/H (Multiplexed remote master station)	MELSECNET/H (Multiplexed remote sub-master station)	Section 5.1.1
Starting I/O	●	●	Section 5.1.2
Network No.	●	●	Section 5.1.2
Total stations	●	△ *1	Section 5.1.2
Group No.	△	△	Section 5.1.2
Mode	●	●	Section 5.1.2
Common parameters	●	△ *1	Section 5.1.3
Supplementary setting	△	△	Section 5.1.4
Station specific parameters	×	×	—
Refresh parameters	● *2 *3	● *2 *3	Section 5.1.5
Valid module during other station access	△	△	Section 5.1.6
Interlink transmission parameter	×	×	—
Routing parameters	△	△	*4

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

<b>POINT</b>
<p>*1: Set Total stations and common parameters of the multiplexed remote sub-master station when using the multiplexed remote sub-master station to resume the network. The settings must be the same as those of the multiplexed remote master station.</p> <p>For example, if the multiplexed remote master station is powered off and then on during network control by the multiplexed remote sub-master station, the multiplexed remote sub-master station resumes networking as a master operating station.</p>

\*2 : Default value is not set in LX/LY. Set refresh parameters.

\*3 : Default values are preset for LB/LW.

The system may operate even if refresh parameters have not been set.

For the operation and precautions, refer to Section 5.1.5 (3).

\*4 : Refer to the "Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC Network) (SH-080049)".

(2) Table 2.4 lists the setting items can be set on a remote I/O module operating as a remote I/O station (R) and the parameter setting items can be set from GX Developer.

Table 2.4 Setting Items of Remote I/O Station

Setting item	Remote I/O station (R)	Reference
Network module main module switch		
STATION NO.	1 to 64	Section 4.2.2
MODE	●	Section 4.2.2
GX Developer parameter setting		
PLC system	▲	*4
PLC RAS	▲	*4
I/O assignment	△	*4
Operation setting	△	Section 5.1.2
Ethernet setting	△	*5
CC-Link setting	△	*6
Remote password setting	△	Section 7.12
GX Configurator setting		
Initial setting	△	*7
Auto refresh setting	△	*7

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*4 : Refer to "QCPU User's Manual (Functional Explanation: Program Fundamentals) (SH-080484ENG)".

\*5: Refer to "Q Corresponding Ethernet Interface Module User's Manual (Basic) (SH-080009)". Note that interrupt setting is not available.


\*6 : Refer to "CC-Link System Master/Local Module User's Manual (SH-080394E)". Note that interrupt setting is not available.

\*7 : Refer to the user's manual of the corresponding intelligent function module.

### 2.2.3 Available device ranges

The remote I/O network can use the following ranges of devices inside network modules.

Device	Available Range	Others
LB	0H to 3FFFH (16384 points)	The device range (excluding that of I/O module mounted on the host station) should be assigned to each network module.
LW	0H to 3FFFH (16384 points)	
LX	0H to 1FFFH (8192 points)	
LY	0H to 1FFFH (8192 points)	

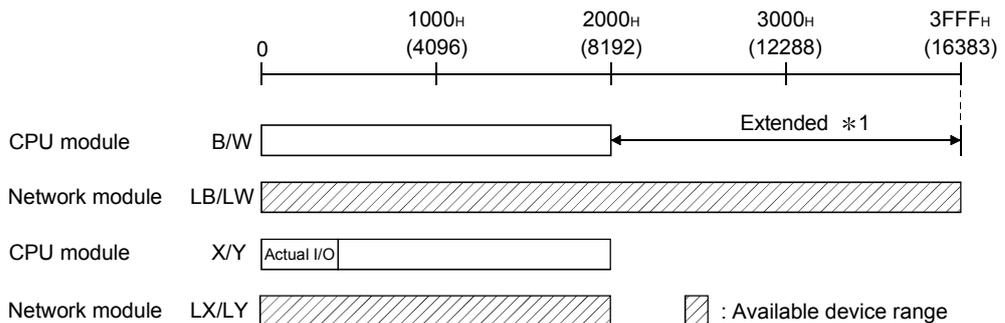

\*1: Expandable by changing from [PLC parameters] - [Device settings]

2.3 Multiplexed Remote I/O Network for Redundant System (Redundant CPU)

2.3.1 Configuration

The redundant system including the Redundant CPU utilizes the multiplexed remote I/O network system in order to control I/O modules and intelligent function modules. In the multiplexed remote I/O network system for the redundant system, the master module on the side of the control Redundant CPU (started up as a control system) acts as a multiplexed remote master station and controls remote I/O stations, while the master module mounted on the side of the standby Redundant CPU performs the sub-master operation as a multiplexed remote sub-master station.

When the control system CPU or the multiplexed remote master station goes down, the multiplexed remote sub-master station switches from "standby" to "control" and takes over the control of the remote I/O stations.

Make sure to assign No.0 to the master module mounted on the system A CPU in the redundant system.


For station No. of the multiplexed remote sub-master station, set any of No. 1 to 64, which should not be overlapped with any of remote I/O stations.

The number of remote I/O stations connectable to a multiplexed remote I/O network for the redundant system is 63 in the optical loop system and 31 in the coaxial bus system.

<b>POINT</b>
The CPU module applicable for the multiplexed remote master or sub-master station in the redundant system is the Redundant CPU only. The CPUs other than the Redundant CPU are not applicable.

**REMARKS**

Refer to QnPRHCPU User's Manual (Redundant System) for details on the redundant system.

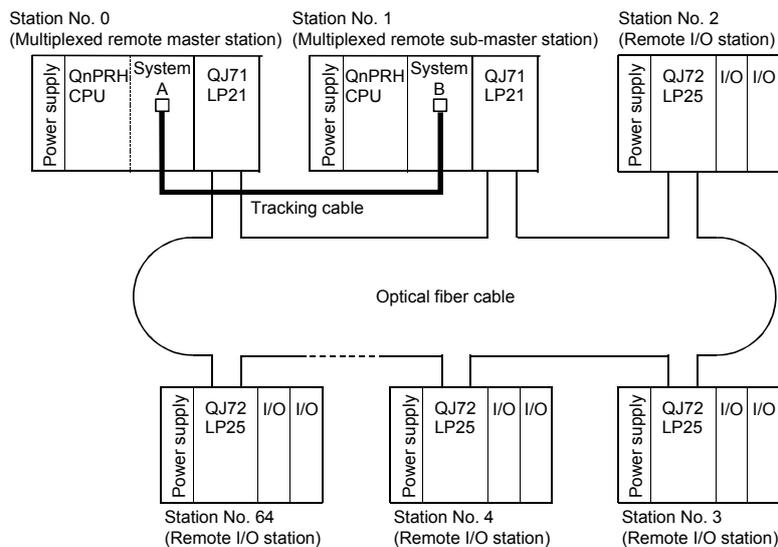

In the optical loop system, up to 63 remote I/O stations can be connected. Connection of up to 31 stations is allowed for the coaxial bus system.

## 2.3.2 Setting items

- (1) Table 2.5 indicates the parameter setting items of the multiplexed remote master station (DM<sub>R</sub>) and multiplexed remote sub-master station (DSM<sub>R</sub>).

In the redundant system, the same network parameters are set to both the control and standby systems. For this reason, parameter setting for the multiplexed remote sub-master station is not required.

Make sure to assign No.0 to the master module mounted on the system A CPU in the redundant system.

Table 2.5 Setting Items of Multiplexed Remote Master Station and Multiplexed Remote Sub-master Station

Setting items	Remote master station (M <sub>R</sub> )	Remote submaster station (DSM <sub>R</sub> )	Reference
Tracking cable connector	System A	System B	Section 7.1.1
Network module switch			
STATION NO.	0	1 to 64	Section 4.2.1
MODE	●	●	Section 4.2.1
Parameter setting on GX Developer			
Setting the number of Ethernet/CC IE/MELSECNET cards			
Network type	MELSECNET/H (Remote master station)	×	Section 5.1.1
Starting I/O No.	●	×	Section 5.1.2
Network No.	●	×	Section 5.1.2
Total stations	●	×	Section 5.1.2
Group No.	×	×	—
Mode	●	×	Section 5.1.2
Common parameters	●	×	Section 5.1.3
Supplementary setting	△	×	Section 5.1.4
Station specific parameters	×	×	—
Refresh parameters	● *1 *2	×	Section 5.1.5
Valid module during other station access	△	×	Section 5.1.6
Interlink data transfer parameters	×	×	—
Setting of redundant configuration	●	×	Section 5.1.7
Routing parameters	△	×	*3

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*1: Default value is not set in LX/LY. Set refresh parameters.

\*2: Default values are preset for LB/LW.

The system may operate even if refresh parameters have not been set.

For the operation and precautions, refer to Section 5.1.5 (3).

\*3: Refer to the "Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC Network) (SH-080049)".



2.4 Multiple Remote I/O Network


2.4.1 Configuration

A multiple remote I/O network system is a network system with many networks connected to it.

Set so that a network number will not duplicate another. If there are no duplications, setting can be anywhere within a range from 1 to 239.

Up to four master modules can be mounted on the remote master station.

Note that, however, there are restrictions on the number of master modules that can be mounted, depending on the CPU module used. (Refer to Section 2.5.)

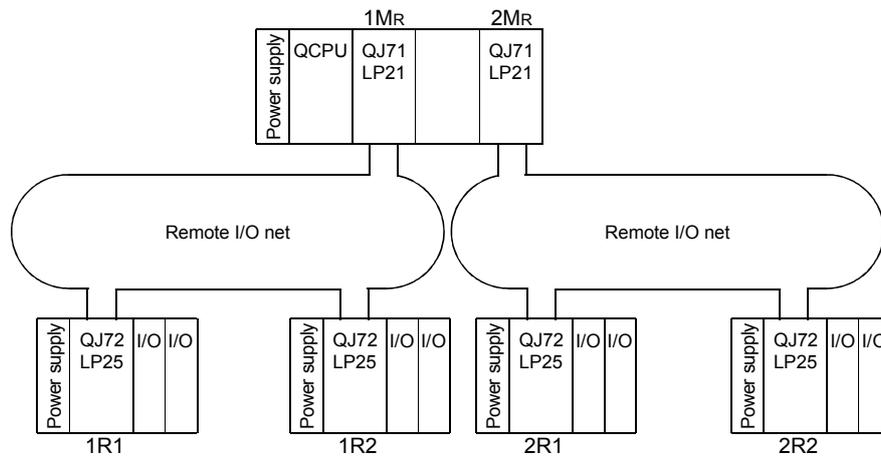

## 2.4.2 Setting items

- (1) Table 2.7 shows the setting items for the master module main module for remote master station (MR) and the parameter settings from the GX Developer.

Table 2.7 Remote master station setting items

Setting items	Remote master station (MR)	Reference
Network module main module switch		
STATION NO.	0	Section 4.2.1
MODE	●	Section 4.2.1
Parameter setting on GX Developer		
Setting the number of Ethernet/CC IE/MELSECNET cards		
Network type	MELSECNET/H (Remote master station)	Section 5.1.1
Starting I/O No.	●	Section 5.1.2
Network No.	●	Section 5.1.2
Total number of remote modules	●	Section 5.1.2
Group No.	×	—
Mode	●	Section 5.1.2
Common parameters	●	Section 5.1.3
Supplementary setting	△	Section 5.1.4
Station specific parameters	×	—
Refresh parameters	● *1 *2	Section 5.1.5
Valid module during other station access	△	Section 5.1.6
Inter-link data transfer parameters	×	—
Routing parameters	△	*3

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*1: Default value is not set in LX/LY. Set refresh parameters.

\*2: Default values are preset for LB/LW.

The CPUs other than the Universal model QCPU may operate even if refresh parameters have not been set.

For the operation and precautions, refer to Section 5.1.5 (3).

\*3: Refer to the "Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC Network) (SH-080049)".

(2) Table 2.8 shows the setting items for the remote I/O module main module for the remote I/O station (R) and the parameter setting items from the GX Developer.

Table 2.8 Remote I/O station setting items

Setting items	Remote I/O station (R)	Reference
Network module main module switch		
STATION NO.	1 to 64	Section 4.2.2
MODE	●	Section 4.2.2
GX Developer parameter setting		
PLC system	▲	* 3
PLC RAS	▲	* 3
I/O assignment	△	* 3
Operation setting	△	Section 5.2.1
Ethernet setting	△	* 4
CC-Link setting	△	* 5
Remote password setting	△	Section 7.12
GX Configurator setting		
Initial setting	△	* 6
Auto refresh setting	△	* 6

●: Always set, ▲: Default setting, △: Set as needed, ×: No need to set

\*3 : Refer to "QCPU User's Manual (Functional Explanation: Program Fundamentals) (SH-080484ENG)".

\*4 : Refer to "Q Corresponding Ethernet Interface Module User's Manual (Basic) (SH-080009)". Note that interrupt setting is not available.


\*5 : Refer to "CC-Link System Master/Local Module User's Manual (SH-080394E)". Note that interrupt setting is not available.

\*6 : Refer to the user's manual of the corresponding intelligent function module.

### 2.4.3 Available device ranges

The remote I/O network can use the following device ranges in the network module.

Device	Available range	Others
LB	0 <sub>H</sub> to 3FFF <sub>H</sub> (16384 points)	—
LW	0 <sub>H</sub> to 3FFF <sub>H</sub> (16384 points)	
LX	0 <sub>H</sub> to 1FFF <sub>H</sub> (8192 points)	The device range (excluding that of I/O module mounted on the host station) should be assigned to each network module.
LY	0 <sub>H</sub> to 1FFF <sub>H</sub> (8192 points)	

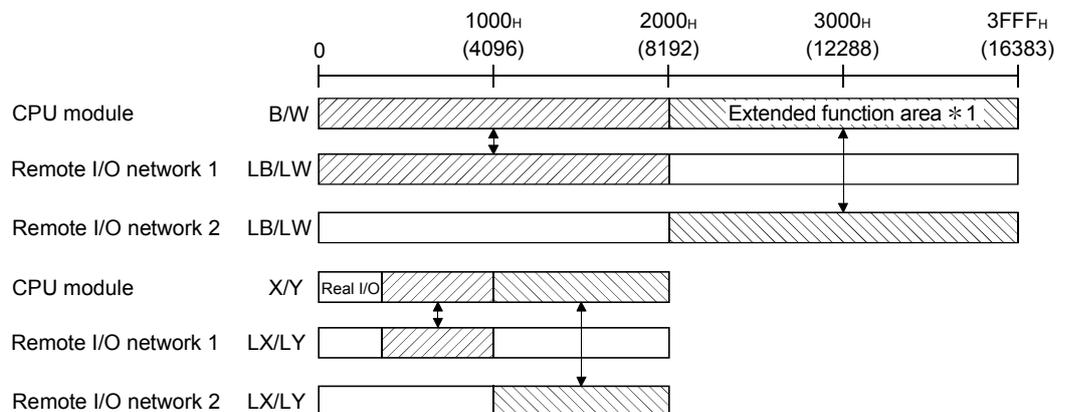

\*1: Expandable by changing from [PLC parameters] - [Device settings]

2.5 Applicable Systems

2.5.1 Applicable systems for remote master stations

This section describes applicable systems of remote master stations.

No. of mountable modules is the maximum number of mountable network modules with CC-Link IE controller network.

(1) Applicable modules and base units, and No. of modules

(a) When mounted with a CPU module

The table below shows the CPU modules and base units applicable to the master module and quantities for each CPU model.

Depending on the combination with other modules or the number of mounted modules, power supply capacity may be insufficient.

Pay attention to the power supply capacity before mounting modules, and if the power supply capacity is insufficient, change the combination of the modules.

Applicable CPU module		No. of modules *1	Base unit *2				
CPU type	CPU model		Main base unit	Extension base unit			
Programmable controller CPU	Basic model QCPU	Q00JCPU	N/A	×	×		
		Q00CPU					
		Q01CPU					
	High Performance model QCPU *3	Q02CPU	4	○	○		
		Q02HCPU					
		Q06HCPU					
		Q12HCPU					
		Q25HCPU					
	Process CPU	Q02PHCPU	4	○	○		
		Q06PHCPU					
		Q12PHCPU					
		Q25PHCPU					
	Redundant CPU	Q12PRHCPU	4 *4	○	×		
		Q25PRHCPU					
	Universal model QCPU	Q02UCPU	2	○	○		
		Q03UDCPU	4	○	○		
		Q04UDHCPU					
		Q06UDHCPU					
		Q13UDHCPU					
		Q26UDHCPU					
Q03UDECPU							
Q04UDEHCPU							
Q06UDEHCPU							
Q13UDEHCPU							
Q26UDEHCPU							
Safety CPU		QS001CPU				N/A	×
C Controller module	Q06CCPU-V	N/A				×	×
	Q06CCPU-V-B						

○: Applicable, ×: N/A

- \*1: Limited within the range of I/O points for the CPU module.
- \*2: Can be installed to any I/O slot of a base unit.
- \*3: Use a CPU module whose serial No. (first five digits) is "02092" or later.
- \*4: Mountable number for one of the systems.  
Use a master module of function version D or later.
- \*5: Connection of extension base units is not available with any safety CPU.

(b) Mounting to a MELSECNET/H remote I/O station

The master module cannot be mounted to any MELSECNET/H remote I/O station.

Mount it to a CPU module on a master station.

(2) Support of the multiple CPU system

When using the network module in a multiple CPU system, refer to the QCPU User's Manual (Multiple CPU System) first.

To construct the remote I/O network with a multiple CPU system, use a master module of function version B or later.

For precautions for the use in a multiple CPU system, refer to Section 2.6.

(3) Network type

The available network type varies depending on the CPU module type, the function version of the master module, and the version of GX Developer.

Network type	CPU module	Master module	GX Developer
Multiplexed remote I/O network for redundant system	Q12PRHCPU, Q25PRHCPU	Function version D or later.	Version 8.18U or later
Multiple remote I/O network	Q02PHCPU, Q06PHCPU	Function version B or later (First 5 digits of the serial No. is "04012" or later)	Version 8.68W or later
	Q12PHCPU, Q25PHCPU	Function version B or later (First 5 digits of the serial No. is "04012" or later.)	Version 7.10L or later
Remote I/O network	Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q12PHCPU, Q25PHCPU	Function version B or later.	Version 6 or later
	Q02UCPU, Q03UDCPU, Q04UDHCPU, Q06UDHCPU	Function version B or later.	Version 8.48A or later
	Q13UDHCPU, Q26UDHCPU	Function version B or later.	Version 8.62Q or later
	Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q13UDEHCPU, Q26UDEHCPU	Function version B or later	Version 8.68W or later

## 2.5.2 Applicable systems for remote I/O stations

This section explains application systems of remote I/O stations.

### (1) Applicable base units

Listed below are the main base units applicable to remote I/O modules.

Mount a remote I/O module to a CPU slot of any of the following main base units.

Model	Product name
Q33B, Q35B, Q38B, Q312B	Main base unit
Q32SB, Q33SB, Q35SB	Slim type main base unit
Q35RB	Main base unit for the redundant power supply system

### (2) Network type

The available network type varies depending on the function version of the remote module and the version of GX Developer.

Network type	Remote I/O module	GX Developer
Multiplexed remote I/O network for redundant system	Function version D or later	Version 6 or later
Multiple remote I/O network	Function version B or later	
Remote I/O network		

### (3) Applicable modules

The Q-series modules are applicable to remote I/O stations.

Note that the following modules have some restrictions.

Module Name	Description
Q3□B, Q3□SB, Q3□RB *1, *2	Base unit for remote I/O modules Max. mountable remote I/O modules: 1
Q6□B, Q6□RB, Q5□B *1, *2, *3	Max. mountable stages: 7
Q6□WRB	N/A
QA1S6□B, QA6□B	N/A
Q6□P, Q6□RP, Q61SP *4	<ul style="list-style-type: none"> <li>• Q6□RP is applicable to Q6□RB.</li> <li>• Q61SP is applicable to Q3□SB.</li> </ul>
QC05B, QC06B, QC12B, QC30B, QC50B, QC100B	Overall extension cable length: 13.2m or less *5
QI60, QJ71GP21-SX, QJ71GP21S-SX, QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ71LP21G, QJ71LP21GE, QJ71BR11, QJ71WS96, QJ71MES96, QJ71AS92, QJ71DN91, QJ71PB92D, QJ71PB93D	N/A
QJ71E71-B5, QJ71E71-B2, QJ71E71-100, QJ71E71	<ul style="list-style-type: none"> <li>• Function version B or later is available.</li> <li>• Interrupt pointers, dedicated instructions and e-mail function are not available.</li> </ul>

(To the next page)

Module name	Description
Q64AD, Q68ADV, Q68ADI, Q64AD-GH, Q62AD-DGH, Q66AD-DG, Q68AD-G, Q62DAN, Q62DA, Q64DAN, Q64DA, Q68DAVN, Q68DAV, Q68DAIN, Q68DAI, Q62DA-FG, Q66DA-G, Q64TD, Q64TDV-GH, Q68TD-G-H01, Q64RD, Q64RD-G, QJ71C24, QJ71C24-R2, QJ71C24N, QJ71C24N-R2, QJ71C24N-R4, QD51, QD51-R24, QJ61BT11N, QJ61BT11, QJ71FL71-T-F01, QJ71FL71-B5-F01, QJ71FL71-B2-F01, QJ71FL71-T, QJ71FL71-B5, QJ71FL71-B2, QD62, QD62D, QD62E, QD63P6, QD64D2, QD72P3C3, QD75P1, QD75P2, QD75P4, QD75D1, QD75D2, QD75D4, QD75M1, QD75M2, QD75M4, QD75MH1, QD75MH2, QD75MH4, QJ71FL71-T-F01, QJ71FL71-B5-F01, QJ71FL71-B2-F01, QJ71FL71-T, QJ71FL71-B5, QJ71FL71-B2, QJ71MB91, QJ71MT91	Interrupt pointers and intelligent-function-module-dedicated instructions are not available.
QJ71PB92V	Dedicated instructions and automatic refresh are not available.

\*1 : Total of up to 64 modules can be mounted to a base unit.

Refer to the data book for the latest information.

A-series and QnA-series modules are not usable.

\*2 : Online module change can be performed for modules mounted on Q3□B, Q3□RB, Q6□B or Q6□RB. Modules mounted on the following base unit cannot be replaced online.

1) Q3□SB

2) Q5□B (Modules mounted on Q3□B cannot be replaced online, while those mounted on Q6□B can be replaced online.)

\*3 : When using the Q5□B, calculate the operating voltage of the Q5□B and confirm that it is within the specified range. Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection) for the calculation expression, and to the Data Book for the current consumption of each module mounted to the base unit.

\*4 : The ERR contact of the power supply module operates differently depending on the combination of the remote I/O module function version and the base unit. The following table indicates the ERR contact operation of the power supply module.

Base unit	Remote I/O module	
	Function version D or later	Function version C or earlier
Q3□B, Q3□SB	3)	×
Q3□RB	1)	×
Q6□B, Q5□B	×	×
Q6□RB	2)	2)

1): Output turns OFF when AC/DC power is not input or power supply module fault or remote I/O module stop error occurs.

2): Output turns OFF when AC/DC power is not input, or power supply module fault occurs.

3): Output turns OFF when AC/DC power is not input or remote I/O module stop error occurs.

× : Output is always OFF.

\*5 : Note the following points when using extension cables.

1) Do not install extension cables together with the main circuit (high voltage, large current) cables.

2) Connect an extension cable from OUT of the extension cable connector of the base unit to IN of the next extension base unit.

#### (4) Precautions for mounting an intelligent function module

Note that the number of intelligent function module parameters that may be set (initial setting, automatic refresh setting) is limited on the remote I/O module. If the number of parameters set exceeds the limited number, the remote I/O module detects the "SP. PARA ERROR (3301)" error.

If the error has been detected, read/write the data of the intelligent function modules using the REMFR/REMTO instruction.

(a) The following is the number of parameters that may be set for initial setting.

Sum total of the numbers of parameters within the setting ranges of all intelligent function modules  $\leq 512$

(b) The following is the number of parameters that may be set for automatic refresh setting.

Sum total of the numbers of parameters within the setting ranges of all intelligent function modules  $\leq 256$

The number of parameters for initial setting is fixed for each intelligent function module. To confirm the numbers of parameters for initial setting, refer to the user's manuals of the corresponding intelligent function modules.


Refer to Section 6.3 for the way to count the number of parameters for automatic refresh setting.

2.6 When Using a Multiple CPU System


Take the following points into consideration when configuring a remote I/O network by utilizing multiple CPU system.

- (1) Use the master module of function version B or later.
- (2) Set the network parameters to the control CPU controlling the master module.
- (3) It is possible to set up to four master modules per control CPU. Note that the maximum number of mountable master modules per multiple CPU system is four.


(a) CPU No. 1 controls all master modules

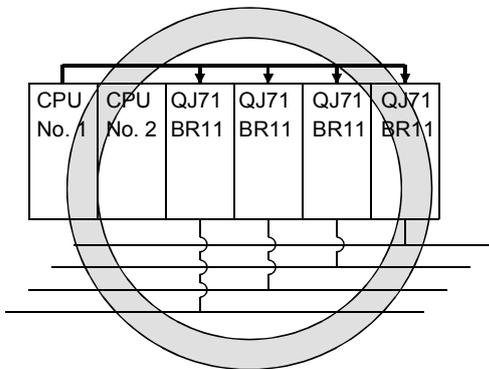


(b) CPU No. 1 and CPU No. 2 control each master module

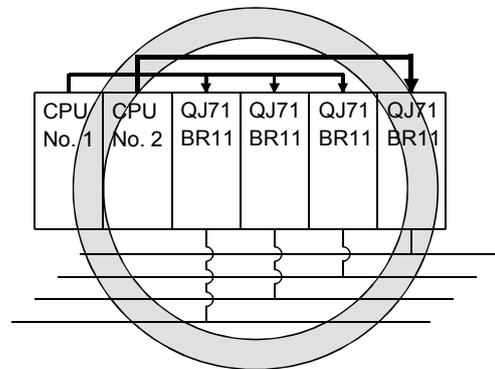

(c) CPU No 1 to No. 4 control each master module

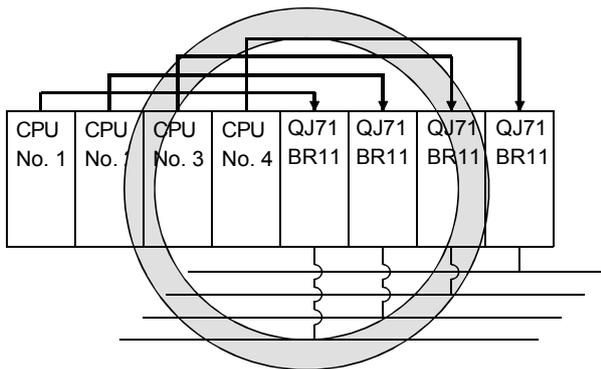


(d) The maximum number of mountable master modules per system is four

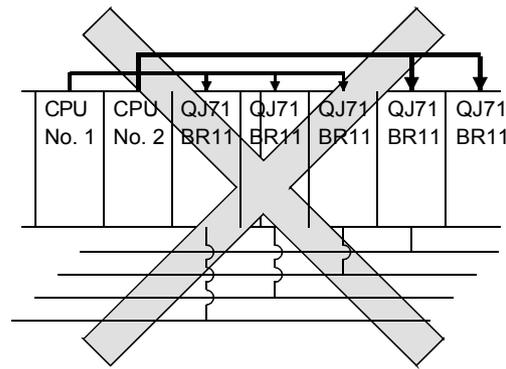


\*: The number of mounted modules exceeds the limit by one.

- (4) By connecting to a remote I/O station for access to other stations, GX Developer can access stations in the other network system, whether the relay stations in the multiple CPU system are controlled by the same or different CPUs. Also, GX Developer can access either the control CPU or non-control CPU in the multiple CPU system.


(a) Accessible to remote I/O station in other network

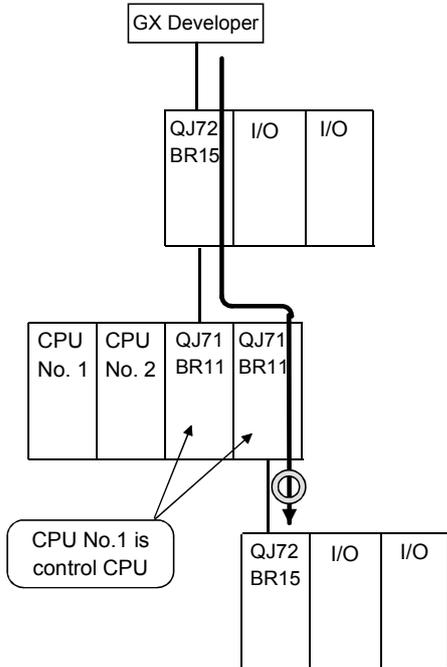


(b) Accessible to control CPU in other network

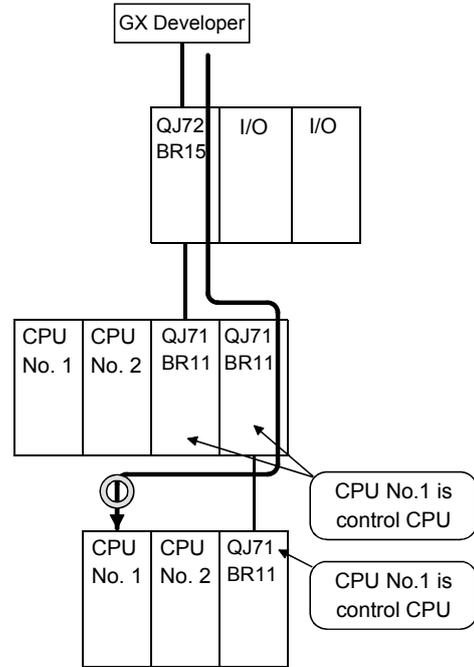

(c) Accessible to non-control CPU in other network

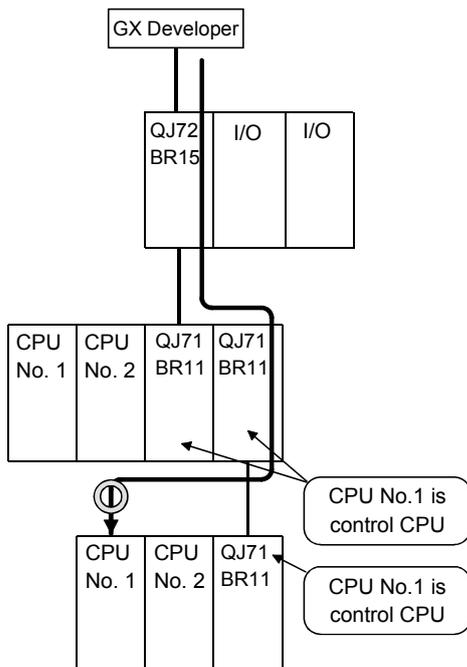

(d) Accessible to other network even if relayed station is controlled by another control CPU

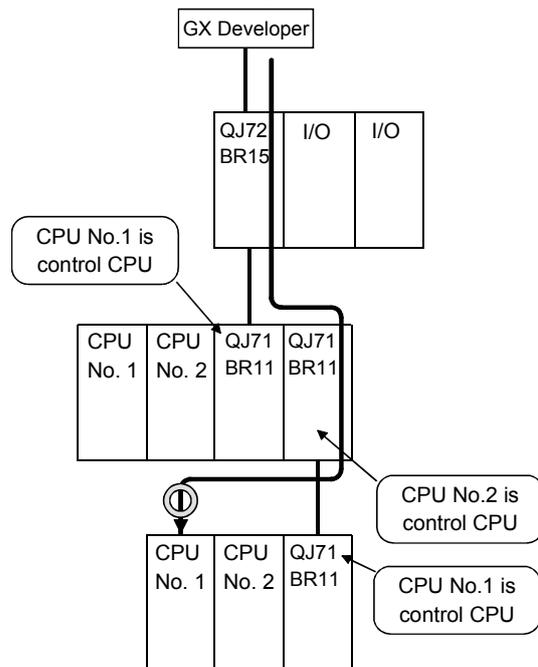


- (5) When all of the following conditions from a) to d) are met, use a MELSECNET/H module whose first five digits of the serial number is "10042" or later.
  - (a) A multiple CPU system containing a Built-in Ethernet port QCPU is configured.
  - (b) To the Ethernet port of the Built-in Ethernet port QCPU, GX Developer or GOT is connected.
  - (c) From GX Developer or GOT, access is made to another station through a MELSECNET/H module controlled by another CPU.
  - (d) The access target on another station is an A/QnQ series CPU module.

2.7 Checking Function Version and Serial No.

The following describes how to check the function version and serial No. of the network module.

(1) Checking the rating plate on the side of the module.

The serial number of the module and function version number are shown in the "Serial" field.

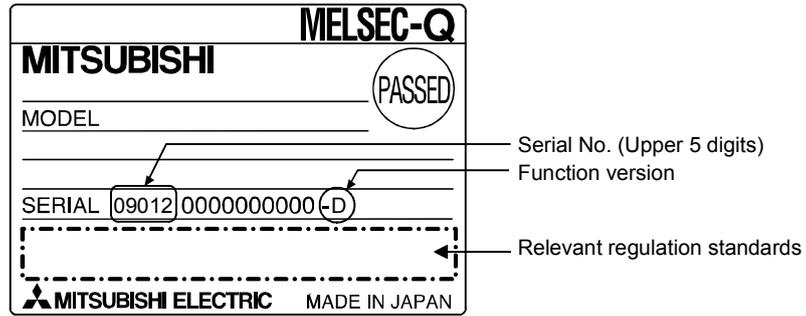

(2) Checking using GX Developer

The following shows the method for checking the serial number and function version of the selected module.

The serial number and function version are shown in the "Product Information List" or "Module's Detailed Information".

The following shows the procedure for checking the serial number and function version using the "Product Information List" screen. (Refer to Section 8.3.1 for information about using the "Module's Detailed Information" screen.)

[Starting procedure]

[Diagnose] → [System monitor] → [Product Information List]

Slot	Type	Series	Model name	Points	I/O No.	Master PLC	Serial No.	Ver.	Product No.
0-0	Intelli	Q	QJ71LP21-25	32pt	0000	-	0901200000000000	D	090421091210001-B
0-1	-	-	None	-	-	-	-	-	-
0-2	-	-	None	-	-	-	-	-	-

[Serial No., Ver., Product No.]

- The serial number for the modules are shown in the "Serial No." column.
- The function version for the modules is shown in the "Ver." column.
- The serial No. (Product No.) shown on the rating plate is displayed in the Product No. column. \*1

Note that "-" is displayed in the Product No. column for the network module since this module is not supporting Product No. display.

\*1: The Product No. is displayed in the column only when the Universal model QCPU is used.

**POINT**

The serial No. described on the rated plate may not match with the serial No. displayed on the product information of GX Developer.

- The serial No. on the rated plate describes the management information of the product.
- The serial No. displayed on the product information of GX Developer describes the function information of the product.

The function information of the product is updated when adding functions.

3 SPECIFICATIONS

The following describes the network system specifications, performance specifications and the specifications for sending and receiving link data.

For general specifications, refer to the user's manual of the CPU module to be used on the network system.

3.1 Performance Specifications

3.1.1 Optical loop system performance specifications

Table 3.1 shows the performance of the optical loop system.

Table 3.1 Optical loop system performance specifications

Item		Remote master station				Remote I/O station		
		QJ71LP21	QJ71LP21G	QJ71LP21GE	QJ71LP21-25	QJ71LP21S-25	QJ72LP25-25	QJ72LP25G
Maximum number of links per network	LX/LY	8192 points						
	LB	16384 points (Remote master station → remote sub-master station, remote I/O station: 8192 points, remote sub-master station, remote I/O station → remote master station: 8192 points)						
	LW	16384 points (Remote master station → remote sub-master station, remote I/O station: 8192 points, remote sub-master station, remote I/O station → remote master station: 8192 points)						
Maximum number of links per station	<ul style="list-style-type: none"> <li>Remote Master Station → Remote I/O station <math>((LY + LB)/8 + (2 \times LW)) \leq 1600</math> bytes *1</li> <li>Remote I/O station → Remote Master Station <math>((LX + LB)/8 + (2 \times LW)) \leq 1600</math> bytes</li> <li>Multiplexed remote master station ↔ multiplexed remote sub-master station <math>((LY + LB)/8 + (2 \times LW)) \leq 2000</math> bytes</li> </ul>							
Maximum I/O points per remote I/O station	$X + Y \leq 4096$ points If the X/Y numbers are duplicate, only one side is taken into consideration.							
Device points per remote I/O station	M	8192 points						
	SM	2048 points						
	D	12288 points						
	SD	2048 points						
Communication speed	10 Mbps		25 Mbps / 10 Mbps / (selected with MODE switch)			10 Mbps		
Number of stations per network	65 stations (Remote master stations: 1 Remote I/O stations: 64) *2							
Overall distance	30 km							
Distance between stations *3	25 Mbps	—			SI optical cable : 200m H-PCF optical cable : 400m Broad-band H-PCF optical cable : 1km □ QSI optical cable : 1km		—	
	10 Mbps	SI optical cable : 500m □ H-PCF optical cable : 1km □ Broad-band H-PCF optical cable : 1km □ QSI optical cable : 1km	GI-50/125 optical cable : 2km	GI-62.5/125 optical cable : 2km	SI optical cable : 500m □ H-PCF optical cable : 1km □ Broad-band H-PCF optical cable : 1km □ QSI optical cable : 1km	GI-50/125 optical cable : 2km	GI-62.5/125 optical cable : 2km	
Network cable	Optical fiber cable (procured by user) *3							
Applicable connectors	2-core optical connector plug (procured by user)							
Maximum number of networks	239 (Total including PLC to PLC networks)							
Transmission path format	Duplex loop							
Communication method	Token ring							
Synchronization method	Frame synchronization							
Coding method	NRZI code (Non Return to Zero Inverted)							
Transmission format	HDCL standards (Frame format)							
Error control	CRC ( $X^{16} + X^{12} + X^5 + 1$ ) and retry by timeout							
RAS functions	<ul style="list-style-type: none"> <li>Loop-back function due to error detection or broken cable</li> <li>Diagnostic function for checking local link lines</li> <li>Detection using link special relays or link special registers</li> <li>Backup of power supply on a remote I/O station</li> <li>Online module change in a remote I/O station</li> </ul>							
Application function	Remote password for remote I/O station							
Transient transmission	<ul style="list-style-type: none"> <li>1:1 communication (Monitor, program upload/download, etc.)</li> <li>Various send/receive commands from the programmable controller program (READ/WRITE, REMFR/REMTO)</li> </ul>							



Item		Remote master station				Remote I/O station			
		QJ71LP21	QJ71LP21G	QJ71LP21GE	QJ71LP21-25	QJ71LP21S-25	QJ72LP25-25	QJ72LP25G	QJ72LP25GE
Number of occupied I/O points		32 points (Intelligent function module: 32 points)				48 points (I/O Assignment: empty; first 16, intelli.: second 32) *4	—		
External Power Supply	Voltage	—				20.4 to 31.2 V DC	—		
	Current	—				0.20 A	—		
	Size of terminal screw	—				M3 Screw	—		
	Suitable crimp terminal	—				R1.25-3	—		
	Suitable cable size	—				0.3 to 1.25 mm <sup>2</sup>	—		
	Tightening torque	—				0.42 to 0.58 N•m	—		
	Allowable momentary power failure time	—				1ms (Level PS1)	—		
	Noise immunity	—				By noise simulator of 500Vp-p noise voltage, 1ms noise width, and 25 to 60Hz noise frequency	—		
5 V DC internal current consumption		0.55 A				0.89 A			
External dimensions		98 (3.86)(H) × 27.4 (1.08)(W) × 90 (3.54)(D) [mm (inch)]				98 (3.86)(H) × 55.2 (2.18)(W) × 90 (3.54)(D) [mm(inch)]	98 (3.86)(H) × 27.4 (1.08)(W) × 90 (3.54)(D) [mm (inch)]		
Weight		0.11 kg				0.20 kg	0.15 kg		

\* 1: The remote master station includes the multiplexed remote master station and multiplexed remote sub-master station.

\* 2: On a multiplexed remote I/O network, one of 64 remote I/O stations works as a multiplexed remote sub-master station.

\* 3: The optical fiber cable (A-2P- □ ) differs in interstation distance between the L and H types. Refer to Section 4.8.1 for details.

\* 4: Two slots are occupied.

Set the numeric value resulted from adding 10H to the I/O No. of the slot where a module mounted as the "Starting I/O No." of the "Network parameter". The first empty 16 points can be set to "0" on the "I/O assignment" tab screen within the "Q Parameter" screen.

Example: Set 10H as the "Starting I/O No." when the module is mounted on slot 0.

(Set 0H as the "Starting I/O No." when 0 has been set to slot 0 on the "I/O assignment" tab screen.)

## 3.1.2 Coaxial cable system performance specifications

Table 3.2 shows the performance of the coaxial bus system.

Table 3.2 Coaxial cable system performance specifications

Item		Remote master station	Remote I/O station
		QJ71BR11	QJ72BR15
Maximum number of links per network	LX/LY	8192 points	
	LB	16384 points (Remote master station → remote sub-master station, remote I/O station: 8192 points, remote sub-master station, remote I/O station → remote master station: 8192 points)	
	LW	16384 points (Remote master station → remote sub-master station, remote I/O station: 8192 points, remote sub-master station, remote I/O station → remote master station: 8192 points)	
Maximum number of links per station	<ul style="list-style-type: none"> <li>Remote Master Station → Remote I/O station <math>((LY + LB)/8 + (2 \times LW)) \leq 1600</math> bytes * 1</li> <li>Remote I/O station → Remote Master Station <math>((LX + LB)/8 + (2 \times LW)) \leq 1600</math> bytes</li> <li>Multiplexed remote master station ↔ multiplexed remote sub-master station <math>((LY + LB)/8 + (2 \times LW)) \leq 2000</math> bytes</li> </ul>		
Maximum I/O points per remote I/O station	$X + Y \leq 4096$ points If the X/Y numbers are duplicate, only one side is taken into consideration.		
Device points per remote I/O station	M	8192 points	
	SM	2048 points	
	D	12288 points	
	SD	2048 points	
Communication speed	10 Mbps		
Number of stations per network	33 stations (Remote master stations: 1 Remote I/O stations: 32) * 2		
Overall distance	3C-2V	300 m (Between stations 300 m) * 3	
	5C-2V	500m (Between stations 500 m) * 3	
Can be extended up to 2.5 km with the use of a repeater (A6BR10,A6BR10-DC)			
Maximum number of networks	239 (Total including PLC to PLC networks)		
Transmission path format	Single layer bus		
Communication method	Token bus		
Synchronization method	Frame synchronization		
Coding method	Manchester code		
Transmission format	HDCL standards (Frame format)		
Error control	CRC ( $X^{16} + X^{12} + X^5 + 1$ ) and retry by timeover		
RAS functions	<ul style="list-style-type: none"> <li>Station separation function due to error detection or cable disconnection</li> <li>Diagnostic function for checking local link lines</li> <li>Detection using link special relays or link special registers</li> <li>Configuring a redundant power supply on a remote I/O station</li> <li>Online module change in a remote I/O station</li> </ul>		
Application function	<ul style="list-style-type: none"> <li>Remote password for remote I/O station</li> </ul>		
Transient transmission	<ul style="list-style-type: none"> <li>1:1 communication (Monitor, program upload/download, etc.)</li> <li>Various send/receive commands from the programmable controller program (READ/WRITE, REMFR/REMTO)</li> </ul>		
Maximum number of modules per CPU	4 modules	—	
Number of I/O points	32 points (Intelligent function module: 32 points)		
5 V DC internal current consumption	0.75 A	1.10 A	
External dimensions	98 (3.86)(H) × 27.4 (1.08)(W) × 90 (3.54)(D) [mm (inch)]		
Weight	0.11 kg	0.16 kg	

\* 1: The remote master station includes the multiplexed remote master station and multiplexed remote sub-master station.

\* 2: On a multiplexed remote I/O network, one of 32 remote I/O stations works as a multiplexed remote sub-master station.

\* 3: There are restrictions on the interstation cable length depending on the number of connected stations. Refer to Section 4.8.2 for details.

3.1.3 Optical fiber cable specifications

This section explains the specifications of the optical fiber cables used with the MELSECNET/H optical loop system. Confirm that the cable in use conforms to the details of the optical fiber cable specifications.

A technical skill and a special tool are needed when connecting an optical fiber cable to an exclusive connector.

Optical fiber cables with connectors are available from Mitsubishi Electric System & Service Co. Ltd. (Catalogs of the optical fiber cables are also available.)

For cabling, consult your local Mitsubishi Electric System & Service representative.

Table 3.3 Optical fiber cable specifications

Item		SI (Multi-particulate glass)	H-PCF (Plastic-clad)	Broad-band H-PCF (Plastic-clad)	QSI (Quartz glass)	QI-50/125 (Quartz glass)	QI-62.5/125 (Quartz glass)
Interstation distance	10 Mbps	500 m	1 km	1 km	1 km	2 km	2 km
	25 Mbps	200 m	400 m	1 km	1 km	Must not be used	Must not be used
Transmission loss		12 dB/km	6 dB/km	5 dB/km	5.5 dB/km	3 dB/km	3 dB/km
Core diameter		200 μm	200 μm	200 μm	185 μm	50 μm	62.5 μm
Clad diameter		220 μm	250 μm	250 μm	230 μm	125 μm	125 μm
Primary membrane		250 μm	—	—	250 μm	—	—
Applicable connector		F06/F08 or equivalent (JIS C5975/5977 conformance)					

**REMARKS**

The following types of optical fiber cables are available.

A type: Cable for connection inside control panel


B type: Cable for connection between control panels inside a building

C type: Cable for outdoor connection

D type: Reinforced cable for outdoor connection

For other special-purpose cables such as flexible cables or heat-resistant cables, contact Mitsubishi Electric System & Service Co., Ltd.

(1) Cable loss of GI-62.5/125 optical fiber cable

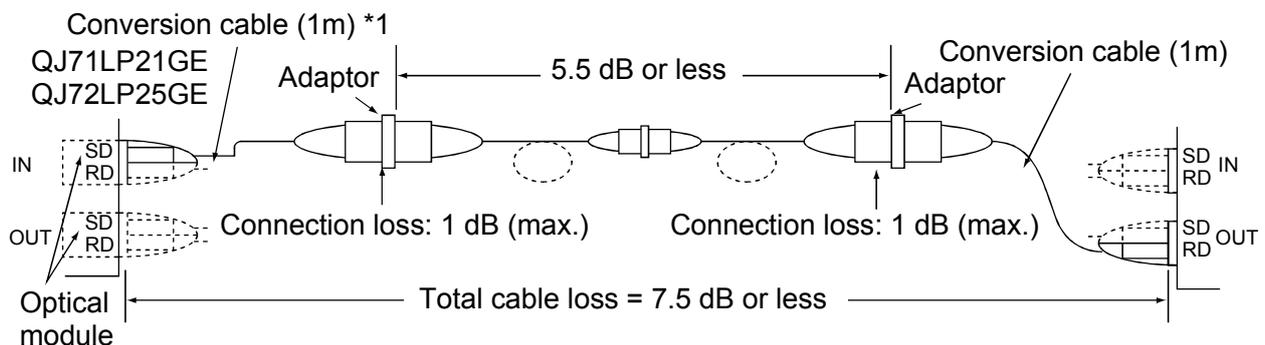

\*1: Conversion cable

Conversion Type	Cable
CA type ↔ FC type	AGE-1P-CA/FC1.5M-A
CA type ↔ ST type	AGE-1P-CA/ST1.5M-A
CA type ↔ SMA type	AGE-1P-CA/SMA1.5M-A

Purchased from: Mitsubishi Electric Europe GmbH

3.1.4 Coaxial cable specifications

The following table lists the specifications of the coaxial cables used for the coaxial bus system.

The high frequency coaxial cable "3C-2V" or "5C-2V" (conforms to JIS 3501) is used. However, when configuring a multiplexed remote I/O network for redundant system, use a double shield coaxial cable. (Refer to section 4.8.2.)

(1) Coaxial cable specifications

The specifications of the coaxial cable are shown in Table 3.4.

Select coaxial cables that meet the operating ambient temperature (0 to 55°C) shown in the general specifications of the programmable controller.

Table 3.4 Coaxial cable specifications

Item	3C-2V	5C-2V
Structure		
Cable diameter	5.4 mm (0.21 in.)	7.4 mm (0.29 in.)
Minimum allowable bend radius	22 mm (0.87 in.) or more	30 mm (1.18 in.) or more
Internal conductor diameter	0.5 mm (0.02 in.) (annealed copper wire)	0.8 mm (0.03 in.) (annealed copper wire)
Insulating material diameter	3.1 mm (0.12 in.) (polyethylene)	4.9 mm (0.19 in.) (polyethylene)
External conductor diameter	3.8 mm (0.15 in.) (single annealed copper wire mesh)	6.6 mm (0.26 in.) (single annealed copper wire mesh)
Applicable connector plug	3C-2V connector plug (BNC-P-3-NiCAu is recommended.)	5C-2V connector plug (BNC-P-5-NiCAu is recommended.)

**REMARKS**

Consult the nearest Mitsubishi representative with connector plugs.

(2) Connecting the coaxial cable connectors

The following section explains how to connect the BNC connector (the connector plug for the coaxial cable) to the cable.

 <b>CAUTION</b>	<ul style="list-style-type: none"> <li>Solder the coaxial cable connectors properly. Insufficient soldering may result in malfunctions.</li> </ul>
--	--

(a) Structure of the BNC connector and coaxial cable

The structure of the BNC connector and coaxial cable are shown in Figure 3.1.


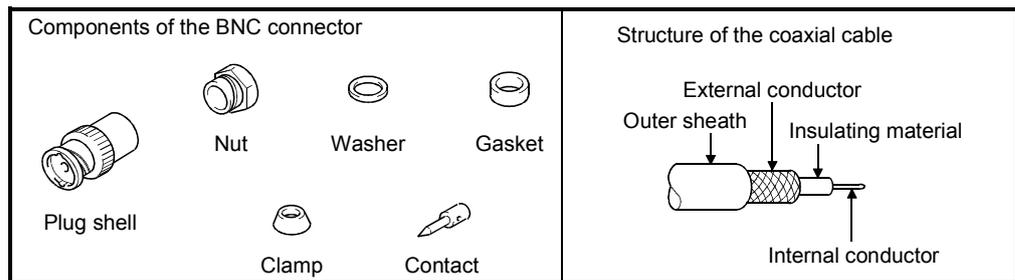


Figure 3.1 Structure of the BNC connector and coaxial cable

(b) How to connect the BNC connector and the coaxial cable


- Cut the portion of the outer sheath of the coaxial cable as shown in the diagram below.

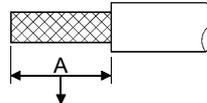


Cut this portion of the outer sheath

Applicable cable	A
3C-2V	15mm (0.59 in.)
5C-2V, 5C-2V-CCY	10mm (0.4 in.)

- Fit the nut, washer, gasket and clamp onto the coaxial cable, as shown below, and then loosen the external conductor.

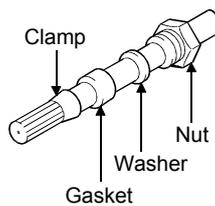


- Cut the external conductor, insulating material and internal conductor to the dimensions shown below. Note that the external conductor should be cut to the same dimension as the tapered section of the clamp and smoothed down to the clamp.

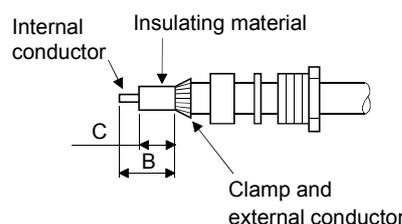


Applicable cable	B	C
3C-2V	6mm (0.24 in.)	3mm (0.12 in.)
5C-2V, 5C-2V-CCY	7mm (0.28 in.)	5mm (0.2 in.)

- 4) Solder the contact to the internal conductor.

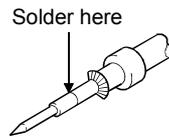

- 5) Insert the connector assembly shown in 4) into the plug shell and screw the nut into the plug shell.

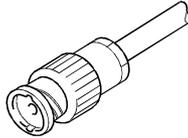

- (1) The following precautions should be observed when soldering the internal conductor and contact:
- Make sure that the solder does not bead up at the soldered section.
  - Make sure that there are no gaps between the connector and cable insulating material and that they do not cut into each other.
  - Solder as quick as possible so the insulating material does not deform.
- (2) Before connecting or disconnecting the coaxial connector, touch a grounded metal object to discharge the static electricity from the human body. Failure to do so may result in a module malfunction.

### 3.2 Function Specifications

The following introduces the MELSECNET/H remote I/O network functions.  
The list of the functions is shown below.

Basic functions	Cyclic transmission function (Periodic communication)	Communicating with input/output module . . . . .	Section 3.2.1 (1)	
		Communicating with intelligent function module . . . . .	Section 3.2.1 (2)	
	RAS functions	Output reset function for communication errors . . . . .	Section 3.2.2 (1)	
		Hardware error time CPU operation mode setting . . . . .	Section 3.2.2 (2)	
		Automatic return function . . . . .	Section 3.2.2 (3)	
		Loopback function (Optical loop system) . . . . .	Section 3.2.2 (4)	
		Station detach function (Coaxial bus systems) . . . . .	Section 3.2.2 (5)	
		Transient transmission enabled even at CPU module error . . . . .	Section 3.2.2 (6)	
		Checking the transient transmission abnormal direction time . . . . .	Section 3.2.2 (7)	
		Diagnostic functions . . . . .	Section 3.2.2 (8)	
Redundant power supply on a remote I/O station . . . . .	Section 3.2.2 (9)			
Online module change in a remote I/O station . . . . .	Section 3.2.2 (10)			
Application functions	Transient transmission function (Non-periodic communication)	Link dedicated instruction	Reading/writing remote I/O station intelligent function module buffer memory (REMFRR/REMTOR) . . . . .	Section 7.1.1 (1)
			Remote I/O station system monitor . . . . .	Section 7.2
	Device test for remote I/O station . . . . .	Section 7.3		
	Multiplex transmission function (Optical loop system) . . . . .	Section 7.4		
	Return sequence station number setting function . . . . .	Section 7.5		
	Reserved station function . . . . .	Section 7.6		
	Interrupt settings . . . . .	Section 7.7		
	I/O assignment function . . . . .	Section 7.8		
	Stopping/restarting the cyclic transmission and stopping link refreshing (Network test) . . . . .	Section 7.9		
	Multiplex remote master function (Process CPU) . . . . .	Section 7.10		
	Multiplexed remote master function for redundant system (Redundant CPU) . . . . .	Section 7.11		
	Remote password . . . . .	Section 7.12		
Network diagnostics (Network monitor) . . . . .	Section 8.1			

3.2.1 Cyclic transmission function (Periodic communication)

The cyclic transmission function periodically exchanges data between the remote master station and remote I/O station using link device (LX/LY/LB/LW)

The following explains the differences between when the module connected to the remote I/O station is an I/O module and when it is an intelligent module connected to it.


(1) Communicating with I/O modules

The remote master station uses input/output X/Y(LX/LY) device after the actual I/O for the host so that there can be communication with the I/O module on the remote I/O station.

When communicating between the remote master station and the remote I/O station, network parameter is written to the remote master station.

The device range for communicating with each remote I/O station is set by the remote master station common parameters.

PLC parameters written to the remote I/O station will not cause problems with the I/O module communication, even with the default settings. Change the settings of the PLC parameters as needed.

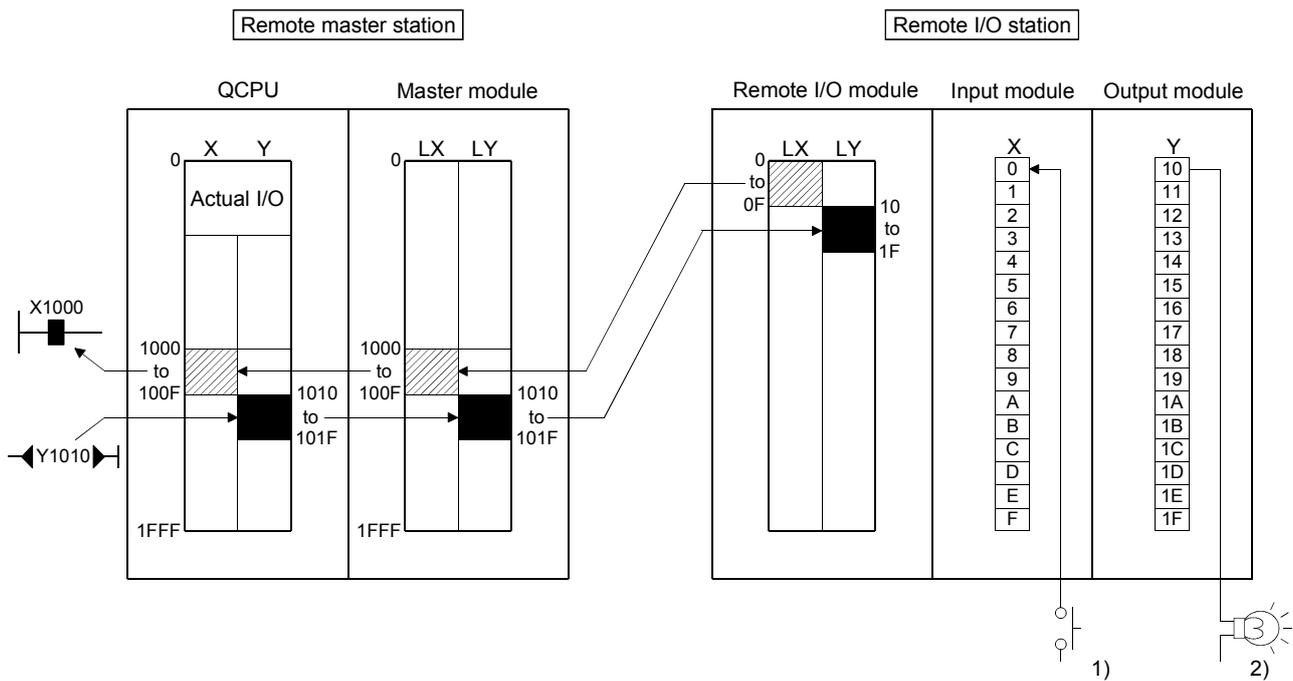

(2) Communicating with intelligent function modules

The remote master station can communicate with the intelligent function module mounted to the remote I/O station in the following four ways.

	Methods for communicating with the intelligent module	Features
(a)	By cyclic transmission (common parameters) + intelligent function module parameters (Automatic refresh target device W).	When the intelligent function module is mounted to a nearby slot of the CPU module, the same kind of sequence program can be created. Regular time data can be read without regard to timing
(b)	Dedicated instructions for the intelligent function module (REMFR, REMTO)	The GX Configurator is not needed. Data can be communicated only when needed.
(c)	By cyclic transmission (common parameters) + intelligent function module parameters (Automatic refresh target device D). Remote I/O station parameters (parameters for transmitting between devices)	When the intelligent function module is mounted to a nearby slot of the CPU module, the same kind of sequence program can be created. In a way different from method 1, it is also possible to set the intelligent function module parameters in the same way as setting for the host.
(d)	Link dedicated instructions (READ, WRITE) Intelligent function module parameters (Automatic refresh target device D)	When the intelligent function module is mounted to a nearby slot of the CPU module, the same kind of sequence program can be created. Data can be communicated only when needed.

In communication methods (a), (c) and (d), when there is communicating between remote master station and remote I/O station, the network parameters are written to the remote master station and the PC parameters and intelligent function module parameters are written to the remote I/O station.

The device range for communicating with each remote I/O station is set by the remote master station common parameters.

PC parameters written to the remote I/O station will not cause problems with the intelligent function module communication, even with the default settings.

Change the settings of the PLC parameters as needed.

POINT
(1) Note that the number of intelligent function module parameters (initial setting, automatic refresh setting) that may be set is limited. If the number of parameters set exceeds the limited number, the remote I/O module detects the "SP. PARA ERROR (3301)" error. If the error has been detected, read/write the data of the intelligent function modules using the REMFR/REMTO instruction.
(a) The following is the number of parameters that may be set for initial setting. Sum total of the numbers of parameters within the setting ranges of all intelligent function modules $\leq 512$
(b) The following is the number of parameters that may be set for automatic refresh setting. Sum total of the numbers of parameters within the setting ranges of all intelligent function modules $\leq 256$
The number of parameters for initial setting is preset to each intelligent function module. To confirm the numbers of parameters for initial setting, refer to the user's manuals of the corresponding intelligent function modules. Refer to Section 6.3 for the way to count the number of parameters for automatic refresh setting.
(2) A remote master station cannot execute the dedicated instructions for intelligent function module to the intelligent function modules mounted in a remote I/O station.


- (a) The CPU module reads and writes intelligent function module data at fixed intervals, using the following devices and setting.
  - X/Y (LX/LY) and B/W (LB/LW) devices that are set with common parameters
  - Intelligent function module parameters (auto refresh setting) written to the remote I/O module

The intelligent function module parameters are created by GX Configurator. (For more detailed information, refer to the manual for the intelligent function module you are using.)

···· With this method, a sequence program can be created to allow communication in the same way as with an intelligent function module mounted to the same base units as the CPU module.

The analog input values for the analog-digital converter module, the current values of the high speed counter module and others are periodically read and suited for periodic writing of the analog output value for the digital-analog converter module.

**POINT**  
 With this method, since data is read and written periodically, there is no interlock with the intelligent function module.

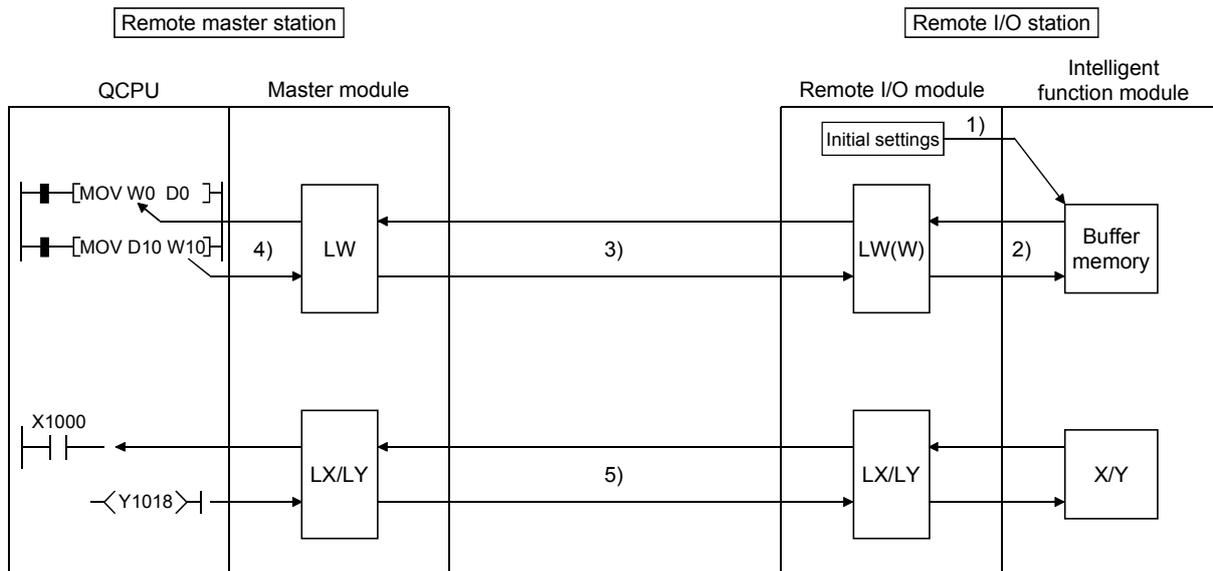

[Buffer memory]

- 1) The GX Configurator is used to write the initial settings for the intelligent function module and the automatic refresh settings to the remote I/O station remote I/O module.
- 2) The remote I/O module follows the automatic refresh settings and refreshes the data in the buffer memory of the intelligent function module to link register W of the remote I/O module.
- 3) Link register W, follows the common parameters set in the remote master station for communication between the remote master station and the remote I/O station.

- 4) QCPU follows the refresh parameters and refreshes link register W between QCPU and the master module.

[Input/output]

- 5) X/Y(LX/LY) is the same as communication with I/O module.

- (b) The CPU module reads or writes data using a link dedicated instruction (REMFR/REMTO).


With a link dedicated instruction (REMFR/REMTO), data are directly read from or written to the buffer memory of the intelligent function module on the remote I/O station.

... This method can be used for the following applications.

- During intelligent function module control, when reading and writing data with the sequence program only when data is needed.
- When an interlock with the intelligent function module is desired.
- When link register W to remote I/O station is insufficient.

Moreover, this method can be used for reading and writing data when there is no GX Configurator available.

Refer to Section 7.1.1 for details on the REMFR/REMTO instructions.

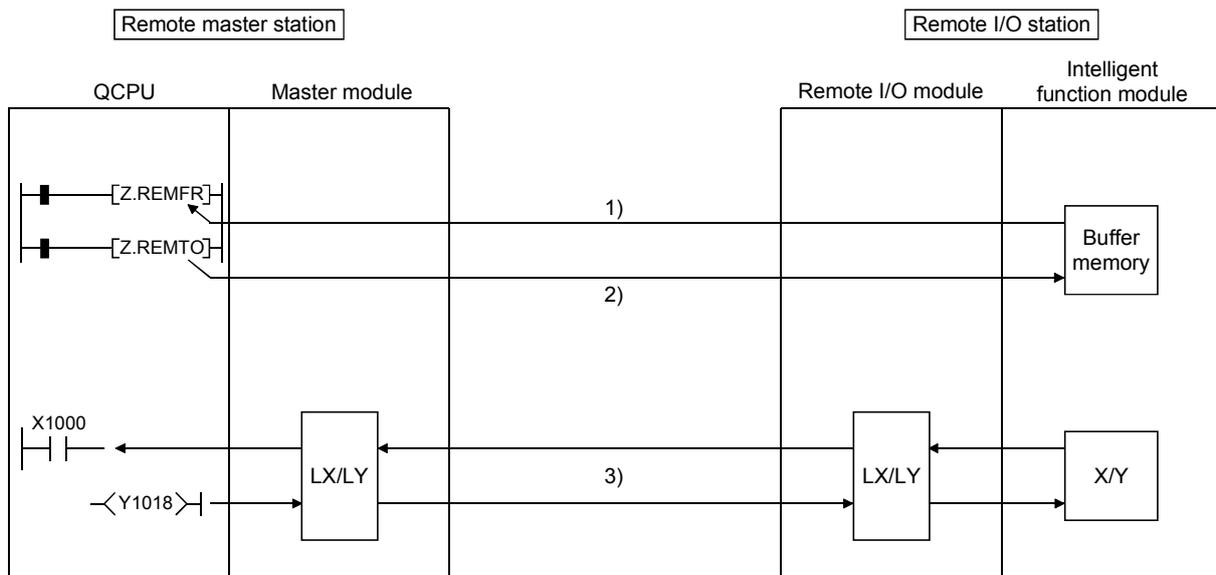

[Buffer memory]

- 1) QCPU uses the REMFR instruction to read the contents of the intelligent function module buffer memory.
- 2) QCPU uses the REMTO instruction to write the contents in the intelligent function module buffer memory to the intelligent function module.


[Input/output]

- 3) X/Y(LX/LY) is the same as communication with I/O module.

- (c) The CPU module reads and writes intelligent function module data at fixed intervals, using the following devices and setting.
  - X/Y (LX/LY) and B/W (LB/LW) devices that are set with common parameters
  - Intelligent function module parameters (auto refresh setting) written to the remote I/O module

The difference between this and (a) is that with the automatic refresh settings for the intelligent function module parameters, the automatic refresh destination of the intelligent function module is remote I/O module data register D. Data register D, uses the PLC parameters for the remote I/O module to transmit to link register W among devices.

... With this method, a sequence program can be created to allow communication in the same way as with an intelligent function module mounted to the same base units as the CPU module. The analog input value for the analog-digital converter module, current value for the high-speed count module and others are periodically read to suit the digital-analog converter module analog output value being periodically written. In addition, there is no need to revise the intelligent function module parameters even if the network parameters for the remote master station are changed.

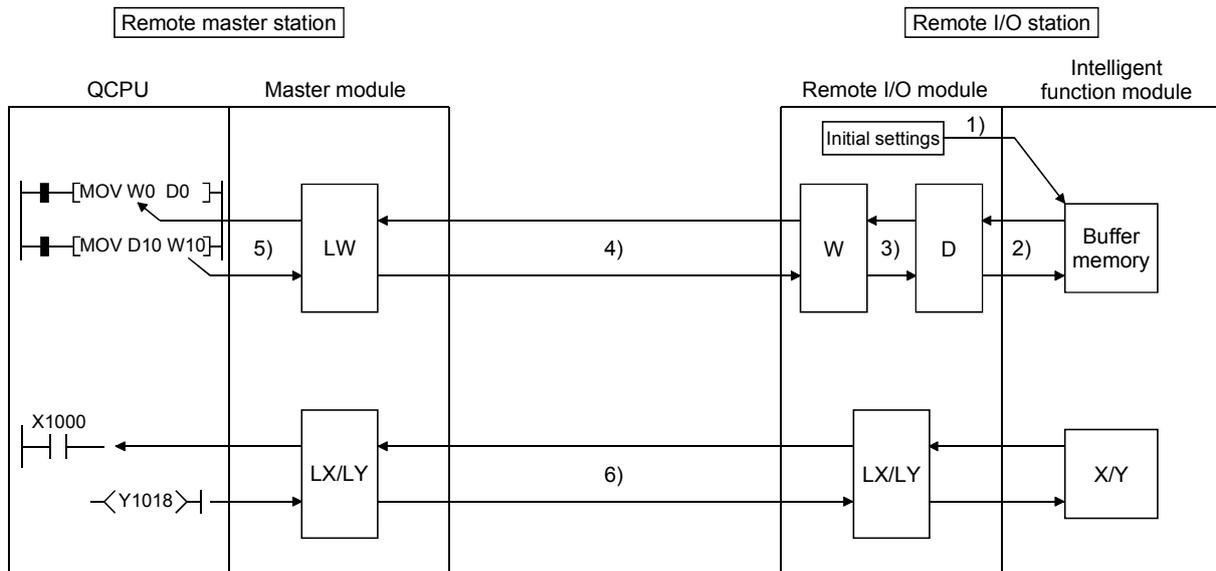


[Buffer memory]

- 1) The GX Configurator is used to write the initial settings for the intelligent function module and the automatic refresh settings to the remote I/O station remote I/O module.
- 2) The remote I/O module follows the automatic refresh settings and refreshes the data in the buffer memory of the intelligent function module to the data register D of the remote I/O module.
- 3) The remote I/O module uses transfer among devices for the PLC parameters written to the host to send data register D to link register W.

- 4) Link register W, follows the common parameters set in the remote master station for communication between the remote master station and the remote I/O station.
  - 5) Link register W between the master module and QCPU are refreshed.  
[Input/output]
  - 6) X/Y(LX/LY) is the same as communication with I/O module.
- (d) The CPU module reads or writes data register D of the remote I/O module with a link dedicated instruction (READ/WRITE).  
To data register D, intelligent function module data are refreshed, using intelligent function parameters (auto refresh setting).  
... This method can be used for the following applications.
- During intelligent function module control, when reading and writing data with the sequence program only when data is needed.
  - When link register W to remote I/O station is insufficient.

For details on the read/write instructions, refer to the Q corresponding MELSECNET/H network system reference manual (PLC to PLC network).

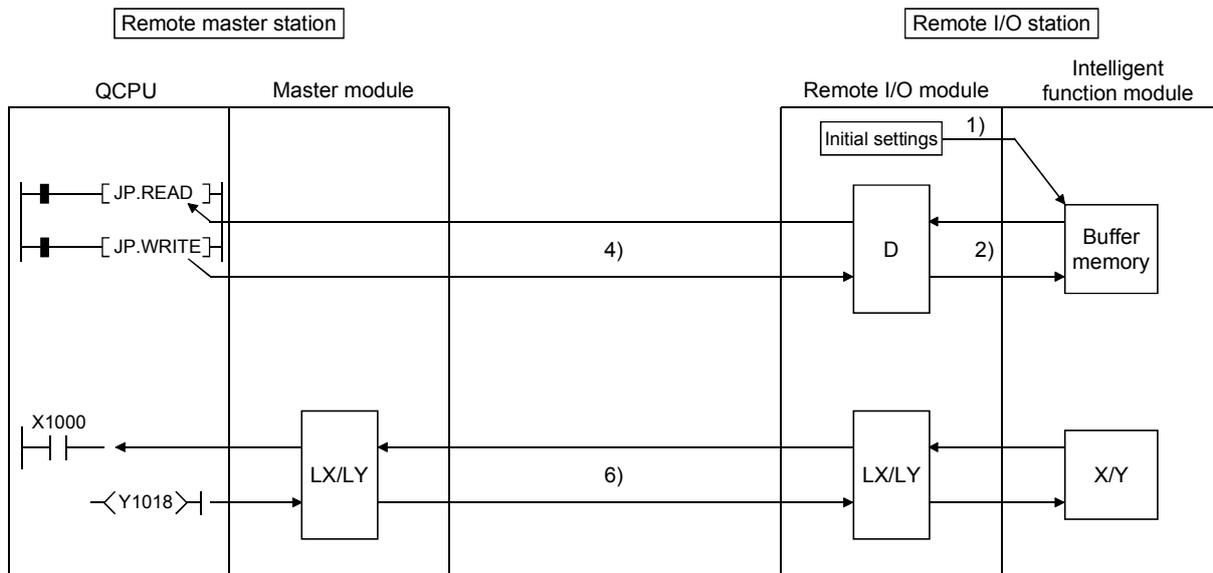

[Buffer memory]

- 1) The GX Configurator is used to write the initial settings for the intelligent function module and the automatic refresh settings to the remote I/O station remote I/O module.
- 2) The remote I/O module follows the automatic refresh settings and refreshes the data in the buffer memory of the intelligent function module to the data register D of the remote I/O module.
- 3) QCPU uses the read/write instructions to read and write to remote I/O module data register D.

[Input/Output]

- 4) X/Y(LX/LY) is the same as communication with I/O module.

### 3.2.2 RAS functions

RAS stands for "Reliability", "Availability" and "Serviceability" and is an automated facility for overall ease of use.

#### (1) Output reset function for communication errors

Remote I/O net will set all output of remote I/O stations to off when there is a data link error.

It will also set all output of remote I/O stations to off when the data links are operating properly but the remote master station CPU module is down.

To hold the output of a remote I/O station even in the case of an error, set "Error time output mode" to "Hold" in the detailed I/O assignment setting in "PLC Parameter" for the remote I/O station.

Refer to the GX Developer Operating Manual for more information about setting the PLC parameters.

If the remote master station has a remote I/O station that has experienced a data link communication error or communication stop, it saves the received data (X,B,W) from the remote I/O station in the immediately preceding data.

<b>POINT</b>
To hold output analog values of a digital-analog converter module, set "Error time output mode" to "Hold" and retain the CH□ Output enable/disable flag status.

#### (2) Hardware error time CPU operation mode setting\*1

This setting specifies whether to stop or continue the operation of a remote I/O station when a hardware error occurs in an intelligent function module on the remote I/O station.

The hardware error time CPU operation mode is set in I/O assignment in PLC parameter.

For the PLC parameter setting method, refer to GX Developer Operating Manual.

##### (a) When set to "Stop" (default)

Automatic refresh of all intelligent function modules on the remote I/O station is stopped.

##### (b) When set to "Continue"

Automatic refresh is continued for modules other than the intelligent function module in which a hardware error has occurred.

\*1: The hardware error time CPU operation mode setting is available for the following remote I/O module and GX Developer:

- Remote I/O module: First five digits of serial No. is "10012" or later.
- GX Developer: GX Developer: Version 8.62Q or later

(3) Automatic return function


When a station disconnected from a network due to a data link error recovers from the error, the station is automatically reconnected to the network and restarts data link.

(a) When a remote I/O station restarts data link (the "D.LINK" LED is lit.)  
The remote I/O station resets all of the modules mounted on the station. If data link is resumed by connecting/disconnecting the link cable, the modules are not reset.

(b) When parameter change or reset of a remote I/O station (including power cycle) was performed  
After parameters of a remote I/O station are changed, if parameter change or reset is performed at the remote master station, or if the remote I/O station is reset (power off and then on, or the reset switch turned on), the modules will be reset when the remote I/O station returns to the system to resume the data link. Consequently, even if the output setting under a CPU error is set to HOLD (retention) in an output module, digital-analog converter module, or temperature control module, output cannot be retained when data link is resumed.

1) The remote I/O station No. 2 is disconnected due to a data link error.

2) The station No. 2 recovers to the normal status and returns to the system.

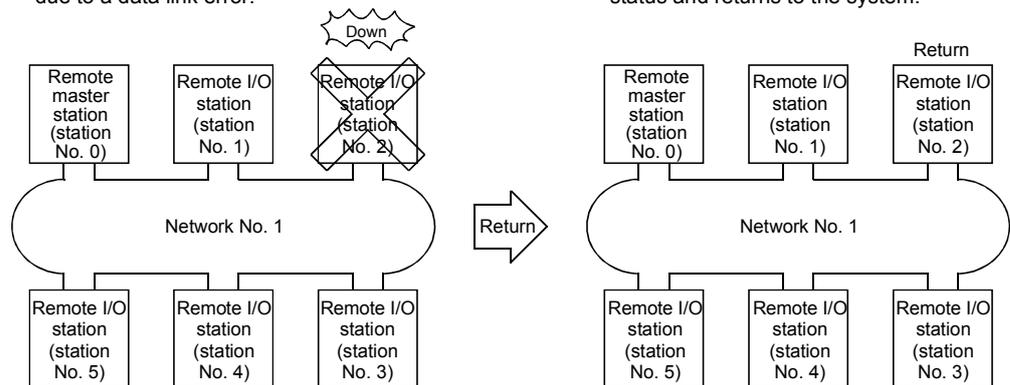

**POINT**


There is a limit to the number of faulty stations that can return to the system within one link scan. For details, refer to Section 5.1.4, "Supplementary Settings."

(4) Loopback function (optical loop system)

In the optical loop system, the transmission path is dual-structured. When an error occurs in a transmission path, the faulty area is disconnected by switching the transmission path from the forward loop to the reverse loop or from the reverse loop to the forward loop, or performing a loopback. The transmission is continued normally between the stations that are still able to perform data communication.

(a) When normal


The data link is performed using the forward loop (or the reverse loop).

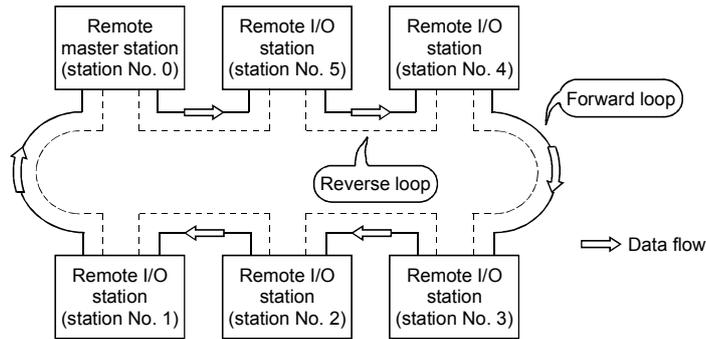

(b) When abnormal

1) Disconnection in the forward loop (reverse loop)


The data link continues using the reverse loop (forward loop).

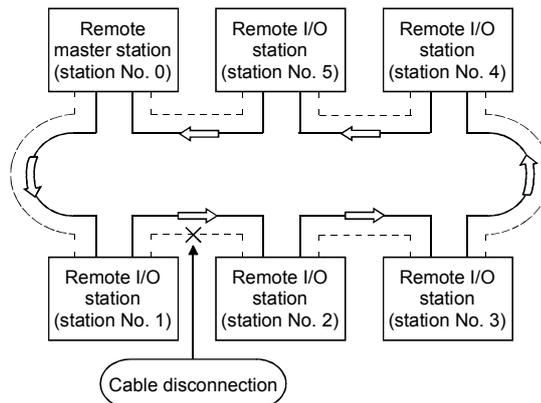

2) When some of the stations are down

The data link continues excluding the stations that are down.

When two or more stations are down, the data link cannot be performed with the station located between the stations that are down.

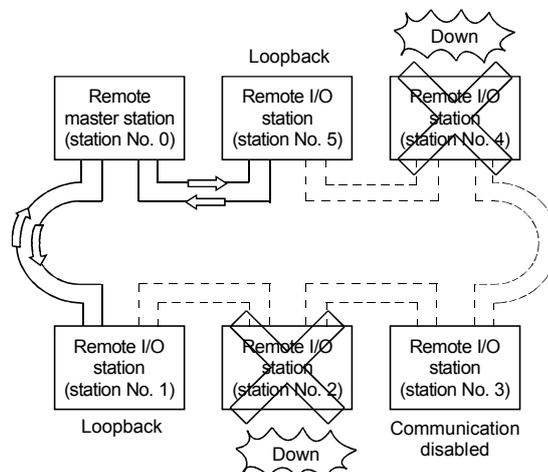

(c) Precautions in using the optical loop system

- 1) When the cable is inserted or removed, the line (forward loop/reverse loop) may be switched, but the data link will be performed normally.
- 2) When the loopback is being executed due to a cable disconnection, both the forward and reverse loops may be recognized as normal depending on the condition of the cable disconnection.

Whether the forward/reverse loop is normal/abnormal is determined by the status of "RD" (receive) of the loopback station.

(Example)

In the cases described below, the data link continue by dividing the network into two loops: "1M<sub>R</sub>-1R5-1R6"

<Loop containing 1M<sub>R</sub>1-1R4-1R5>

- 1M<sub>R</sub>1: Forward loop normal/reverse loop normal
- 1R4 : Forward loop normal/reverse loop normal
- 1R5 : Forward loop normal/reverse loop normal

} Forward loop normal  
 } Reverse loop normal  
 } normal

<Loop containing 1R1-1R2-1R3>


- 1R1 : Forward loop "RD" abnormal/reverse loop normal
- 1R2 : Forward loop normal/reverse loop normal
- 1R3 : Forward loop normal/reverse loop "RD" abnormal

} Forward loop abnormal  
 } Reverse loop abnormal  
 } abnormal



Communication disabled

An RD abnormal detection in the forward loop → Loopback with the reverse loop

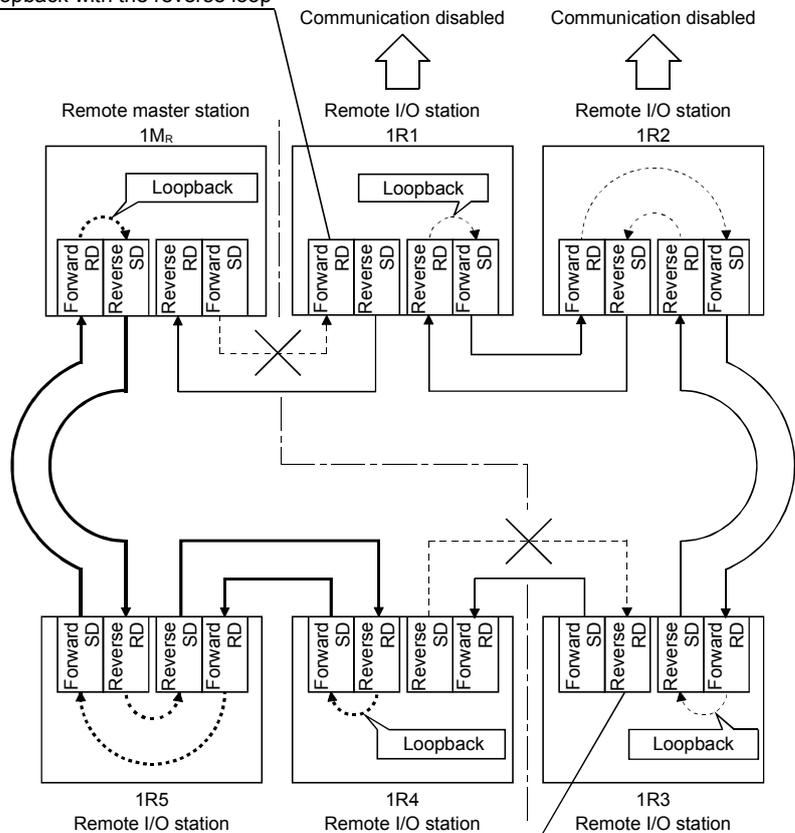

An RD abnormal detection in the reverse loop → Loopback with the forward loop

Communication disabled

**REMARKS**

If the network module has become faulty, a loopback may not be made depending on the fault.

In that case, the network may stop. Identify the faulty network module in the following method.


- (1) Check the LED indications (RUN LED off, ERR. LED on) of all network modules for a faulty station.
- (2) Power off all stations and power them on in order, starting from the remote master station. At that time, check up to which station the network operates properly.

Change the network module where the fault has been detected, and confirm that the network is restored to normal.

**(5) Station detach function (coaxial bus system)**


In the coaxial bus system, even if the power to a connected station is turned off, the data link continues between other stations which are still able to perform data communication.

**(a) When normal**

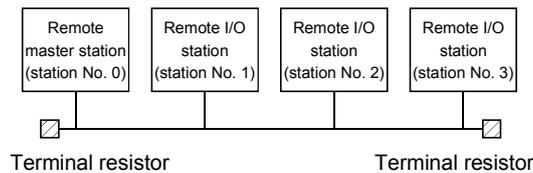


**(b) When abnormal**

The data link continues excluding the station that is down.

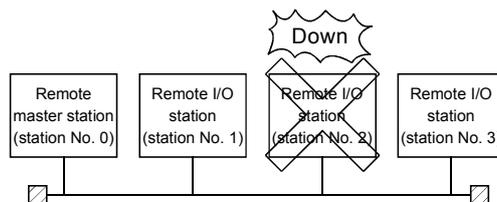


**POINT**

When a cable disconnection occurs, the data link cannot be performed because there will be no terminal resistors.

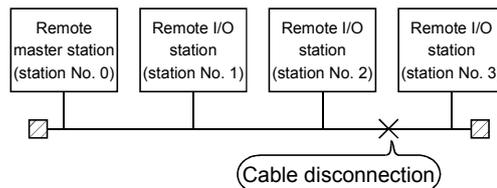

In addition, even if the cable is normal, the data link cannot be performed if a terminal resistor is detached from an F-type connector.

- (6) Transient transmission enabled even at CPU module error  
 By using this function, the network module can continue the transient transmission even if an error that stops the CPU module occurs while the system is operating.  
 The description of the error of the corresponding station can be checked from other stations using GX Developer.

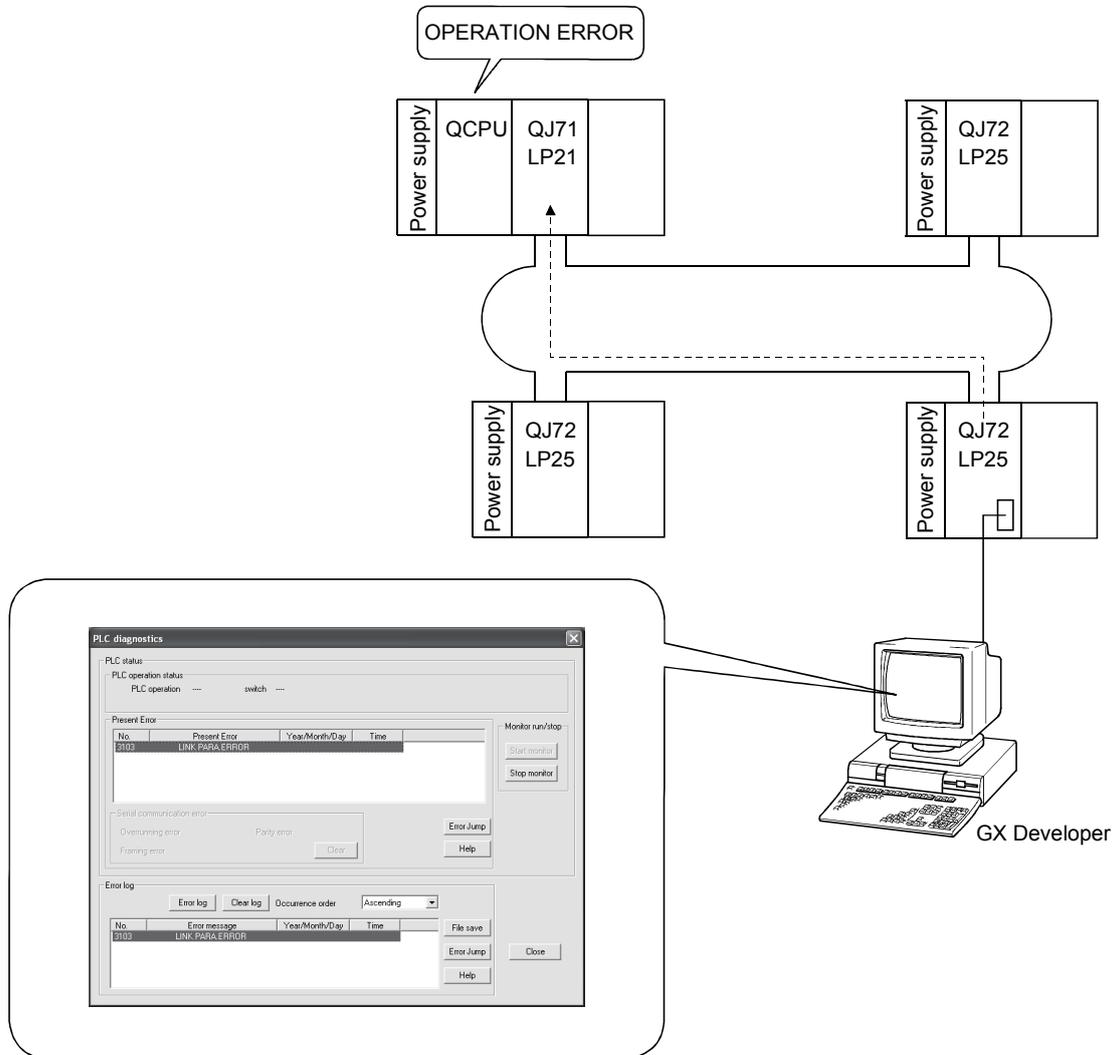

The following table lists the operations of the cyclic and transient transmissions for each CPU module status.

CPU module status	Rank	Cyclic transmission	Transient transmission
	Battery error Annunciator error ON, etc. (Continue error)		
Parameter error Instruction code error, etc. (Stop error)	Medium error	Stopped	Enabled
CPU reset, etc. (MAIN CPU down)	Major error	Stopped	Disabled*


\* : Accessing the remote master station from GX Developer or like using the transient function will result in a communication error.

(7) Checking the transient transmission abnormal detection time

By using this function, the "Time," "Abnormal detection network number," and "Abnormal detection station number" can be checked when a transient transmission (READ, WRITE and other instructions) ends abnormally.

The time log can be used to identify the network problems and to determine how the network can be improved.

For details on the instructions, refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).

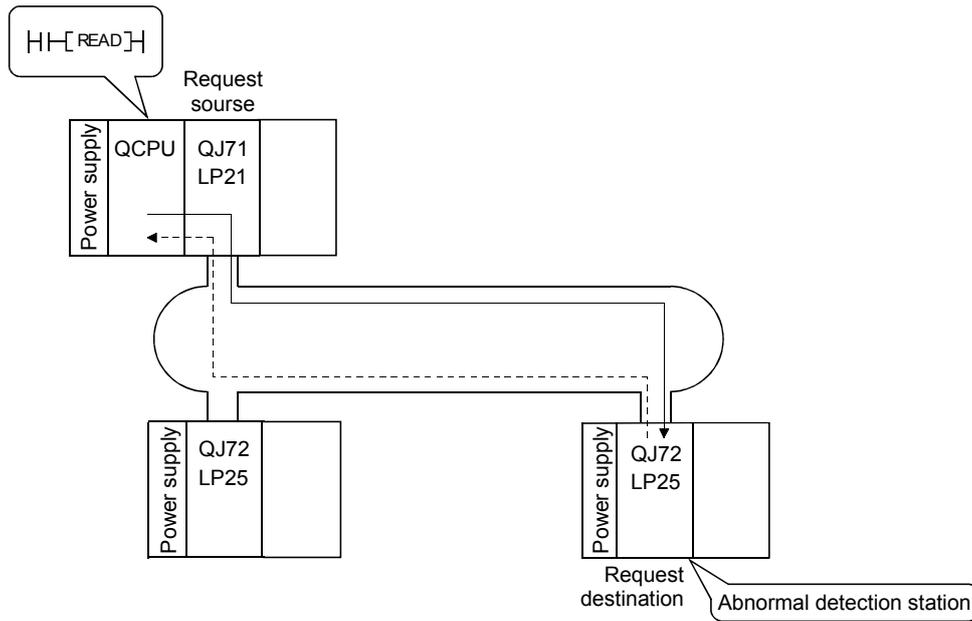

(8) Diagnostic function

The diagnostic function is used to check the network's line status and the module setting status.

The diagnostic function consists mainly of following two types of tests:

- Offline tests
- Online tests

<b>POINT</b>
Execute the online tests when the network module is communicating (T.PASS LED is on). An error occurs if any of the online tests is executed from a station that has been disconnected from the data link.

1) Offline tests

The network module's hardware and the data link cable wiring can be checked at the system startup by setting the network module or GX Developer to the test mode.

Item	Description	Optical loop system	Coaxial bus system	Reference section
Self-loopback test	Checks hardware including the send/receive circuits and the cables of the transmission system of an individual network module.	○	○	Section 4.7.1
Internal self-loopback test	Checks hardware including the send/receive circuits of the transmission system of an individual network module.	○	○	Section 4.7.2
Hardware test	Checks hardware inside the network module.	○	○	Section 4.7.3
Forward loop/reverse loop test	Checks the wiring status of the forward and reverse loops in the status in which all the stations are connected. (Remote master station only)	○	×	Section 4.9.2

2) Online tests

The status of a line and other items can be easily checked with GX Developer.

If an error occurs while the system is in operation, the diagnostics listed below can be executed while remaining in the online status.

Item	Description	Optical loop system	Coaxial bus system	Data link status (cyclic transmission or transient transmission)	Reference section
Loop test	Checks the line status.	○	×	Pause	Section 4.10.1
Setup confirmation test	Checks for duplicate control stations and station numbers.	○	○	Pause	Section 4.10.2
Station order check test	Checks the order of stations connected in the directions of the forward and reverse loop.	○	×	Pause	Section 4.10.3
Communication test	Checks whether or not the transient transmission can be performed normally. It also checks the routing parameter settings.	○	○	Continue	Section 4.10.4


(9) Redundant power supply on a remote I/O station

A redundant power supply can be configured on a remote I/O station by mounting a pair of power supply modules onto the dedicated base unit.

A redundant power supply offers the following advantages.

- 1) The remote I/O station can continue the operation after either power supply module stops power supply  
The remote I/O station with a redundant power supply can continue the operation even if either of the power supply modules stops power supply, as the remaining power supply module supplies power instead.
- 2) A faulty power supply module can be replaced online (hot-swapping)  
A faulty power supply module can be replaced online (hot-swapping), as the remote I/O station operates using the remaining power supply module.

To take advantages of the redundant power supply, connect separate power supplies to the power supply modules.

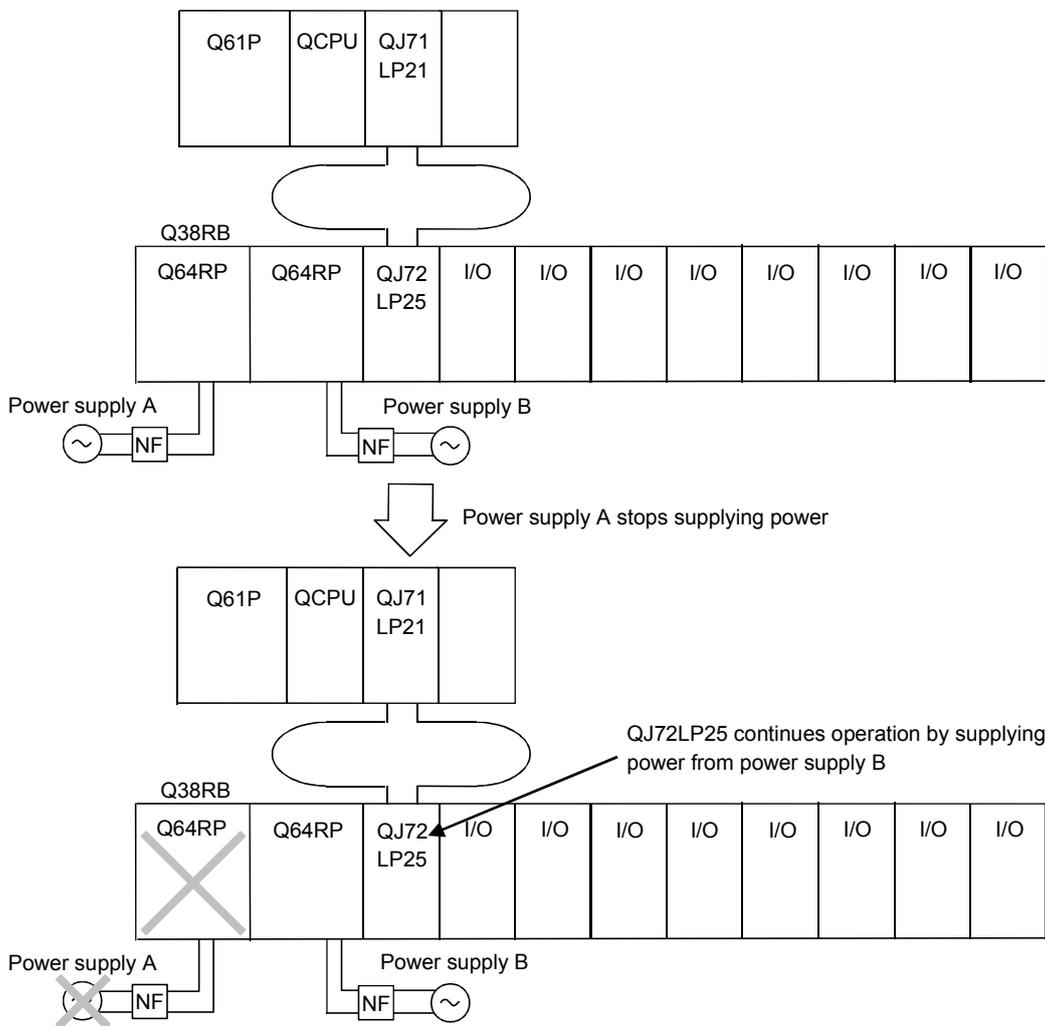

If either of the power supply modules stops supplying power, the remote I/O station detects error code 1510 "SINGLE PS DOWN" or 1520 "SINGLE PS ERROR" (moderate error). Errors in the remote I/O station can be confirmed through the PLC diagnostics/system monitor of GX Developer (version 8.17T or later), the ERR. LED of the remote I/O module, and the ERR contact of the power supply module.

**POINT**

For the specifications of Q3□RB/Q6□RB Redundant power supply base unit and Q6□RP redundant power supply module, refer to QCPU User's Manual (Hardware Design, Maintenance and Inspection).

- (a) Modules needed to configure a redundant power supply in a remote I/O station  
 To configure a redundant power supply in a remote I/O station, use the modules shown below.
- 1) Main base unit: Q3□RB
  - 2) Extension base unit: Q6□RB
  - 3) Power supply module: Q6□RP
  - 4) Remote I/O module: QJ72LP25-25, QJ72LP25G, QJ72LP25GE, and QJ72BR15 (function version D)
- (b) Link special register used for configuring a redundant power supply  
 The remote master station can confirm the status of the power supplies of remote I/O stations using the link special registers shown below.  
 If either of the power supplies stops supplying power, the remote I/O station detects error code 1510 "SINGLE PS DOWN" or 1520 "SINGLE PS ERROR" (moderate error).

No.	Name	Description	Availability																																																																			
			Control station		Normal station		Remote master station		Remote I/O station																																																													
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																												
* 1 SW0088 • SW0089 • SW008A • SW008B	Operation status of each station CPU (2)	The CPU status of each station is stored (including the host). Only normal stations out of SW0070 to 0073 are effective. 0: normal (including the maximum station No. or later and reserved stations) 1: minor error  <table style="margin-left: 20px; border-collapse: collapse;"> <tr> <td></td> <td>b15</td> <td>b14</td> <td>b13</td> <td>b12</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> <td></td> </tr> <tr> <td>SW0088</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>○</td> </tr> <tr> <td>SW0089</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> <td>○</td> </tr> <tr> <td>SW008A</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> <td>○</td> </tr> <tr> <td>SW008B</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> <td>○</td> </tr> </table> In the table, 1 to 64 indicate station No.		b15	b14	b13	b12	to	b4	b3	b2	b1	b0		SW0088	16	15	14	13	to	5	4	3	2	1	○	SW0089	32	31	30	29	to	21	20	19	18	17	○	SW008A	48	47	46	45	to	37	36	35	34	33	○	SW008B	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																												
SW0088	16	15	14	13	to	5	4	3	2	1	○																																																											
SW0089	32	31	30	29	to	21	20	19	18	17	○																																																											
SW008A	48	47	46	45	to	37	36	35	34	33	○																																																											
SW008B	64	63	62	61	to	53	52	51	50	49	○																																																											

\* 1: Effective only when SB0047 is OFF. When this signal is turned ON (error), the data just before ON are held.

- The link special register stores minor errors caused by the factors below in addition to power supply disconnection.
- When an error specified as "Continue" in the "operation mode under error condition" in the PC RAS settings of parameters (fuse blown or module verification error) occurs

- (c) Precautions on configuring a redundant power supply
- 1) If either of the power supply modules fails and it needs to be replaced in a remote I/O station including redundant power supply, replace the other power supply module as well, in order to prevent the potential accidents  
Also, it is recommended to replace power supply modules five years after the remote I/O station starts to run.  
For procedures for replacing a redundant power supply module in a normal operating state, refer to Section 8.5.
  - 2) For the Q64RP power supply modules for the redundant power supply system, it is recommended to supply AC power from one of them and to supply power from the other via UPS (Uninterruptible Power Supply).  
Use the on-line UPS or line interactive UPS, of which voltage distortion is less than 5%. Or use the off-line UPS, Mitsubishi FREQUPS-F Series with serial No. P or later. (Example: FW-F10-0.3K/0.5K).  
Do not use the off-line UPS other than above.
  - 3) When mounting modules onto the Q38RB or Q68RB redundant power supply base unit, make sure that the sum of 5VDC current consumption of them is within 8.5 A, the rated current value of a power supply module.
  - 4) Connect a NF (non-fuse breaker) to each power supply module so that power supply modules can be shut down separately when either of power supply modules has failed.
  - 5) The output of the ERR contact of the power supply module mounted on a main or extension base unit is turned off when AC/DC power supply is not input or a power supply module error is detected.
  - 6) The output of the ERR contact of the power supply module mounted on a main base unit is turned off when an error that stops the remote I/O module has occurred.

REMARKS
---------

For a remote I/O station including redundant power supply configuration, remote I/O modules of function version C or later can also be used.

However, follow the precautions below.

- (1) Precautions on redundant power supply
  - When power supply fails, the remote I/O module does not detect an error code. In addition, errors (minor errors) are not noticed to the remote master station.
  - When power supply fails, the remote I/O module does not store the error in link special registers SW0088 to 8B.
- (2) Precautions on the ERR contact of power supply module
  - When an error that stops a remote I/O module operation occurs, the output of the ERR contact is not turned off.
  - When the remote I/O module is mounted on the main base unit, the output of the ERR contact is always OFF.  
When it is mounted on the extension base unit, the output is turned off in the case where AC/DC power supply is not input or the ERR contact is turned off due to detection of a power supply module error.

(10) Online module change on a remote I/O station

Online module change is the function for replacing a Q series module mounted on the main base unit or extension base unit of a remote I/O station while the station is operating.

Using this function, a faulty module can be replaced with a module of the same model while the station is operating.

POINT
(1) A new module cannot be added and a module cannot be replaced with different model by using the online module change.
(2) Perform online module change after confirming that the system outside the programmable controller system will not malfunction.
(3) In order to prevent electric shocks or malfunction, provide a switch or other method to turn off the external power supply of the module to be replaced online.
(4) In order to confirm the content shown below, it is recommended to perform online module change on an actual system in advance to verify that no error is found in the operations of the modules out of the scope of change. <ul style="list-style-type: none"> <li>• Isn't there any error in the method and configuration for disconnecting external devices?</li> <li>• Isn't any influence found from the turning on/off of switches and so on?</li> </ul>
(5) Do not install/remove the module to/from the base unit more than 50 times after the first use of the product. (IEC 61131-2 compliant) Failure to do so may cause malfunction.

(a) Conditions for online module change on a remote I/O station

Online module change can be performed in the following cases:

- 1) Modules that can be replaced online (hot-swappable) on remote I/O stations

Hot-swappable modules are shown in the following table.

Module type		Restriction
Input module		No restriction
Output module		
I/O combined module		
Intelligent function module	Analog-digital conversion module	Function version "C"
	Channel isolated high resolution analog-digital converter module	
	Channel isolated high resolution analog-digital converter module (With signal conditioning function)	
	Digital-analog converter module	
	Channel isolated digital-analog module	
	Temperature control module	
	Thermocouple input module	
	Channel isolated thermocouple/micro voltage input module	
	Channel isolated thermocouple input module	
	RTD Input Module	
	Channel isolated temperature input module	
Channel isolated pulse input module		

Modules other than above cannot be replaced online.

For whether the intelligent function module can be replaced online and replacement procedure, refer to the manual of the intelligent function module used.

- 2) GX Developer versions required for online module change on a remote I/O station  
To perform online module change, GX Developer Version 8.18U or later is required.  
In addition, online module change can also be performed from GX Developer via a network.
- 3) Remote I/O station configuration for online module change  
Online module change can be performed for Q3□B or Q3□RB main base unit and the modules mounted on the Q6□B or Q6□RB extension base unit.  
Online module change cannot be performed for the modules mounted on the following base units:
  - Q32SB, Q33SB, or Q35SB slim type main base unit
  - Q5□B extension base unit (the modules mounted on a main base unit cannot be replaced online. However, the modules mounted on a Q6□B extension base unit can be replaced.)
- 4) Control status of the remote I/O module  
Online module change can be performed when a stop error has not occurred on the remote I/O module. In addition, online module change can be performed when an error that allows the system to continue operation occurs.  
However, if the followings occur while online module change is performed, the online module change is suspended.
  - The remote I/O module has been reset.
  - A stop error has occurred.
- 5) Number of modules that can be replaced online  
Only one module can be replaced on a remote I/O station while online module change is performed once.  
More than one module cannot be replaced simultaneously.


(b) Restrictions online module change operation

The following operations cannot be performed while online module change is performed.

- 1) Issue an online module change request from more than one GX Developer to a remote I/O module.
- 2) Write parameters in the remote I/O module being replaced online.


**POINT**

If an online module change request is issued from other GX Developer to a remote I/O module being replaced online, the message below is displayed. Confirm the message, and select "Yes" or "No."

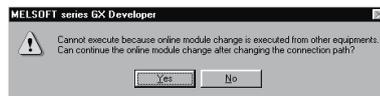


• When "Yes" is selected

The operation of online module change is switched to GX Developer (2), which issued the request latter. (Operation is continued from the status before switching.)

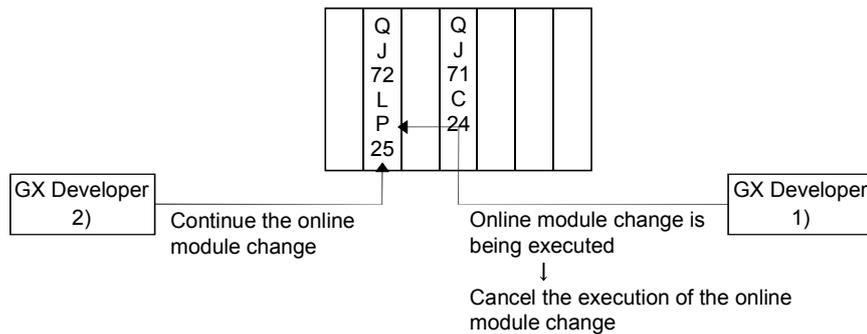

• When "No" is selected

The operation of online module change (GX Developer (2)), which was the latter request, is canceled. (The online module change being executed first (GX Developer (1)) is continued.)

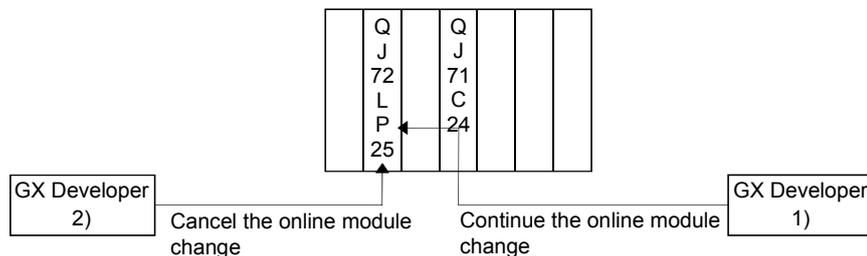

- 3) If an error has occurred on the target remote I/O module, the module holds the error even after online module change is completed. Therefore, it is necessary to clear the error by clearing the error using SM50 and SD50 on the programmable controller CPUs of the remote I/O station and master station.

Reset the error in the order below:

- a) Remote I/O station
- b) Programmable controller CPU of the master station

- 4) When the REMTO/REMFR instruction is executed for an intelligent function module under online module change, the system turns to the waiting for execution status without detecting an error. The instruction is resumed after the online module change has finished. The completion flag of the instruction is not turned on in the waiting for execution status.

(c) Procedure of online module change


This section describes the procedure of the online module change of the I/O module.

For the procedure of the online module change of the intelligent function module, refer to the manual of the intelligent function module used.


**POINT**

It is recommended to turn off the output (Y) from the output module or I/O combined module in advance.

- 1) Select "Diagnostics" → "Online Module Change" on GX Developer to enter the "Online module change" mode.

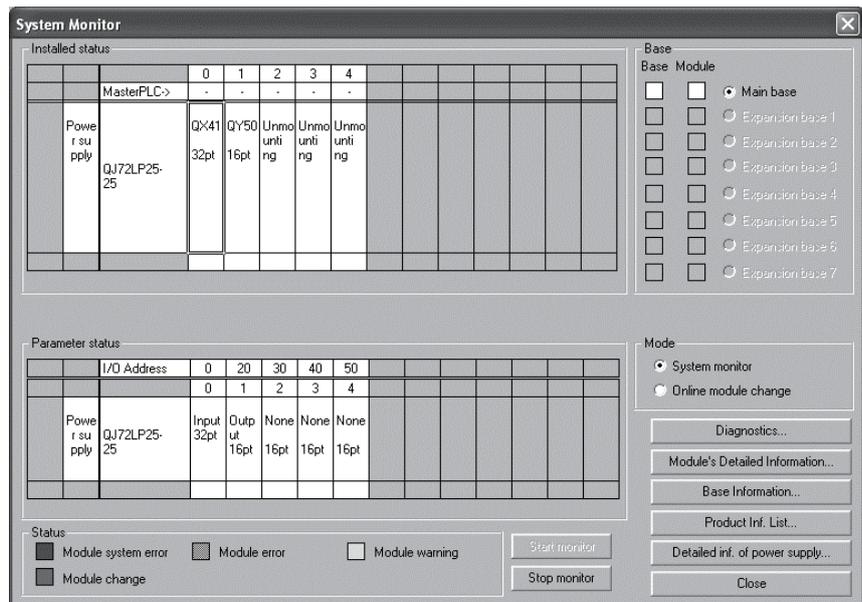


- 2) Double-click the module to be replaced online to display the Online module change screen.  
(The table below indicates the communication status of the module to be replaced online when the screen below is displayed.)

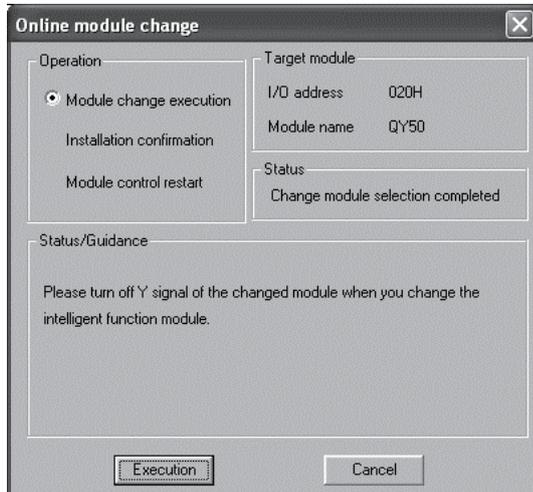

Target modules and items	Execute/not execute
Input module refreshing	Execute
Output module refreshing	Execute
I/O combined module	
Input refreshing	Execute
Output refreshing	Execute
Intelligent function module	
Input refreshing	Execute
Output refreshing	Execute
Intelligent module automatic refreshing	Execute
Buffer memory batch monitoring	Execute


- 3) Click the "Execution" button to enable the online module change.  
(The table below indicates the communication status of the module to be replaced online when the screen below is displayed.)

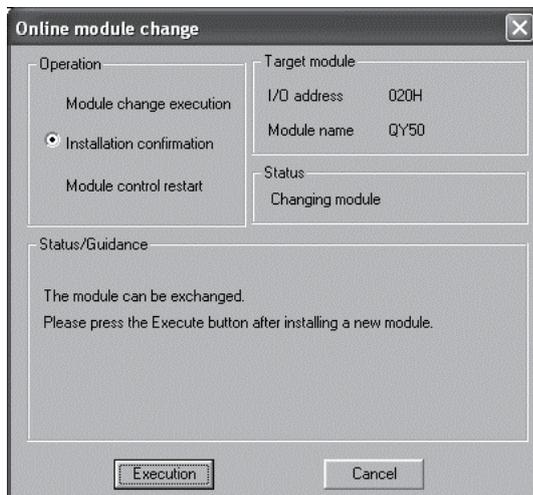

Target modules and items	Execute/not execute
Input module refreshing	Not execute (data are held)
Output module refreshing	Not execute
I/O combined module	
Input refreshing	Not execute (data are held)
Output refreshing	Not execute
Intelligent function module	
Input refreshing	Not execute
Output refreshing	Not execute
Intelligent module automatic refreshing	No processing
Buffer memory batch monitoring	Communication error

- 4) Disconnect the connection of the module (I/O signal) with the external device by the switch and so on.
- 5) Turn off the switch of the external power supply for modules to shut off power supply.
- 6) Remove the terminal block or connector from the module.
- 7) Remove the module.
- 8) Mount a new module in the same slot.
- 9) Mount the terminal block or connector to the module.
- 10) Turn on the switch of the external power supply for modules to resume power supply.

- 11) Connect between the external device and module (I/O signal) by the switch and so on.
- 12) Mount the module, and then click the "Execution" button.  
(The table below indicates the communication status of the new module when the screen below is displayed.)

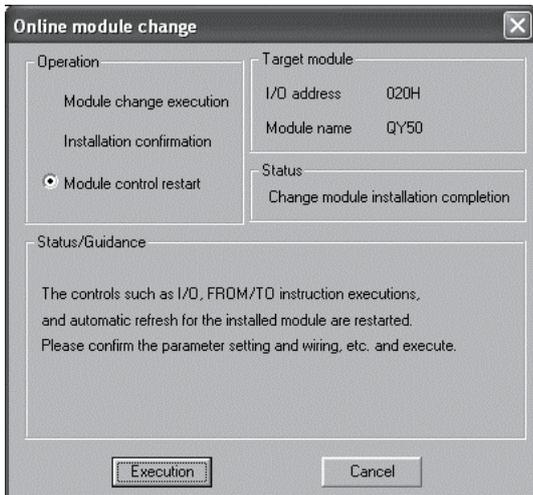

Target modules and items	Execute/not execute
Input module refreshing	Not execute (data are retained)
Output module refreshing	Not execute
<b>I/O combined module</b>	
Input refreshing	Not execute (data are retained)
Output refreshing	Not execute
<b>Intelligent function module</b>	
Input refreshing	Execute
Output refreshing	Execute
Intelligent module automatic refreshing	No processing
Buffer memory batch monitoring	Execute

\*: If the initial settings of the intelligent function module have been made by GX Configurator, the setting data are written in to the intelligent function module.

- 13) Click the "Execution" button to start control.
- 14) The "Online module change completed." screen is displayed.  
(The table below indicates the communication status of the new module when the screen below is displayed.)



Applicable modules and items	Execute/not execute
Input module refreshing	Execute
Output module refreshing	Execute
<b>I/O combined module</b>	
Input refreshing	Execute
Output refreshing	Execute
<b>Intelligent function module</b>	
Input refreshing	Execute
Output refreshing	Execute
Intelligent module automatic refreshing	Execute
Buffer memory batch monitoring	Execute

### 3.3 Link Data Send/Receive Processing Time Specifications

The following introduces the method of calculating link data send/receive and transmission delay time in the remote I/O network.

#### 3.3.1 Link data send/receive processing


##### (1) Summary of send/receive processing

Cyclic transmission of the remote I/O network communicates by network module LX/LY/LB/LW.

##### (a) For input module

The following is an example of CPU module side output (Y).

- 1) Remote master station Y1000 is on.
- 2) Y1000 data is stored in the master module refresh data storage area (LY) by link refresh.
- 3) The Y1000 data in the refresh data storage area (LY) is stored as Y0 in the link data storage area (LY) according to the common parameters.
- 4) The Y0 data in the link data storage area (LY) is stored in the link data storage area (LY) for the remote I/O module by link scan.
- 5) The Y0 data in link data storage area (Y) is stored in refresh data storage area (LY).
- 6) The Y0 data is output from the output module of the remote I/O station by the I/O refresh operation of the remote I/O module.

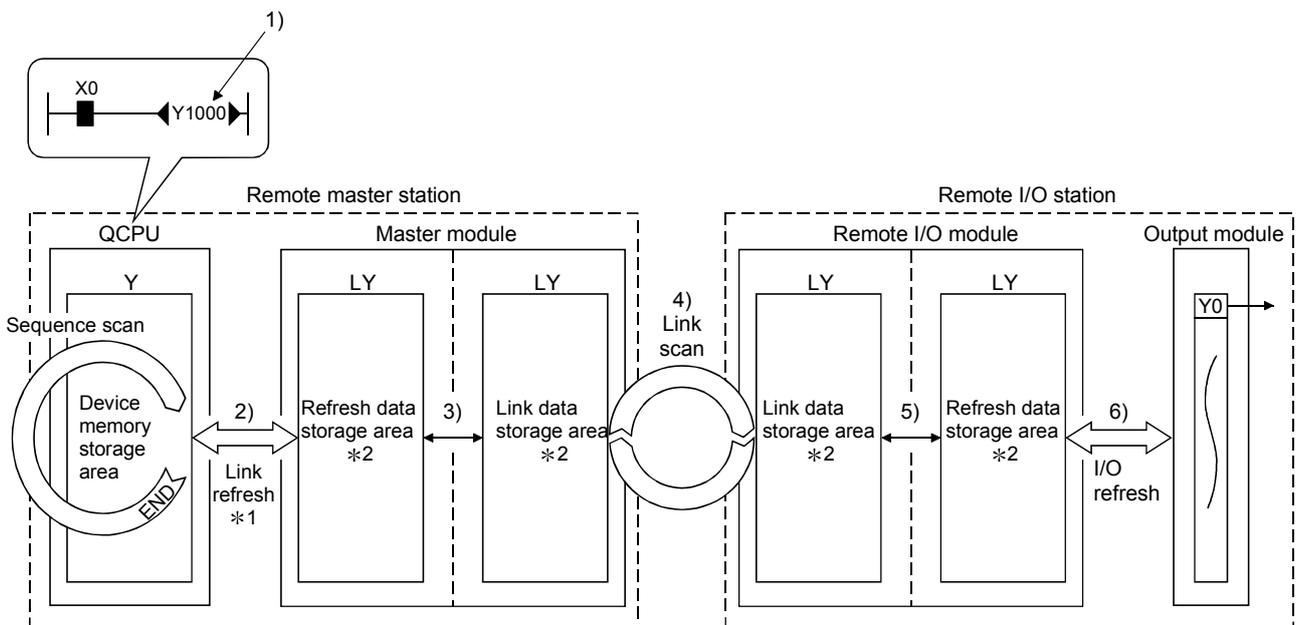


\*1: Set by network refresh parameters.  
 \*2: Set by remote master station common parameters.

(b) For intelligent function module

The following provides an example of how the link device (W) on the CPU module side is sent to an intelligent function module.

- 1) Data is sent to the remote master station W0.
- 2) W0 data is stored in the master module refresh data storage area (LW) by link refresh.
- 3) The W0 data in the refresh data storage area (LW) is stored as W0 in the link data storage area (LW) according to the common parameters.
- 4) The W0 data in the link data storage area (LW) is stored in the link data storage area (LW) for the remote I/O module by link scan.
- 5) The W0 data in link data storage area (LW) is stored in refresh data storage area (LW).
- 6) The W0 data is written to the remote I/O station intelligent function module buffer memory address 0 by the automatic refresh settings of the intelligent function module parameters.

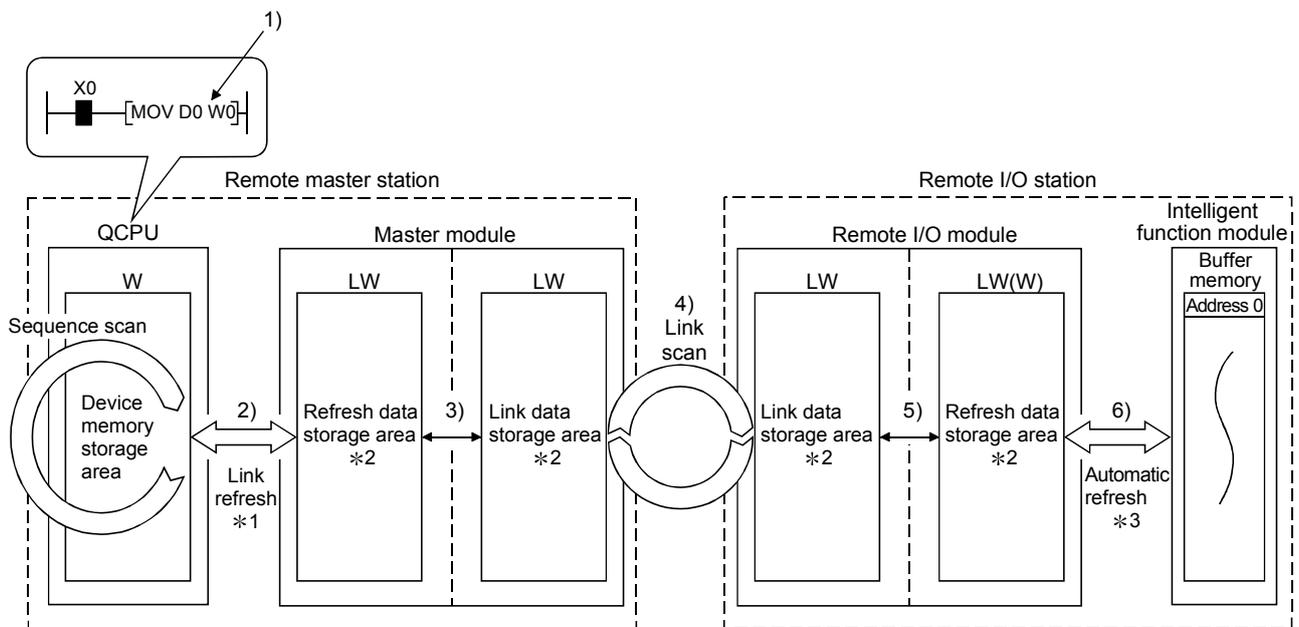


\*1: Set by network refresh parameters.  
 \*2: Set by remote master station common parameters.  
 \*3: Set by intelligent function module parameter automatic refresh settings.

(2) Link refresh, link scan, I/O refresh and automatic refresh

(a) Link refresh of the remote master station

Link refresh of the remote master station is performed in the END processing of the CPU module.

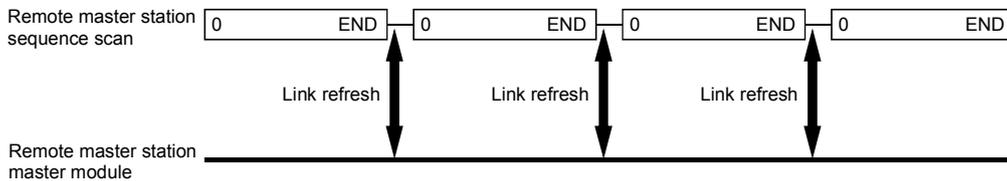

(b) Link scan

Link scans can be performed synchronously with sequence scans of the CPU module (END synchronization) or asynchronously with them (END asynchronization).

Select END synchronization or END asynchronization, referring to the following.

**POINT**

To set the END asynchronization, use the following master module and GX Developer.

- Master module: First 5 digits of serial No. are "09012" or later.
- GX Developer: GX Developer Version 8.45X or later

1) END synchronization (Default)


The transmission delay time for output can be reduced. When a sequence scan takes much longer than a link scan, however, the transmission delay time for input is increased. (Refer to Section 3.3.2.)

2) END asynchronization

When a sequence scan takes much longer than a link scan, the transmission delay time for input can be reduced. However, the transmission delay time for output will be increased. (Refer to Section 3.3.2.)

(c) I/O refresh and automatic refresh

These refreshes are performed in synchronization with link scans.

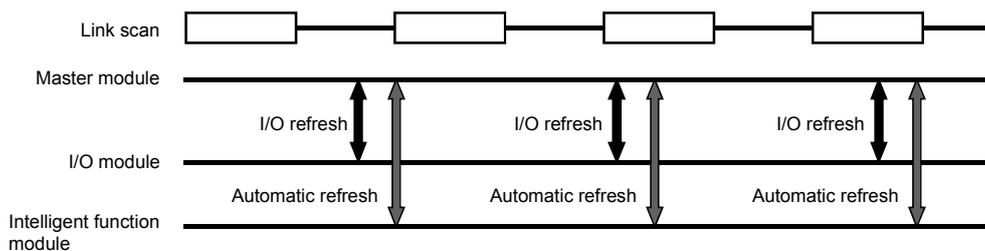


(3) Link data when communication error station/communication stop station has occurred

If a remote I/O station has experienced a communication error or communication stop, the remote master station saves the immediately preceding data (X,B,W) from the communication error station and communication stop station.

The remote I/O station output (Y) is set to all points off.

(A communication stop station is a station that has had its cyclic transmission stopped by peripheral equipment.)

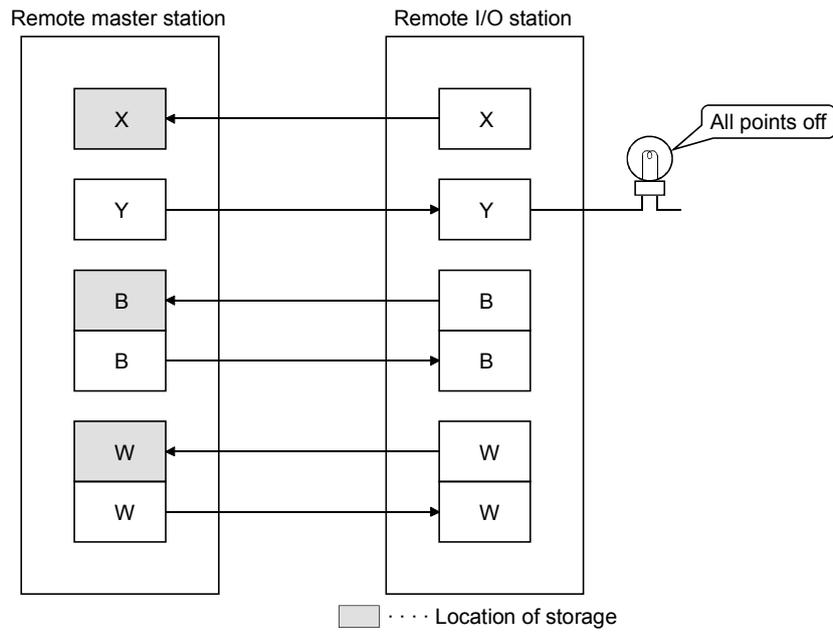

(4) SB/SW when a communication error station/communication stop station occurs on the network

The status of whether there are any communication error/communication stop stations on the network can be checked with the link special relay/register (SB/SW).


Use them as interlocks for programs.

Link special relays and registers

Link special relay/register	Description	Signal status	
		Off	On
SB0047	Shows the baton pass execution status of the host.	The baton pass is being executed	The baton pass is stopped
SB0049	Shows the data link status of the host.	Normal	Abnormal
SB0070	Shows the baton pass execution status of all stations (including the host). However, it only shows the status for the number of stations set with parameters.	The baton pass is being executed on all stations	Occurrence of communication stop station
SW0070 to 0073	Shows the baton pass execution status of each station. Each bit corresponds to the status of each station.	The baton pass is being executed	The baton pass is stopped
SB0074	Shows the cyclic transmission status of all stations (including the host). However, it only shows the status for the number of stations set with parameters.	All stations normal	Occurrence of abnormal station
SW0074 to 0077	Shows the cyclic transmission status of each station. Each bit corresponds to the status of each station.	Normal	Abnormal

3.3.2 Transmission delay time

The names of items (1), (2) on the following pages indicate those between the following stations.

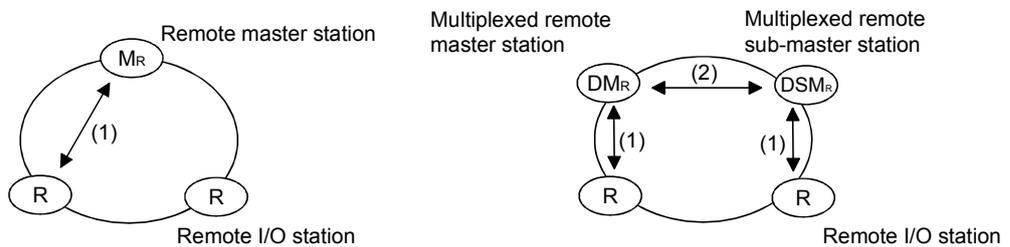

Item Name
(1) Remote master station ↔ remote I/O station
(2) Multiplexed remote master station ↔ multiplexed remote sub-master station

(1) Remote master station ↔ remote I/O station

(a) Cyclic transmission (X/Y/W periodic communication)

Transmission delay time of X/Y/W is the sum of the following.

- Remote master station scan time (Except for the link refreshing time)
- Remote master station link refresh time
- Link scan time
- Remote I/O station I/O refresh (X/Y) or automatic refresh (W)

Calculate the sum as shown below:


(Note that for X/Y communication time, it is necessary to add the I/O module response delay time to the calculation)

1) In the case of END synchronization

[X transmission delay time (T<sub>DX</sub>)] (END synchronization)


[Remote master station scan time (S<sub>m</sub>) > link scan time (LS)]

$$T_{DX} = (S_m + \alpha m) \times 2 + S_m + T_{RIOR} \text{ [ms]}$$

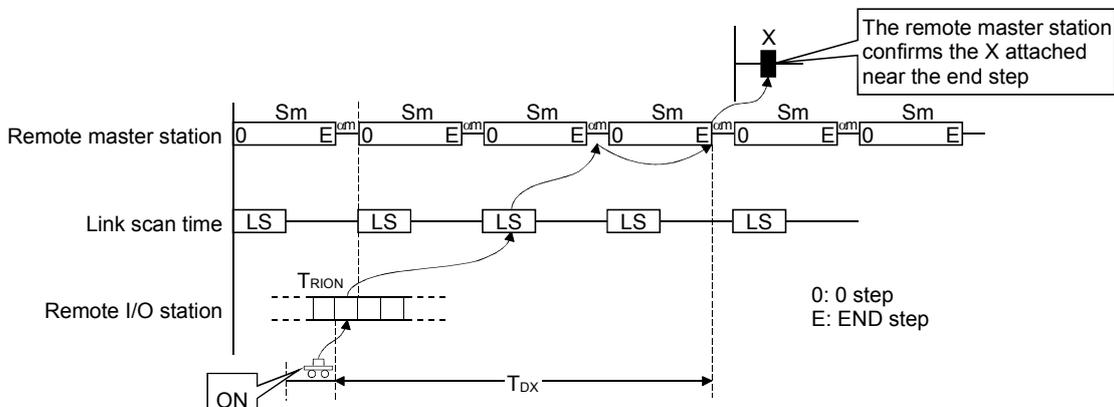

[Remote master station scan time (S<sub>m</sub>) < link scan time (LS)]

$$T_{DX} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] \times 2 + S_m + T_{RIOR} \text{ [ms]}$$

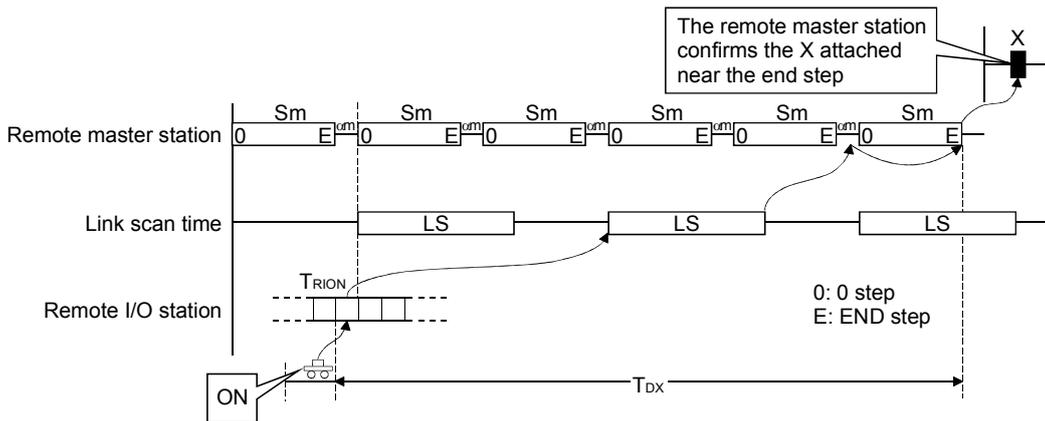


- S<sub>m</sub> : Remote master station scan time
- αm : Remote master station link refresh time
- LS : Link scan time
- T<sub>RIOR</sub> : I/O refresh time
- round up : Round up the decimal point of the result operation [LS / (S<sub>m</sub> + αm)]

**POINT**


The same formula is used to calculate the transmission delay time (T<sub>DX</sub>) independently of the Block send/receive data assurance per station setting.

[Y transmission delay time ( $T_{DY}$ )] (END synchronization)

[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]  
 $T_{DY} = (S_m + \alpha m) + LS + T_{RIOR}$  [ms]

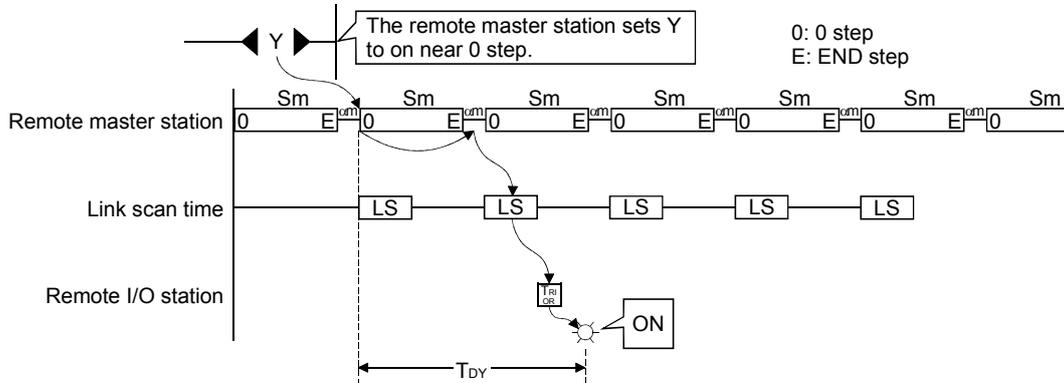

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]  
 $T_{DY} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] + LS + T_{RIOR}$  [ms]

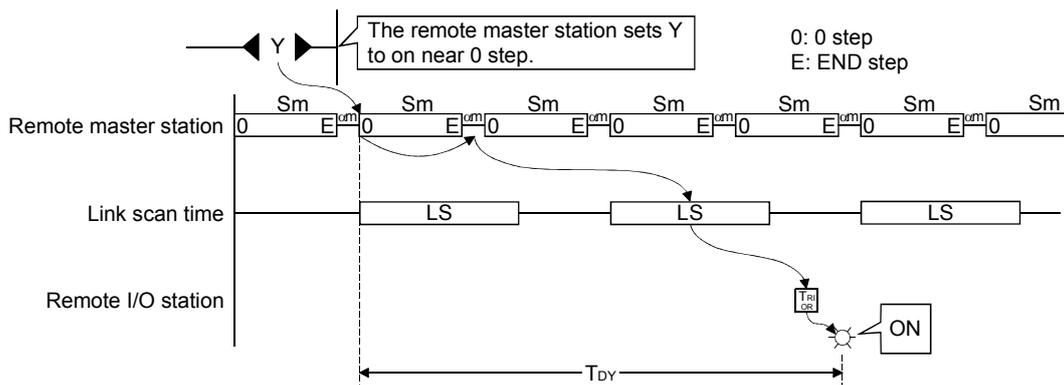

- $S_m$  : Remote master station scan time
- $\alpha m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RIOR}$  : I/O refresh time
- round up : Round up the decimal point of the result operation  $[LS / (S_m + \alpha m)]$


**POINT**

When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time ( $T_{DY}$ ) is calculated as follows:


- [Remote master station scan time ( $S_m$ ) > Link scan time ( $LS$ )]  
 $T_{DY} = (S_m + \alpha m) + LS + T_{RIOR}$  [ms]
- [Remote master station scan time ( $S_m$ ) < Link scan time ( $LS$ )]  
 $T_{DY} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] \times 2 + LS + T_{RIOR}$  [ms]

[W input transmission delay time ( $T_{DB1}$ )] (END synchronization)

[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]  
 $T_{DB1} = (S_m + \alpha m) \times 2 + S_m + T_{RBF}$  [ms]

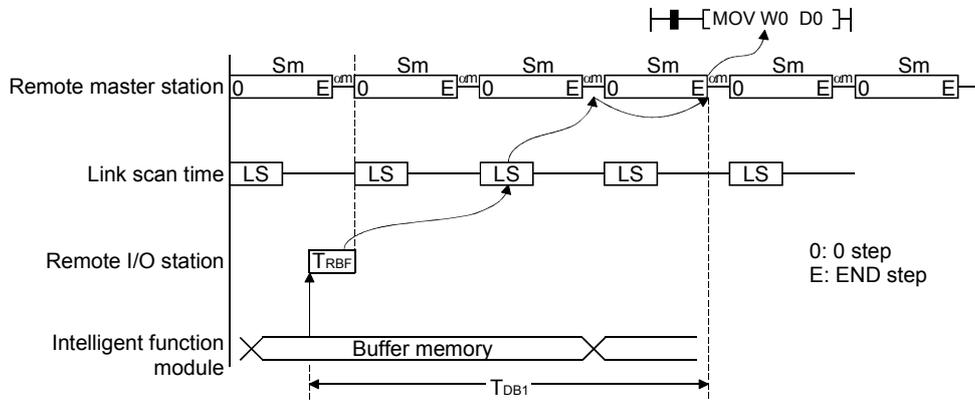

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]  
 $T_{DB1} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] \times 2 + S_m + T_{RBF}$  [ms]

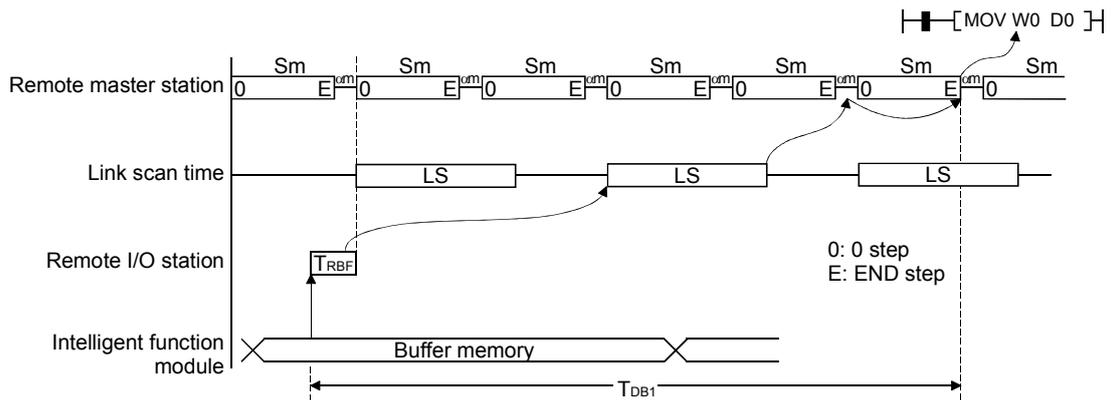


- $S_m$  : Remote master station scan time
- $\alpha m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RBF}$  : Intelligent function module buffer memory refresh time
- round up : Round up the decimal point of the result operation  $[LS / (S_m + \alpha m)]$

**POINT**


The same formula is used to calculate the transmission delay time ( $T_{DB1}$ ) independently of the Block send/receive data assurance per station setting.

[W output transmission delay time (T<sub>DB2</sub>)] (END synchronization)

[Remote master station scan time (S<sub>m</sub>) > link scan time (LS)]  
 $T_{DB2} = (S_m + \alpha_m) + LS + T_{RBF}$  [ms]

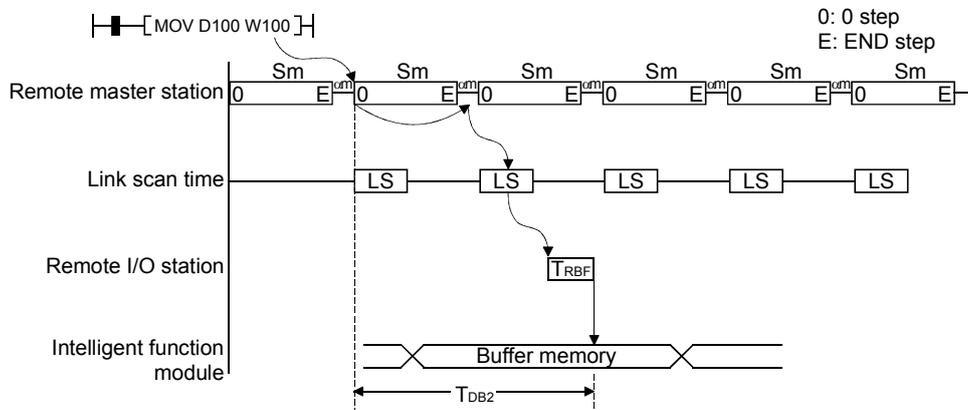

[Remote master station scan time (S<sub>m</sub>) < link scan time (LS)]  
 $T_{DB2} = (S_m + \alpha_m) \times \text{round up } [LS / (S_m + \alpha_m)] + LS + T_{RBF}$  [ms]

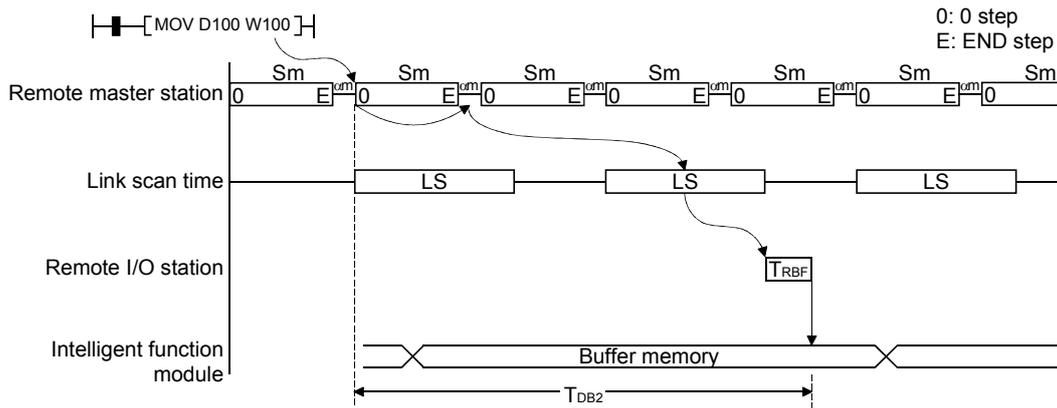

- S<sub>m</sub> : Remote master station scan time
- α<sub>m</sub> : Remote master station link refresh time
- LS : Link scan time
- T<sub>RBF</sub> : Intelligent function module buffer memory refresh time
- round up : Round up the decimal point of the result operation [LS / (S<sub>m</sub> + α<sub>m</sub>)]

**POINT**

When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time (T<sub>DB2</sub>) is calculated as follows:


- [Remote master station scan time (S<sub>m</sub>) > Link scan time (LS)]  
 $T_{DB2} = (S_m + \alpha_m) + LS + T_{RBF}$  [ms]
- [Remote master station scan time (S<sub>m</sub>) < Link scan time (LS)]  
 $T_{DB2} = (S_m + \alpha_m) \times \text{round up } [LS / (S_m + \alpha_m)] \times 2 + LS + T_{RBF}$  [ms]

2) In the case of END asynchronization

[X transmission delay time ( $T_{DX}$ )] (END asynchronization)


[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]

$$T_{DX} = S_m + \alpha_m + S_m + T_{RIOR} \text{ [ms]}$$

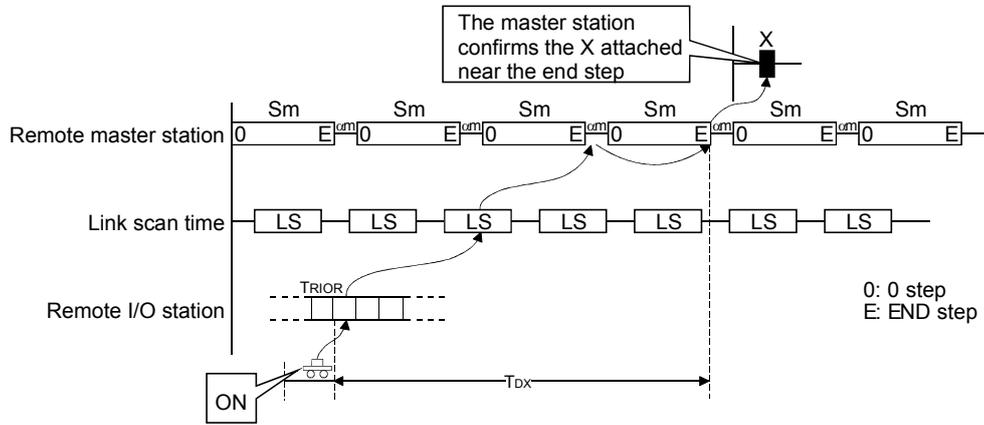

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]

$$T_{DX} = LS \times 2 + S_m + \alpha_m + S_m + T_{RIOR} \text{ [ms]}$$

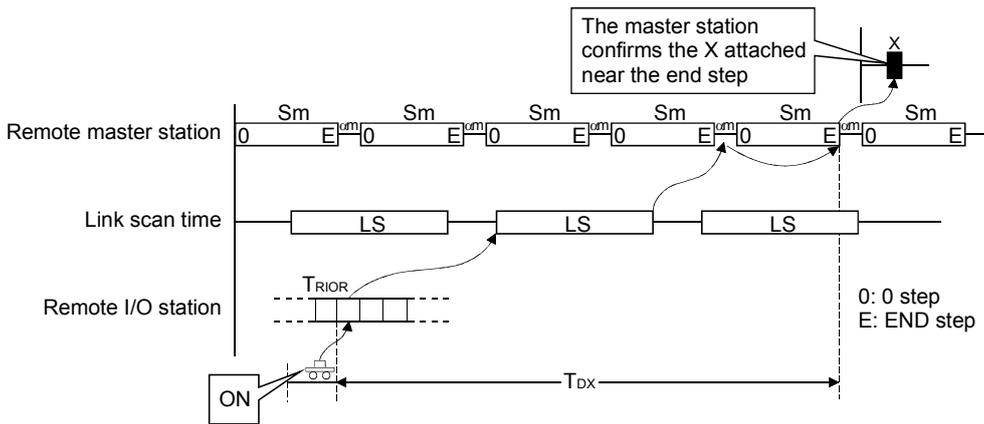

- $S_m$  : Remote master station scan time
- $\alpha_m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RIOR}$  : I/O refresh time

**POINT**


When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time ( $T_{DX}$ ) is calculated as follows:

- Remote master station scan time ( $S_m$ ) > Link scan time ( $LS$ )  
 $T_{DX} = (S_m + \alpha_m) \times 2 + S_m + T_{RIOR} + LS \text{ [ms]}$
- Remote master station scan time ( $S_m$ ) < Link scan time ( $LS$ )  
 $T_{DX} = LS \times 3 + S_m + \alpha_m + S_m + T_{RIOR} \text{ [ms]}$

[Y transmission delay time ( $T_{DY}$ )] (END asynchronization)


[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]

$$T_{DY} = (S_m + \alpha m) + LS \times 2 + T_{RIOR} \text{ [ms]}$$

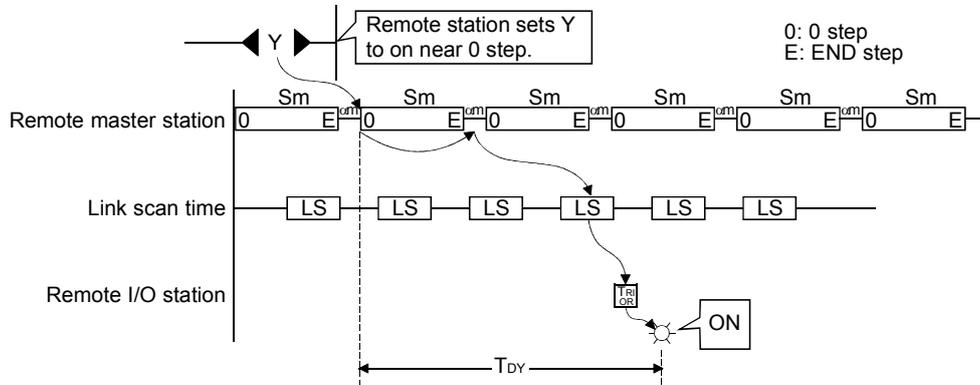

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]

$$T_{DY} = (S_m + \alpha m) + LS \times 2 + T_{RIOR} \text{ [ms]}$$

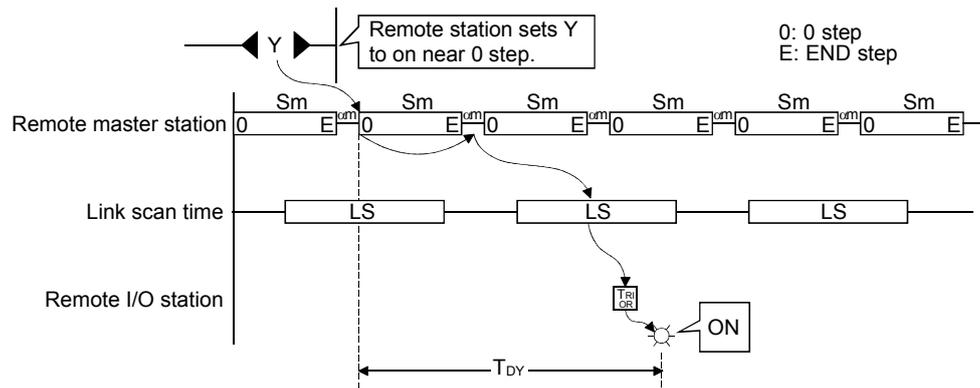

- $S_m$  : Remote master station scan time
- $\alpha m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RIOR}$  : I/O refresh time

**POINT**


When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time ( $T_{DY}$ ) is calculated as follows:

- Remote master station scan time ( $S_m$ ) > Link scan time ( $LS$ )  
 $T_{DY} = (S_m + \alpha m) \times 2 + LS \times 2 + T_{RIOR} \text{ [ms]}$
- Remote master station scan time ( $S_m$ ) < Link scan time ( $LS$ )  
 $T_{DY} = (S_m + \alpha m) + LS \times 3 + T_{RIOR} \text{ [ms]}$

[W input transmission delay time ( $T_{DB1}$ )] (END asynchronization)


[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]

$$T_{DB1} = S_m + \alpha m + S_m + T_{RBF} \text{ [ms]}$$

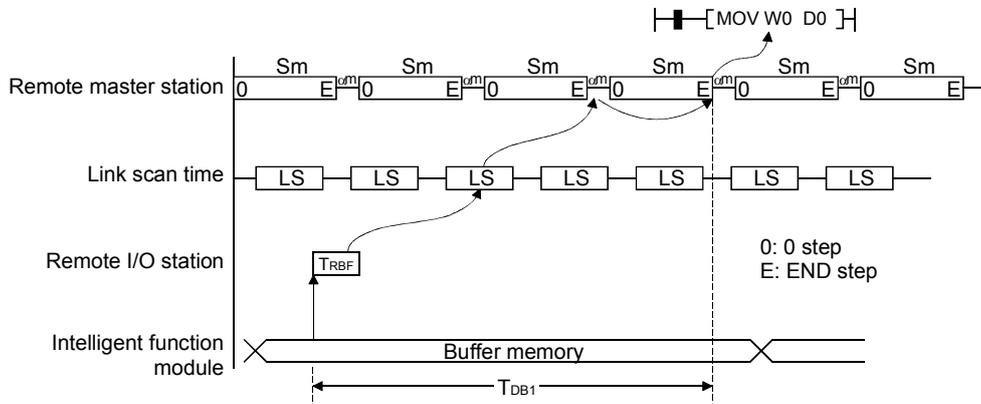

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]

$$T_{DB1} = LS \times 2 + S_m + \alpha m + S_m + T_{RBF} \text{ [ms]}$$

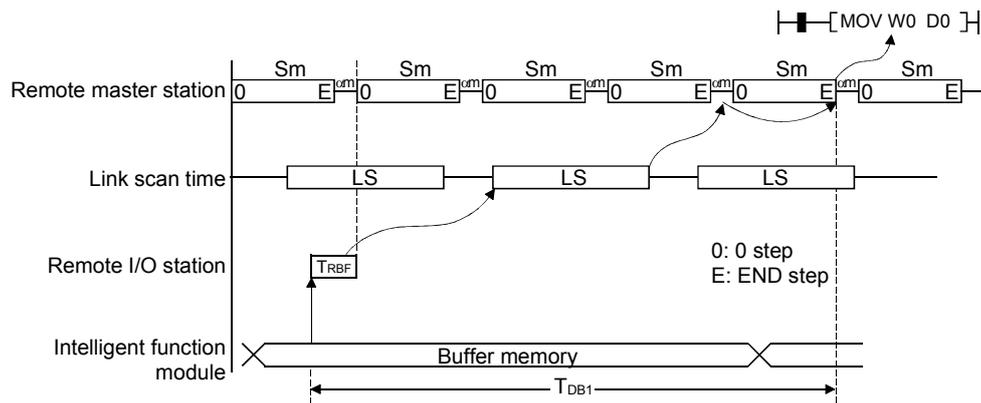

- $S_m$  : Remote master station scan time
- $\alpha m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RBF}$  : Intelligent function module buffer memory refresh time

**POINT**

When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time ( $T_{DB1}$ ) is calculated as follows:

- Remote master station scan time ( $S_m$ ) > Link scan time

$$T_{DB1} = (S_m + \alpha m) \times 2 + S_m + T_{RBF} + LS \text{ [ms]}$$


- Remote master station scan time ( $S_m$ ) < Link scan time

$$T_{DB1} = LS \times 3 + S_m + \alpha m + S_m + T_{RBF} \text{ [ms]}$$

[W output transmission delay time ( $T_{DB2}$ )] (END asynchronization)


[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]

$$T_{DB2} = (S_m + \alpha m) + LS \times 2 + T_{RBF} \text{ [ms]}$$

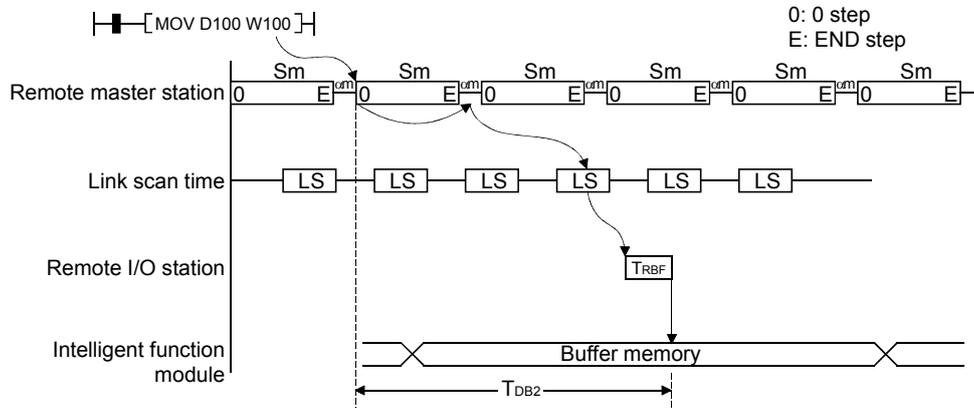

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]

$$T_{DB2} = (S_m + \alpha m) + LS \times 2 + T_{RBF} \text{ [ms]}$$

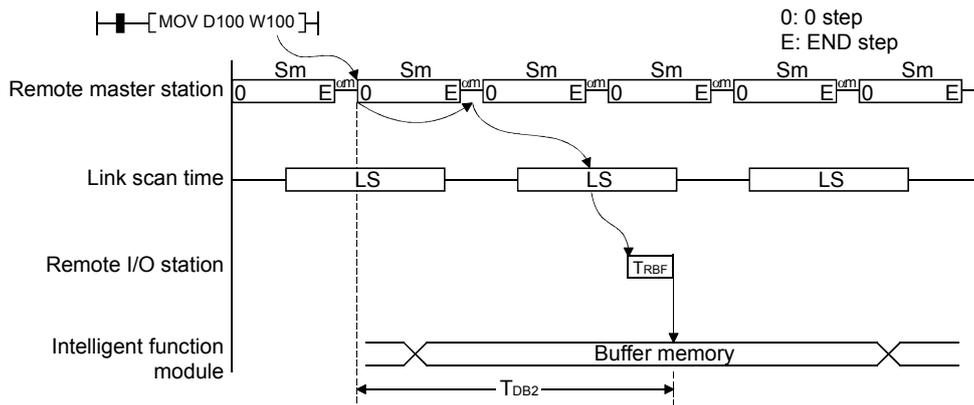

- $S_m$  : Remote master station scan time
- $\alpha m$  : Remote master station link refresh time
- $LS$  : Link scan time
- $T_{RBF}$  : Intelligent function module buffer memory refresh time

**POINT**

When the "Block send/receive data assurance per station" boxes is checked, the transmission delay time ( $T_{DB2}$ ) is calculated as follows:

- Remote master station scan time ( $S_m$ ) > Link scan time ( $LS$ )  
 $T_{DB2} = (S_m + \alpha m) \times 2 + LS \times 2 + T_{RBF} \text{ [ms]}$
- Remote master station scan time ( $S_m$ ) < Link scan time ( $LS$ )  
 $T_{DB2} = (S_m + \alpha m) + LS \times 3 + T_{RBF} \text{ [ms]}$

(b) REMFR/REMTO/READ/WRITE instructions

REMFR/REMTO/READ/WRITE instructions transmission delay time is the sum of the following.


- Remote master station scan time (Except for the link refreshing time)
- Remote master station refresh time
- Link scan time

Calculate the sum as shown below:

[Instruction transmission delay time ( $M_D$ )]


[Remote master station scan time ( $S_m$ ) > link scan time ( $LS$ )]

$$M_D = (S_m + \alpha m) \times 3 \text{ [ms]}$$

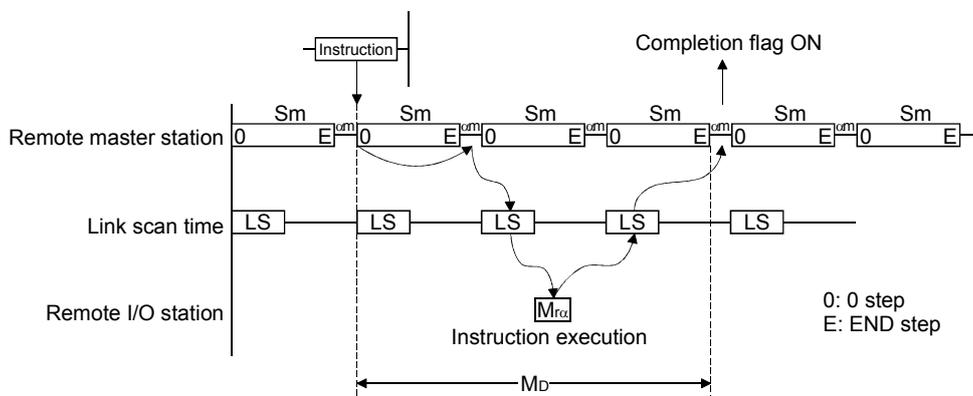

[Remote master station scan time ( $S_m$ ) < link scan time ( $LS$ )]

$$M_D = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] \times 3 \text{ [ms]}$$

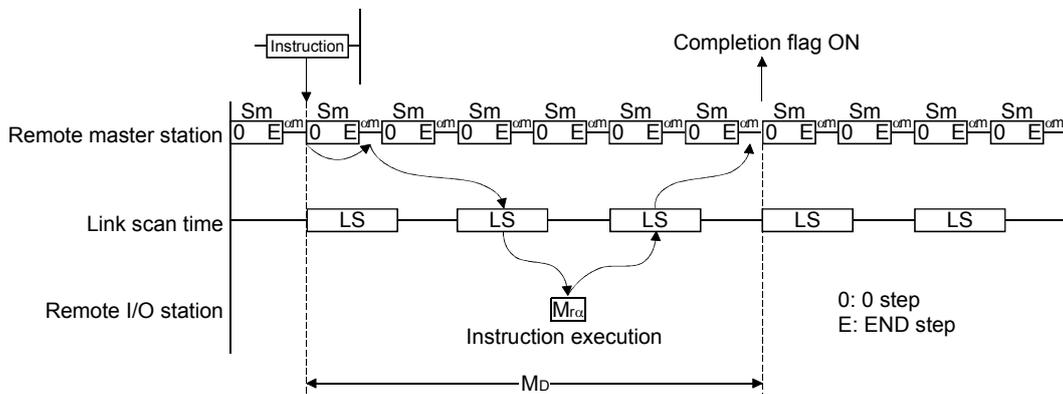

$S_m$  : Remote master station scan time

$\alpha m$  : Remote master station link refresh time

$LS$  : Link scan time

$Mr_\alpha$  : Instruction access data refresh time

round up : Round up the decimal point of the result operation  $[LS / (S_m + \alpha m)]$

## (2) Multiplexed remote master station ↔ multiplexed remote sub-master station

## (a) Cyclic transmission (LB/LW/LX/LY periodic communication)

The transmission delay time of B/W/Y communication is the sum of the following:

- Scan times of multiplexed remote master station and multiplexed remote sub-master station (Except for the link refreshing time)
- Link refresh times of multiplexed remote master station and multiplexed remote sub-master station
- Link scan time of multiplexed remote master station

Calculate the sum as shown below:

## 1) In the case of END synchronization

[Transmission delay time of B/W/Y communication] (END synchronization)

## 1) Multiplexed remote master station → Multiplexed remote sub-master station:

Transmission delay time ( $T_{DM1}$ )

[Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)]

$$T_{DM1} = (S_m + \alpha m) + LS + (S_s \times 2 + \alpha s) \text{ [ms]}$$

[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)]

$$T_{DM1} = (S_m + \alpha m) \times \text{round up } [LS/(S_m + \alpha m)] + LS + (S_s \times 2 + \alpha s) \text{ [ms]}$$

## 2) Multiplexed remote sub-master station → Multiplexed remote master station:

Transmission delay time ( $T_{DS1}$ )

[Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)]

$$T_{DS1} = (S_s + \alpha s) + (S_m + \alpha m) \times 2 + S_m \text{ [ms]}$$

[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)]

$$T_{DS1} = (S_s + \alpha s) + (S_m + \alpha m) \times \text{round up } [LS/(S_m + \alpha m)] \times 2 + S_m \text{ [ms]}$$

$S_m$  : Multiplexed remote master station side scan time

$S_s$  : Multiplexed remote sub-master station side scan time

$\alpha m$  : Multiplexed remote master station side link refresh time

$\alpha s$  : Multiplexed remote sub-master station side link refresh time

LS : Link scan time

round up : Round up decimal fraction of the operation result

$$[LS/(S_m + \alpha m)]$$

The above calculations are effective under the following conditions:

- There are no faulty stations.
- Transient transmission is not executed.

**POINT**

When the Block send/receive data assurance per station setting is enabled, the following formulas are used.

1) Formula for Transmission delay time ( $T_{DM1}$ )

[Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)]

$$T_{DM1} = (S_m + \alpha m) + LS + (S_s \times 2 + \alpha s) \text{ [ms]}$$

[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)]

$$T_{DM1} = (S_m + \alpha m) \times \text{round up}[LS/(S_m + \alpha m)] \times 2 + LS + (S_s \times 2 + \alpha s) \text{ [ms]}$$

2) Formula for Transmission delay time ( $T_{DS1}$ )

The same formula is used independently of the Block send/receive data assurance per station setting.

## 2) In the case of END asynchronization

[Transmission delay time of B/W/Y communication] (END asynchronization)
1) Multiplexed remote master station → Multiplexed remote sub-master station: Transmission delay time ( $T_{DM1}$ ) [Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)] $T_{DM1} = S_m + \alpha_m + LS + (S_s + \alpha_s) \times 2$ [ms]
[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)] $T_{DM1} = S_m + \alpha_m + LS + (S_s + \alpha_s) \times 2$ [ms]
2) Multiplexed remote sub-master station → Multiplexed remote master station: Transmission delay time ( $T_{DS1}$ ) [Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)] $T_{DS1} = S_s + \alpha_s + LS + (S_m + \alpha_m) \times 2$ [ms]
[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)] $T_{DS1} = S_s + \alpha_s + LS + (S_m + \alpha_m) \times 2$ [ms]

$S_m$	: Multiplexed remote master station side scan time
$S_s$	: Multiplexed remote sub-master station side scan time
$\alpha_m$	: Multiplexed remote master station side link refresh time
$\alpha_s$	: Multiplexed remote sub-master station side link refresh time
LS	: Link scan time

The above calculations are effective under the following conditions:

- There are no faulty stations.
- Transient transmission is not executed.

POINT
When the block send/receive data assurance per station setting is enabled, the following formulas are used.
1) Formula for Transmission delay time ( $T_{DM1}$ ) [Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)] $T_{DM1} = (S_m + \alpha_m) \times 2 + LS + (S_s + \alpha_s) \times 2$ [ms]
[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)] $T_{DM1} = S_m + \alpha_m + LS \times 2 + (S_s + \alpha_s) \times 2$ [ms]
2) Formula for Transmission delay time ( $T_{DS1}$ ) [Multiplexed remote master station side scan time ( $S_m$ ) > Link scan time (LS)] $T_{DS1} = S_s + \alpha_s + LS + (S_m + \alpha_m) \times 3$ [ms]
[Multiplexed remote master station side scan time ( $S_m$ ) < Link scan time (LS)] $T_{DS1} = S_s + \alpha_s + LS \times 2 + (S_m + \alpha_m) \times 2$ [ms]

## (b) SEND/RECV/RECVS/READ/WRITE/REQ/ZNRD/ZNWR instruction communication

The transmission delay time of instruction communication is the sum of the following:

- Scan times of multiplexed remote master station and multiplexed remote sub-master station (Except for the link refreshing time)
- Link refresh times of multiplexed remote master station and multiplexed remote sub-master station
- Link scan time of multiplexed remote master station

Calculate the sum as shown below:

[Transmission delay times of instruction communication]

## 1) SEND (with arrival check)/READ/WRITE/REQ/ZNRD/ZNWR instruction

$$T_{D2} = (S_T + \alpha_T + S_R + \alpha_R) \times 2 + (LS \times 4) + LS_U \text{ [ms]}$$

$$\text{(MAX : } T_{D2} = (S_T + \alpha_T + S_R + \alpha_R) \times 2 + (LS \times 6) + LS_U \text{)}$$

## 2) SEND - RECV arrival time

$$T_{D3} = S_T + \alpha_T + (LS \times 2) + (S_R \times 2) + \alpha_R + LS_U \text{ [ms]}$$

$$\text{(MAX : } T_{D3} = S_T + \alpha_T + (LS \times 3) + (S_R \times 2) + \alpha_R + LS_U \text{)}$$

## 3) SEND - RECVS arrival time

$$T_{D4} = S_T + \alpha_T + (LS \times 2) + S_R + \alpha_R + LS_U \text{ [ms]}$$

$$\text{(MAX : } T_{D4} = S_T + \alpha_T + (LS \times 3) + S_R + \alpha_R + LS_U \text{)}$$

$S_T$  : Send side scan time

$S_R$  : Receive side scan time

$\alpha_T$  : Send side link refresh time \*2

$\alpha_R$  : Receive side link refresh time \*2

$LS$  : Link scan time

$$LS_U = \left\{ \left( \frac{\text{Number of simultaneous transient requests}}{\text{Maximum transient count}} \right)^{*1} - 1 \right\} \times (LS \times 2)$$

Number of simultaneous transient requests : Total number of transient requests made from stations on the same network during one link scan

Maximum transient count : Max. transient count during one link scan set by supplementary settings of common parameters

\*1: Round up the fractional portion

\*2: Total number of mounted network modules

(3) Link refresh time

The link refresh time (CPU module end processing time extension) is calculated as shown below.

- Link device assignment points
- Type of CPU used

[Remote master station link refresh time ( $\alpha_m$ )]

$$\alpha_m = KM1 + KM2 \times \left( \frac{LB + LX + LY + SB}{16} + LW + SW \right) + \alpha_E \text{ [ms]}$$

$$\alpha_E = KM3 \times \left( \frac{LB + LX + LY}{16} + LW \right)$$

- $\alpha_m$  : Remote master station link refresh time
- LB : Total points of link relays (LB) refreshed by the corresponding station \*1
- LW : Total points of link registers (LW) refreshed by the corresponding station \*1
- LX : Total points of link inputs (LX) refreshed by the corresponding station \*1
- LY : Total points of link outputs (LY) refreshed by the corresponding station \*1
- SB : Number of points of the link special relay (SB)
- SW : Number of points of the link special register (SW)
- $\alpha_E$  : Transfer time of the file registers (R, ZR), extended data register (D), and extended link register (W) on the memory card \*2
- KM1, KM2, KM3 : Constants
- \*1 : Total points are the sum of link devices set in the link refresh parameter settings and in the network range settings. The points assigned for reserved station are not included.
- \*2 : When multiple stations execute transient transmission simultaneously, the value is a total of processing time at each station.

(a) When a master module is connected to main base unit

Constant		KM1	KM2 ( $\times 10^{-3}$ )	KM3 ( $\times 10^{-3}$ )
High Performance model QCPU	Q02CPU	0.30	0.48	0.47
	Other than above	0.13	0.41	0.33
Process CPU				
Redundant CPU		0.16	0.41	0.39
Universal model QCPU	Q02UCPU			
	Q03UD/Q03UDECPU			
	Other than above	0.09	0.41	0.33

(b) When a master module is connected to extension base unit

Constant		KM1	KM2 ( $\times 10^{-3}$ )	KM3 ( $\times 10^{-3}$ )
High Performance model QCPU	Q02CPU	0.30	1.20	0.47
	Other than above	0.13	0.97	0.53
Process CPU		0.13	0.97	0.53
Redundant CPU				
Universal model QCPU	Q02UCPU	0.16	0.97	0.39
	Q03UD/Q03UDECPU	0.09	0.97	0.39
	Other than above	0.09	0.97	0.33

**POINT**

The values in previous page are calculated on the basis that data are received from all stations during one sequence scan.

When the link scan is long or when the sequence scan is short, data from all stations may not be received within one sequence scan.

If this occurs, the actual link refresh time is less than the calculated value shown in this section.

Remote I/O station link refresh time ( $\alpha r$ )

The remote I/O station link refresh time ( $\alpha r$ ) does not affect transmission delay time.

(4) Link scan time

Link scan time is based on a calculation of the following factors.

- Link device assignment points
- Number of stations connected

[Link scan time]

[Communication speed: 10 Mbps]

$$LS = KB + (0.45 \times \text{total number of stations}) + \{LX + LY + LB + (LW \times 16)\} / 8 \times 0.001 + KR$$

$$+ \{LY_{M \rightarrow R} + LB_{M \rightarrow R} + (LW_{M \rightarrow R} \times 16)\} / 16 \times 0.0003$$

$$+ \{LX_{M \leftarrow R} + LB_{M \leftarrow R} + (LW_{M \leftarrow R} \times 16)\} / 16 \times 0.0003$$

$$+ (T \times 0.001) + (F \times 4) \text{ [ms]}$$

[Communication speed: 25 Mbps]

$$LS = KB + (0.40 \times \text{total number of stations}) + \{LX + LY + LB + (LW \times 16)\} / 8 \times 0.0004 + KR$$

$$+ \{LY_{M \rightarrow R} + LB_{M \rightarrow R} + (LW_{M \rightarrow R} \times 16)\} / 16 \times 0.0003$$

$$+ \{LX_{M \leftarrow R} + LB_{M \leftarrow R} + (LW_{M \leftarrow R} \times 16)\} / 16 \times 0.0003$$

$$+ (T \times 0.0004) + (F \times 4) \text{ [ms]}$$

LS : Link scan time

KB, KR : constants

Total remote I/O stations	1 to 8	9 to 16	17 to 24	25 to 32	33 to 40	41 to 48	49 to 56	57 to 64
KB	4.0	4.5	4.9	5.3	5.7	6.2	6.6	7.0
KR	3.9	3.1	2.6	2.3	1.7	1.1	0.6	0.0

LX : Total number of link inputs (LX) being used by all stations. \*1

LY : Total number of link outputs (LY) being used by all stations. \*1

LB : Total number of link relay (LB) being used by all stations \*1

LW : Total number of link register (LW) being used by all stations \*1

LY<sub>M → R</sub> : Total number of link outputs (LY) being used by stations in M → R direction \*1

LB<sub>M → R</sub> : Total number of link relay (LB) being used by stations in M → R direction \*1

LW<sub>M → R</sub> : Total number of link register (LW) being used by stations in M → R direction \*1

LX<sub>M ← R</sub> : Total number of link input (LX) being used by stations in M ← R direction \*1

LB<sub>M ← R</sub> : Total number of link relay (LB) being used by stations in M ← R direction \*1

LW<sub>M ← R</sub> : Total number of link register (LW) being used by stations in M ← R direction \*1

T : Maximum number of bytes transmitting during one link scan \*2

F : Number of stations that return to system (available only when an error has occurred. Maximum number of stations that return to system in a link scan (setting) \*3)

\*1: Total link device points set up in Network range assignment.

Note that the points assigned to reserved stations are excluded.

\*2: If simultaneous transient transmissions are performed from multiple stations during one link scan, it totals the data length of the sending and receiving frames. 0 when not used.

\*3: Set the maximum number of stations that return to system in a link scan using the supplementary settings in the common parameters. (Refer to section 5.1.4.)

## (5) Refresh time with the remote I/O module, I/O module and intelligent function module

Refresh time with the remote I/O module, I/O module and intelligent function module is according to the formula shown below.

[I/O module and refresh time]

$$T_{RIOR} = X_K/16 \times 0.0016 + X_Z/16 \times 0.0024 + Y_K/16 \times 0.0014 + Y_Z/16 \times 0.0022 \text{ [ms]}$$

$T_{RIOR}$  : I/O refresh time

$X_K$  : Number of input modules mounted to main base unit (Multiples of 16)

$X_Z$  : Number of input modules mounted to extension base unit (Multiples of 16)

$Y_K$  : Number of output modules mounted to main base unit (Multiples of 16)

$Y_Z$  : Number of output modules mounted to extension base unit (Multiples of 16)

The number of I/O modules ranges as follows:

The input module is the X range set by the common parameters of the network parameters

The output module is the range of modules mounted to the remote I/O station (from the first output module mounted to the main base unit to the last output module mounted to the extension base unit.)

In the formula, the main base unit and extension base units from the range referenced above are assigned.

[Intelligent function module and refresh time]

$$T_{RBF} = N_{BF} + N_{CF} N_{DT} + N_{EX} \text{ [ms]}$$

$T_{RBF}$  : Refresh time between intelligent function module and GX Configurator

$N_{BF}$  : Refresh time generated by auto refresh settings of GX Configurator for intelligent function module

$$N_{BF} = (\text{number of set modules} \times 0.05\text{ms}) + (\text{number of set items} \times 0.22\text{ms}) \\ + (\text{number of set words} \times 0.005\text{ms}) \text{ [ms]}$$

$N_{CF}$  : Refresh time generated by CC-Link auto refresh settings of remote I/O station

$$N_{CF} = (\text{number of set modules} \times 3\text{ms}) + (\text{number of set words} \times 0.003\text{ms}) + 1\text{ms} \text{ [ms]}$$

$N_{DT}$  : Refresh time generated by device-to-device transfer parameter settings of remote I/O station

$$N_{DT} = (\text{number of set devices} \times 0.3\text{ms}) + (\text{number of set words} \times 0.006\text{ms}) \text{ [ms]}$$

$N_{EX}$  : Delay time by external access or relay processing \*1

$$N_{EX} = 0 \text{ ms or } 20 \text{ ms}$$

\*1: In the case of the following access (reading and writing devices, monitoring, etc.) or relay processing, 20 ms is generated as delay time.

Without any access or relay processing, the delay time is 0 ms.

- When accessing a remote I/O station from GX Developer or GOT, or when accessing other station from GX Developer or GOT via a remote I/O station.
- When accessing a remote I/O station from an intelligent function module, or when accessing other station from an intelligent function module via a remote I/O station.
- When accessing a remote I/O station from a CPU module.

## (6) Transmission delay time formula

The transmission delay time is calculated based on the following system design and conditions.

(System design, conditions)

- 1) CPU module:Q06HCPU
- 2) Total number of remote I/O stations: 8
- 3) Number of link devices: LX = LY = 1024 points, LB = LW = 0 point, SB = SW = 512 points
- 4) Remote master station CPU module scan time: 1 ms
- 5) Communication speed: 10 Mbps
- 6) File register not used.
- 7) Transient transmission not used.
- 8) Remote master station mounts the master module to the main base unit.
- 9) All remote I/O stations only use the I/O module.
- 10) The link device per each remote I/O station is LX = LY = 128 points.
- 11) Link scans are performed in synchronization with sequence scans.

(END synchronization)

<Constants when a master module is mounted to the main base unit.>

Constant	KM1	KM2 ( $\times 10^{-3}$ )	KM3 ( $\times 10^{-3}$ )
CPU type			
Q06HCPU	0.13	0.41	0.53

(a) Link refresh time ( $\alpha m$ )

$$\begin{aligned}\alpha m &= KM1 + KM2 \times \{(LB + LX + LY + SB) / 16 + LW + SW\} + \alpha E \\ &= 0.13 + 0.41 \times 10^{-3} \times \{(0 + 1024 + 1024 + 512) / 16 + 0 + 512\} + 0 \\ &= 0.41 \text{ [ms]}\end{aligned}$$

## (b) Link scan time (LS)

$$\begin{aligned}LS &= KB + (0.45 \times \text{total number of remote I/O stations}) + \{LX + LY + LB + \\ &\quad (LW \times 16)\} / 8 \times 0.001 + KR + \{LYM \rightarrow R + LBM \rightarrow R + (LWM \rightarrow R \times \\ &\quad 16)\} / 16 \times 0.0003 \\ &\quad + \{LXM \leftarrow R + LBM \leftarrow R + (LWM \leftarrow R \times 16)\} / 16 \times 0.0003 \\ &\quad + (T \times 0.001) + (F \times 4) \\ &= 4.0 + (0.45 \times 8) + \{1024 + 1024 + 0 + (0 \times 16)\} / 8 \times 0.001 + 3.9 \\ &\quad + \{1024 + 0 + (0 \times 16)\} / 16 \times 0.0003 \\ &\quad + \{1024 + 0 + (0 \times 16)\} / 16 \times 0.0003 \\ &\quad + (0 \times 0.001) + (0 \times 4) \\ &= 11.8 \text{ [ms]}\end{aligned}$$

## (c) I/O refresh time

$$\begin{aligned}T_{RIOR} &= XK/16 \times 0.0016 + XZ/16 \times 0.0024 + YK/16 \times 0.0014 \\ &\quad + YZ/16 \times 0.0022 \\ &= 128/16 \times 0.0016 + 0 + 128/16 \times 0.0014 + 0 \\ &= 0.024 \text{ [ms]}\end{aligned}$$

(d) Cyclic transmission delay

Since  $S_m = 1$  [ms],  $LS = 11.8$  [ms], the  $S_m < LS$  formula is used.

1) Input transmission delay time ( $T_{DX}$ )

$$T_{DX} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] \times 2 + S_m + T_{RIOR}$$

$$= (1 + 0.41) \times [11.8 / (1 + 0.41)] \times 2 + 1 + 0.024$$

$$= 24.6 \text{ [ms]}$$

2) Output transmission delay time ( $T_{DY}$ )

$$T_{DY} = (S_m + \alpha m) \times \text{round up} [LS / (S_m + \alpha m)] + LS + T_{RIOR}$$

$$= (1 + 0.41) \times [11.8 / (1 + 0.41)] + 11.8 + 0.024$$


$$= 23.6 \text{ [ms]}$$

3.3.3 Switching time from the multiplexed remote master station to the multiplexed remote sub-master station in a multiplexed remote I/O network

In the multiplexed remote I/O network system, the multiplexed remote sub-master station takes over the control of the remote I/O station from of the multiplexed remote master station when it develops an error.

While control is switched from the multiplexed remote master station to the multiplexed remote sub-master station, the remote I/O station holds output (data).

The switching time from the multiplexed remote master station to the multiplexed remote sub-master station is expressed with the formula below:

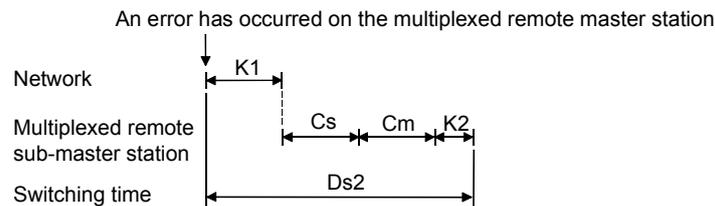

[Switching time from the multiplexed remote master station to the multiplexed remote sub-master station ( $Ds2$ )]

$$Ds2 = K1 + Cs + Cm \text{ [ms]}$$

K1: Internal processing time

- When a power failure or CPU module stop error occurs: 620ms
- When a system switching is caused by the followings, execution of system switching instruction, system switching request by GX Developer or link cable disconnection on other network module: 160ms

Cs: Normal station baton passing/cyclic communication initializing time

$$= \text{Number of normal stations} \times 9 \text{ [ms]}$$

Cm: Error station baton passing/cyclic communication initializing time

$$= \text{Number of error stations} \times 16 \text{ [ms]}$$

(only if any error station is found)


### 3.3.4 Output holding time during system switching in the multiplexed remote I/O network for redundant system

In the multiplexed remote I/O network for redundant system, if an error occurs in the multiplexed remote master station of the control system, the multiplexed remote sub-master station of the standby system takes over the control of remote I/O stations. At the time of system switching, remote I/O stations hold the outputs (data).


The output holding time of remote I/O stations during system switching differs with the reason of system switching. In addition, it is affected by the CPU system switching time and the switching time between multiplexed remote master station and multiplexed remote sub-master station.

The following shows the calculation formula of output holding time for each reason for system switching.

#### (1) When a power failure or CPU module stop error occurs

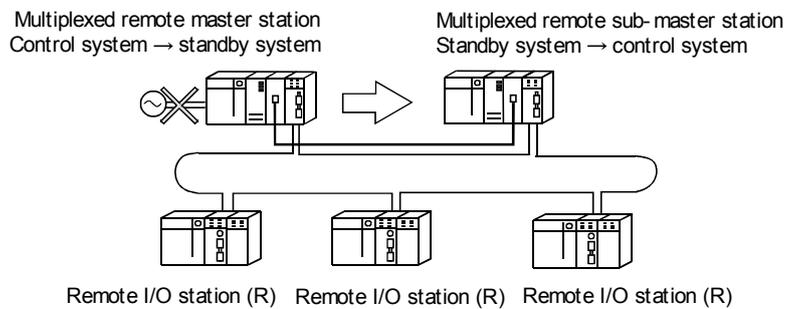

#### (a) CPU system switching time < System switching time from the multiplexed remote master station to the multiplexed remote sub-master station

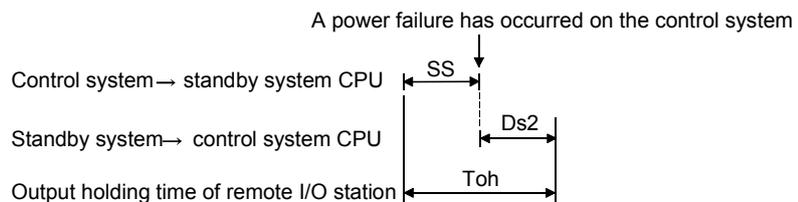


[Output holding time (Toh)]

$$Toh = Ds2 + SS \text{ [ms]}$$

Ds2: Switching time from the multiplexed remote master station to the multiplexed remote sub-master station [ms]

SS: Scanning time of the redundant CPU [ms]

- (b) CPU system switching time > Switching time from the multiplexed remote master station to the multiplexed remote sub-master station

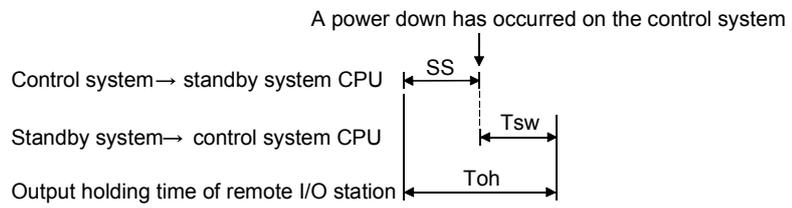


[Output holding time (Toh)]

$$Toh = Tsw + (SS \times 2) [ms]$$


Tsw: Redundant CPU system switching time [ms]  
 SS: Scanning time of the redundant CPU [ms]

<b>POINT</b>	For the CPU system switching time, refer to QnPRHCPU User's Manual (Redundant System).
--------------	--

- (2) System switching when a system switching dedicated instruction is executed, a system switching request is issued by GX Developer, or the link cable is disconnected on other network module

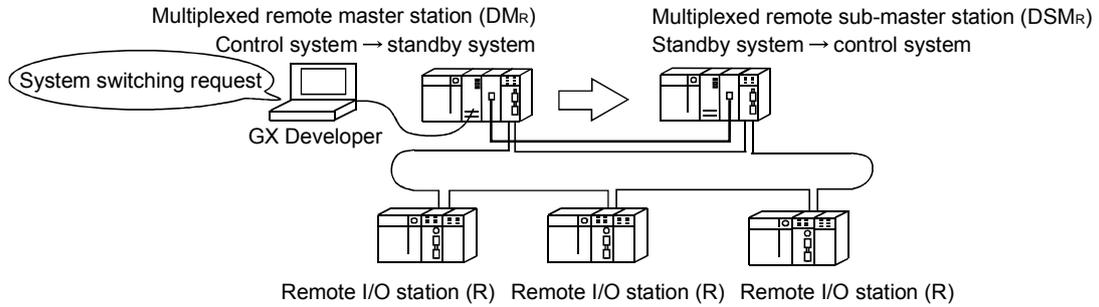

- (a) CPU system switching time < System switching time from the multiplexed remote master station to the multiplexed remote sub-master station

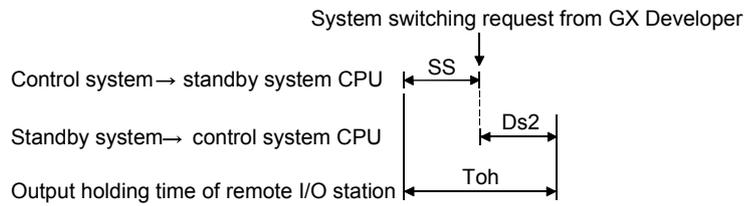


[Output holding time (Toh)]

$$Toh = Ds2 + SS \text{ [ms]}$$

- Ds2: Switching time from the multiplexed remote master station to the multiplexed remote sub-master station [ms]  
SS: Scanning time of the redundant CPU [ms]

- (b) CPU system switching time > Switching time from the multiplexed remote master station to the multiplexed remote sub-master station

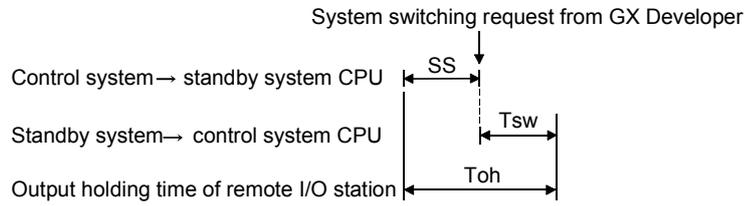

[Output holding time (Toh)]

$Toh = Tsw + SS$  [ms]

Tsw: Redundant CPU system switching time [ms]  
 SS: Scanning time of the redundant CPU [ms]


**POINT**

For the CPU system switching time, refer to QnPRHCPU User's Manual (Redundant System).

(3) System switching when the link cable disconnection occurs in the host network module

If a communication error occurs due to link cable disconnection on the host network module, it will considerably increase "data link monitoring time + switching monitoring time".

Therefore the calculation formula is not affected by the CPU system switching time and the switching time from the multiplexed remote master station to the multiplexed remote sub-master station.

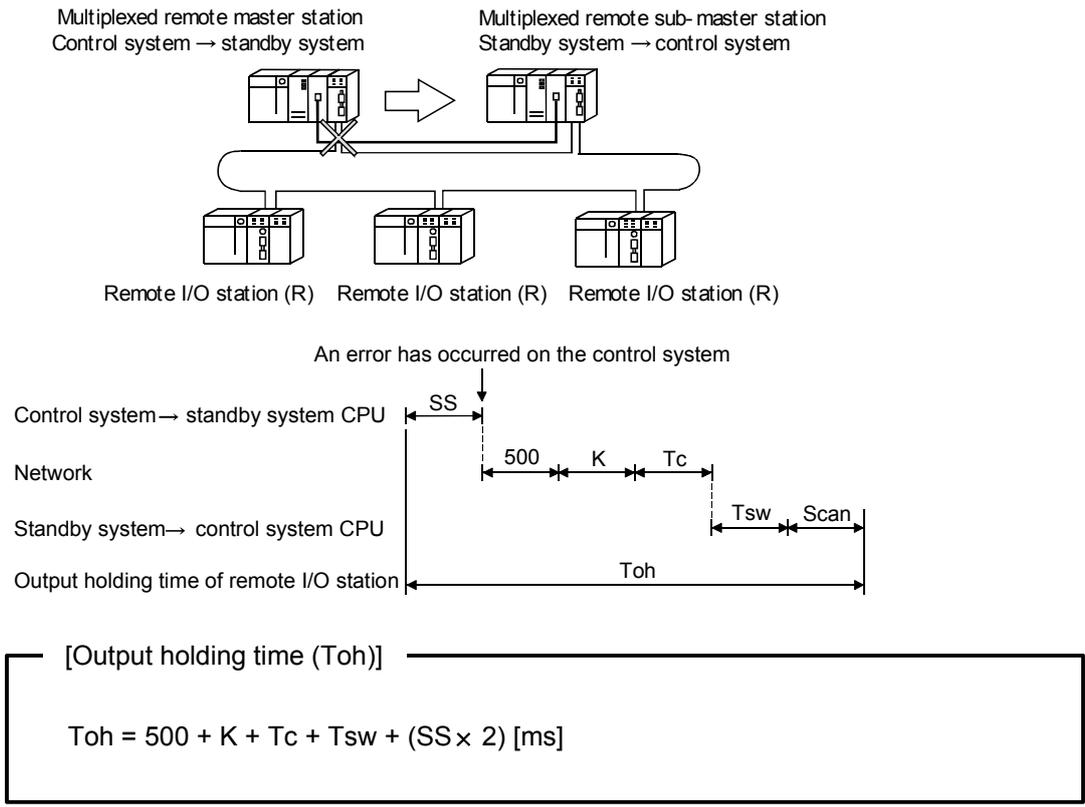

K: Data link monitoring time (set up by the common parameters in the network parameters) [ms]

Tc: Switching monitoring time (specify the setting range using SW0018) × 10ms [ms]

Tsw: Redundant CPU system switching time [ms]

SS: Scanning time of the redundant CPU [ms]

**POINT**


For the CPU system switching time, refer to QnPRHCPU User's Manual (Redundant System).

## 4 SETUP AND PROCEDURES BEFORE STARTING THE OPERATION

This chapter explains the procedures, settings, connections and testing that are required to start the data link operation.

### 4.1 Procedures Before Starting the Operation


The following flowchart shows the procedures that are required to perform the data link operation:

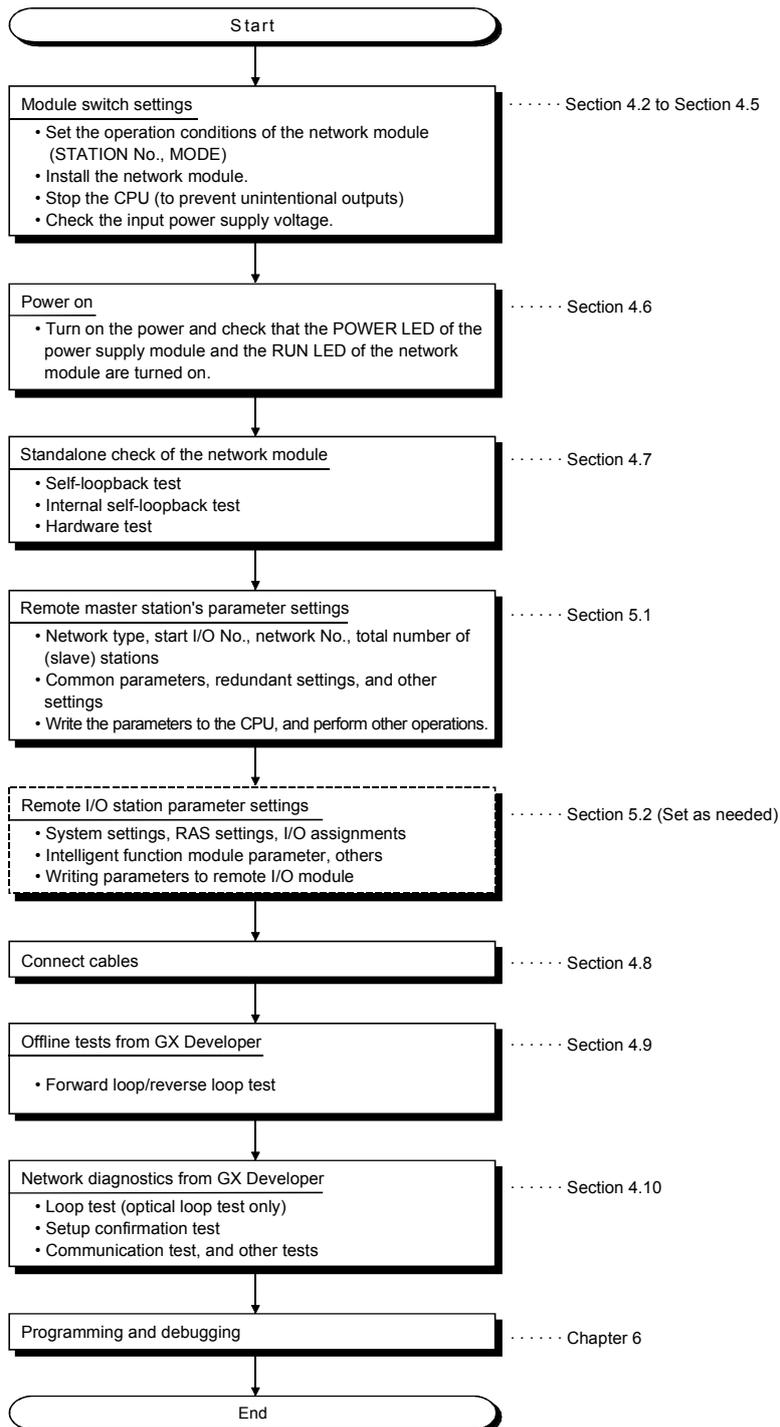

4.2 Network Module Names and Settings

4.2.1 QJ71LP21, QJ71LP21-25, QJ71LP21G, QJ71LP21GE, QJ71BR11 (Remote master station)


Optical loop module

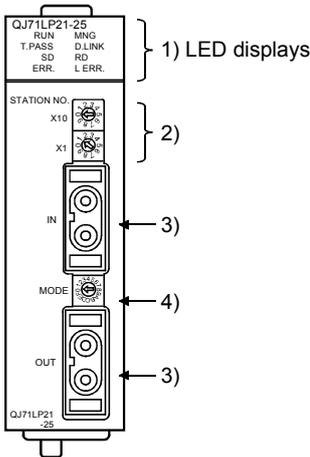

2) STATION No. (factory default setting: 1):  
Station number setting switch  
This switch sets the station number on the same network.

Setting	Description
0	Remote master station setting
1 to 64	Setting of a remote sub-master station (When using the QJ71BR11, setting any of 33 to 64 will result in a setting error. However, the red ERR. LED will not turn ON.)
65 to 99	Setting error (The red ERR. LED turns ON.)

3) IN/OUT connectors  
Connected with an optical fiber connector.

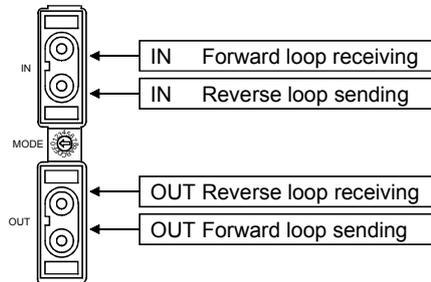

4) MODE (factory default setting: 0): Mode setting switch  
This switch sets the operation mode.

a) QJ71LP21, QJ71LP21G, QJ71LP21GE, QJ71BR11


Setting	Description
0	Online (Mode selected with a parameter becomes valid.)
1	Self-loopback test
2	Internal self-loopback test
3	Hardware test
4 to F	Use prohibited

b) QJ71LP21-25, QJ71LP21S-25


Setting	Description	
0	Online (Mode selected with a parameter becomes valid.)	When 10Mbps in use
1	Self-loopback test	
2	Internal self-loopback test	
3	Hardware test	When 25Mbps in use
4	Online (Mode selected with a parameter becomes valid.)	
5	Self-loopback test	
6	Internal self-loopback test	
7	Hardware test	
8 to F	Use prohibited	

5) Coaxial connector  
Connect an F-type connector for a coaxial cable

6) External power supply terminal block  
Wire for external power supply.

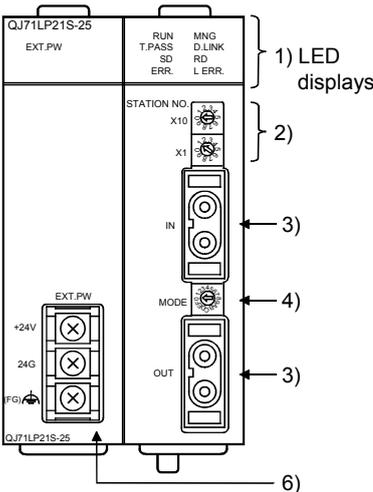

Coaxial cable bus module

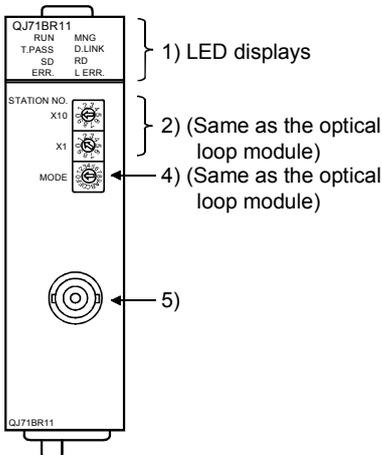

**POINT**

Set the mode setting switches in the same position on all network modules.

## 1) LED displays

No.	Name	LED status	Description
1	RUN	Green on	Module operating normally
		Off	Watchdog timer error occurred (hardware error)
2	MNG * 1	Green on	Operating as a remote master station
		Off	Not operating as a remote master station
3	T.PASS	Green on	Executing baton pass (being joined in a network)
		Green flash	Test is determined to have completed normally when this LED flashes 20 times or more (approximately 10 s) during the test.
		Off	Baton pass not yet executed (the host is disconnected from the network)
4	D.LINK	Green on	Data link being executed (cyclic transmission is being executed)
		Off	Data link not yet executed (parameter receiving not completed, host CPU error, data link stop instructed, etc.)
5	SD	Green on	Data being sent
		Off	Data not yet sent
6	RD	Green on	Data being received
		Off	Data not yet received
7	ERR.	Red on	<ul style="list-style-type: none"> <li>• An error occurred, for instance a station number setting error (other than 0 to 64), mode setting error (set to use prohibited), operation condition setting error (parameters), or an installed CPU type error (settings outside the range used, CPU type).</li> <li>• A station with the same number already exists in the network.</li> <li>• Invalid parameter settings (contradicting settings).</li> <li>• A moderate or fatal error occurred in the CPU module.</li> </ul>
		Flashing	<ul style="list-style-type: none"> <li>• An error was detected while testing the network module.</li> <li>• The mode setting switch or the station number setting switch was changed during operation. * 2</li> </ul>
		Off	Normal status
8	L ERR.	Red on	<p>A communication error occurred (one of the following communication errors has occurred):</p> <p>CRC : Error generated by an abnormal cable, noise, etc.</p> <p>OVER : This error occurs when the next data is received before the last receive data is loaded into the module, and the data is overwritten. It is caused by a hardware error in the receive area of the network module.</p> <p>AB.IF : This error occurs when more than the specified number of bits are set to "1" among the receive data in the frame, or when the receive data is shorter than the specified data length.</p> <p>TIME : This error occurs when a baton pass was not handed to the host within the monitoring time.</p> <p>DATA : This error is caused when abnormal code data is received.</p> <p>UNDER : This error occurs when the internal processing of the send data was not executed at a fixed interval.</p> <p>LOOP : This error occurs when the forward loop line or reverse loop line is faulty and the power to the adjacent station, which sends data to the host station, is turned OFF or the cable connector is faulty.</p> <p>&lt;Corrective action&gt;</p> <p>Check the cables and connectors (detached or loosened connectors, wrong IN/OUT connections, broken or damaged cables, improper cable routing, etc.)</p> <p>For more details, refer to the "Network Diagnostics" (Section 8.1).</p>
		Off	No communication error
9	EXT. PW	Green on	External power being supplied (Host station power status (SB0042) is ON.)
		off	External power not supplied (Host station power status (SB0042) is OFF.)

\* 1: On a multiplexed remote I/O network, the LED of the sub-master operating station is off.

\* 2: The ERR. LED flashes on the following modules whose serial No. (first five digits) is "02112" or later.


- QJ71LP21
- QJ71LP21-25
- QJ71BR11

(1) Station No. settings on a multiplexed remote I/O network for redundant system


For the master module mounted on the station (multiplexed remote master station) to which the system A connector of tracking cable is connected, set the station No.0.

If the station No. other than 0 is set, the programmable controller CPU will detect the LINK PARA. ERROR (error code 3101).


For the master module mounted on the station (multiplexed remote sub-master station) to which system B connector of tracking cable is connected, set the station No. in the range of 1 to 64. If the station No. 0 is set, the programmable controller CPU will detect the LINK PARA. ERROR (error code 3101).

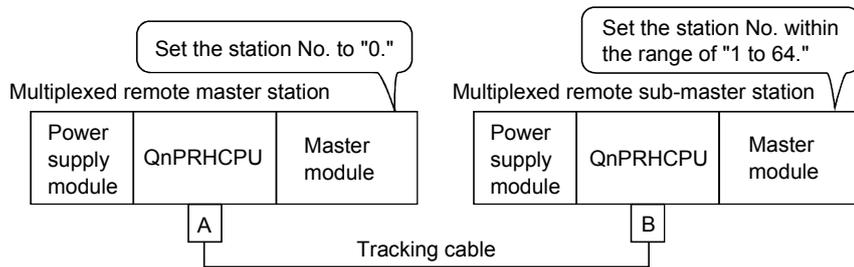

4.2.2 QJ72LP25-25, QJ72LP25G, QJ72LP25GE, QJ72BR15

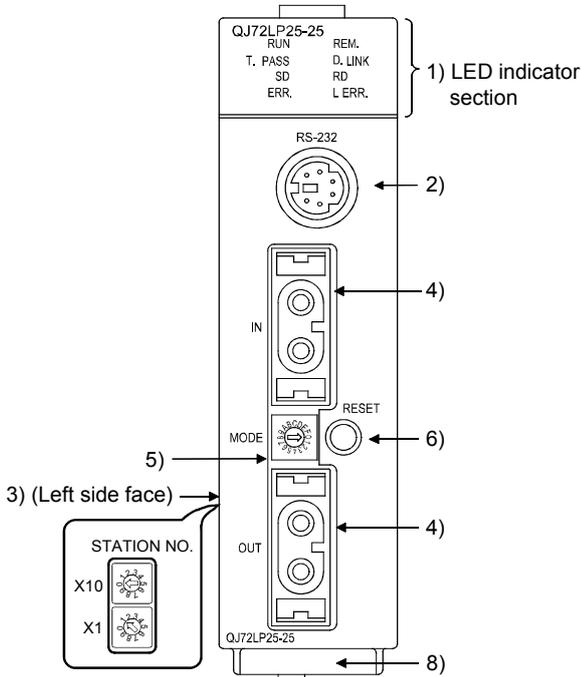

Optical loop module

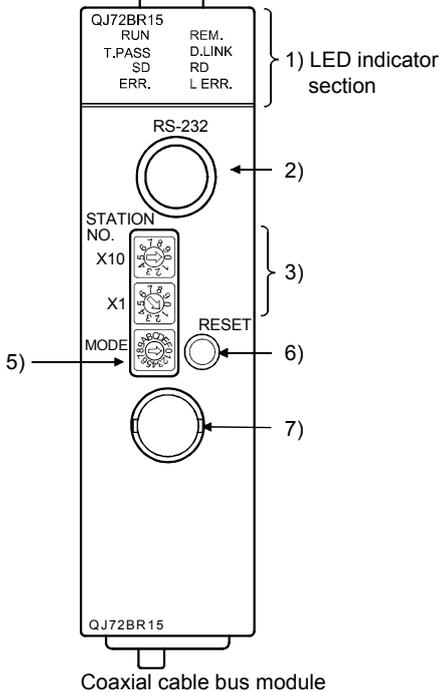


Coaxial cable bus module

3) STATION No. (Factory setting:1) : Station number setting switch  
Station numbers can be set inside the same network.

Setting	Contents
0	Setting error (The red ERR. LED turns ON.)
1 to 64	Valid setting range (When using the QJ72BR15, setting any of 33 to 64 will result in a setting error. However, the red ERR. LED will not turn ON.)
65 to 99	Setting error (The red ERR. LED turns ON.)

4) IN/OUT connector  
For connector for optical fiber.

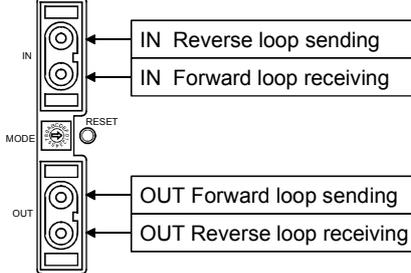

5) MODE (Factory setting: 0): Mode setting switch  
Sets the operating mode  
a) QJ72LP25G, QJ72LP25GE, QJ72BR15

Setting	Contents
0	On line
1	Self return test
2	Internal self return test
3	Hardware test
4 to F	Prohibited

b) QJ72LP25-25

Setting	Contents	
0	Online	10 Mbps used
1	Self return test	
2	Internal self return test	
3	Hardware test	25 Mbps used
4	Online (Parameter mode selection is enabled)	
5	Self return test	
6	Internal self return test	
7	Hardware test	
8 to F	Prohibited	

- 6) RESET switch  
Resets the remote I/O station hardware. \* 1
- 7) Coaxial connector  
For connecting F-type connector for coaxial cable.
- 8) Serial number plate (QJ72LP25-25)  
Indicates the serial No. of the QJ72LP25-25.

\* 1: When resetting the system, press and hold the RESET switch for a second or more. If the pressing time is too short, the system may not be reset normally. If the system is not reset normally, try reset operation again.

POINT
1) There can be no duplication of station numbers in the same network.
2) Setting can be done regardless of station sequence. However, if a station number is to be left empty, sting a reserved number.
3) Set the mode setting switches in the same position on all network modules.

## 1) LED displays

No.	Name	LED status	Description
1	RUN	Green on	Module operating normally
		Off	Watchdog timer error occurred (hardware error)
2	REM. *2	Green on	Module operating normally.
		Green flashing	Parameters being written to flash ROM or device is in test mode.
		Off	In remote initialization, error (watchdog timer error, blown fuse error, I/O module verification error, etc.)
3	T.PASS	Green on	Executing baton pass (being joined in a network)
		Green flash	Test is determined to have completed normally when this LED flashes 20 times or more (approximately 10 s) during the test.
		Off	Baton pass not yet executed (the host is disconnected from the network)
4	D.LINK	Green on	Data link being executed (cyclic transmission is being executed)
		Off	Data link not yet executed (parameter receiving not completed, host CPU error, data link stop instructed, etc.)
5	SD	Green on	Data being sent
		Off	Data not yet sent
6	RD	Green on	Data being received
		Off	Data not yet received
7	ERR. *2	Red on	<ul style="list-style-type: none"> <li>• Station setting error (other than 1 to 64), mode setting error (prohibited setting), operating condition setting error due to parameters.</li> <li>• A station with the same number already exists in the network.</li> <li>• Host is designated as remote master station in spite of a remote master station already existing in the network.</li> <li>• Abnormality in parameters received from the remote master station.</li> <li>• Watchdog timer error occurred (RUN LED is OFF).</li> </ul>
		Flashing	<ul style="list-style-type: none"> <li>• An error was detected while testing the network module.</li> <li>• The mode setting switch or the station number setting switch was changed during operation. *3</li> </ul>
		Off	Normal status
8	L.ERR.	Red on	<ul style="list-style-type: none"> <li>• A communication error occurred (one of the following communication errors has occurred):</li> <li>CRC : Error generated by an abnormal cable, noise, etc.</li> <li>OVER : This error occurs when the next data is received before the last receive data is loaded into the module, and the data is overwritten. It is caused by a hardware error in the receive area of the network module.</li> <li>AB.IF : This error occurs when more than the specified number of bits are set to "1" among the receive data in the frame, or when the receive data is shorter than the specified data length.</li> <li>TIME : This error occurs when a baton pass was not handed to the host within the monitoring time.</li> <li>DATA : This error is caused when abnormal code data is received.</li> <li>UNDER : This error occurs when the internal processing of the send data was not executed at a fixed interval.</li> <li>LOOP : This error occurs when the forward or reverse loop line is faulty and the power to the adjacent station, which sends data to the host station, is turned OFF or the cable connector is faulty.</li> </ul> <p>&lt;Corrective action&gt;</p> <p>Check the cables and connectors (detached or loosened connectors, wrong IN/OUT connections, broken or damaged cables, improper cable routing, etc.)</p> <p>For more details, refer to the "Network Diagnostics" (Section 8.1).</p> <ul style="list-style-type: none"> <li>• Watchdog timer error occurred (RUN LED is OFF).</li> </ul>
		Off	No communication error

## 2) RS-232 connector

For connecting RS-232 connector for peripheral equipment.

\*2: When a remote I/O module is used in a redundant power supply system, the REM. LED and ERR. LED indicate errors as follows according to the failure causes of the power supply module.

Power supply module	Failure cause	REM. LED	ERR. LED
Failure of only one module	Input power supply off, fuse blown	Off	On
	Internal failure	On	On
Failure of both the two modules	Input power supply off, fuse blown	Off	Off
	Internal failure (Both the LEDs are off or on depending on the failure part.)	Off	On
		On	On

The faulty power supply module can be confirmed by the error code. (Refer to section 8.3.2.)

When a remote I/O module of function version C or later is used, the ERR. LED remains off even if one or two power supply modules fail.




Confirm the failure of the power supply module on the LED of the module. If the power supply module is mounted on an extension base unit, the error can also be confirmed by the ERR contact of the power supply module. (For the specification of the LED of the power supply module, refer to QCPU User's Manual (Hardware Design, Maintenance and Inspection).)

\*3: The ERR. LED flashes on the following modules whose serial No. (first five digits) is "02112" or later.



- QJ72LP25-25
- QJ72BR15

4.3 Installing and Uninstalling the Module

(1) Installing the module

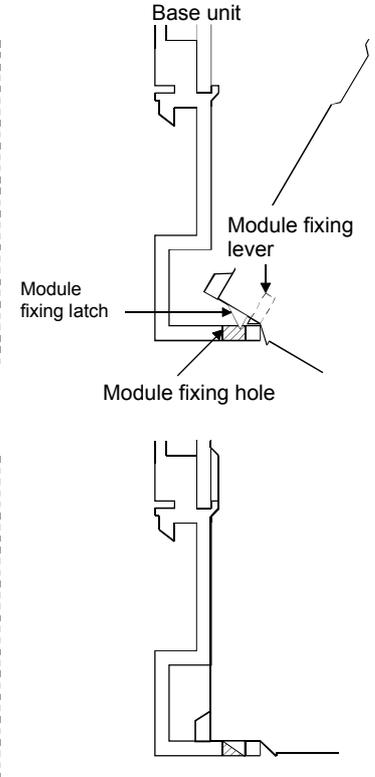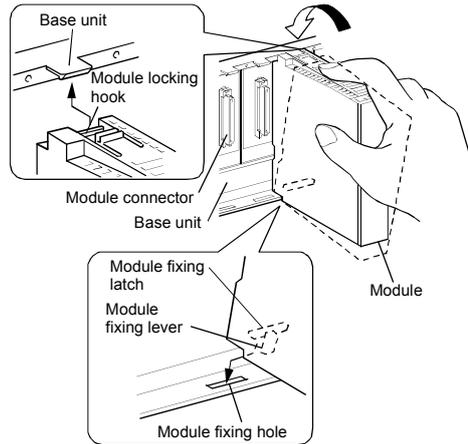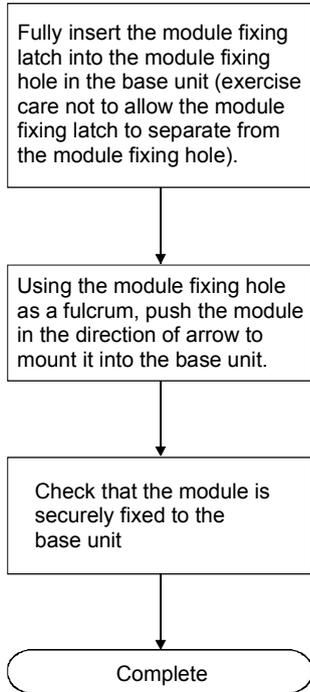

(2) Uninstalling the module

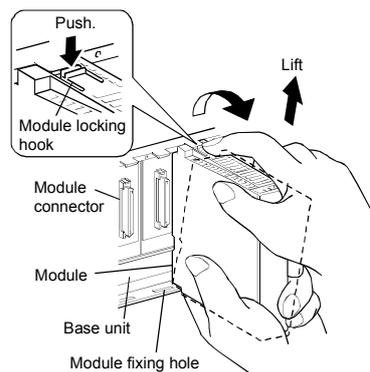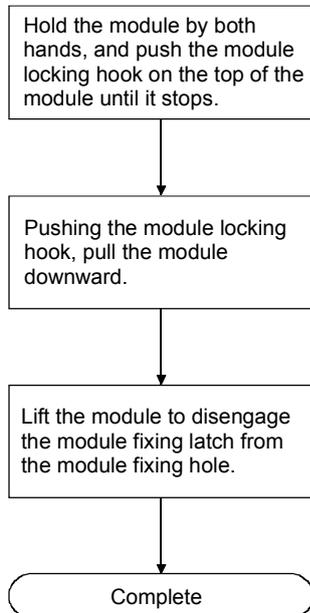

[Module handling precautions]

- Since the module case is made of resin, do not drop it or subject it to strong impacts.
- The module can be easily fixed onto the base unit using the hook at the top of the module. However, it is recommended to secure the module with the module fixing screw if the module is subject to significant vibration or shock. In this case, tighten the module fixing screws within the following clamping torque range.

Module fixing screws (M3): clamping torque ranging from 0.36 to 0.48 N•m

- Tighten the external power supply terminal screw of QJ71LP21S-25 within the following torque range:

For the specification of the external power supply terminal, refer to section 3.1.1.

External power supply terminal screw (M3): torque ranging from 0.42 to 0.58 N•m


 DANGER

- Do not touch the terminals and the connectors while the power to the module is on. Doing so may cause electric shocks or malfunctions.
- If the module is not mounted properly and fastened with the screws, it may cause the module to malfunction, break down or fall off. If the screws are tightened excessively, it may damage the module and the screws, and cause the module to short-circuit, malfunction or fall off.

 CAUTION

- Be careful not to let foreign particles such as chaff or wire chips enter the module. They may cause fire, breakdowns or malfunctions.
- Never disassemble or modify the module. It may cause breakdowns, malfunctions, injuries or fire.

4.4 Stopping the CPU (Unintentional Output Prevention)

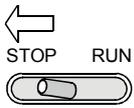

Set the CPU module's RUN/STOP switch to the STOP side.


4.5 Checking the Input Power Supply Voltage

Check that the supply power voltage to the power supply module is within the specifications.

4.6 Powering On

Check the power supply to the network module.


4.6.1 Checking the on status of the POWER LED of the power supply module

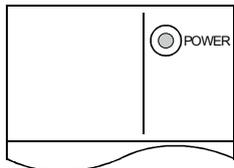

The POWER LED lights up at the same time when the programmable controller system is powered on.

4.6.2 Checking the on status of the RUN LED of the network module


Remote master station

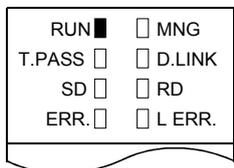

The RUN LED lights up in green when the network module of remote master station and remote I/O station is operating normally.

If this LED does not light up, refer to Chapter 8, "Troubleshooting."

Remote I/O station

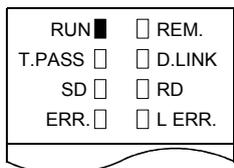


4.7 Standalone Check of the Network Module (Offline Tests)

Before executing the data link operation, check the network module and the cables. Select a test using the mode setting switch on the front of the network module. The following three test are available for the offline tests:

- (1) Self-loopback test (mode setting switch: 1 or 5)  
This test checks the hardware of the internal circuits, including the send/receive circuit of the network module, as well as the cables.
- (2) Internal self-loopback test (mode setting switch: 2 or 6)  
This test checks the hardware of the internal circuits, including the send/receive circuit of the network module.
- (3) Hardware test (mode setting switch: 3 or 7)  
This test checks the hardware inside the network module.

Flow of offline tests

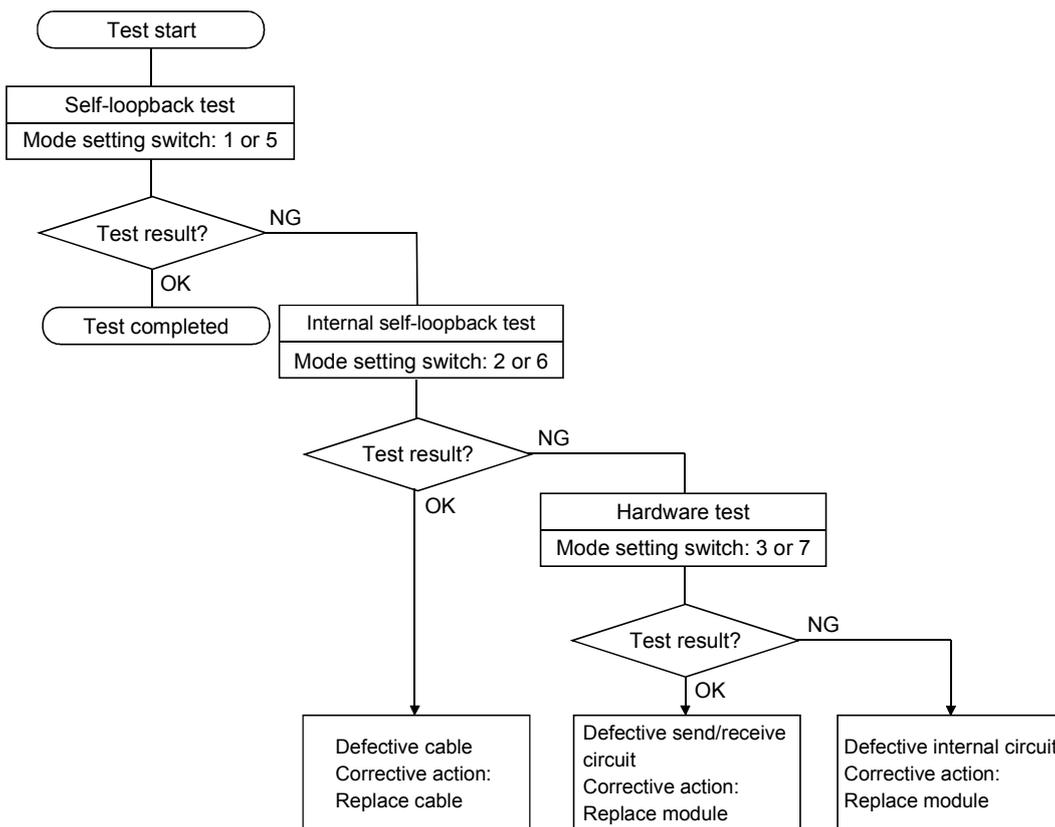

**REMARKS**

The data link operation cannot be executed normally if at least one station is placed in the test mode (offline, MODE switches 1 to 3 or 5 to 7) during data linking (online).

4.7.1 Self-loopback test


This test checks the hardware of a standalone network module, including the send/receive circuit and cable of the transmission system.

**POINT**  
 To perform the self-loopback test, be sure to connect the cable or terminal resistor.  
 Do not connect or disconnect the cable or terminal resistor during execution of the test. (Doing so will result in test failure.)

- (1) Connect the IN and OUT terminals of the QJ71LP21/QJ72LP25 network module (for the optical loop system) with an optical fiber cable. Connect a terminal resistor to both of the F-type connectors for the QJ71BR11/QJ72BR15 network module (for the coaxial bus system).

For QJ71LP21/QJ72LP25  
 (optical loop system)

For QJ71BR11/QJ72BR15  
 (coaxial bus system)

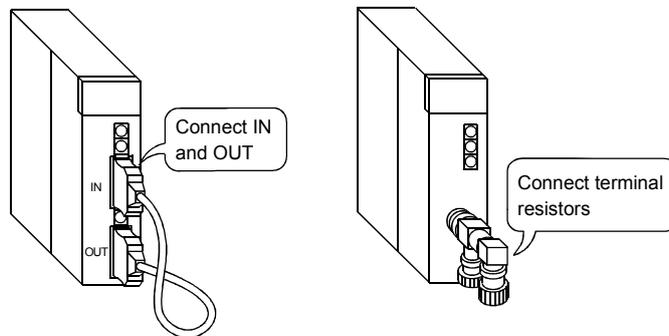

- (2) Set the mode setting switch of the network module to "1". Set it to "5" when using the QJ71LP21/QJ72LP25 at 25Mbps. The self-loopback test is selected.
- (3) Power on the target station. The self-loopback test is executed; check the execution status on the network module display. The T.PASS LED flashes during the test. When the T.PASS LED flashes 20 times (approx. 10 seconds) or more and if the ERR.LED does not flash, this condition indicates normal completion. If the test is abnormally completed, the ERR. LED flashes. Upon detection of an error, the test will be terminated (abnormal termination).

RUN <input type="checkbox"/>	<input type="checkbox"/> MNG
T.PASS <input type="checkbox"/>	<input type="checkbox"/> D.LINK
SD <input type="checkbox"/>	<input type="checkbox"/> RD
ERR. <input type="checkbox"/>	<input type="checkbox"/> L ERR.

Before test	During test	Normal completion of test
T.PASS <input type="checkbox"/> : Off	⇒ <input checked="" type="checkbox"/> : Flashing	⇒ <input checked="" type="checkbox"/> : Flashing 20 times (approx. 10 seconds) or more
		Abnormal completion of test
		ERR. <input checked="" type="checkbox"/> : Flashing

If an error is detected in the QJ71LP21/QJ72LP25 (for the optical loop system), check the error in GX Developer and replace the cable to identify a faulty part. For an error in the QJ71BR11/QJ72BR15 (for the coaxial bus system), check the error in GX Developer and replace the terminal resistor to identify a faulty part.

REMARKS
---------

In the MELSECNET/H, a link refresh is executed even when the module is offline. Thus, the user can check the testing status and the result with GX Developer or a sequence program using the link special registers.

Baton pass status (host)	SW0047	→ 1FH	: Offline test
Cause of baton pass interruption	SW0048	→ 2H	: Offline test
Offline test execution item/faulty station (requesting side)	SW00AC	→ 7H	: Self-loopback test
Offline test result (requesting side)	SW00AD	→ 0	: Normal
		1 or larger	: Error code

For details on how to check the error contents, refer to Chapter 8.

If two or more modules are installed, the testing status and the result of each module can be checked by adding 200H to the corresponding device number.


4.7.2 Internal self-loopback test

This test checks the hardware of a standalone network module, including the send/receive circuit of the transmission system.

- (1) Do not connect the optical fiber cable with the QJ71LP21/QJ72LP25 network module (for the optical loop system). However, make sure that the exterior random light does not enter from the connector. Do not connect cables or terminal resistors if the QJ71BR11/QJ72BR15 network module (for the coaxial bus system) is used.

For QJ71LP21/QJ72LP25  
(optical loop system)

For QJ71LP21/QJ72BR15  
(coaxial bus system)

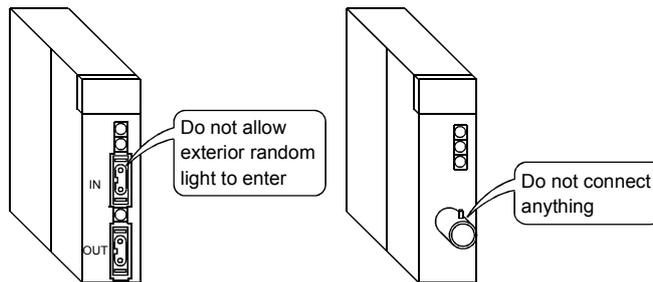

- (2) Set the mode setting switch of the network module to "2". Set it to "6" when using the QJ71LP21/QJ72LP25 at 25Mbps. The internal self-loopback test is selected.

- (3) Power on the target station. The internal self-loopback test is executed; check the execution status on the network module display. The T. PASS LED flashes during the test. When the T.PASS LED flashes 20 times (approx. 10 seconds) or more and if the ERR.LED does not flash, this condition indicates normal completion. If the test is abnormally completed, the ERR. LED flashes. Upon detection of an error, the test will be terminated (abnormal termination).

RUN	MNG
T.PASS	D.LINK
SD	RD
ERR.	L.ERR.

Before test	During test	Normal completion of test
T.PASS: Off	⇒ T.PASS: Flashing	⇒ T.PASS: Flashing 20 times (approx. 10 seconds) or more
		Abnormal completion of test
		ERR. Flashing

When an error occurs, the contents of the error should be checked with GX Developer. The faulty area can be examined by replacing the module.

REMARKS
---------

In the MELSECNET/H, a link refresh is executed even when the module is offline. Thus, the user can check the testing status and the result with GX Developer or a sequence program using the link special registers.

Baton pass status (host)	SW0047	→ 1FH	: Offline test
Cause of baton pass interruption	SW0048	→ 2H	: Offline test
Offline test execution item/faulty station (requesting side)	SW00AC	→ 8H	: Internal self-loopback test
Offline test result (requesting side)	SW00AD	→ 0	: Normal
		1 or larger	: Error code

For details on how to check the error contents, refer to Chapter 8.

If two or more modules are installed, the testing status and the result of each module can be checked by adding 200H to the corresponding device number.


4.7.3 Hardware test

This test checks the hardware inside the network module.

- Connect the IN and OUT terminals of the QJ71LP21/QJ72LP25 network module (for the optical loop system) with an optical fiber cable. Do not connect cables or terminal resistors if the QJ71BR11/ QJ72BR15 network module (for the coaxial bus system) is used.

For QJ71LP21/QJ72LP25  
(optical loop system)

For QJ71LP21/QJ72BR15  
(coaxial bus system)

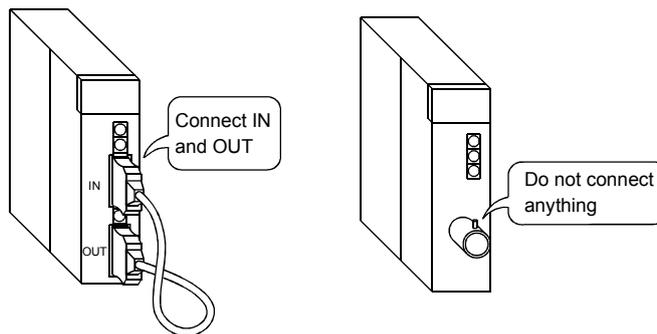

- Set the model setting switch of the network module to "3". Set it to "7" when using the QJ71LP21/QJ72LP25 at 25Mbps. The hardware test is selected.

- Power on the target station. The hardware test is executed; check the execution status on the network module display. The T. PASS LED flashes during the test. When the T.PASS LED flashes 20 times (approx. 10 seconds) or more and if the ERR.LED does not flash, this condition indicates normal completion. If the test is abnormally completed, the ERR. LED flashes. Upon detection of an error, the test will be terminated (abnormal termination).

RUN	MNG
T.PASS	D.LINK
SD	RD
ERR.	L ERR.

Before test	During test	Normal completion of test
T.PASS: Off	Flashing	Flashing 20 times (approx. 10 seconds) or more
		Abnormal completion of test
		ERR. Flashing

When an error occurs, the contents of the error should be checked with GX Developer. The faulty area can be examined by replacing the cable or module.

REMARKS
---------

In the MELSECNET/H, a link refresh is executed even when the module is offline. Thus, the user can check the testing status and the result with GX Developer or a sequence program using the link special registers.

Baton pass status (host)	SW0047	→ 1FH	: Offline test
Cause of baton pass interruption	SW0048	→ 2H	: Offline test
Offline test execution item/faulty station (requesting side)	SW00AC	→ 9H	: Hardware test
Offline test result (requesting side)	SW00AD	→ 0	: Normal
		1 or larger	: Error code

For details on how to check the error contents, refer to Chapter 8.

If two or more modules are installed, the testing status and the result of each module can be checked by adding 200H to the corresponding device number.

4.8 Cable Connections

4.8.1 Optical loop system

(1) Precautions when connecting

- (a) The type of cables that can be used will vary according to the distance between stations.

Type		Interstation distance			
		QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ72LP25-25 : 10 Mbps	QJ71LP21-25, QJ71LP21S-25, QJ72LP25-25 : 25 Mbps	QJ71LP21G QJ72LP25G	QJ71LP21GE QJ72LP25GE
SI optical fiber cable (Old type: A-2P-□)	L type	500m (1641 ft.)	200m (656 ft.)	Must not be used	Must not be used
	H type	300m (984 ft.)	100m (328 ft.)		
SI optical fiber cable		500m (1641 ft.)	200m (656 ft.)		
H-PCF optical fiber cable		1000m (3281 ft.)	400m (1312 ft.)		
Broad-band H-PCF optical fiber cable		1000m (3281 ft.)	1000m (3281 ft.)		
QSI optical fiber cable		1000m (3281 ft.)	1000m (3281 ft.)		
GI-50/125 optical fiber cable		Must not be used	Must not be used	2000m (6562 ft.)	Must not be used
GI-62.5/125 optical fiber cable		Must not be used	Must not be used	Must not be used	2000m (6562 ft.)

- (b) When connecting an optical fiber cable, the following restrictions on the bending radius should be observed.  
For details, check the specifications of the cable to be used.
- (c) Maintain the bending radius of the optical fiber cable within the allowable range using a tool for securing the optical fiber cable bending radius.  
This tool may be purchased from Mitsubishi Electric System Service, Inc, or your nearest dealer. Please inquire for more information.
- (d) When laying the optical fiber cables, do not touch the fiber cores of the cable and module connectors, and do not let dust or particles collect on them.  
If oil from hands, dust or particles adhere to the cores, the accumulated transmission loss may cause malfunctions in the data link.  
Also, do not remove the cover from the module-side connector until the optical fiber cable is ready to be installed.
- (e) When connecting or disconnecting an optical fiber cable, hold the connector part of the cable.
- (f) Connect the cable and module connectors securely until you hear a "click" sound.
- (g) Be sure to shut off all phases of the external power supply used in the system before connecting or disconnecting optical fiber cables.


(2) Cable connection

(a) How to connect the cable


Note that there is no need to connect the cables in the order of station numbers.

Remote master station is set as station number 0.

a - 1) QJ71LP21-25 - QJ72LP25-25, QJ71LP21G - QJ72LP25G


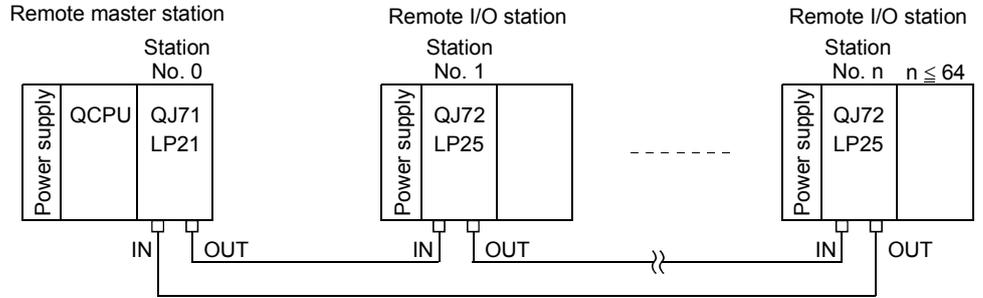


a - 2) QJ71LP21GE - QJ72LP25GE

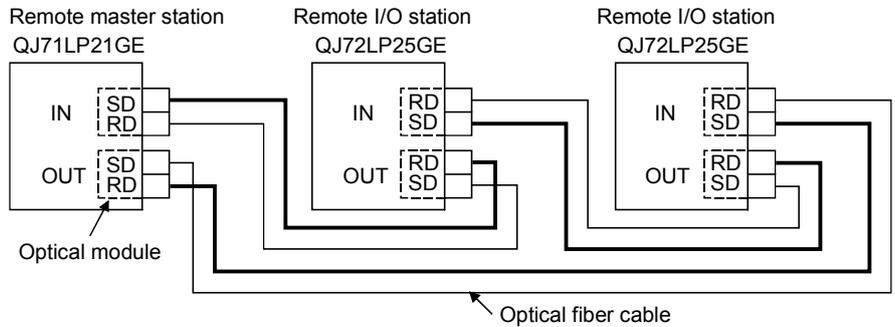



(b) Installing the optical fiber cable

The following shows how to install the optical fiber cable:

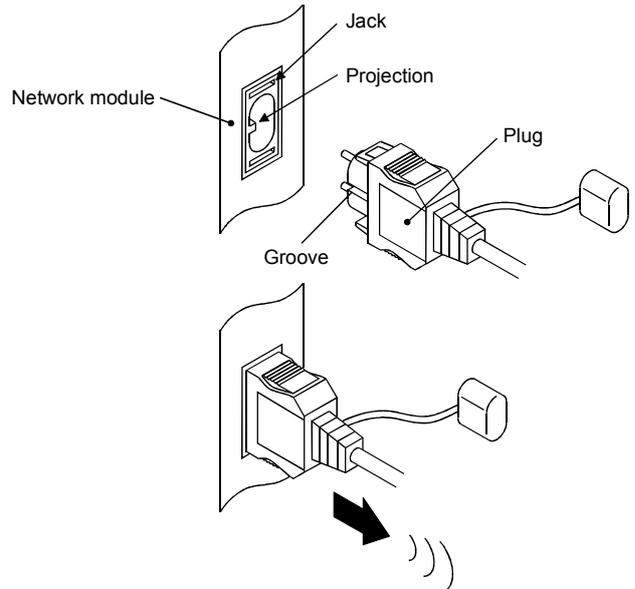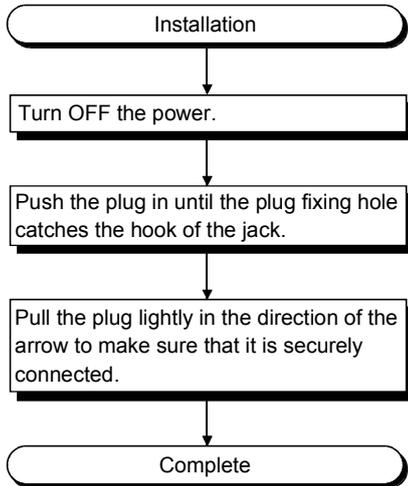

(c) Removing the optical fiber cable

The following shows how to remove the optical fiber cable:

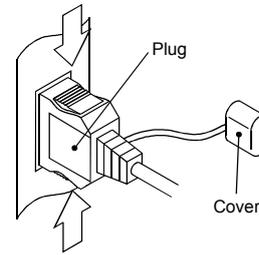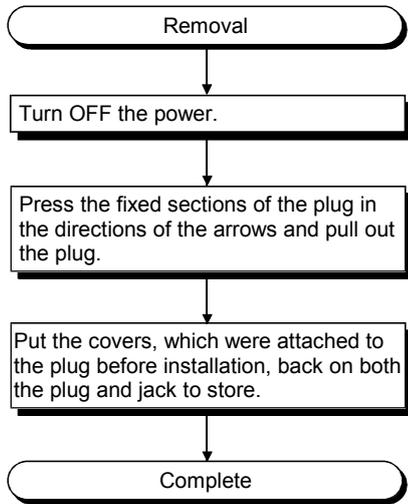

**POINT**

Data link operation may be executed even if IN and IN or OUT and OUT are connected with an optical fiber cable. However, the loopback function, the network diagnostic function and some of other functions do not operate normally. So, make sure to connect OUT and IN.

The wiring status can be checked by either of the following methods.

- (1) When checking by stopping data link  
Conduct a loop test in the network diagnostics of GX Developer. (Refer to Section 4.10.1.)
- (2) When checking without stopping data link  
Check the status of SW009C to 9F. (Refer to Section 8.2.9.)

4.8.2 Coaxial bus system

(1) Precautions in connecting

(a) Restrictions on the cable length between the stations

- 1) When connecting between the network modules, the cable lengths indicated in the table below should be used according to the number of stations connected.

A communication error may occur if a cable length other than the lengths indicated in the table is used.


Station-to-station cable length / Cable type	2 to 9 stations		10 to 33 stations	
	3C - 2V	5C - 2V	3C - 2V	5C - 2V
0 to 1 m (3.28 ft.)	× (cable less than 1m (3.28 ft.) in length cannot be used.)			
1 (3.28 ft.) to 5 m (16.41 ft.)	○	○	○	○
5 (16.41 ft.) to 13 m (42.65 ft.)	○	○	×	×
13 (42.65 ft.) to 17 m (55.78 ft.)	○	○	○	○
17 (55.78 ft.) to 25 m (82.03 ft.)	○	○	×	×
25 (82.03 ft.) to 300 m (984.3 ft.)	○	○	○	○
300 (984.3 ft.) to 500 m (1640.5 ft.)	×	○	×	○

○: Allowed ×: Not allowed

- 2) If there is a possibility of adding more stations to expand the existing system, the cables should be installed by considering restriction 1) mentioned above in advance.
- 3) When using a repeater module (models A6BR10 or A6BR10-DC), use the station-to-station cable length for "10 to 33" stations, regardless of the number of stations connected or the number of repeater modules.

(b) Cable installation precautions


- 1) Install the coaxial cables at least 100 mm (3.94 in.) away from other power cables and control cables.
- 2) Consider to use double shield coaxial cables in locations where there is excessive noise.
- 3) To configure a multiplexed remote I/O network for redundant system, use a double shield coaxial cable.

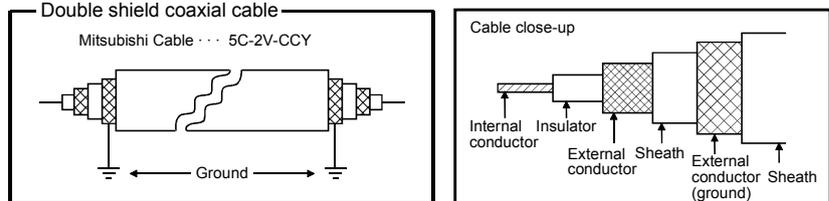

5C-2V connector plug can be applied to double-shielded coaxial cable. Connect the plug to the coaxial cable inside the double shield coaxial cable.


Ground the shielded section, external part of the double shield coaxial cable, as shown above.

Connect the external conductor (Grounding surface) of the double-shielded coaxial cable 10mm (0.394 in.) away from the 5C-2V connector plug. (Avoid connection between them.)

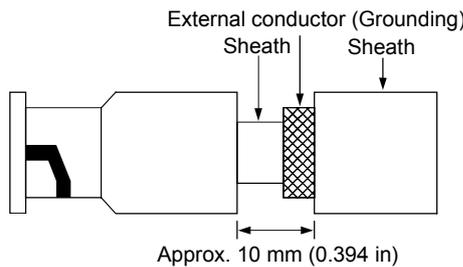

(c) When connecting a coaxial cable, the following restrictions on the bending radius must be observed.

Cable type	Allowable bending radius r	Connector A
3C – 2V	23mm (0.91 in.)	55mm (2.17 in.)
5C – 2V	30mm (1.18 in.)	

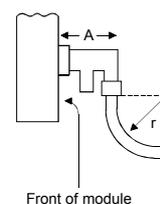

- (d) Do not pull any of the connected coaxial cables. This may cause a faulty contact and cable disconnection, or damage the module.
- (e) For coaxial bus type network systems, be sure to connect both end stations to the terminal register.
- (f) Depending on the usage environment, some white oxidation deposits may be seen on the F type connector. However, oxidation will not occur on the connection area, so there will be no problems with the function of the unit.
- (g) Be sure to shut off all phases of the external power supply used in the system before connecting or disconnecting coaxial cables.

(2) Cable connection


(a) Connection method

Connect the coaxial cable as shown below.


Always install a terminal resistor (sold separately: A6RCON-R75) to the stations connected at both ends.

The F-type connector (A6RCON-F) comes with the module.

1) Without a repeater module

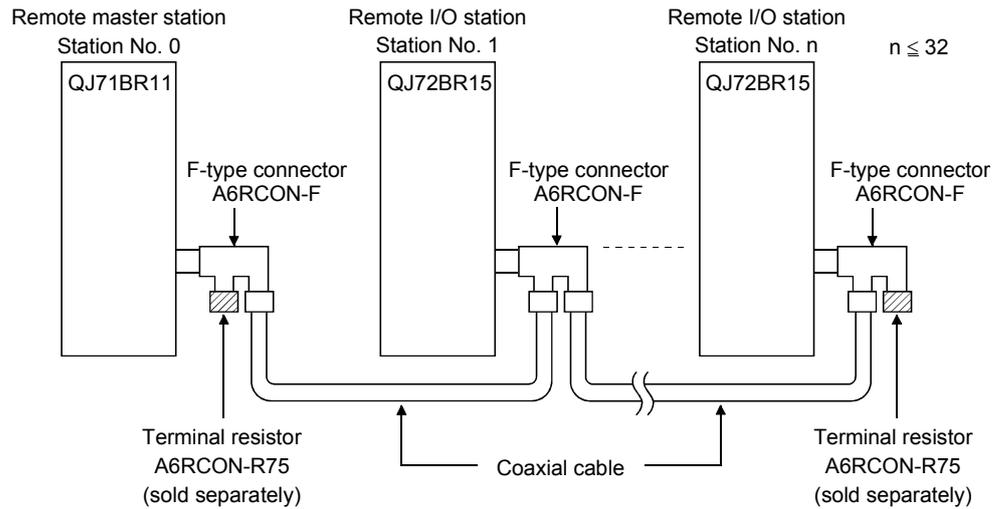

2) With a repeater module (series connection)

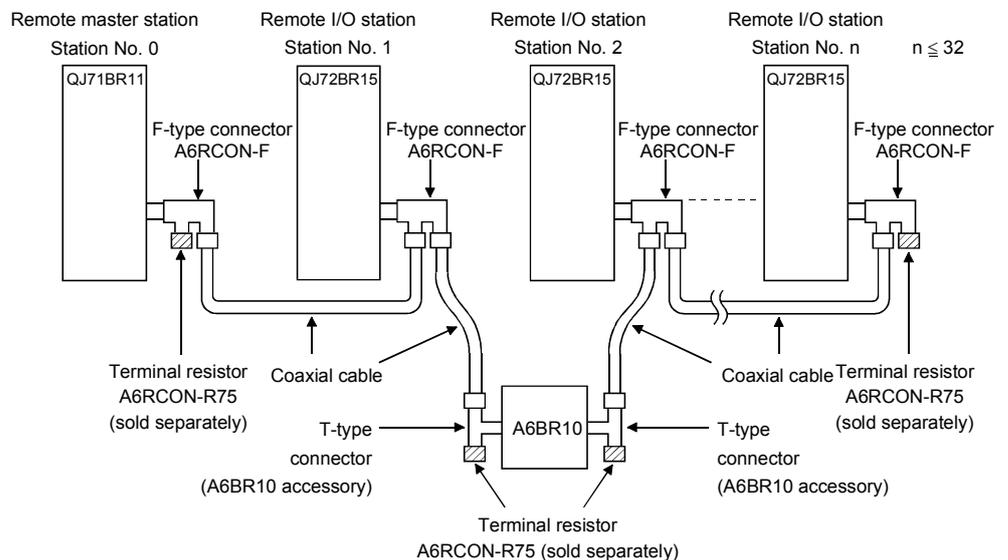


**REMARKS**

For details about the repeater module (A6BR10), refer to the following user's manual attached to the product:


Model A6BR10/A6BR10-DC MELSECNET/10 Coaxial Bus System  
Repeater Module User's Manual (IB-66499)

3) With a repeater module (branch connection)

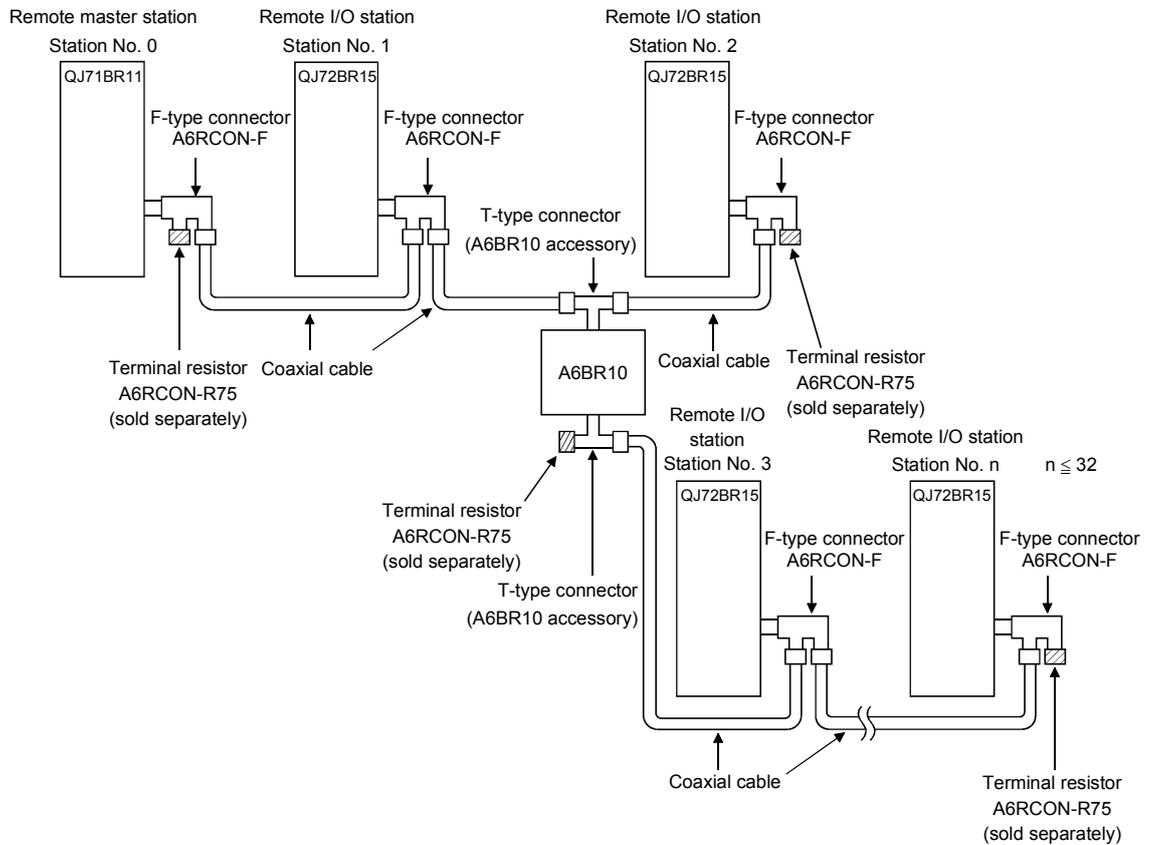



**POINT**

- (1) By setting stations that will be connected in future (stations that are included in the number of stations but not actually connected) as reserved stations, a communication error can be prevented and the link scan time will not be affected.
- (2) The two connectors of the F-type connector are not dedicated to IN and OUT. A coaxial cable can be connected to either of them.
- (3) A terminal resistor can be placed on either side of the F-type connector.

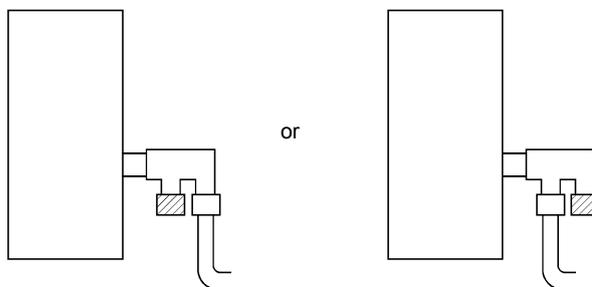



(b) Installing the coaxial cable

The following shows how to install the coaxial cable:

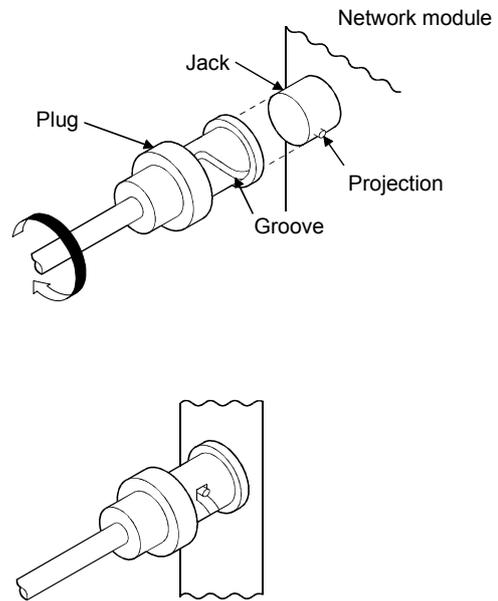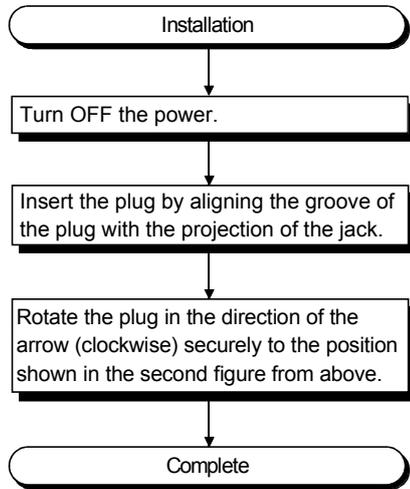

(c) Removing the coaxial cable

The following shows how to remove the coaxial cable:

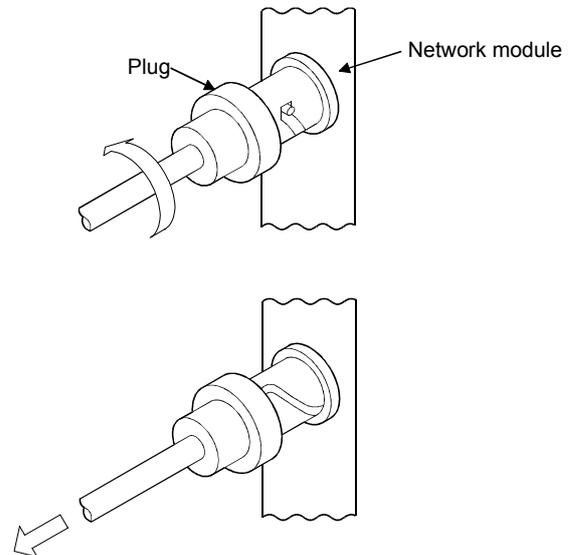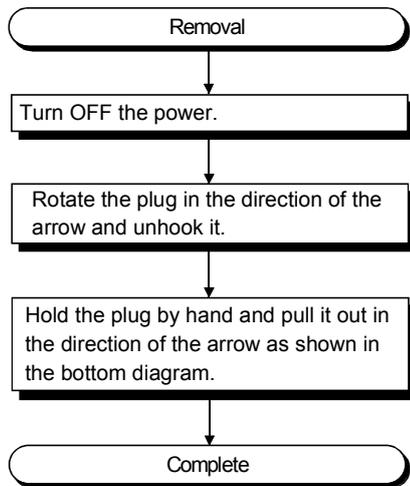

4.9 Offline Tests from GX Developer

The offline tests check the cable connection status using the network parameters of GX Developer.

4.9.1 Forward loop/reverse loop test (Remote master station only)

The forward loop/reverse loop test checks the hardware of the network modules and cables after all stations are connected with optical fiber cables. It also checks whether the cables are connected between IN and OUT connections properly.

The following explains how to conduct the forward loop/reverse loop test:

(1) Setting the test mode

- (a) Mode for performing the forward loop/reverse loop test on a system other than the redundant system

When conducting the forward loop test, set the mode network parameter of the station that will be executing the forward loop test to "Forward loop test" with GX Developer and write the parameter setting to the CPU module.

Set the mode for all other stations than the testing station to "Online."

When conducting the reverse loop test, set the mode network parameter of the station that will be executing the reverse loop test to "Reverse loop test" with GX Developer and write the parameter setting to the CPU module.

Remote master station

Module 1	
Network type	MNET/H(Remote master) <span style="float: right;">M</span>
Starting I/O No.	0000
Network No.	1
Total stations	5
Group No.	
Station No.	
Mode	Forward loop test <span style="float: right;">Set</span>
Network range assignment	

- (b) Setting the mode when performing the forward loop/reverse loop test on the redundant system


When conducting the forward loop/reverse loop test on the redundant system, set the operation mode of the redundant CPU to the backup mode in advance.

When it the power supplies of both the systems cannot be powered on/off, perform the forward loop/reverse loop test in the separate mode.

The table below shows the mode settings when conducting the forward loop/reverse loop test on the redundant system.


Target station			Set-up
Test target station	Redundant system	In backup mode	Set to "forward loop test" or "reverse loop test."
		In separate mode	
Non-test target station	Redundant system	In backup mode	Set to "offline."
		In separate mode	Set to "online."
	Remote I/O station		Set to "online."

The figure below shows the settings when the forward loop test is executed on the system A (station No. 1) of the redundant system (in the backup mode).

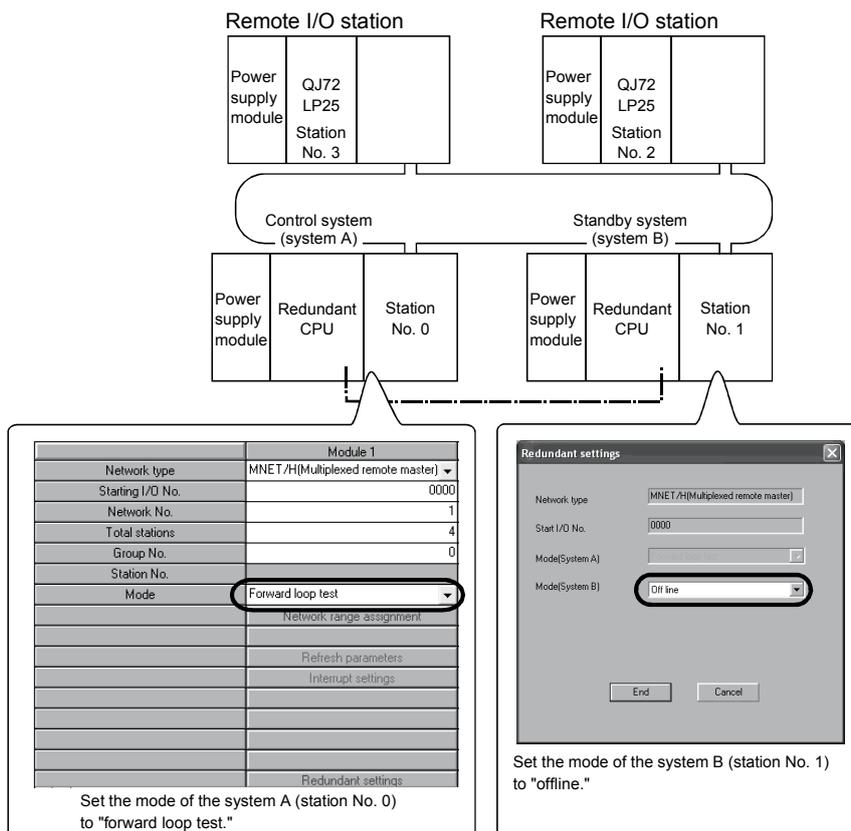


(2) Starting the test

- (a) High Performance model QCPU, Process CPU, and Redundant CPU  
Set the RUN/STOP switch of the CPU module to STOP position. When resetting the CPU module, use the RESET/L.CLR switch.

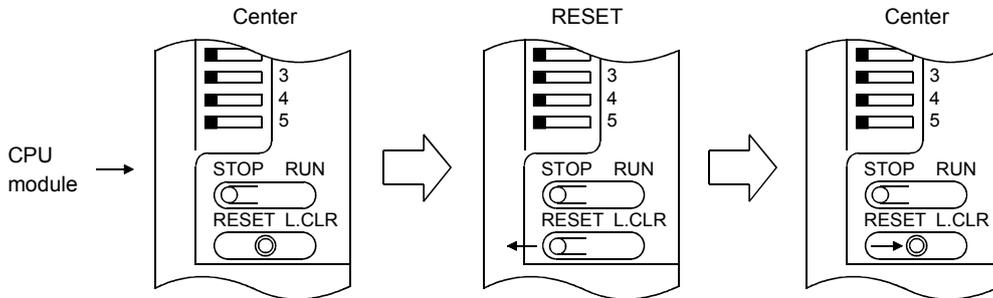

- (b) Universal model QCPU  
Reset with the RESET/STOP/RUN switch.  
Hold the switch in the RESET position until the ERR. LED starts flashing, and release it after the LED turns off.

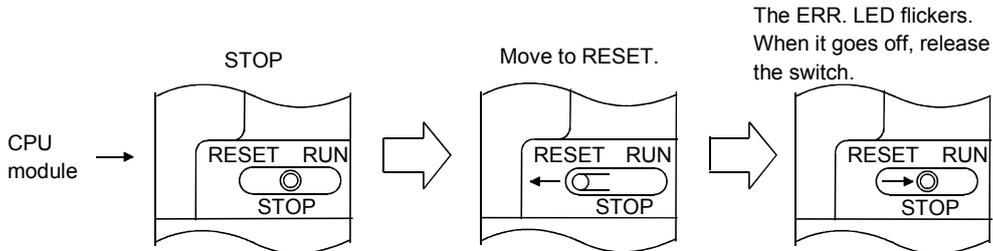

The ERR. LED flickers.  
When it goes off, release the switch.

**POINT**

To execute the forward loop/reverse loop test, connect the cable correctly to OUT and IN.  
Also, do not connect or disconnect the cable during execution of the test. (Doing so will result in test failure.)


(3) Checking the test result

The T.PASS LED of the network module flashes at approximately 0.5 s intervals. When the T.PASS LED flashes 20 times (approx. 10 seconds) or more and if the ERR.LED does not flash, this condition indicates normal completion.


When the test has failed, the ERR. LED flashes.

Check the test result with the LEDs of the testing station.

[Normal test result]

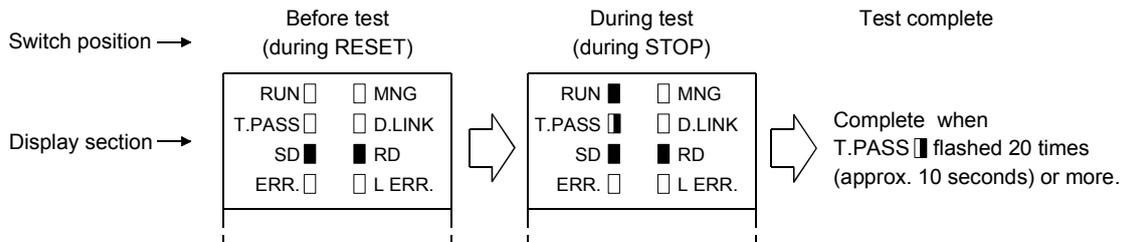

[Abnormal test result]

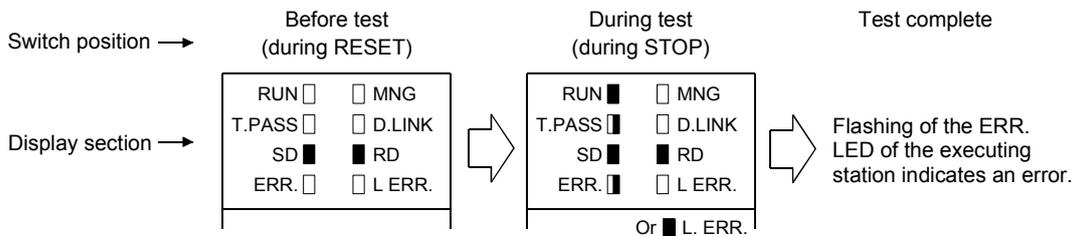

Upon detection of an error, the test will be terminated (abnormal termination).

<Possible causes of errors>

A loopback was executed because of a wiring error, a faulty optical fiber cable or abnormality was detected in other station.

- 1) If wiring is incorrect  
Check the connections of IN and OUT connectors and other connectors.  
If an incorrect connection is found, connect properly.
- 2) If an optical fiber cable is faulty or other station is abnormal  
Replace the defective cable or module.

**REMARKS**

The status during the test and the test result can be checked by link special registers or GX Developer.

Baton pass status (host)	SW0047	→ 1FH	: Offline test
Cause of baton pass interruption	SW0048	→ 2H	: Offline test
Offline test execution item/ faulty station (requesting side)	SW00AC	→ □□03H or □□04H	: Loop test
Offline test result (requesting side)	SW00AD	→ 0	: Normal

1 or larger : Error code

For details on how to check the error contents, refer to Chapter 8.

If two or more modules are installed, the testing status and the result of each module can be checked by adding 200H to the corresponding device number.

4.10 Network Diagnostics from GX Developer (Online Tests)

With the network diagnostic function of GX Developer, the line status can easily be checked and diagnosed.

Conduct network diagnostics by connecting GX Developer with a remote master station.

For a remote sub-master station and remote I/O station, the line status can be confirmed through the network diagnostics of the remote master station.

To conduct the network diagnostics, the network parameters (station number setting switch, mode setting switch, number of modules, network settings, and common parameters) must be set.

However, even if not all the parameters were set, the loop test can be performed while the "T.PASS" LED is on.

The network diagnostics function allows the diagnostics of the network module while maintaining it in the online status when a problem occurs during system operation.


The following table lists the tests that can be conducted for each network system:

Test item	Optical loop system	Coaxial loop system	Data link status of cyclic and transient transmissions	Reference section
Network test	○	○	Continue	Section 7.9
Loop test	○	×	Pause	Section 4.10.1
Setup confirmation test	○	○	Pause	Section 4.10.2
Station order check test	○	×	Pause	Section 4.10.3
Communication test	○	○	Continue	Section 4.10.4

○: Execution allowed ×: Execution not allowed

For details on the operations of each function, refer to the GX Developer Operating Manual.

The following screen is displayed when the network diagnostics is selected with GX Developer. Select the button for the network diagnostic item that will be conducted.

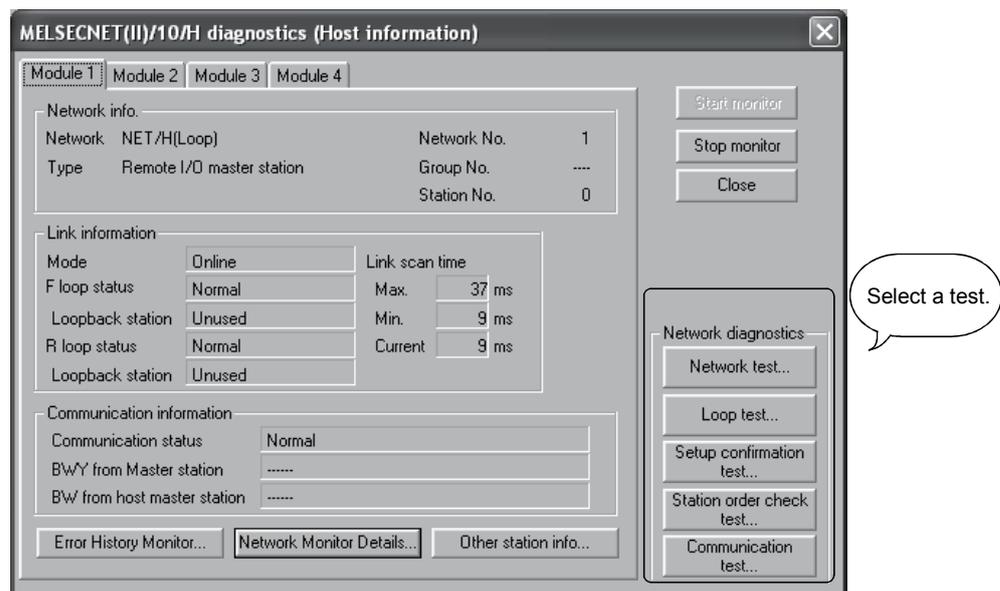


4.10.1 Loop test (optical loop system only)

This test checks the line status of the forward and reverse loops upon completion of the wiring of the optical loop system. Also, when a loopback is being executed, it checks the station that executes the loopback.

For example, in the system shown below, where the IN/OUT connectors of station number 5 are connected in reverse, conduct a loop test using the GX Developer connected to remote master station.

The monitoring screen below is displayed after the loop test has been executed, and station No. 5 is detected as the receive direction error station.

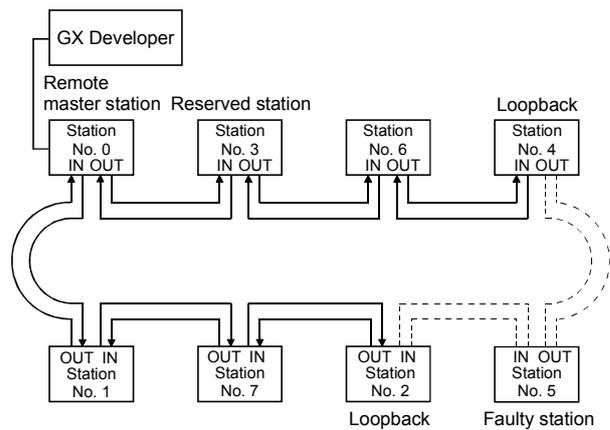

**Loop test**

Network info.		Network No.	1	Loop test	
Network	NET/H[Loop]	Group No.	---	Test method	Object module
Type	Remote I/O master station	Station No.	0	<input checked="" type="radio"/> Parameter designation	<input checked="" type="radio"/> Module 1
Module No.	1	Total No. of stations	8	<input type="radio"/> All stations designation	<input type="radio"/> Module 2
Loop status	Loopback	Receive direction error station No.	0	<input type="radio"/> Module 3	<input type="radio"/> Module 4
Forward direction	4 Station	Number of stations not responding	1	<input type="button" value="Execute"/>	
Reverse direction	2 Station				
Remote master station:	Normal				

Execution results

NORMAL     INVALID    R:Reserved Station

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Receive direction error			R		✗											
Non-responding station																
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Receive direction error																
Non-responding station																
	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
Receive direction error																
Non-responding station																
	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64
Receive direction error																
Non-responding station																

**POINT**

In the loop test, data link is stopped to check the wiring status.  
 To check the wiring status without stopping data link, make the check by SW009C to 009F.  
 Refer to Section 8.2.9 for details.




4.10.3 Station order check test (optical loop system only)

This test checks the connected station numbers in the optical loop system. The following connection orders can be checked by the loop status (displayed on the station order check test result screen. Refer to the monitor screen below.) when this test is conducted.

Loop status	Display
Forward and reverse loops	The station numbers connected in the direction of the forward loop from the host as well as the station numbers connected to the direction of the reverse loop from the host
Forward loop	Only the station numbers connected in the direction of the forward loop from the host
Reverse loop	Only the station numbers connected in the direction of the reverse loop from the host
Loop back	Only the station numbers connected in the direction of the forward loop from the host

For example, in the following system, when the station order check test is conducted by the GX Developer connected to remote master station, the monitor screen shown below is displayed to verify that a loopback is being executed between station numbers 4 and 2 that are connected in the direction of the forward loop.

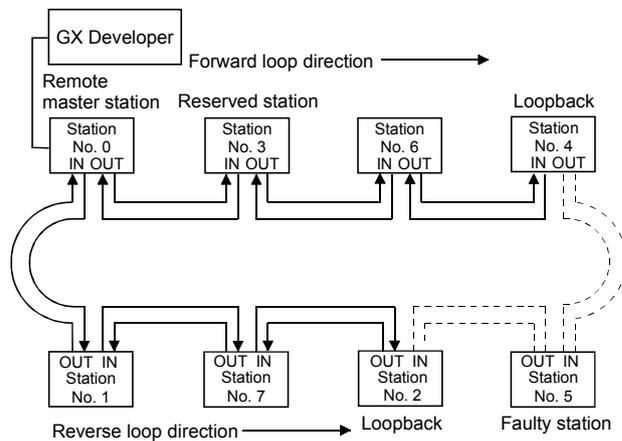

**Station order check test**

Network info.		Station order check test	
Network	NET/H(Loop)	Network No.	1
Type	Remote I/O master station	Group No.	----
Module No.	1	Station No.	0
Loop status	Loopback	No. of stations	8
Forward direction	4 Station	Reverse direction	2 Station
Test method		Object module	
<input checked="" type="radio"/> Parameter designation		<input checked="" type="radio"/> Module 1	
<input type="radio"/> All stations designation		<input type="radio"/> Module 2	
<input type="button" value="Execute"/>		<input type="radio"/> Module 3	
		<input type="radio"/> Module 4	

Execution results

	Own station	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Forward loop direction from own station	0	6	4	2	7	1											
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
		33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
		49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64


	Own station	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Reverse loop direction from own station																	
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
		33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
		49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64

Station No. 3 is not displayed because it is a reserved station.

4.10.4 Communication test

This test checks whether or not data communication can normally be performed between the host and a destination station (designated with network number and station number). Especially when the destination has another network number, the relay network and station numbers are displayed. So, make sure that the routing parameters are properly set.

In the following system, when the communication test is conducted to 4Ns6 of network number 4 by the GX Developer connected to 1MR (2Mp2) of network number 2, the monitor screen shown below is displayed to verify that normal communication can be performed with the contents of the routing parameter settings.

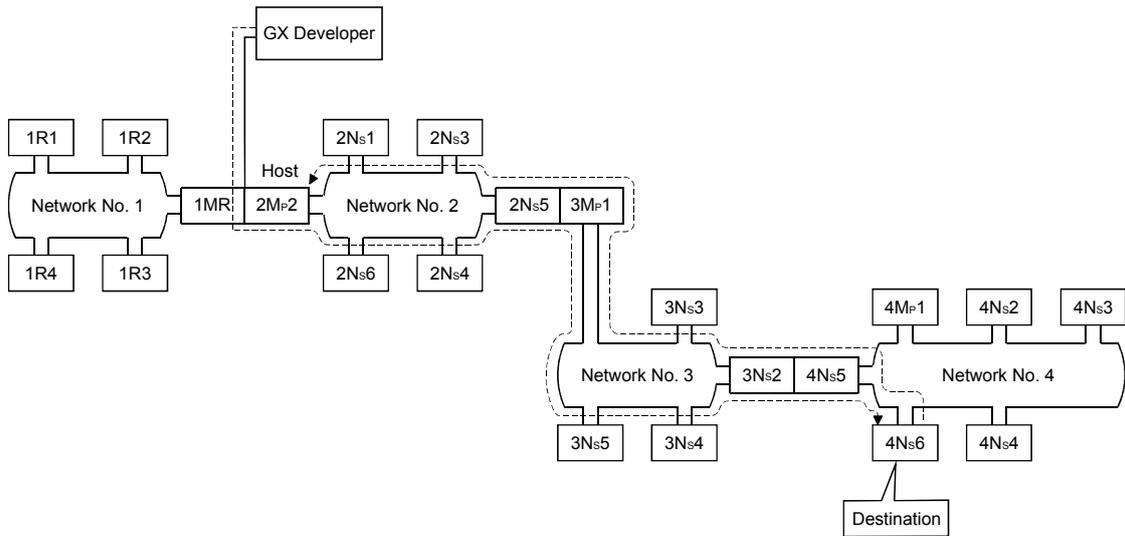

Return path from the destination to the host      Forward path from the host to the destination

**Communication test**

Execution results

Network No.	Station No.	Own station	Station No.	Network No.
2	1	Network No. 2	5	2
3	2	Station No. 2	5	1
4	6			

Communication information

Communication count: 1 Times

Communication time: 0 × 100ms

Destination station

Network No. 4

Station No. 6

Communication test

1: Destination      2: Communication data

Network No. 4      Length 100 Byte

Station No. 6      Time 1 Times

W.D.T 5 Sec.

Execute      Close

Station numbers of relay stations.  
5 is the station No. of network No. 2 side.  
1 is the station No. of network No. 3 side.

**REMARKS**


If the routing parameters are not properly set, the message "Cannot communicate with PLC" is displayed and the communication result is not displayed.

## 5 PARAMETER SETTINGS

To operate a remote I/O network, parameters must be set up for the CPU module on the remote master station and remote I/O modules on remote I/O stations accordingly. Settings ranging from MELSECNET/H type selection to application function details can be configured with parameters.

The following is a flow chart of the settings.

### (1) Parameter settings for the remote master station

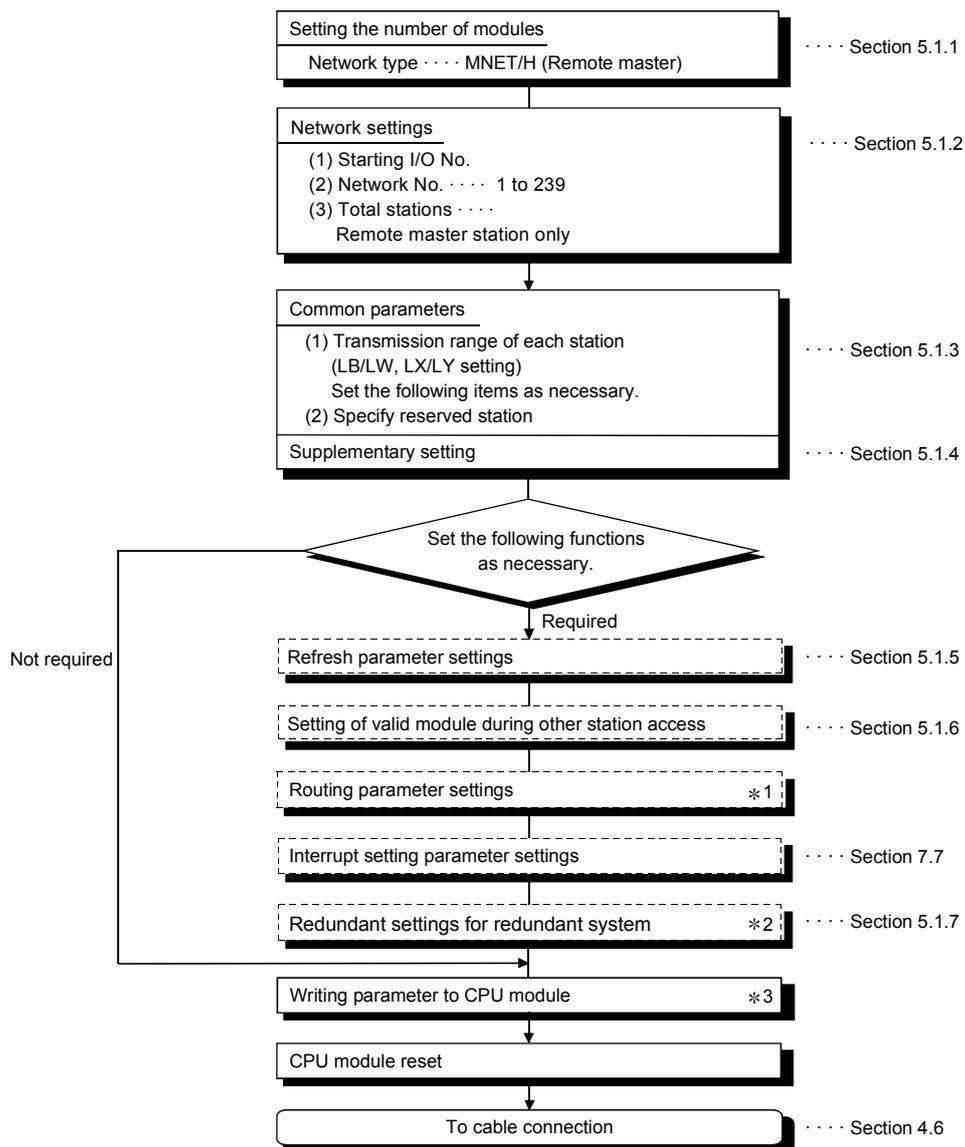


\*1: Refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network) for details.

\*2: Make the settings only when using the redundant system.

\*3: For the redundant system, write the parameter to the CPU module of the control system.

(2) Parameter settings for remote I/O station

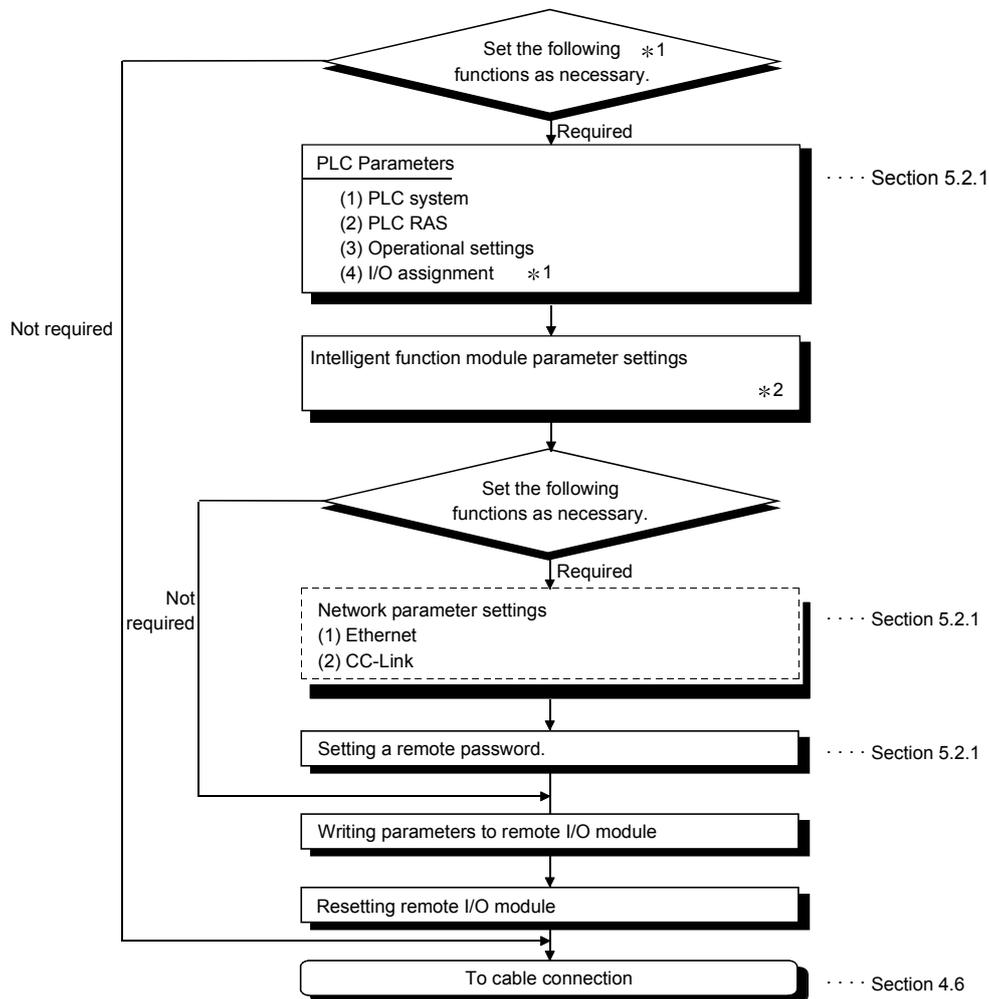

**POINT**

- 1) If no parameters are written to the remote I/O station, operation is performed using the default settings. (Refer to Section 5.2.1)
- 2) Resetting the CPU module of the remote master station or changing the status from STOP to RUN will reset remote I/O stations.  
Note that, they will be reset only when the following conditions are satisfied:
  - The PLC parameter/network parameter or remote password of a remote I/O station was corrected but not yet effective due to a reason such as reset of the remote I/O station.
  - A stop error has occurred. (Refer to section 8.3.2.)
- 3) Even if only one of the following settings is corrected, all the parameters are written to the remote I/O module: PLC parameters, intelligent function module parameters, network parameters, and remote password

\*1: The following settings can be performed for the I/O assignment.

- 1) Input module for I/O response time.
- 2) Output module error time output mode.
- 3) I/O assignment
- 4) Setting switches for intelligent function modules.

\*2: Refer to the intelligent function module user's manual for details about intelligent function module parameters.

Table 5.1 Remote master station network parameter setting items

Parameter setting item	Network station type	Remote master station	Reference section
Settings with the network module		—	Section 4.3
Station number (STATION No.)		●	Section 4.3.1
Mode (MODE)		●	Section 4.3.2
Settings with GX Developer		—	
Setting the number of modules (network type)		●	Section 5.1.1
Network settings		—	Section 5.1.2
Starting I/O No.		●	Section 5.1.2 (1)
Network No.		●	Section 5.1.2 (2)
Total stations		●	Section 5.1.2 (3)
Group No.		△	Section 5.1.2 (4)
Mode		●	Section 5.1.2 (5)
Common parameters		—	Section 5.1.3
Send range of each station (LX/LY settings)		●	Section 5.1.3 (1)
Send range of each station (LB/LW settings)		△	Section 5.1.3 (2)
Specify reserved station		△	Section 5.1.3 (3)
Supplementary settings		—	Section 5.1.4
Constant link scan		△	Section 5.1.4
Maximum No. of returns to system stations in 1 scan.		▲	
Multiplex transmission designation		△	
Block send data assurance per station		△	
Block receive data assurance per station		△	
END asynchronous settings		△	
Transient settings		▲	
Refresh parameters		▲ *3 *4	Section 5.1.5
Valid module during other station access		△	Section 5.1.6
Interrupt settings		△	Section 7.7
Redundant settings		●	Section 5.1.7
Routing parameters		△	*5

●: Always set ▲: Default setting exists △: Set as needed ×: Setting not required

\*3: Default values are not set for LX/LY. Set refresh parameters.

\*4: Default values are preset for LB/LW.

The CPUs other than the Universal model QCPU may operate even if refresh parameters have not been set.

For the operation and precautions, refer to Section 5.1.5 (3).

\*5: For details, refer to the Q Series MELSECNET/H Network System Reference Manual (PLC to PLC Network).

#### REMARKS

Always write network parameters to the remote master station.

Table 5.2 Remote I/O station PLC parameter setting items

Parameter setting item	Network station type	Remote I/O station	Reference section
PLC system		—	Section 5.2.1
Points occupied by empty slot		▲	
Module synchronization		▲	
PLC RAS		—	Section 5.2.1
Operating mode when there is an error		▲	
Error check		▲	
Operational settings		—	Section 5.2.1
Remote I/O switch setting		△	
Assignment method		△	
Forwarding parameter between devices		△	
I/O assignment		—	Section 5.2.1
I/O Assignment		△	
Standard setting		△	

●: Always set ▲: Default setting exists △: Set as needed ✕: Setting not required

Table 5.3 Remote I/O station network parameter setting items

Parameter setting item	Network station type	Remote I/O station	Reference section
Ethernet		△	Section 5.2.1
CC-Link		△	Section 5.2.1

●: Always set ▲: Default setting exists △: Set as needed ✕: Setting not required

Table 5.4 Remote I/O station remote password setting items

Parameter setting item	Network station type	Remote I/O station	Reference section
Password setting		△	Section 5.2.1
Password active module settings		△	Section 5.2.1

●: Always set ▲: Default setting exists △: Set as needed ✕: Setting not required

Refer to the intelligent function module user's manual for details about intelligent function module parameters.




5.1.2 Network settings

These parameters are used to configure the MELSECNET/H network. Set the starting I/O No., network No., total number of (slave) stations, group No. and mode for each of the module model names set in the number of modules settings.

(1) Starting I/O No.

Set the start I/O No. to which the module is loaded in 16-point units in hexadecimal for each applicable network module.

For example, set 130 when the network module is loaded onto X/Y130 to 14F.

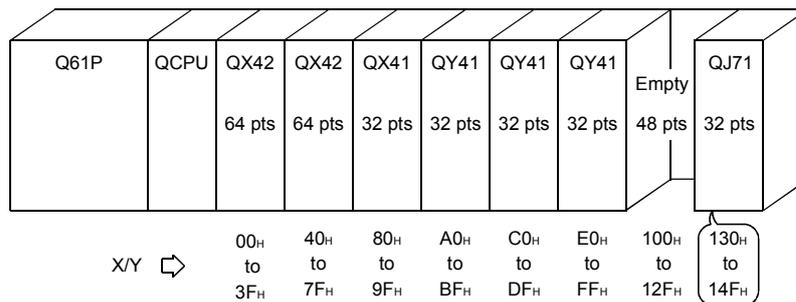

(a) Valid setting range

0<sub>H</sub> to 0FE0<sub>H</sub>

(b) Precaution

Unlike the setting method for the AnUCPU (where the higher two digits of the 3-digit value should be set), here all three digits should be set as is.

(2) Network No.


Set the network number to which the applicable network module is connected.

(a) Valid setting range

1 to 239

(3) Total stations

Set up the total number of multiplexed remote sub-master stations, remote I/O stations, and reserved stations in a single network.

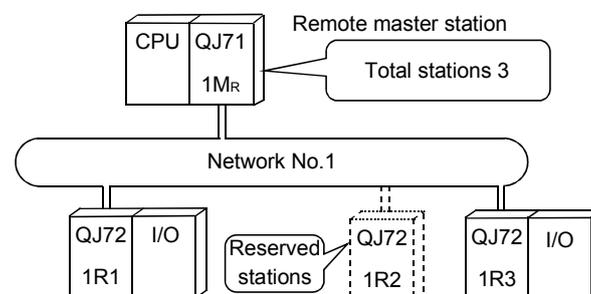

(a) Valid setting range

1 to 64

## (4) Group No. (Available for multiplexed remote master/sub-master station only)

Set the group No. to send data simultaneously to other stations in transient transmission.

## (a) Valid setting range

0 : No group specification (default)

1 to 32 : Group No.

## (5) Mode

Set the operation mode of the network module.


The mode selection with this parameter becomes valid when the mode setting switch of the network module is set to 0 or 4.

Selection item	Description
Online (Default)	This mode performs normal operations (the station returns to the network). Starts data communication at startup and executes automatic return operation. etc.
Offline	This mode stops operations (disconnecting the station). Baton pass and data communication with other stations are not executed.
Forward loop test	This mode is to select the hardware test operation that checks the connection status and the optical fiber cables on the forward loop side. (Remote master station only) For details on how to conduct the hardware test, refer to Section 4.9.1.
Reverse loop test	This mode is to select the hardware test operation that checks the connection status and the optical fiber cable on the reverse loop side. (Remote master station only) For details on how to conduct the hardware test, refer to Section 4.9.1.

(6) Parameter setting example

The following is an example for system parameter settings including remote master station (remote I/O network) and controlling station (PLC to PLC network).

(System configuration)

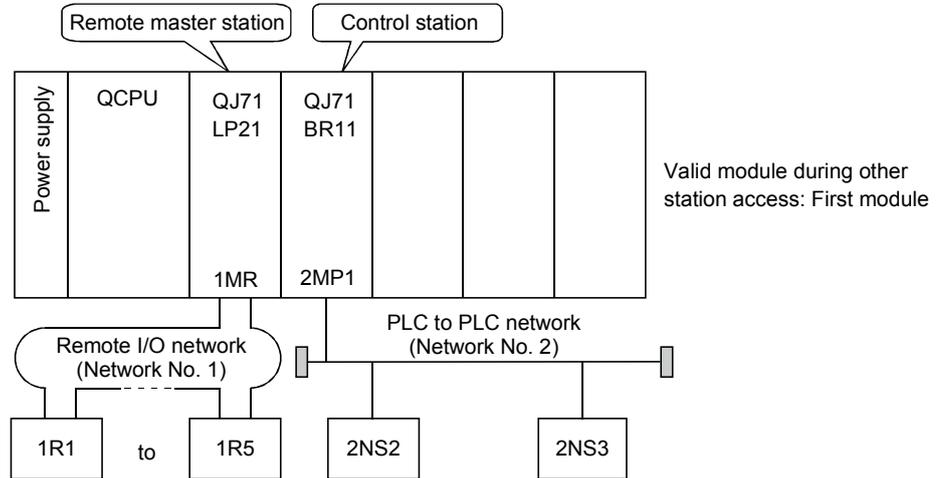

(Screen settings)

	Module 1	Module 2
Network type	MNET/H(Remote master)	MNET/H mode (Control station)
Starting I/O No.	0000	0020
Network No.	1	2
Total stations	5	3
Group No.		0
Station No.		
Mode	On line	On line
	Network range assignment	Network range assignment
	Refresh parameters	Refresh parameters
	Interrupt settings	Interrupt settings
		Return as control station

5.1.3 Common parameter

The common parameters set the LB, LW, LX and LY cyclic transmission ranges that allows sending and receiving between a remote master station and remote I/O stations in a network. Common parameters only need to be set for the remote master station.

(1) LX/LY setting

I/O signals (X, Y) of each remote I/O station are transferred to the CPU module via link devices (LX, LY) of the remote master station for control in the CPU module.

The I/O signals (X,Y) are assigned to the remote master station's link devices (LX, LY) in the LX/LY setting.

The LX setting is made for transferring the input signal (X) information of remote I/O stations to the link devices of the remote master station.

The LY setting is made for transferring the link device (LY) information of the remote master station to the output signal (Y) area of the remote I/O stations.

Set the same device points for the remote master and each remote I/O station in the LX/LY setting.


(Screen setting)

StationNo.	M station -> R station						M station <- R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	1000	10FF	256	0000	00FF	256	1000	10FF	256	0000	00FF
2	256	1100	11FF	256	0000	00FF	256	1100	11FF	256	0000	00FF
3	256	1200	12FF	256	0000	00FF	256	1200	12FF	256	0000	00FF

(Assignment)

An LX assignment is illustrated below.

The following is an example where LX of the master module is automatically refreshed to the area starting from X1000 in the CPU module.

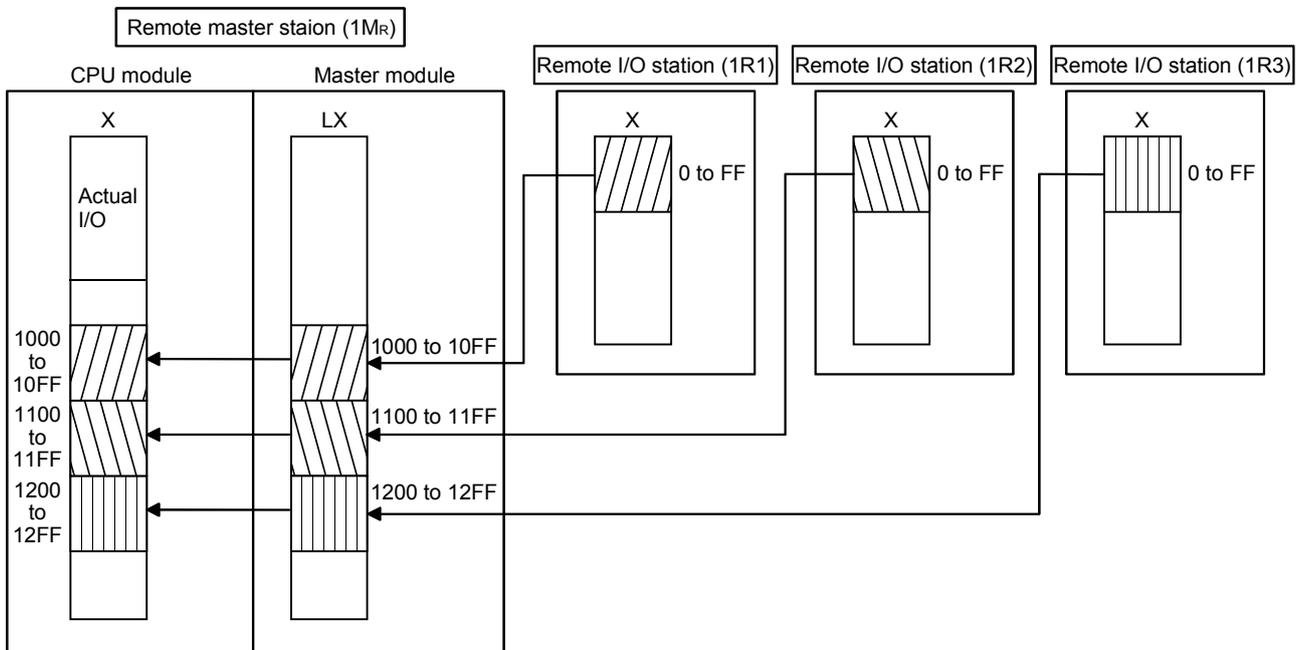


**REMARKS**

The link device (LX, LY) data of the remote master station are refreshed to the internal user devices (e.g. X, Y) of the CPU module to be used in sequence programs.

To refresh these data to the CPU module's input (X) or output (Y) area, assign them to the area after the actual I/O.

For details on the link refresh, refer to Section 5.1.5.

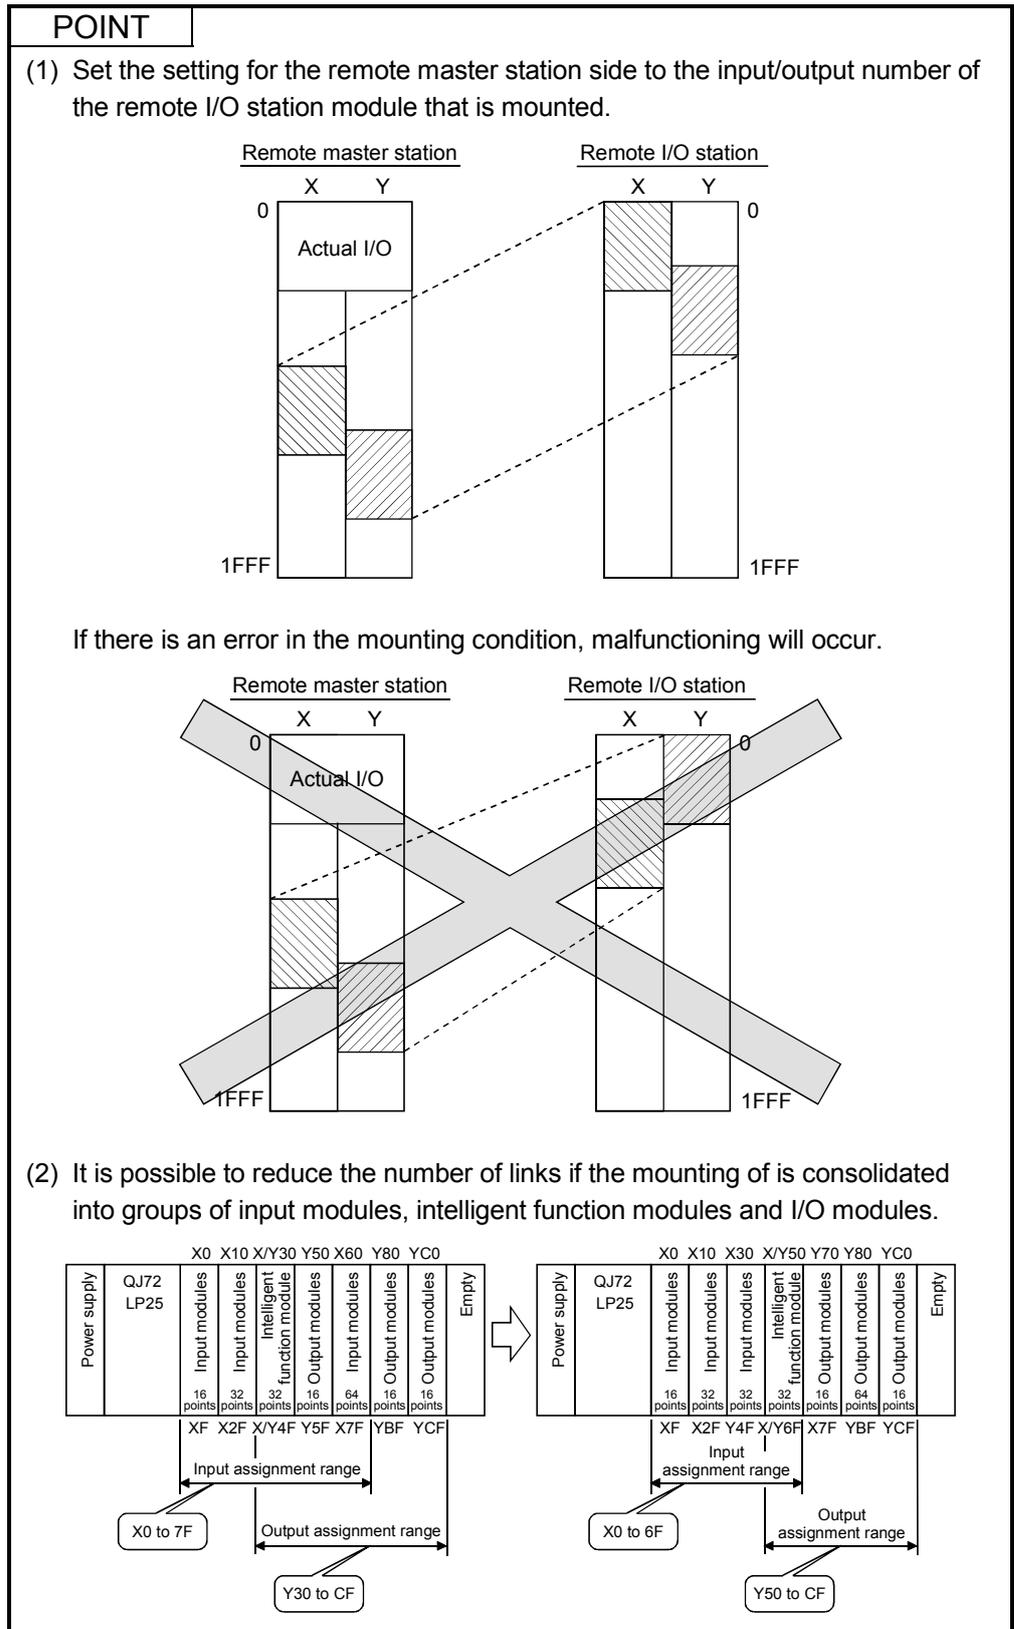

(2) LB/LW setting

The LB/LW data on each remote I/O station are transferred to the CPU module via LB/LW of the remote master station for control in the CPU module.

In the LB/LW setting, set the area ranges for sending data from the remote master station to each remote I/O station and for receiving data from each remote I/O station to the remote master station.

In addition, if intelligent function parameters (automatic refresh setting) are set to an intelligent function module on a remote I/O station from GX Configurator, the buffer memory of the intelligent function module can be read/written from the remote master station using LW.

For details, refer to Section 3.2.1.


(Screen setting)

StationNo.	M station → R station			M station ← R station			M station → R station			M station ← R station		
	B			B			W			W		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1							128	0000	007F	128	1000	107F
2							128	0080	00FF	128	1080	10FF
3							128	0100	017F	128	1100	117F

(Allocation)

An LW assignment is illustrated below.


The following is an example where LW of the master module is link refreshed to the area starting from W0 in the CPU module.

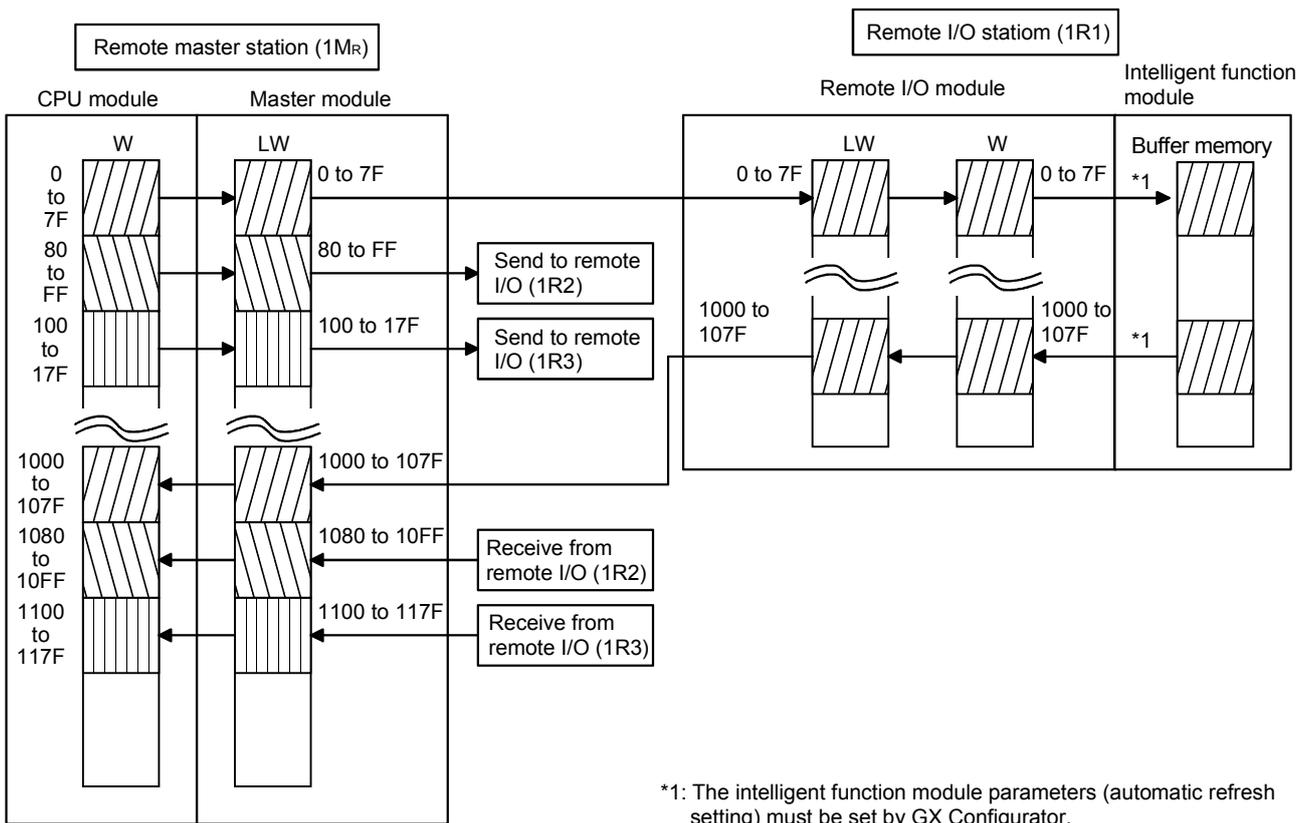

**REMARKS**

The link device (LB, LW) data of the remote master station are refreshed to the internal user devices (e.g. B, W) of the CPU module to be used in sequence programs.

For details of the link refresh, refer to Section 5.1.5.

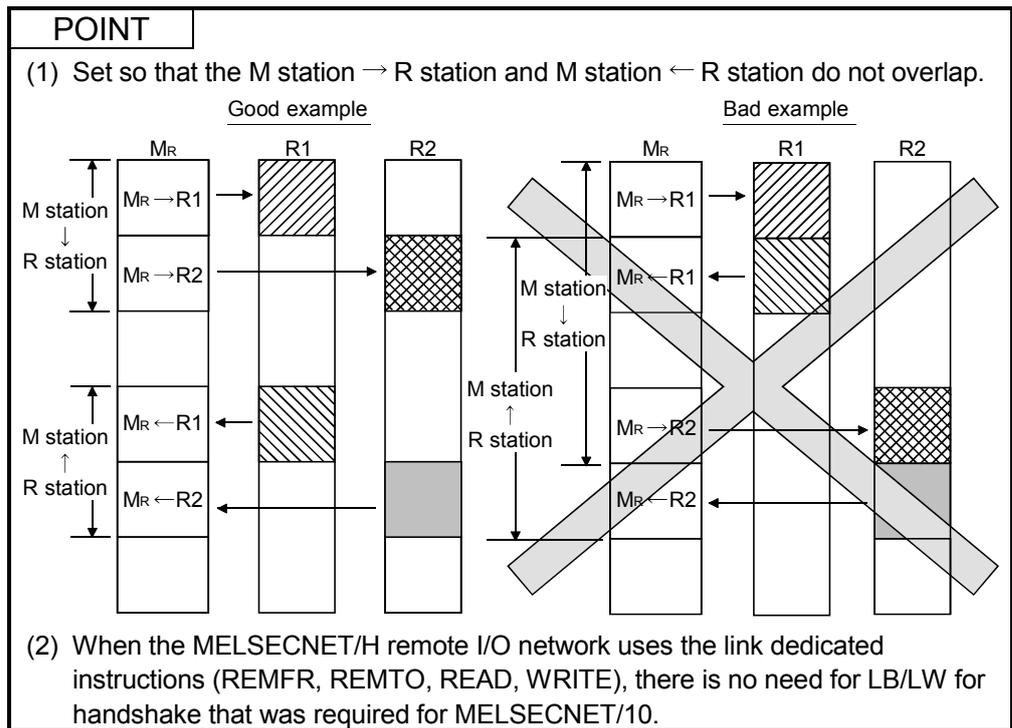

(3) Specify reserved station

The specify reserved station is a function that not handle stations to be connected in the future as stations with communication errors. (These stations are not actually connected, but they are included in the total number of stations (slave) in the network.)

Since reserved stations do not affect scan time, full performance can be realized even when they remain reserved.

(4) Remote sub-master station

Since the multiplexed remote master station must recognize the station No. of the multiplexed remote sub-master station, set the station No. of the multiplexed remote sub-master station in the network range assignment screen of the multiplexed remote master station.

1) Select a station No. of the multiplexed remote sub-master station

StationNo.	M station → sub M/R station			M station ← sub M/R station			M station → sub M/R station			M station ← sub M/R station		
	Points	Start	End									
Sub 1												
2												
3												

Buttons: Specify reserved station, Remote sub-master station, Equal assignment, Supplementary setting, Clear, Check, End, Cancel

2) After selecting a station No. of the multiplexed remote sub-master station, click the button to finish the settings. When the settings are completed, "Sub" is displayed on the station No. box.

**POINT**


In the case of the multiplexed remote I/O network for redundant system, set the link devices in the tracking settings in the redundant parameters to update the link devices between the multiplexed remote master station and multiplexed remote sub-master station. (The set link devices are tracked from the control system to the standby system via the tracking cable.)

On the network range assignment screen, do not set the devices between the multiplexed remote master station and multiplexed remote sub-master station.

5.1.4 Supplementary settings

The supplemental settings are included in common parameter settings to provide more precise usage. Keep the default settings for normal use.

Common parameters supplemental are only for remote master stations.

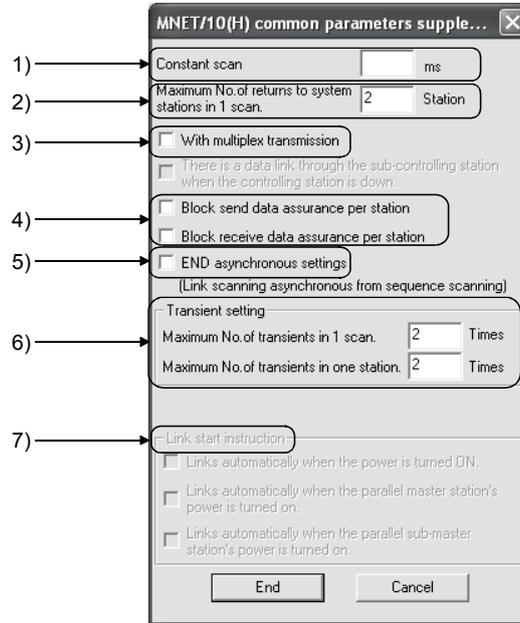

[Setting items]

1) Constant scan

The constant link scan function is used to maintain the link scan time constant.

If the response time is long for the transient transmission function, setting the constant link scan function may reduce the response time.

Set a value in the following range to use a link scan time:

Setting time	Constant link scan
Blank	Not executed (default)
1 to 500 ms	Executed using the set time

- 2) Maximum No. of returns to system stations in 1 scan (refer to Section 3.2.2)  
Set the number of faulty stations that can return to the network in one link scan.
  - Valid number of stations : 1 to 64 stations
  - Default : 2 stationsSince link scan time may be extended when a station error occurs if the number of stations has been increased in the settings, carefully change the settings.
  
- 3) With multiplex transmission (refer to Section 7.4)  
Set this item when executing the multiplex transmission function.  
The multiplex transmission function is used when both the forward and reverse loops are in the normal status to speed up the transmission rate using both loops at the same time.  
This setting can be made when there are four or more remote I/O stations.
  - Default: No multiplex transmission
  
- 4) Block send/receive data assurance per station  
Set these items when executing the link data separation prevention per station in the cyclic transmission.  
This allows multiple word data manipulation without interlocks.  
However, the separation prevention \*1 is valid only for the refresh processing between the CPU module and the master module.
  - Default: No setting for both send and receive\*1: The separation prevention refers to a prevention of link data with double word precision (32 bits), such as the current value of the positioning module, from being separated into new data and old data in one word (16 bits) units due to the cyclic transmission timing.
  
- 5) END asynchronous settings (refer to Section 3.3.1 (2) (b).)  
Enable this setting when link scans should be performed asynchronously with sequence scans.
  - Default: No END asynchronous settings

## 6) Transient setting \*2

Set the execution conditions for the transient transmission.

"Maximum No. of transients in 1 scan"

Set the number of transients (total for one entire network) that a single network can execute in one link scan.

- Valid setting count : 1 to 255 times
- Default : 2 times

"Maximum No. of transients in one station"

Set the number of transients that a single station can execute in one link scan.

- Valid setting count : 1 to 10 times
- Default : 2 times

\*2: When making the transient setting, use the following network module and GX Developer:

- Remote master and remote I/O stations: First 5 digits of serial No. is "07102" or later.
- GX Developer: GX Developer Version 8.29F or later

POINT
<p>(1) Transient request processing may be prolonged in a system where transient requests are made frequently (e.g. a system including a remote I/O station to which a GOT is mounted). In such a case, make the following setting.</p> <p>(a) Parameter setting for the remote master station Increase the value set in No. of transients. Doing this enables concurrent execution of many transient requests (during one scan).</p> <p>(b) Setting on the remote master station (CPU module)</p> <p>1) Execute the COM instruction. Transient requests are processed when the remote master station executes the COM instruction. (This is effective when the scan time of the remote master station is long.)</p> <p>2) Secure communication processing time. In the END processing of the remote master station, the processing time for transient requests is secured. (This is effective when the scan time is short.)</p> <ul style="list-style-type: none"> <li>• For the High Performance model QCPU, Process CPU, and Redundant CPU, set it by the special register SD315.</li> <li>• For the Universal model QCPU, set it by the service processing setting of the PLC parameter (PLC system) of GX Developer.</li> </ul> <p>Either of the above 1) or 2) can reduce the wait time for transient request processing on the remote master station even if multiple remote I/O stations issue transient requests.</p> <p>(2) Although the above (1) can reduce the transient request processing time, it may affect the process as described below. Adjust each set value shown in (1) to a value suitable for the system being used.</p> <p>(a) Link scan time of MELSECNET/H When transient requests are issued from multiple stations at the same time, the link scan time may be temporarily prolonged.</p> <p>(b) Scan time of the remote master station (CPU module) The scan time may be prolonged by execution of the COM instruction or by securing the communication processing time.</p>

## 7) Link start instruction

For future expansion. Cannot be set at present time.

5.1.5 Refresh parameters

The refresh parameters are used to transfer the link device data (LB, LW, LX, LY) of the network module to the devices (X, Y, M, L, T, B, C, ST, D, W, R, ZR) of the CPU module for operation of the sequence programs.

By eliminating the link refresh of those link devices that are not used by the sequence programs, the scan time can also be reduced.

Because it is not necessary to transfer the link devices to different devices with the sequence programs, the number of program steps is reduced and easy-to-understand programs can be created.

**POINT**

Note that there are no default settings for LX/LY points in the refresh parameters. A CPU that does not have the number of points set cannot input and output network link device LX/LY.


Refresh parameters

(Refresh parameter setting screen)

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LB	4096	0000	0FFF	↔	B	4096	0000	0FFF
Transfer2	LW	4096	0000	0FFF	↔	W	4096	0000	0FFF
Transfer3	LX	2048	1000	17FF	↔	X	2048	1000	17FF
Transfer4	LY	2048	1000	17FF	↔	Y	2048	1000	17FF
Transfer5					↔				
Transfer6					↔				

The assignment status of the above refresh parameters can be checked with the assignment image diagram.

The assignment image diagram shows the device assignments made between the CPU module and the modules set for the No. of module setting.

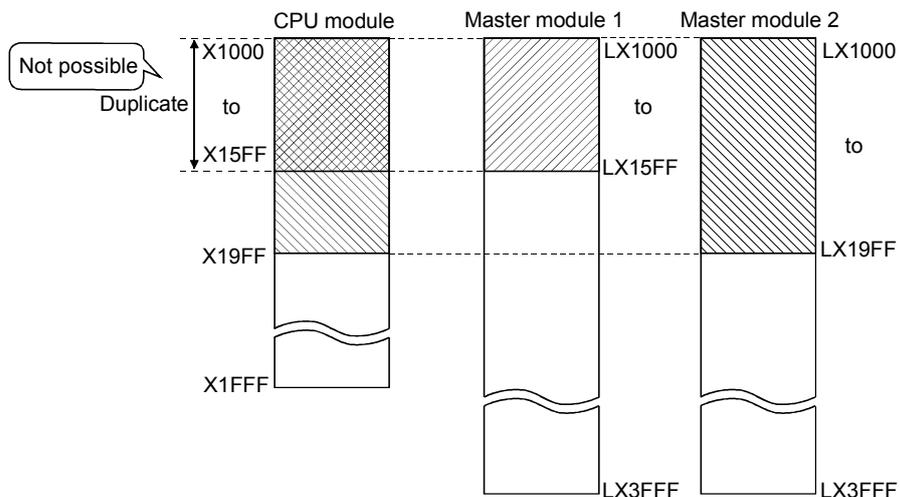


Using the assignment image diagram, assignment errors and duplicate settings between the modules can also be checked.

It is a convenient tool to view the assignment status when setting or changing the network refresh parameters.

Assignment image

(Refresh parameter setting screen)

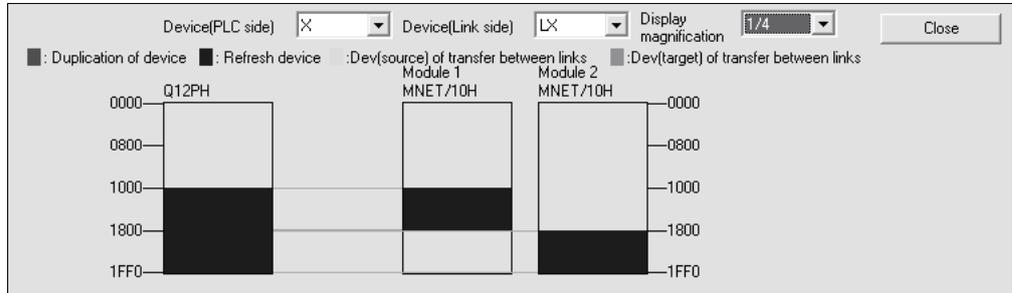

### POINT

The assignment image diagram can display schematic images of CC-Link IE controller network and MELSECNET/H (network modules on controller networks, PLC to PLC networks, and remote I/O networks).

Avoid any duplicate settings of the programmable-controller-side devices that are used for the following.

- Auto refresh parameters of CC-Link modules
- Auto refresh parameters of intelligent function modules
- Auto refresh using the CPU-shared memory in the multiple CPU system

#### 1) Assignment method

Select the device range input method from either Points/Start or Start/End.

- Default: Start/End

#### 2) Transient transmission error history status

Select whether to overwrite or hold the error history.

- Default: Overwrite

#### 3) Transfer settings on the Link side and the PLC side

Select the device names from the following:

Link side : LX, LY, LB, LW

PLC side : X, Y, M, L, T, B, C, ST, D, W, R, ZR

However, if the link side is LX, any of C, T and ST cannot be selected on the CPU side.

Set the values for Points/Start/End in 16-point units.

#### 4) **Default** button

Select this button to automatically assign the default link devices according to the number of installed modules.

#### 5) **Check** button

Select this button to check if there are any duplicate parameter data settings.

6)  button

Click this button to return to the network setting screen after completing the data settings.

**REMARKS**

[Random cyclic] is for future use. An error will not occur even if it is selected, but no processing will be performed.

**POINT**

Either of the following settings must be made to use the entire device range (16K points) of LB/LW.

- 1) Change the number of B/W device points. (Refer to the following example.)
- 2) Make the refresh parameter settings so that B/W and other devices will be assigned as the refresh destination devices of LB/LW. (Refer to Section 5.1.5.)

[Example]


To change [Device] of [PLC parameter] in order to use all 16K points of the LB and LW device range

Note the following points when assigning device points:

- 1) The total number of device points is 29K words for the High Performance model QCPU, Process CPU, Redundant CPU, and Universal model CPU.
- 2) The total number of bit devices must be 64K bits.

[In the case of Q25HCPU]


	[Default]	[After change]
Input relay	X 8K	8K
Output relay	Y 8K	8K
Internal relay	M 8K	8K
Latch relay	L 8K	4K
Link relay	B 8K	16K
Annunciator	F 2K	2K
Link special relay	SB 2K	2K
Edge relay	V 2K	2K
Step relay	S 8K	8K
Timer	T 2K	2K
Retentive timer	ST 0K	0K
Counter	C 1K	1K
Data register	D 12K	4K
Link register	W 8K	16K
Link special register	SW 2K	2K
Word device total	26.0K	26.0K
Bit device total	44.0K	48.0K
Device total	28.8K	29.0K

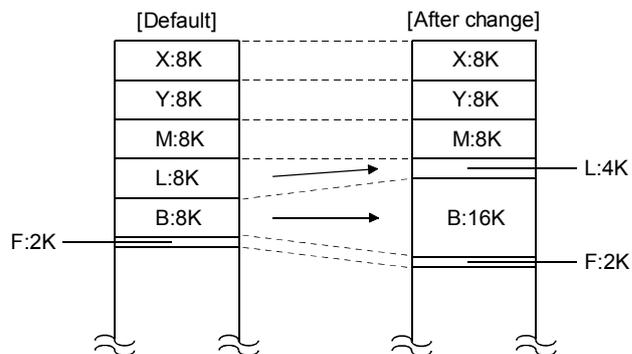

(1) Concept of the link refreshing

(a) Link refresh ranges

The ranges that are set in Refresh parameters and that are set with common parameters are refreshed.

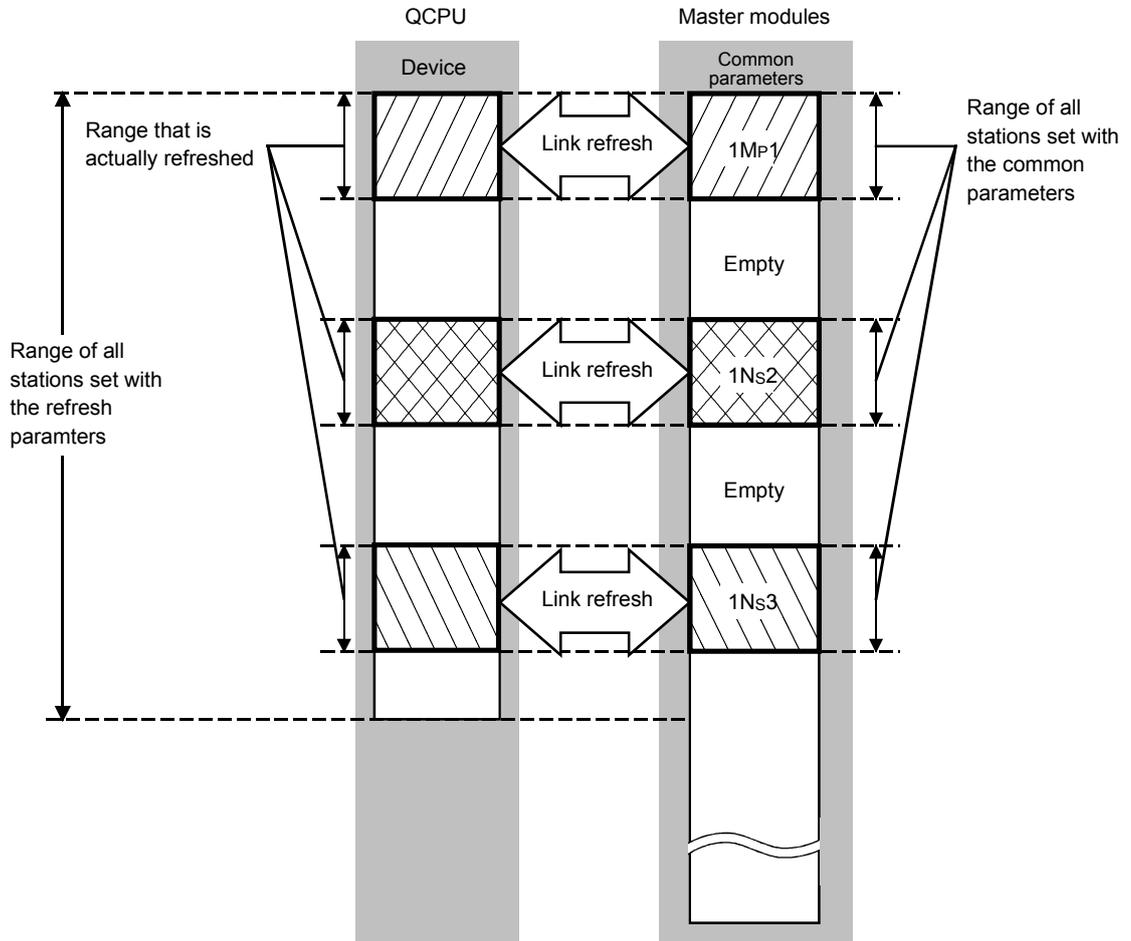

(b) Devices for which link refreshing can be executed

64 transfer settings (LX, LY, LB, LW), one SB transfer setting and one SW transfer setting can be performed for each master module.

It is possible to transfer to different devices.

SB, LB, B, LX, LY, X, Y, M, L, T, C and ST can be set in 16-point units, and SW, LW, W, D, R and ZR can be set in one-point units.

[List of devices for which the refresh combination transfer can be executed]


Setting item	Devices for which transfer is allowed		
	Link side device	↔	PLC side device
SB transfer	SB	↔	SB
SW transfer	SW	↔	SW
Transfer 1	LX, LY, LB, LW	↔	X, Y, M, L, T, B, C, ST, D, W, R, ZR*1
:	:	↔	:
Transfer 64	LX, LY, LB, LW	↔	X, Y, M, L, T, B, C, ST, D, W, R, ZR*1

\*1 : C, T or ST cannot be selected as the refresh destination of LX.

(2) How to set the refresh parameters

(a) Automatic setting with the **Default** button


- 1) When B/W points set in [Device] under [PLC parameter] are 8K points or more (6K points or more when three modules are mounted) Link devices are assigned as shown below.

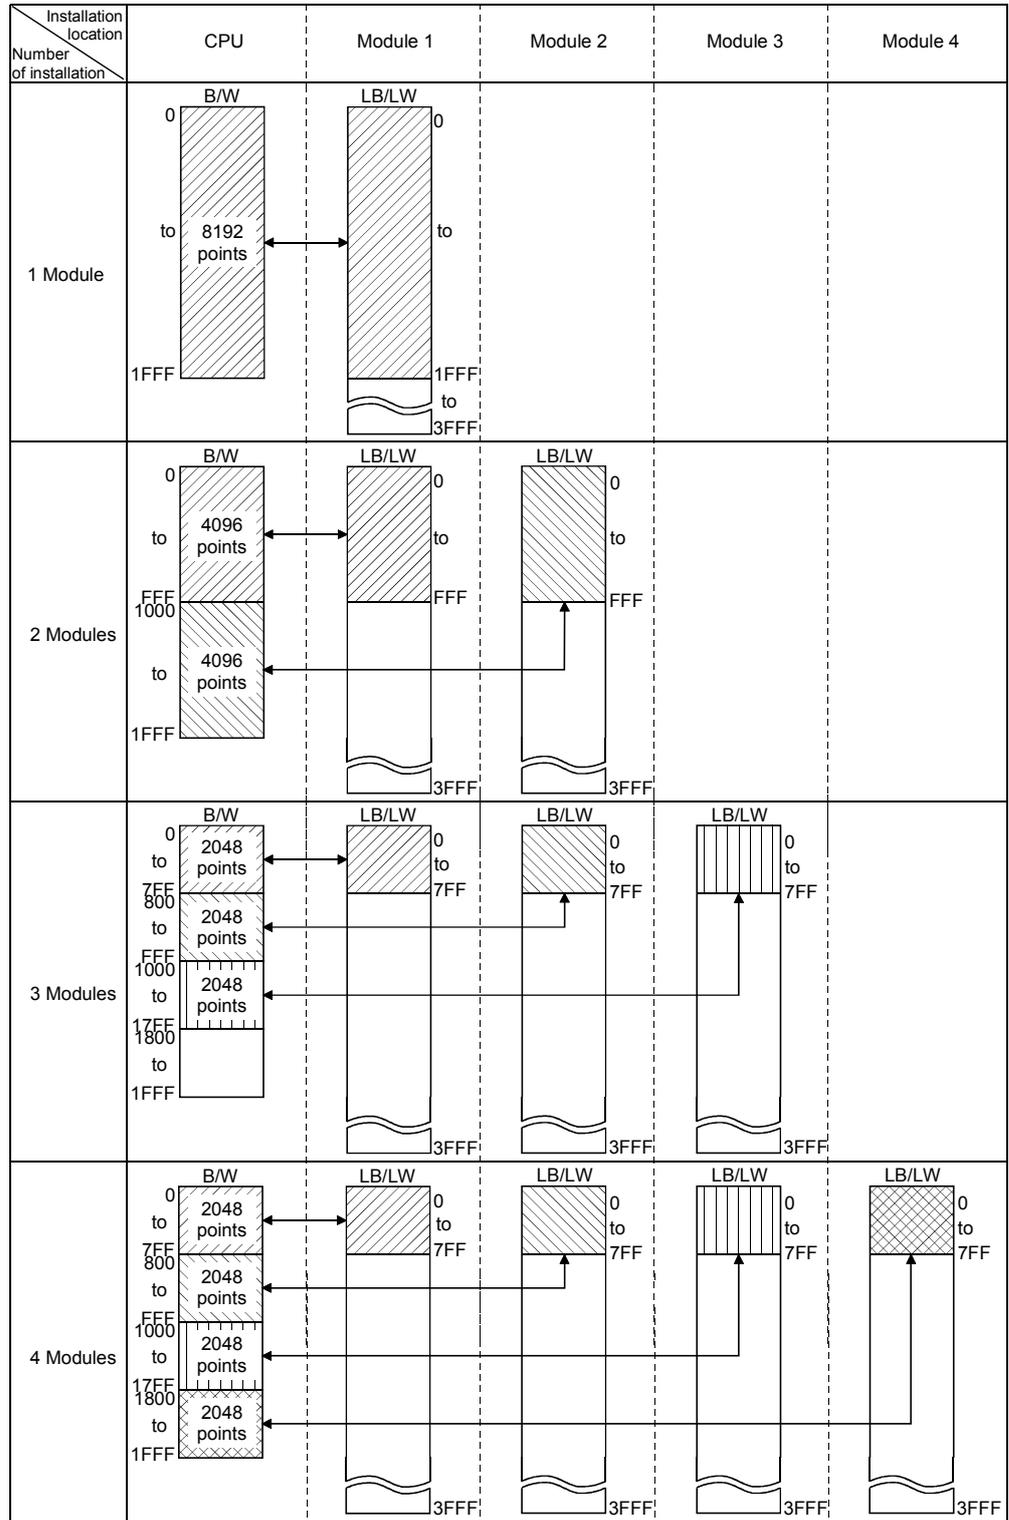

- 2) When B/W points set in [Device] under [PLC parameter] are less than 8K points (less than 6K points when three modules are mounted) Link devices equivalent to the B/W points set in [Device] are assigned, up to the following points for each module.

No. of modules	Maximum points assignable per module
1	B/W points set in [Device]
2	4K points
3	2K points
4	

Example: When B/W points set in [Device] are 5K points

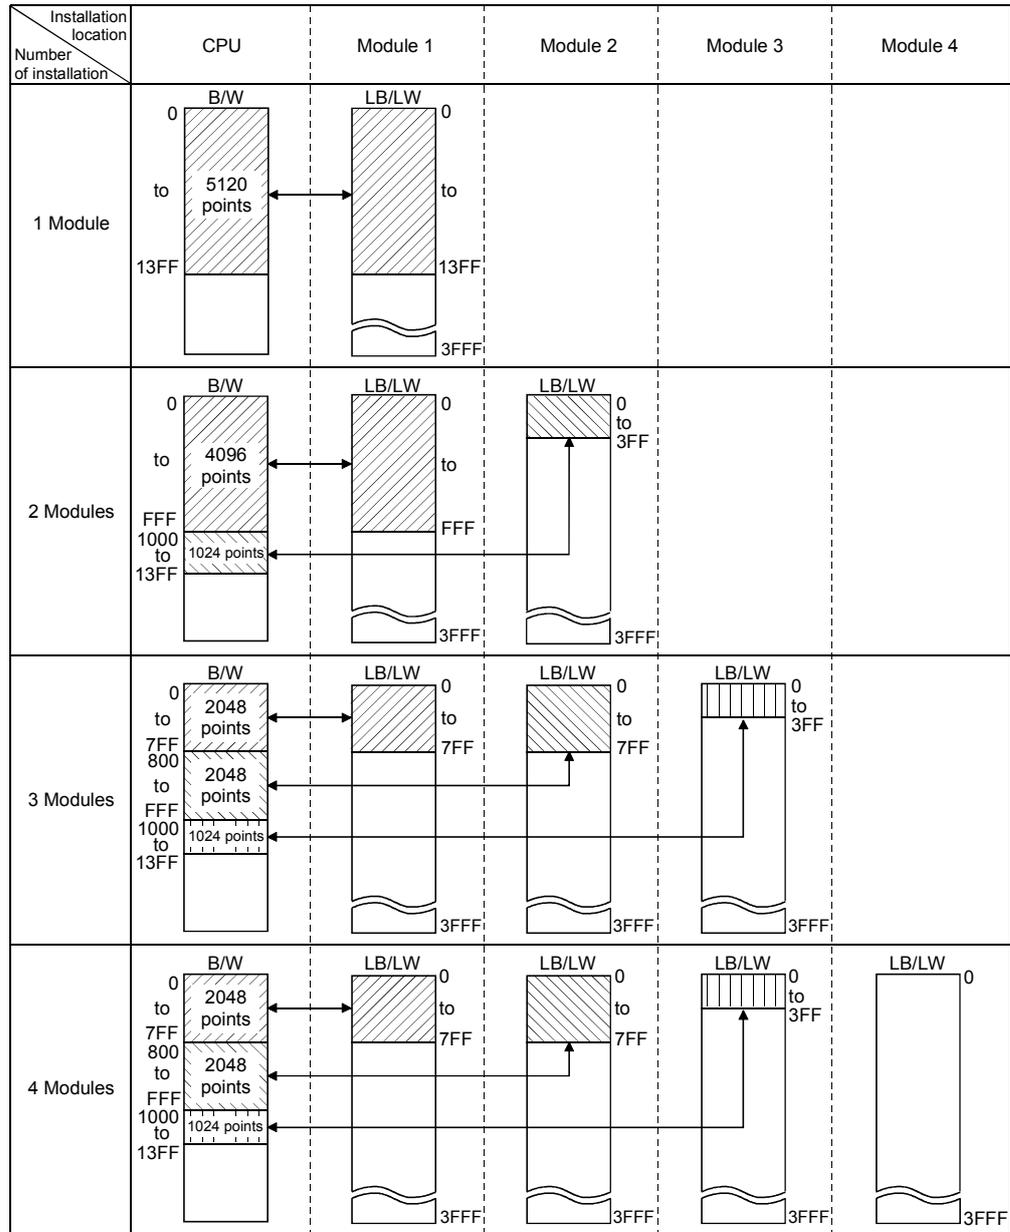


**POINT**  
 LX/LY cannot be automatically set with the **Default** button.

(b) Manual setting by direct input

- 1) Select "Assignment method".  
 Select "Points/Start" when entering link device points and start addresses.  
 Select "Start/End" when entering start and end addresses of link devices.
- 2) Configure the settings for the link side and CPU side devices.

Example: When "Start/End" is selected

Assignment method		Transient transmission error history status							
<input type="radio"/> Points/Start <input checked="" type="radio"/> Start/End		<input checked="" type="radio"/> Overwrite <input type="radio"/> Hold							
	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LB	4096	0000	0FFF	↔	B	4096	0000	0FFF
Transfer2	LW	4096	0000	0FFF	↔	W	4096	0000	0FFF
Transfer3	LX	2048	1000	17FF	↔	X	2048	1000	17FF
Transfer4	LY	2048	1000	17FF	↔	Y	2048	1000	17FF

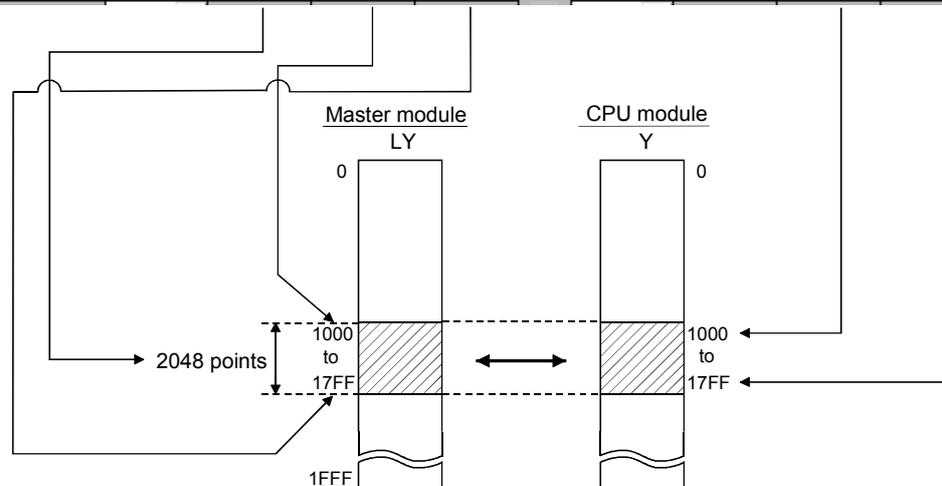

**POINT**


When setting the CPU side device range, check if:

- The refresh range does not overlap with any other range (e.g. actual I/O).
- The CPU side device range is within the range set in [Device] of [PLC parameter].

Device ranges can be checked by selecting [Tools] – [Check parameters] in GX Developer.

- (3) When no refresh parameters are set  
 (High Performance model QCPU, Process CPU, and Redundant CPU)

Link devices are assigned as shown below.

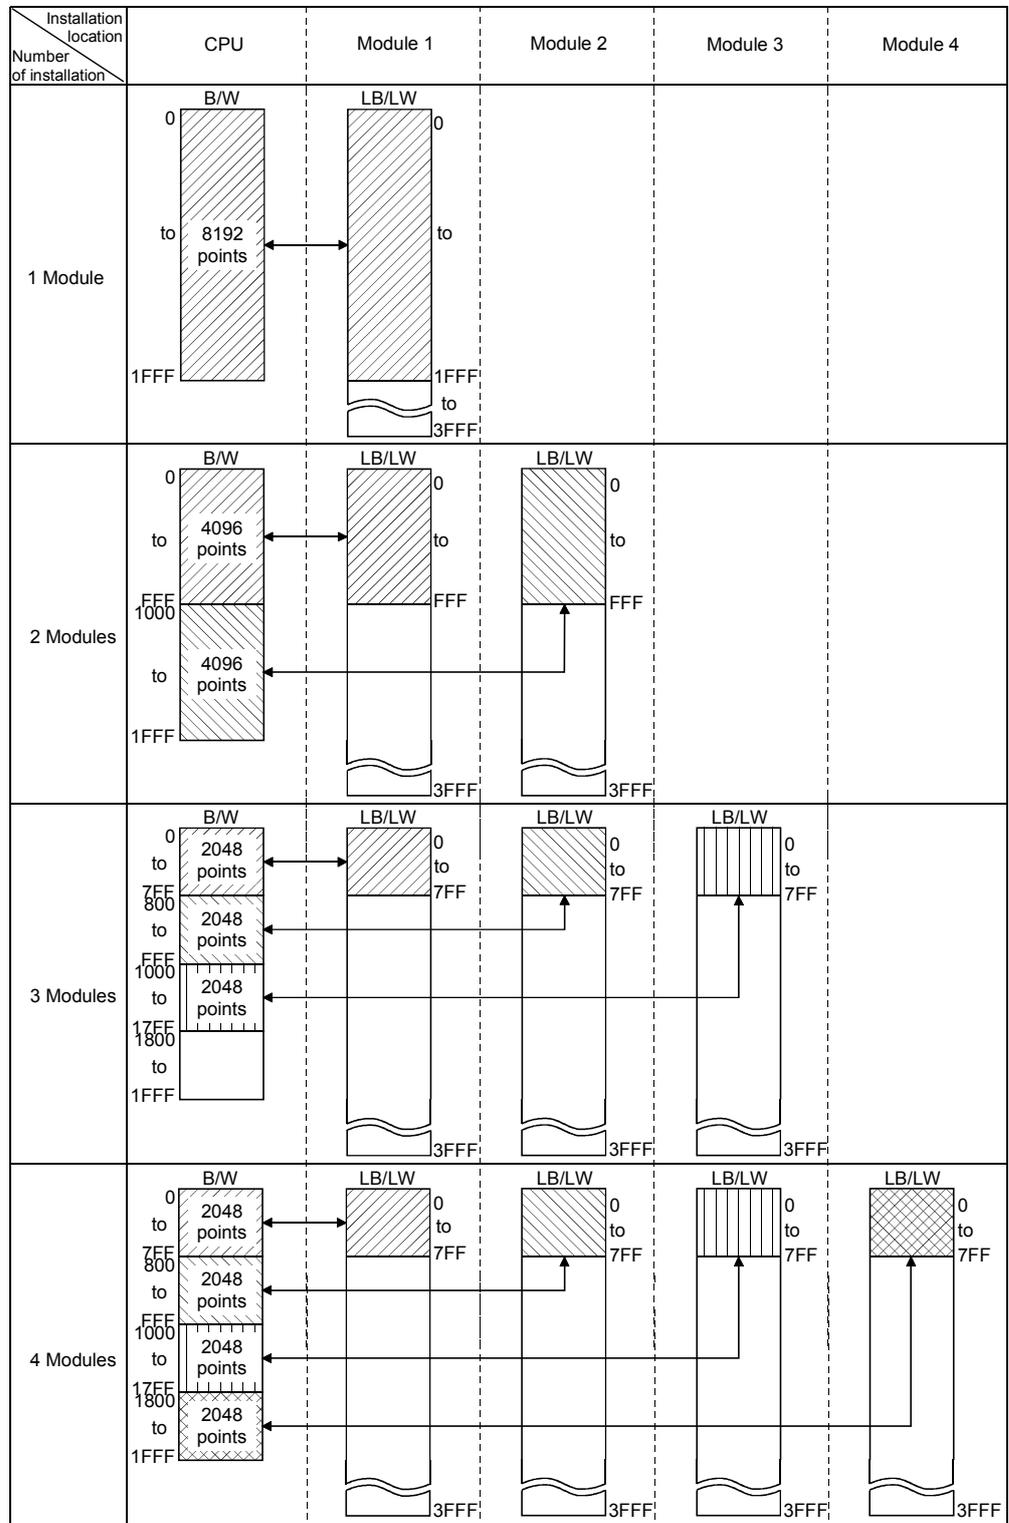


POINT		
When B/W points less than the following are set in [Device] under [PLC parameter], set refresh parameters accordingly. Or, increase the B/W points to the following value or more in [Device].		
No. of modules	Device points in [Device]	
	B	W
1	8K points	8K points
2	8K points	8K points
3	6K points	6K points
4	8K points	8K points


(4) Setting example

The following shows an example of the refresh parameters settings:

[System configuration]

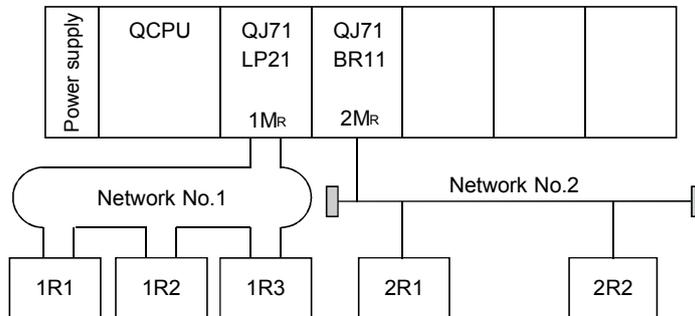

[Parameter assignments]

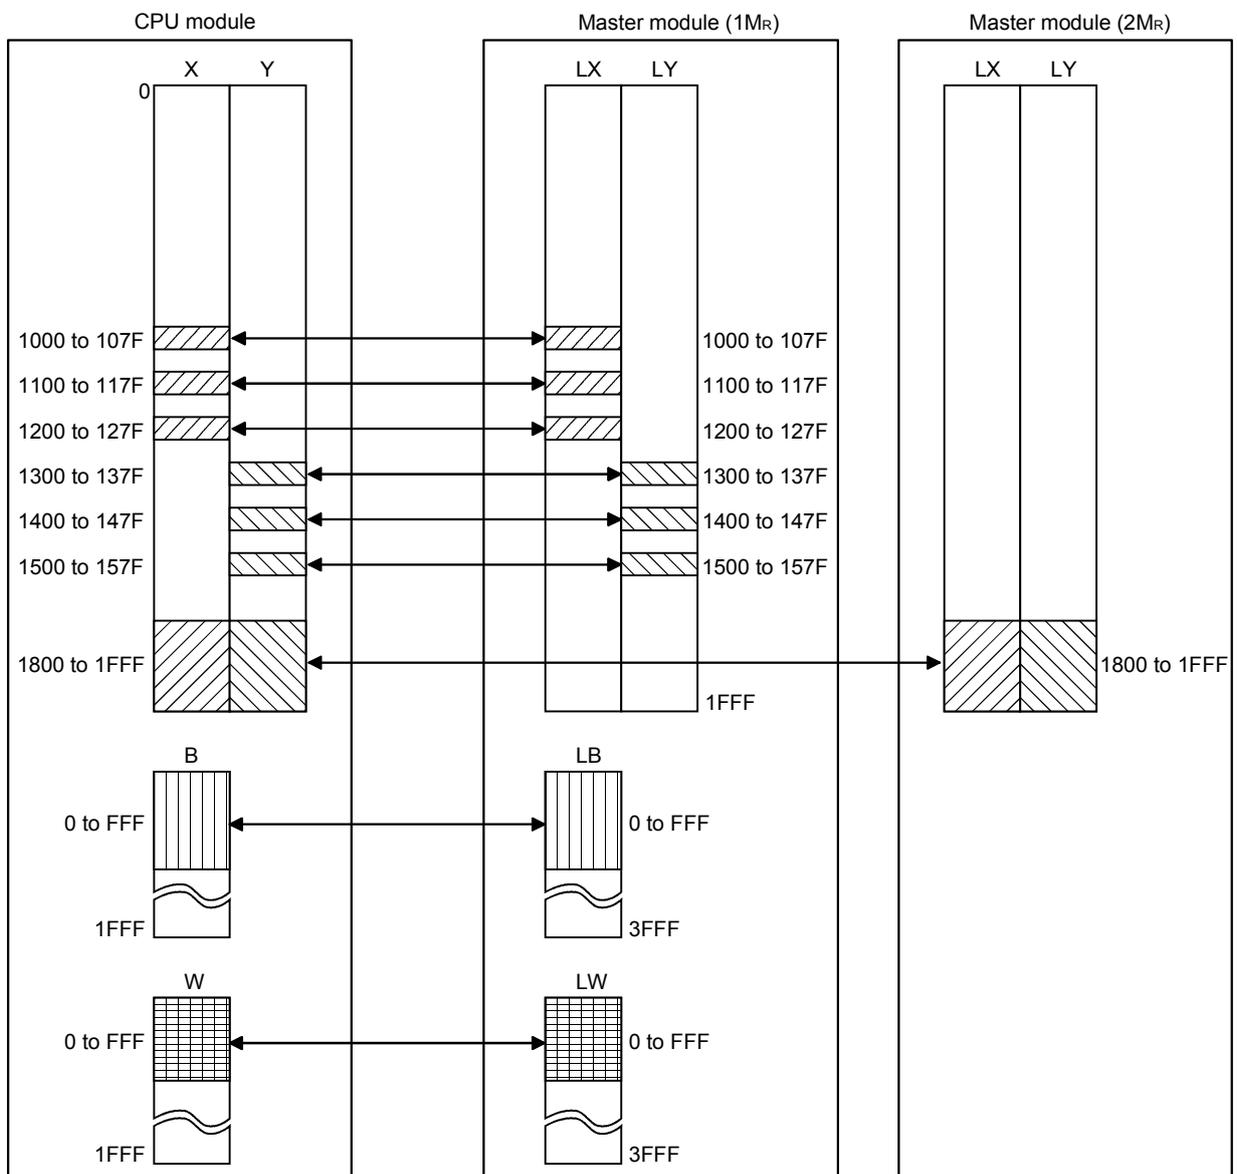

[Setting screen]

The following shows the settings of the refresh parameters for each module that are displayed on the screen.

Settings of module 1 (1MR)

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔	▼			
Random cyclic	LW				↔	▼			
Transfer1	LB ▼	4096	0000	0FFF	↔	B ▼	4096	0000	0FFF
Transfer2	LW ▼	4096	0000	0FFF	↔	W ▼	4096	0000	0FFF
Transfer3	LX ▼	128	1000	107F	↔	X ▼	128	1000	107F
Transfer4	LX ▼	128	1100	117F	↔	X ▼	128	1100	117F
Transfer5	LX ▼	128	1200	127F	↔	X ▼	128	1200	127F
Transfer6	LY ▼	128	1300	137F	↔	Y ▼	128	1300	137F
Transfer7	LY ▼	128	1400	147F	↔	Y ▼	128	1400	147F
Transfer8	LY ▼	128	1500	157F	↔	Y ▼	128	1500	157F

Settings of module 2 (2MR) (transfer SB, transfer SW, transfers 1 and 2)

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0200	03FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0200	03FF
Random cyclic	LB				↔	▼			
Random cyclic	LW				↔	▼			
Transfer1	LX ▼	2048	1800	1FFF	↔	X ▼	2048	1800	1FFF
Transfer2	LY ▼	2048	1800	1FFF	↔	Y ▼	2048	1800	1FFF
Transfer3	▼				↔	▼			
Transfer4	▼				↔	▼			
Transfer5	▼				↔	▼			
Transfer6	▼				↔	▼			

5.1.6 Valid Module During Other Station Access


This parameter is used to specify any of the following modules to be relayed when a data communication request for which the network No. of the access target programmable controller station cannot be specified from the host (access from the serial communication module (A compatible 1C frame), Ethernet module (A compatible 1E frame), etc. to other stations) is issued.

- CC-Link IE controller network, MELSECNET/H, MELSECNET/10 module
- Ethernet module

This setting is not required when a data communication request for which the network No. can be specified, such as the serial communication module (QnA compatible 3C frame, QnA compatible 4C frame) or Ethernet module (QnA compatible 3E frame), is used. Leave it as the default (1) setting.


For details of the serial communication module or Ethernet module protocol, refer to the Q Corresponding MELSEC Communication Protocol Reference Manual.

[Screen settings]

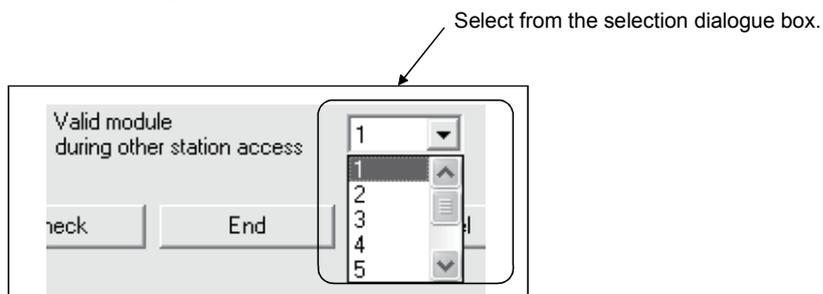


(Example)

In the example below, the personal computer connected to the serial communication module can communicate with the station on network No. 2 where the network module 3 is connected.

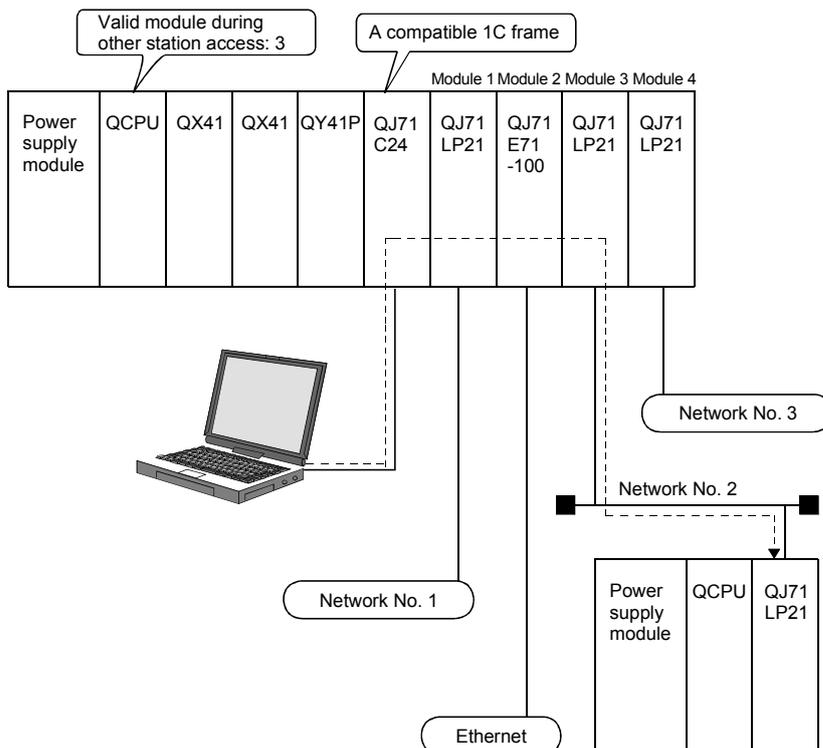


5.1.7 Redundant settings

For the multiplexed remote master station for redundant system, it is necessary to set the same mode as the mode applied to the multiplexed remote master station (system A) to the multiplexed remote sub-master station (system B).  
Set the mode of system B in the redundant settings.

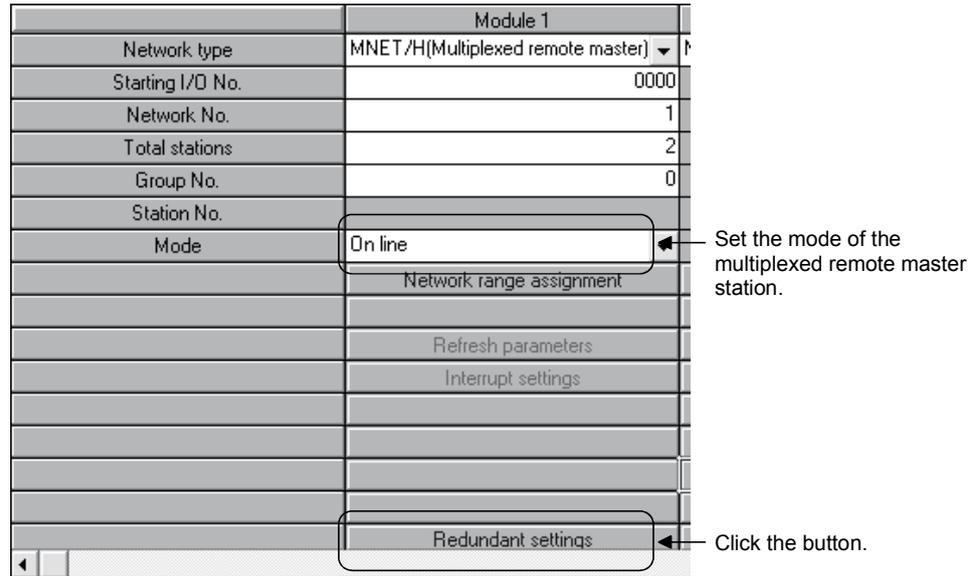

Set the mode of system B on the redundant setting screen.

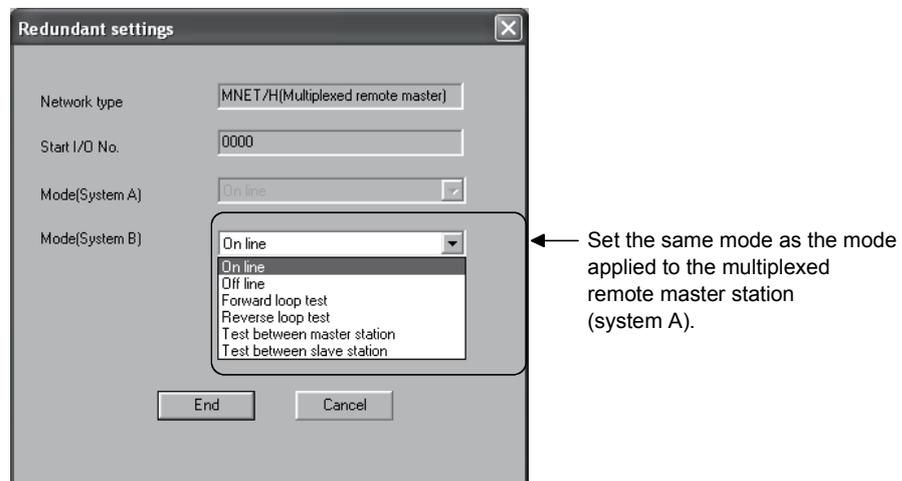

### 5.2 Remote I/O Station Parameter Settings

For remote I/O stations, set up the PLC parameters, network parameters, and remote password on the remote I/O module as needed.

<b>POINT</b>
After writing the parameters to the remote I/O module, reset it to enable the parameters that have been set. To reset the remote I/O module, use the reset switch on the module or power OFF and then ON the remote I/O station.

#### 5.2.1 Remote I/O station possible parameter settings

The following parameters are set as needed on the remote I/O station and written to the remote I/O module.  
 If settings are not needed, the remote I/O station operates using the remote I/O module default settings so there is no need to write the parameters to the remote I/O module.

##### (1) PLC parameters

The remote I/O module can set the PLC parameters in the same manner as the CPU module. However, only the required items can be set as a remote I/O station.

Major item	Intermediate item	Small item	Default value
PLC system	Points occupied by empty slot	Points occupied by empty slot	16 points
	Module synchronization	Synchronizes intelligent module's pulse up	Synchronizes
PLC RAS	Operating mode when there is an error * 1	Fuse blown	Stop
		Module verify error	Stop
	Error check	Carry out fuse blown check	Checks
		Verify module	Checks
Operational settings	Remote I/O switch setting	Remote I/O switch setting	—
	Assignment method	Points/Start	Start/End
		Start/End	
	Forwarding parameter between devices	Device name	No setting
		Points/Start	
		Start/End	
I/O assignment	I/O assignment	Type	No setting
		Model name	
		Points	
		StartXY	
		Switch setting	Switches 1 to 5
	Detailed setting	Error time output mode	Clear
		H/W error time PLC operation mode * 2	Stop
		I/O response time	10ms or 0.2ms
		Standard setting	Base model name
	Power model name		
Extension cable			
Slots			
Base mode			

\*1: The operation mode of a remote I/O station under the error status can be set differently from the parameters of the remote master station (CPU module). When an error (fuse blowout or I/O verification error) occurs on the remote master station (CPU module) and remote I/O station, the data link and output of the remote I/O station are determined based on the combination of the parameter settings of remote I/O stations and remote master station (CPU module).

The table below shows the status of the data link and output of the remote I/O station based on the combination of parameter settings.

i) When an error occurs on the remote master station (CPU module)

		Setting of operation mode when an error has occurred on the remote master station (CPU module)	
		Stop	Continue
Setting of Operating mode when there is an error of remote I/O station	Stop	Data link: Stopped on all stations. Output: Conforms to the setting of output holding/clearing.	Data link: All stations are normal. Output: All stations output normally.
	Continue	Data link: Stopped on all stations. Output: Conforms to the setting of output holding/clearing.	Data link: All stations are normal. Output: All stations output normally.

ii) When an error occurs on a remote I/O station


		Setting of operation mode when an error has occurred on the remote master station (CPU module)	
		Stop	Continue
Setting of Operating mode when there is an error of remote I/O station	Stop	Data link: Stopped on all stations. Output: Conforms to the setting of output holding/clearing.	Data link: The error station is disconnected. The other stations operate normally. Output: The error station conforms to the setting of output holding/clearing. The other stations output normally.
	Continue	Data link: Stopped on all stations. Output: Conforms to the setting of output holding/clearing	Data link: All stations are normal. Output: All stations output normally.

\*2: When setting the H/W error time PLC operation mode, use the following remote I/O module and GX Developer:

- Remote I/O module: First five digits of serial No. is "10012" or later.
- GX Developer: GX Developer: Version 8.62Q or later.

For details, refer to the QCPU User's Manual (Function Explanation, Program Fundamentals) for details about "PLC system", "PLC RAS" and "I/O assignment."

## (a) Operational settings

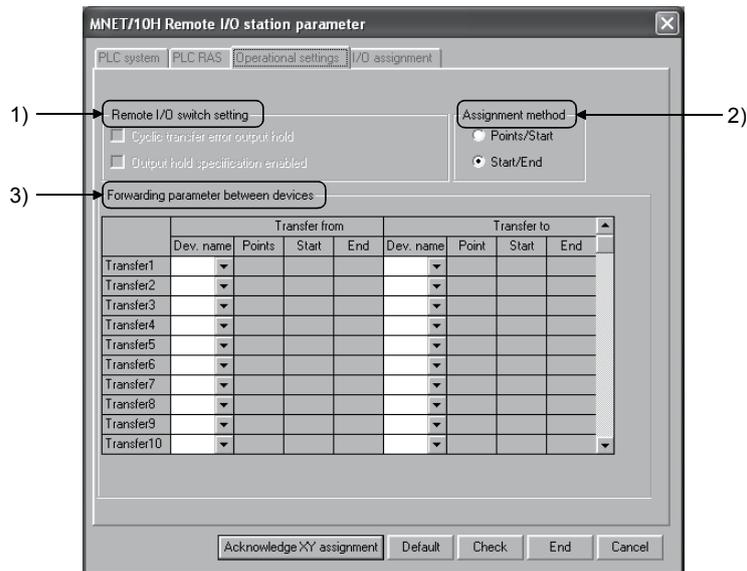

## 1) Remote I/O switch setting

For future expansion. Cannot be set at present time.

## 2) Assignment method

Select the assignment method for sending parameters between devices: "Points/Start" or "Start/End".

- Bit devices (B,M) have number of points in units of 16 and the Start/End address is assigned in multiple units of 16.


## 3) Forwarding parameter between devices

This sets the type of device and transfer range when performing data transfer between internal remote I/O module devices. Up to 64 units can be set.

With the basic setting, when the intelligent function module buffer memory data is automatically refreshed to the remote I/O module data register D, that data is used if there data transfer to link register W. It is also used when link register data W data is transferred to data register D.


**POINT**

When the intelligent function module buffer memory is located in several different areas, the forwarding parameter between devices are convenient when combining them for access.

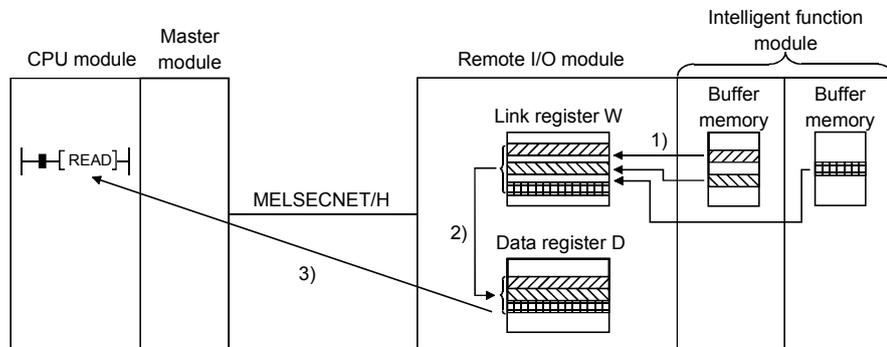

- (1) The buffer memory is refreshed to remote I/O module link register W by the automatic refreshing of the intelligent function module parameters. \*2
- (2) The buffer memory is transferred from link register W to data register D by forwarding parameter between devices.
- (3) The remote master station can read and write the remote I/O module data register D using 1 read/write instruction.

If the remote master station makes direct access to the intelligent function module buffer memory using REMFR/REMTO instructions, the REMFR/REMTO instructions will implement several cycles of the buffer memory area.

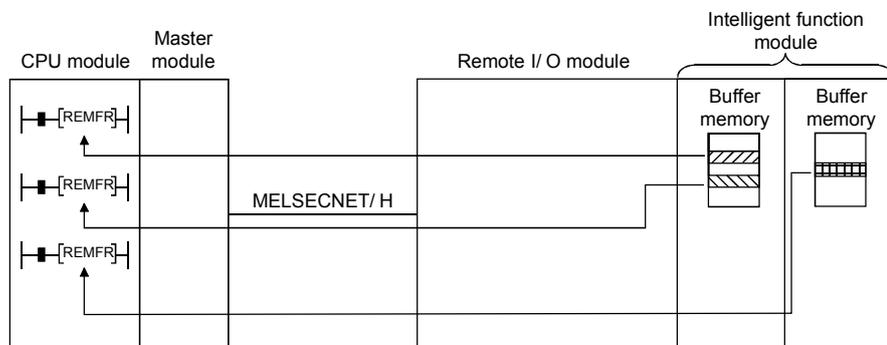

\*2 : The number of intelligent function module parameters that may be set for automatic refresh setting is limited.  
The following is the number of parameters that may be set.

Sum total of the numbers of parameters within the setting ranges of all intelligent function modules ≤ 256

If the above is exceeded, the remote I/O module detects the "SP. PARA ERROR (3301)" error. If the error has been detected, read/write the data of the intelligent function modules using the REMFR/REMTO instruction.

The number of parameters for initial setting is preset to each intelligent function module. To confirm the numbers of parameters for initial setting, refer to the user's manuals of the corresponding intelligent function modules.

Refer to Section 6.3 for the way to count the number of parameters for automatic refresh setting.

**(2) Network parameters**

The remote I/O module can set network parameters in the same way as the CPU module.

Major Items	Description
Ethernet settings	Sets the Ethernet network parameters.
CC-Link settings	Sets the CC-Link settings network parameters.

- (a) For details on Ethernet settings, refer to "Q Corresponding Ethernet Interface Module User's Manual (Basic) (SH-080009).
- (b) For details on CC-Link, refer to : "CC-Link System Master/Local Module User's Manual" (SH-080394E).

**(3) Remote password**

For remote I/O modules, a remote password similar to that applied to QCPU can be set.

Major Items	Description
Password settings	Set a remote password.
Password active module settings	Set the Ethernet module and serial communication module for making the password setting effective.

For the details of remote password, refer to Section 7.12.

## 6 PROGRAMMING

When diverting the program example introduced in this chapter to the actual system, fully check that there are no problems in the controllability of the system.

### 6.1 Programming Precautions

This section explains the precautions in creating programs using data on the network.

#### 6.1.1 Interlock related signals

A list of the interlock signal devices used in the sequence programs is provided below. Refer to Appendix 2, "List of the Link Special Relays (SB)" and Appendix 3, "List of the Link Special Registers (SW)" for other explanations, such as the operation status and setting status of the host and other stations.

When multiple network modules are installed, the interlock signal devices are refreshed to the devices on the PLC side at 512 points (0H to 1FFH) intervals according to the default settings as shown below.

POINT
The Q series uses the link special relays (SB) and the link special registers (SW) in the entire intelligent function module. Therefore, it is important to manage SB/SW properly so that duplicate SBs and SWs are not used in a program.

Assignments of the link special relay (SB) and the link special register (SW) when multiple modules are installed

Mounting position Device	1st module	2nd module	3rd module	4th module
SB	0H to 1FFH	200H to 3FFH	400H to 5FFH	600H to 7FFH
SW	0H to 1FFH	200H to 3FFH	400H to 5FFH	600H to 7FFH

List of Interlock Devices

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SB0020 (32)	Module status	Indicates the network module status. Off: Normal On: Abnormal	○	○	○	○	○	○	×	×
SB0044 (68)	Station setting (host)	When PLC to PLC network Indicates the station type set with the parameter of the host's network module. Off: Normal station On: Control station	○	○	○	○	×	×	×	×
		When remote I/O network Indicates the station type set with the parameter of the host's network module. Off: Remote I/O station or multiplexed remote sub-master station On: Remote master station or multiplexed remote master station	×	×	×	×	○	○	○	○
SB0047 (71)	Baton pass status (host)	Indicates the host's baton pass status (transient transmission enabled). Off: Normal On: Abnormal When an error is identified, the cause of the error can be checked in Baton pass status (host) (SW0047) and Cause of baton pass interruption (SW0048).	○	○	○	○	○	○	○	○
* 1 SB0048 (72)	Control station status (host)	When PLC to PLC network Indicates the host's status. Off: Normal station On: Control station (SB0044 is on) Sub-control station (SB0044 is off)	○	○	○	○	×	×	×	×
	Remote master station status (host)	When remote I/O network Indicate the host status Off: Remote I/O station On: SB0044=On Remote master station or multiplexed remote master station SB0044=Off Remote I/O station or multiplexed remote sub-master station	×	×	×	×	○	○	○	○
SB0049 (73)	Host data link status	Indicates the host's data link operation status. Off: Normal On: Abnormal When an error is identified, the cause of the error can be checked in Cause of data link stop (SW0049).	○	○	○	○	○	○	○	○
* 1 SB0070 (112)	Baton pass status of each station	Indicates the baton pass status of each station. (Not applicable to reserved stations and the station with the maximum station number or higher) Off: All stations normal On: Faulty station exists When any faulty station exists, each station status can be checked in Baton pass status of each station (SW0070 to SW0073).	○	○	○	○	○	○	○	○
* 1 SB0074 (116)	Cyclic transmission status of each station	Indicates the cyclic transmission status of each station. (Not applicable to reserved stations and the station with the maximum station number or higher) Off: All stations are executing data linking On: Stations that are not executing data linking exist When any non-executing station exists, each station status can be checked in Cyclic transmission status of each station (SW0074 to SW0077).	○	○	○	○	○	○	○	○

[Availability column] Optical: optical loop, Coaxial: coaxial bus  
○: Available, ×: Not available

\* 1: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 1 SW0070 (112)/ SW0071 (113)/ SW0072 (114)/ SW0073 (115)	Baton pass status of each station	<p>Stores the baton pass status of each station (including the host).</p> <p>&lt;Online&gt;                      0: Normal (including the stations with the maximum station number and smaller numbers as well as reserved stations)                      1: Abnormal</p> <p>&lt;Offline test&gt;                      0: Normal                      1: Abnormal (including the stations with the maximum station number and smaller numbers as well as reserved stations)</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0070</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0071</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0072</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0073</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0070	16	15	14	13	to	5	4	3	2	1	SW0071	32	31	30	29	to	21	20	19	18	17	SW0072	48	47	46	45	to	37	36	35	34	33	SW0073	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0070	16	15	14	13	to	5	4	3	2	1																																																							
SW0071	32	31	30	29	to	21	20	19	18	17																																																							
SW0072	48	47	46	45	to	37	36	35	34	33																																																							
SW0073	64	63	62	61	to	53	52	51	50	49																																																							
* 1 SW0074 (116)/ SW0075 (117)/ W0076 (118)/ SW0077 (119)	Cyclic transmission status of each station	<p>Stores the cyclic transmission status of each station (including the host).</p> <p>0: Executing cyclic transmission (including the station with the maximum station number and smaller number as well as reserved stations)                      1: Cyclic transmission not executed</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0074</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0075</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0076</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0077</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p> <p>If a CPU module installed together with QJ71LP21S-25 is turned OFF, detection of a data link error may take more time than usual. For immediate detection of a data link error, program an interlock using the link relay (LB) in each station's send range. For details, refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0074	16	15	14	13	to	5	4	3	2	1	SW0075	32	31	30	29	to	21	20	19	18	17	SW0076	48	47	46	45	to	37	36	35	34	33	SW0077	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0074	16	15	14	13	to	5	4	3	2	1																																																							
SW0075	32	31	30	29	to	21	20	19	18	17																																																							
SW0076	48	47	46	45	to	37	36	35	34	33																																																							
SW0077	64	63	62	61	to	53	52	51	50	49																																																							

[Availability column] Optical: optical loop, Coaxial: coaxial bus  
 ○: Available, ×: Not available


\* 1: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

6.1.2 Program example

Interlocks should be applied to the programs according to the link status of the host and other stations.

The following example shows an interlock in the communication program that uses the link status of the host (SB0047, SB0049) and the link status of station number 2 (bit 1 of SW0070 and bit 1 of SW0074).

(Example)

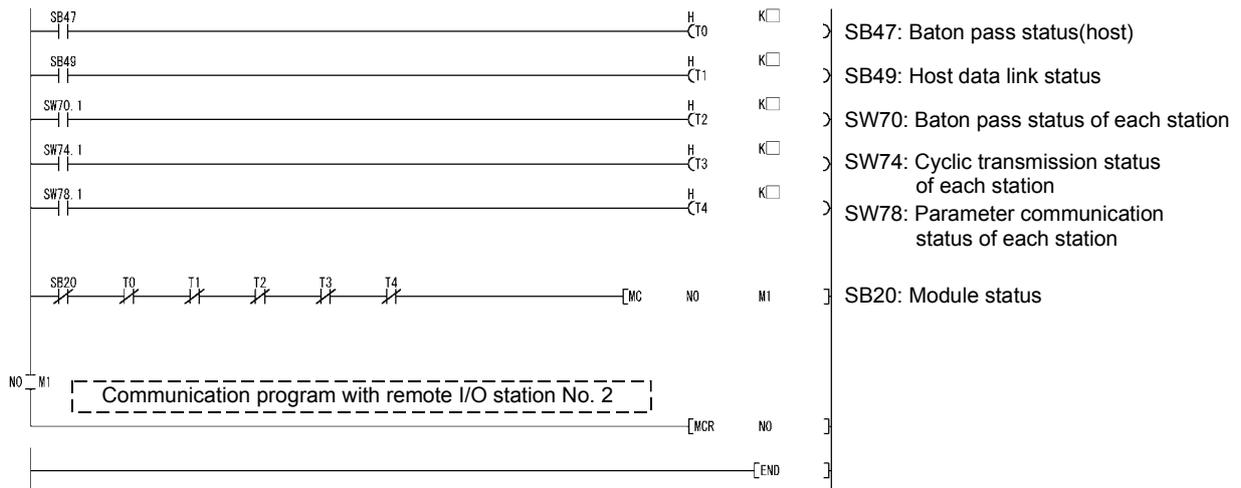

Set the values shown below for timer constant K □.


Baton pass status (T0, T2)	(Sequence scan time × 4) or more
Cyclic transmission status Parameter communication status (T1, T3, T4)	(Sequence scan time × 3) or more

Reason: This is to prevent occasional errors due to cable conditions or electrical noise from stopping control.

Also, the multipliers of 4 and 3 should only be considered as a guideline.

If the initial settings for the buffer memory of the intelligent function module on a remote I/O station are set by a link dedicated instruction (REMTO instruction), write the program so that when only that remote I/O module is reset (by turning the remote I/O module power supply off or by using the remote I/O module reset switch), the remote master station will detect that condition and will once again execute the initial settings in the intelligent function module.

This program is for resetting the intelligent function module on the remote I/O station whenever the remote I/O station is reset.

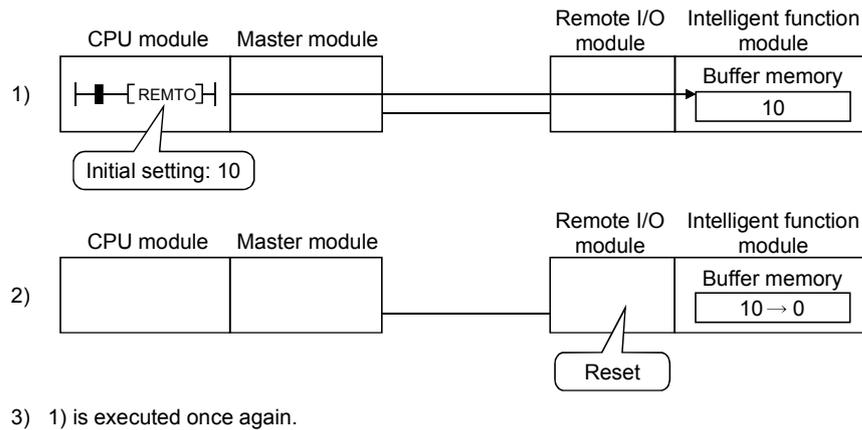


**POINT**

When the intelligent function module parameters (initial settings) are written to the remote I/O station, the intelligent function module initial settings are automatically set, even if the remote I/O station is reset.

The following cases may occur when performing the initial settings to the intelligent function module.

- (a) Analog-digital conversion module Q64AD A/D conversion permit/prohibit setting.
- (b) Digital-analog conversion module Q62DA D/A conversion permit/prohibit.

The operating status of the remote I/O station can be confirmed by the special register for the links for each station baton pass status (SW0070 to SW0073).

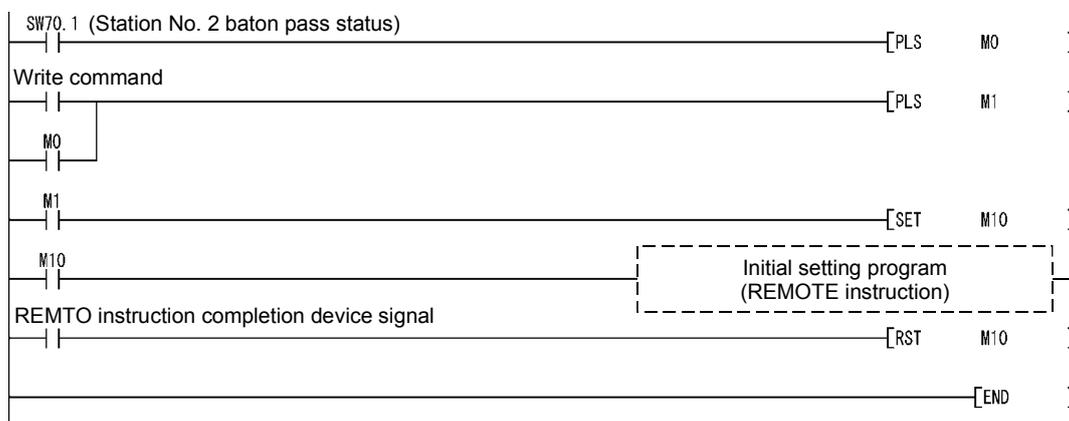

## 6.2 Cyclic Transmission

Depending on the timing of the link refresh, 32-bit (2-word) type link data may be broken up into new and old data in units of 16 bits (one word).

- Current values of analog-digital converter module
- Current values of positioning module, command speed.

The remote I/O network provides the following functions for making handling of the link data easy.

- 32-bit data guarantee : Section 6.2.1
- Block guarantee of cyclic data per station : Section 6.2.2

### 6.2.1 32-bit data guarantee

32-bit data precision is guaranteed automatically by setting parameters so that the following conditions 1) to 4) are satisfied.

If conditions 1) to 4) are not satisfied, a warning for 32-bit data separation is displayed during setting with GX Developer.

- 1) The start device number of LB is a multiple of 20H.
- 2) The number of assigned LB points per station is a multiple of 20H.
- 3) The start device number of LW is a multiple of 2.
- 4) The number of assigned LW points per station is a multiple of 2.

#### Parameter settings for network range assignments

StationNo.	M station -> R station			M station <- R station			M station -> R station			M station <- R station		
	B			B			W			W		
	Points	Start	End									
1	32	0000	001F	32	0100	011F	16	0000	000F	16	0400	040F
2	32	0020	003F	32	0120	013F	16	0100	010F	16	0500	050F
3	32	0040	005F	32	0140	015F	16	0200	020F	16	0600	060F
4	32	0060	007F	32	0160	017F	16	0300	030F	16	0700	070F

Refreshing link devices that satisfy the above conditions 1) to 4) guarantees consistency of 32-bit data.

#### POINT

To guarantee data larger than 32 bits (2 words), use the station unit block assurance in Section 6.2.2.

6.2.2 Block guarantee of cyclic data per station

Since link refresh is performed by handshaking between the CPU and network modules, cyclic data integrity is assured in units of stations.

The Block guarantee of cyclic data per station is a function that prevents link data consisting of two words (32 bits), such as a current value of a positioning module, from being divided into new and old data in units of one word (16 bits).

As shown below, set the send and receive parameters as needed.


These settings can be made using the common parameters (supplementary settings) only for the remote master station.

- Default: Disabled

Network range assignments Supplementary settings

<input type="checkbox"/>	Block send data assurance per station
<input type="checkbox"/>	Block receive data assurance per station

By selecting both [Block send data assurance per station] and [Block receive data assurance per station], an interlock for the link data between the stations to be set becomes unnecessary.

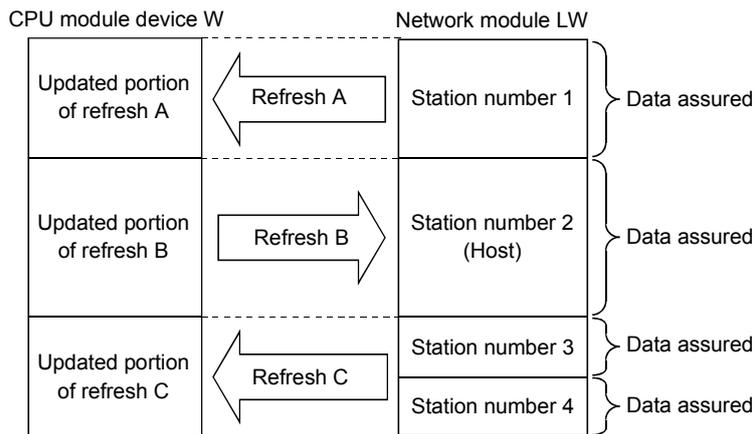

<Precautions>

- (1) In order to enable the block guarantee per station, it is necessary to set the refresh parameters. (Refer to Section 5.1.5.)
- (2) It is not necessary to set the block guarantee of cyclic data per station for remote I/O stations.


**POINT**

For the transmission delay time calculation for the case where the Block send/receive data assurance per station is set enabled, refer to Section 3.3.2 (1) (a) and (2) (a) POINT.

### 6.3 Communications with I/O Modules

This section describes the setting and programming that are required for a CPU to communicate with I/O modules on a remote I/O station by cyclic transmission.

#### (1) System configuration example

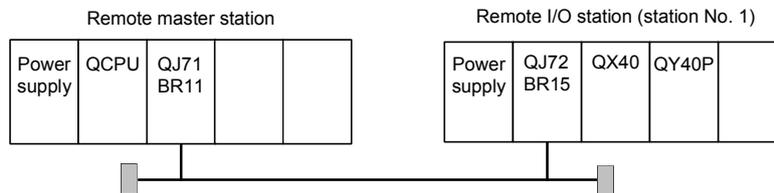

#### (2) Program conditions

The following processing is performed in the program.

- An input from X0 of the remote I/O station turns ON M1000.
- When M2000 is turned ON, a signal is output to Y0 of the remote I/O station.

##### (a) Devices used by the user

- Input flag from X0 of remote I/O station.....M1000
- Output flag to Y10 of remote I/O station.....M2000

#### (3) Parameter setting example

##### (a) Setting for the CPU module of the remote master station

Set network parameters in GX Developer.

- Network type : MNET/H (Remote master)
- Starting I/O No. : 0000H
- Network No. : 1
- Total stations : 1
- Mode : Online
- Network range assignment:

StationNo.	M station -> R station						M station <- R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	1000	10FF	256	0000	00FF	256	1000	10FF	256	0000	00FF


- Refresh parameters:

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer S/W	S/W	512	0000	01FF	↔	S/W	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LX	512	1000	11FF	↔	X	512	1000	11FF
Transfer2	LY	512	1000	11FF	↔	Y	512	1000	11FF

##### (b) Setting for the remote I/O module

Use the default settings. (Refer to Section 5.2.1.)


#### (4) Program example

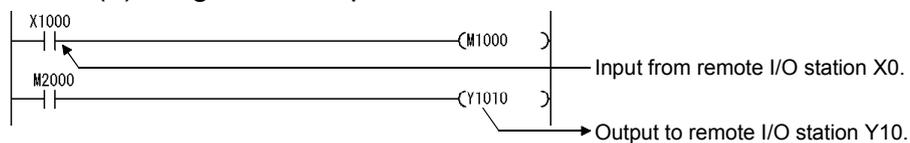

## 6.4 Communications with Intelligent Function Modules

This section describes the setting and programming that are required for a CPU module to communicate with intelligent function modules on a remote I/O station by cyclic transmission.

### (1) System configuration example

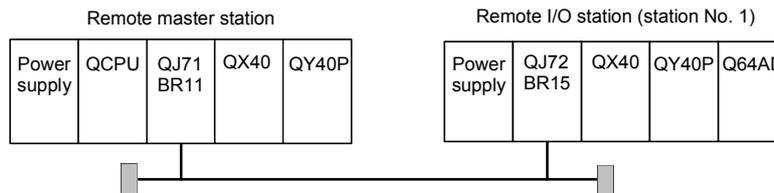

Complete the following intelligent function module switch settings on the remote I/O module in advance.

- Switch 1 0430<sub>H</sub> (CH1: 4 to 20mA, CH2: 0 to 5V, CH3: -10 to 10V)
- Switch 2 Empty
- Switch 3 Empty
- Switch 4 0000<sub>H</sub> (Normal mode (A/D conversion processing))
- Switch 5 0000<sub>H</sub> (0: Fixed)

### (2) Program conditions

In this program, the digital output values that have been A/D converted using CH1 to CH3 of the Q64AD are read by the CPU of the remote master station. CH1 performs sampling processing, CH2 performs averaging processing every 50 times, and CH3 performs averaging processing every 1000ms. An error code appears in BCD format if a write error occurs.

#### (a) Initial settings

- A/D conversion enable channel ..... CH1 to CH3
- Count-based averaging processing channel ..... Average count setting of CH2: 50 times
- Channel performing averaging processing using time ..... Average time setting of CH3: 1000ms

#### (b) Devices used by the user

- Initial setting request signal .....X20
- Digital output value read command input signal .....X21
- Error reset signal .....X23
- Error code display (BCD 3 digits) .....Y30 to Y3B
- A/D conversion completed flag .....D10
- CH1 digital output value .....D11 (W11)
- CH2 digital output value .....D12 (W12)
- CH3 digital output value .....D13 (W13)
- Error code .....D14 (W14)

6.4.1 Program example when using GX Configurator

- (1) Setting for the CPU module on the remote master station  
Set network parameters in GX Developer.

(a) Setting network parameters

- Network type : MNET/H (Remote master)
- Starting I/O No. : 0000H
- Network No. : 1
- Total stations : 1
- Mode : Online
- Network range assignment:

StationNo.	M station → R station						M station ← R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	1000	10FF	256	0000	00FF	256	1000	10FF	256	0000	00FF

StationNo.	M station → R station			M station ← R station			M station → R station			M station ← R station		
	B			B			W			W		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1							160	0100	019F	160	0000	009F

- Refresh parameters:

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LB	8192	0000	1FFF	↔	B	8192	0000	1FFF
Transfer2	LW	8192	0000	1FFF	↔	w	8192	0000	1FFF
Transfer3	LX	512	1000	11FF	↔	X	512	1000	11FF
Transfer4	LY	512	1000	11FF	↔	Y	512	1000	11FF
Transfer5					↔				

(2) Setting for the remote I/O module

In GX Developer, set the intelligent function module switches. (Refer to Section 6.4 (1).)

Also, set intelligent function module parameters in GX Configurator. Configure the following settings.

- Start I/O No. : 20
- Module type : A/D Conversion Module
- Module model name : Q64AD

(a) Initial setting \*1


- CH1, CH2, CH3 A/D conversion enable/disable setting .... "Enable"
- CH1 Sampling process/averaging process setting ..... "Sampling"
- CH2 Sampling process/averaging process setting ..... "Averaging"
- CH2 Time/number of times specifying ..... "50"
- CH3 Sampling process/averaging process setting ..... "Averaging"
- CH3 Average time/average number of times setting ..... "1000"

\*1: Note that the number of intelligent function module parameters that may be set for initial setting is limited.

The number of parameters that may be set for initial setting is as follows.

Sum total of the numbers of parameters within the setting ranges of all intelligent function modules  $\leq 512$

If the number of parameters set exceeds the limited number, the remote I/O module detects the "SP. PARA ERROR (3301)" error.

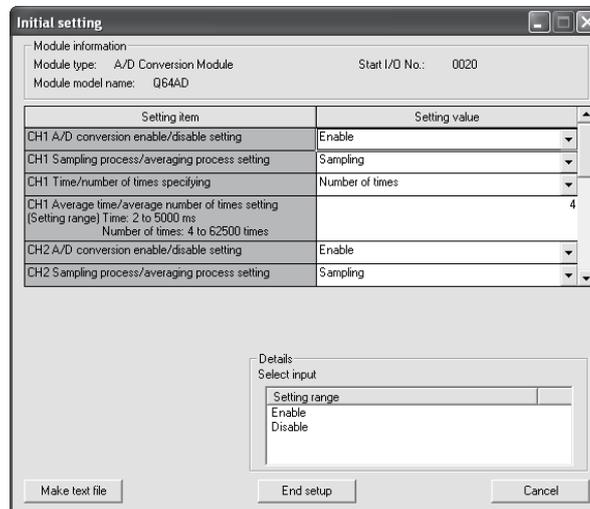

The number of Q64AD parameters for initial setting is 2. Add this number to all numbers of parameters of the other intelligent function modules.

**POINT**

If the remote I/O module has detected the error, read/write the data of the intelligent function modules using the REMFR/REMTO instruction.

The number of parameters for initial setting is fixed for each intelligent function module.

To confirm the numbers of parameters for initial setting, refer to the user's manuals of the corresponding intelligent function modules.

(b) Auto refresh setting\*<sup>1</sup>

- CH1 Digital output value..... "W11"
- CH2 Digital output value..... "W12"
- CH3 Digital output value..... "W13"
- Error code ..... "W14"

\*1: Note that the number of intelligent function module parameters that may be set for automatic refresh setting is limited.  
The number of parameters that may be set for automatic refresh setting is as follows.

Sum total of the numbers of parameters within the setting ranges of all intelligent function modules ≤ 256

If the number of parameters set exceeds the limited number, the remote I/O module detects the "SP. PARA ERROR (3301)" error.

Setting item	Module side Buffer size	Module side Transfer word count	Transfer direction	PLC side Device
CH1 Digital output value	1	1	->	W11
CH2 Digital output value	1	1	->	W12
CH3 Digital output value	1	1	->	W13
CH4 Digital output value	1	1	->	
CH1 Maximum value	1	1	->	
CH1 Minimum value	1	1	->	
CH2 Maximum value	1	1	->	
CH2 Minimum value	1	1	->	
CH3 Maximum value	1	1	->	

This single line is counted as one parameter. A blank field is counted out. Add all the setting items on this setting screen to all numbers of parameters of the other intelligent function modules.


**POINT**

- (1) If automatic refresh settings are performed by the intelligent function module parameters in the remote I/O module, do not use device X,Y in the PLC-side device.  
If these are incorrectly used, the network will not operated properly.  
In the same manner, do not use device X,Y in the CC-Link refresh settings with the remote I/O module network parameters.
- (2) If the error has been detected, read/write the data of the intelligent function modules using the REMFR/REMT0 instruction.  
The number of parameters for automatic refresh setting is preset to each intelligent function module.  
To confirm the numbers of parameters for automatic refresh setting, refer to the user's manuals of the corresponding intelligent function modules.

**REMARKS**

Refer to the manual for the intelligent function module for details about the method for setting the intelligent parameters.

(3) Program example

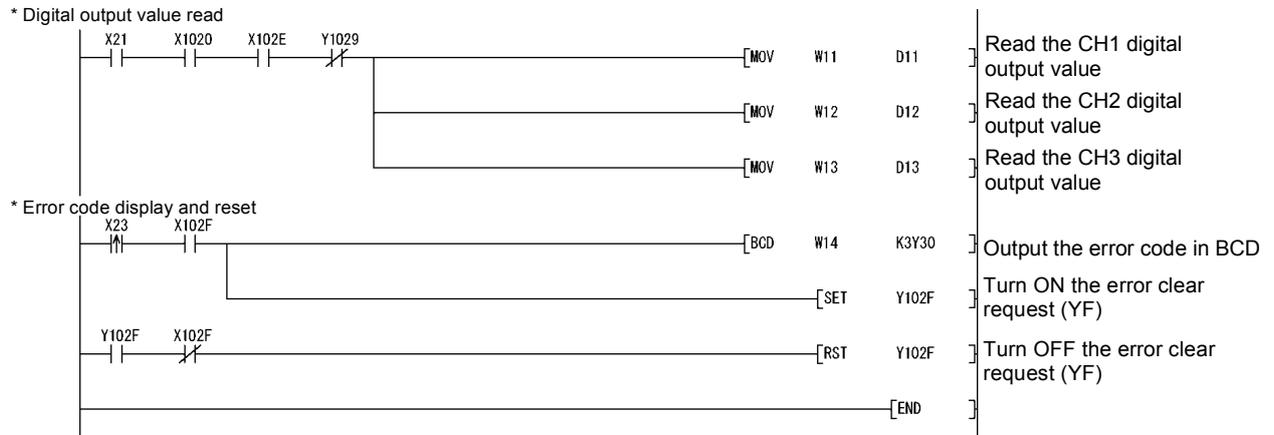

6.4.2 Program example when not using GX Configurator

**POINT**

Execution of the REMFR/REMTO instruction needs several scans. Therefore, the execution result of the REMFR/REMTO instruction cannot be synchronized with operations of the I/O signals. When reading a digital output value on a Q64AD after changing the operating condition during operation, be sure to read the A/D conversion completed flag (buffer memory address 10) at the same time. Also, for the case of changing the operating condition, insert an interlock to prevent the execution of the REMFR instruction.

(1) Setting for the CPU module on the remote master station

- Network type : MNET/H (Remote master)
- Starting I/O No. : 0000H
- Network No. : 1
- Total stations : 1
- Mode : Online
- Network range assignment:

StationNo.	M station -> R station						M station <- R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	1000	10FF	256	0000	00FF	256	1000	10FF	256	0000	00FF

- Refresh parameters:


	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LB	8192	0000	1FFF	↔	B	8192	0000	1FFF
Transfer2	LW	8192	0000	1FFF	↔	W	8192	0000	1FFF
Transfer3	LX	512	1000	11FF	↔	X	512	1000	11FF
Transfer4	LY	512	1000	11FF	↔	Y	512	1000	11FF
Transfer5					↔				

(2) Setting for the remote I/O module


In GX Developer, set the intelligent function module switches. (Refer to Section 6.4 (1).)

(3) Program example

\* Remote I/O station operating status checking

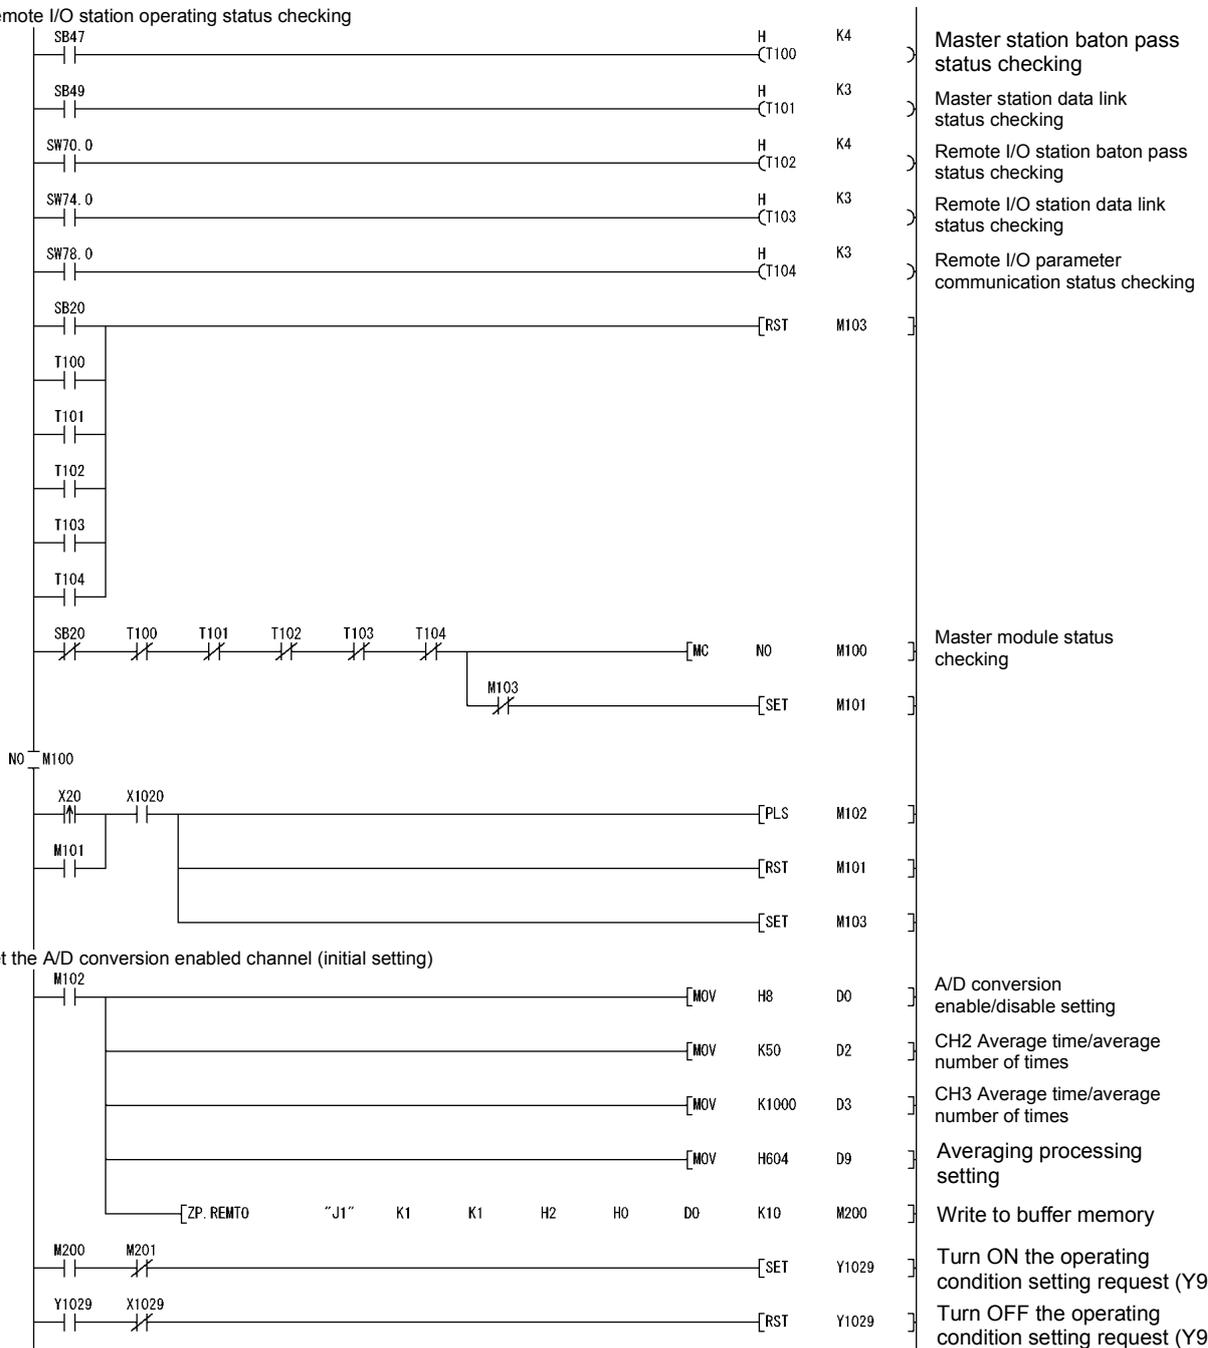


\* Digital output value read processing

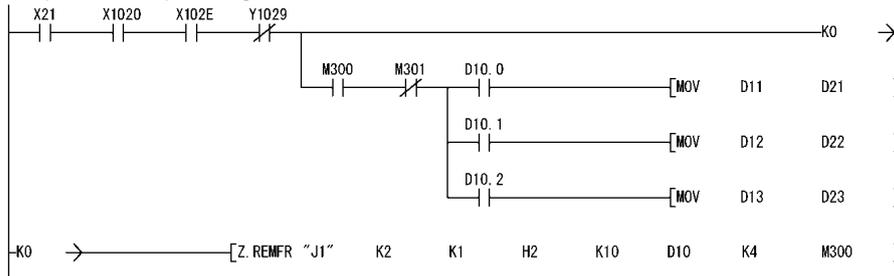

→ Concurrently reads the A/D conversion completed flag and CH1-to-CH3 digital output values.  
 ] Read the CH1 digital output value  
 ] Read the CH2 digital output value  
 ] Read the CH3 digital output value

\* Error code display and reset processing

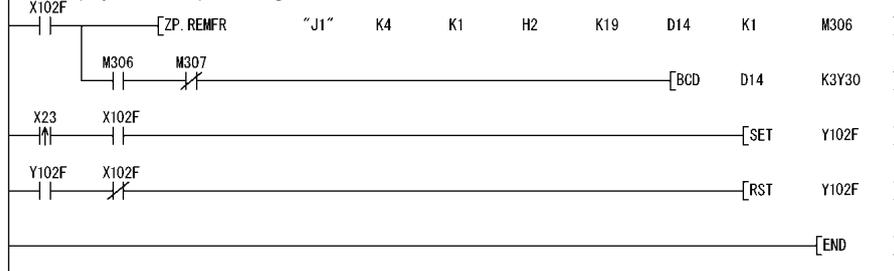

] Read the error code  
 ] Output the error code in BCD  
 ] Turn ON the error clear request (YF)  
 ] Turn OFF the error clear request (YF)

6.5 Link Dedicated Instruction List

The following table outlines the instructions that can be used for the MELSECNET/H. For details on the format and program examples of each instruction, refer to the applicable section listed in the Reference section column.

List of link dedicated instructions

○: Can be used ×: Cannot be used

Instruction	Name	Executing station	Description	Target station	Reference section
		QCPU		Remote I/O station	
REMFR	Read remote I/O station intelligent function module buffer memory	○	<p>Reads data from the target remote I/O station intelligent function module buffer memory.</p>	○	Section 7.1.1 (1)
REMT0	Write remote I/O station intelligent function module buffer memory	○	<p>Writes data to the target remote I/O station intelligent function module buffer memory.</p>	○	Section 7.1.1 (1)
READ	Read other station word device	○	<p>Reads remote I/O station device data for the target network No.. (16 bit unit)</p>	○	* 1
WRITE	Write other station word device	○	<p>Writes device data to the target network No. remote I/O station. (16 bit unit)</p>	○	* 1

Instruction	Name	Execution station		Description	Target station		Reference section
		Process CPU	Redundant CPU *2		Multiplexed remote master station	Multiplexed remote sub-master station	
SEND	Data send	○	×	<p>SEND: Writes data to the target station (network module) of the target network No.                      RECV: Reads the data sent by SEND to the CPU device.</p>	○	○	*1
RECV	Data receive	○	×		○	○	*1
READ SREAD	Other station word device read	○	○	<p>Reads the CPU device data of the target station of the target network No. (in 16 bit units).</p>	○	○	*1
WRITE SWRITE	Other station word device write	○	○	<p>Writes data to the CPU device of the target station of the target network No. (in 16 bit units).                      (SWRITE can turn ON the device of the target station.)</p>	○	○	*1
REQ	Other station transient request	○	○	<p>Performs "remote RUN/STOP" or "clock data read/write" to the other station.</p>	○	○	*1
RCVCS	Message receive (1 scan completion)	○	×	<p>Receives the channel data, which was sent by SEND, within an interrupt program and reads that data to the CPU device immediately. Processing is completed when the instruction is executed.</p>	○	○	*1

Instruction	Name	Execution station		Description	Target station		Reference section
		Process CPU	Redundant CPU *2		Multiplexed remote master station	Multiplexed remote sub-master station	
ZNRD	Other station word device read	○	○	<p>[A-compatible instruction] Reads the CPU device data of the target station of the target network No.</p>	○	○	*1
ZNWR	Other station word device write	○	○	<p>[A-compatible instruction] Writes data to the CPU device of the target station of the target network No.</p>	○	○	*1
RRUN	Remote RUN	○	○	<p>Performs "remote RUN" to the CPU module of the other station.</p>	○	○	*1
RSTOP	Remote STOP	○	○	<p>Performs "remote STOP" to the CPU module of the other station.</p>	○	○	*1
RTMRD	Other station clock data read	○	○	<p>Performs "clock data read" to the CPU module of the other station.</p>	○	○	*1

Instruction	Name	Execution station		Description	Target station		Reference section
		Process CPU	Redundant CPU * 2		Multiplexed remote master station	Multiplexed remote sub-master station	
RTMWR	Write clock data into other station	○	○	Performs "Write clock data" to the CPU module of other station. 	○	○	* 1

\*1: For details of the SEND, RECV, READ, SREAD, WRITE, SWRITE, REQ, RECVS, ZNRD, ZNWR, RRUN, RSTOP, RTMRD, and RTMWR instructions, refer to the Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).

The multiplexed remote master station or the current master station is accessible with each instruction by specifying the target station No. to "7DH" or "7EH" respectively.

\*2: If the Redundant CPU of the execution station executes the unusable instructions such as SEND, RECV, RECVS, to the target station once, it will not result in an error. However, if it executes the unusable instruction again, it will result in an error.

Also, RRUN instruction and RSTOP instruction may result in an error on the Redundant CPU of the target station.

\*3: It is recommended to use SB0048 (ON: multiplexed remote master station) as an interlock signal when executing REMTO instruction, to refer to if the host station operates as a master.

POINT
<p>(1) Eight channels may be used with each link dedicated instruction. Hence, up to eight instructions can make simultaneous access to the intelligent function modules of the remote I/O station. It is recommend to combine GX Configurator's automatic refresh setting and cyclic transmission to access the data of the intelligent function module that is continuously accessed (e.g. the analog input value of the analog-digital converter module). (Refer to Section 6.3.)</p> <p>(2) Link dedicated instructions must be executed in online mode. Execution of the link dedicated instructions is not allowed in offline mode.</p> <p>(3) When the link dedicated instruction is used to access the other station programmable controller during network diagnosis, the execution of the link dedicated instruction may be delayed. After taking the following measures, perform network diagnosis processing and execute the link dedicated instruction.</p> <ul style="list-style-type: none"> <li>• Execute the COM instruction.</li> <li>• Secure the communication processing security time for 2 to 3ms. For the High Performance model QCPU, Process CPU, and Redundant CPU, set it by the special register SD315. For the Universal model QCPU, set it by the service processing setting of the PLC parameter (PLC system) of GX Developer.</li> </ul>

**REMARKS**

If an SREAD, SWRITE instruction is erroneously executed to a remote I/O station, the notification device to the target station is ignored and the it is processed in the same manner as READ,WRITE.

## 6.6 Using the Link Special Relays (SB)/ Link Special Registers (SW)

The data linking information is stored in the link special relays (SB)/link special registers (SW).

They can be used by the sequence programs, or used for investigating faulty areas and the causes of errors by monitoring them.

The range that can be set by the user is SB/SW 0000H to 001FH.

The range that can be set by the system is SB/SW 0020H to 01FFH.

For more details, refer to Appendixes 2 and 3.

### (1) Cyclic transmission stop/restart

Cyclic transmission stop/restart is executed through the GX Developer network tests, but it also can be executed with link special relay (SB) and link special register (SW). (Refer to Section 7.9.)

#### (a) Cyclic transmission stop/restart

(Cyclic transmission stop)

- 1) In the following link special register (SW), specify a station for stopping cyclic transmission.
  - Specification of target station  
Link stop/startup direction content (SW0000)
  - Specification of station No.  
Link stop/startup direction content (SW0001 to SW0004)
- 2) Turn System link stop (SB0003) ON.
- 3) When the network module accepts a request, Cyclic transmission stop acknowledgment status (system) (SB0052) is turned ON.
- 4) When the cyclic transmission stop is completed, Cyclic transmission stop completion status (system) (SB0053) is turned ON.
- 5) The station No. of the station that performed the cyclic transmission stop request is stored in Data linking stop request station (SW004A). (Saved in the station which received the stop request.)
- 6) If the cyclic transmission stop is completed abnormally, an error code will be stored in Data linking stop status (entire system) (SW0053).
- 7) Turn System link stop (SB0003) OFF.

(Cyclic transmission restart)

- 8) In the following link special register (SW), specify a station for restarting cyclic transmission
  - Specification of target station  
Link stop/startup direction content (SW0000)
  - Specification of station No.  
Link stop/startup direction content (SW0001 to SW0004)
- 9) Turn System link startup (SB0002) ON.
- 10) When the network module accepts a request, Cyclic transmission start acknowledgment status (system) (SB0050) is turned ON.
- 11) When the cyclic transmission restart is completed, Cyclic transmission start completion status (system) (SB0051) is turned ON.
- 12) If the cyclic transmission restart is completed abnormally, an error code will be stored in Data linking start status (entire system) (SW0051).
- 13) Turn System link startup (SB0002) OFF.

No.	Description	No.	Description
SB0002	System link startup	SW0000	Link stop/startup direction content
SB0003	System link stop	SW0001 to SW0004	
	—	SW004A	
SB0050	Cyclic transmission start acknowledgment status (system)		—
SB0051	Cyclic transmission start completion status (system)	SW0051	Data linking stop status (entire system)
SB0052	Cyclic transmission stop acknowledgment status (system)		—
SB0053	Cyclic transmission stop completion status (system)	SW0053	Data linking stop status (entire system)

(b) Cyclic transmission stop/restart of the host

(Cyclic transmission stop)

- 1) Turn Link stop (host) (SB0001) ON.
- 2) When the network module accepts a request, Cyclic transmission stop acknowledgment status (host) (SB004E) is turned ON.
- 3) When the cyclic transmission stop is completed, Cyclic transmission stop completion status (host) (SB004F) is turned ON.
- 4) If the cyclic transmission stop is completed abnormally, an error code will be stored in Data linking stop status (host) (SW004F).
- 5) Turn Link stop (host) (SB0001) OFF.

(Cyclic transmission restart)

- 6) Turn Link startup (host) (SB0000) ON.
- 7) When the network module accepts the request, Cyclic transmission start acknowledgment status (host) (SB004C) is turned ON.
- 8) When the cyclic transmission restart is completed, Cyclic transmission start completion status (host) (SB004D) is turned ON.
- 9) If the cyclic transmission restart is completed abnormally, an error code will be stored in Data linking start status (host) (SW004D).
- 10) Turn Link startup (host) (SB0000) OFF.

No.	Description	No.	Description
SB0000	Link startup (host)	—	
SB0001	Link stop (host)		
SB004C	Cyclic transmission start acknowledgment status (host)		
SB004D	Cyclic transmission start completion status (host)	SW004D	Data linking start status (host)
SB004E	Cyclic transmission stop acknowledgment status (host)	—	
SB004F	Cyclic transmission stop completion status (host)		

(2) Checking data link

The data link status is checked through the GX Developer network diagnostics, but it also can be checked with link special relay (SB) and link special register (SW). (Refer to Sections 8.1.1 and 8.1.2.)

(a) Check the data link status of other stations

- 1) Link scan time etc., can be checked in SW005A to SW005B and SW006B to SW006D.
- 2) If an error occurs to data link, either of the following link special relays (SB) will be turned ON.
  - Baton pass status of each station (SB0070)
  - Cyclic transmission status of each station (SB0074)
- 3) When Baton pass status of each station (SB0070) is turned ON, the station No. of a station where an error has occurred is stored in Baton pass status of each station (SW0070 to SW0073).  
When Cyclic transmission status of each station (SB0074) is turned ON, the station No. of a station where an error has occurred is stored in Cyclic transmission status of each station (SW0074 to SW0077).
- 4) The details of the cause of an error can be checked with the link special relay (SB) and link special register (SW) of the station No. for a station where the error has occurred. (Refer to (2)(b) in this Section)

No.	Description	No.	Description
—		SW005A	Maximum baton pass station
		SW005B	Maximum cyclic transmission station
		SW006B	Maximum link scan time
		SW006C	Minimum link scan time
		SW006D	Current link scan time
SB0070	Baton pass status of each station	SW0070 to SW0073	Baton pass status of each station
SB0074	Cyclic transmission status of each station	SW0074 to SW0077	Cyclic transmission status of each station

## (b) Checking data link status of the host

- 1) Link scan time etc., can be checked in SW005A to SW005B and SW006B to SW006D.
- 2) If an error occurs to data link, either of the following link special relays (SB) will be turned ON.
  - Baton pass status (host) (SB0047)
  - Host data link status (SB0049)
- 3) The cause of an error is stored in the following link special registers (SW).
  - Baton pass status (host) (SW0047)
  - Cause of baton pass interruption (SW0048)
  - Cause of data link stop (SW0049)

No.	Description	No.	Description
SB0047	Baton pass status (host)	SW0047	Baton pass status (host)
	—	SW0048	Cause of baton pass interruption
SB0049	Host data link status	SW0049	Cause of data link stop
		SW005A	Maximum baton pass station
		SW005B	Maximum cyclic transmission station
		SW006B	Maximum link scan time
		SW006C	Minimum link scan time
		SW006D	Current link scan time

(3) Checking transient transmission errors

Transient transmission errors are checked through the GX Developer network diagnostics, but they also can be checked with link special relays (SB) and link special registers (SW). (Refer to Section 8.1.4)

- 1) When a transient transmission error occurs, Transient error (SB00EE) is turned ON.
- 2) An error code is stored in Transient transmission error history (SW00F0 to SW00FF).
- 3) The number of transient transmission errors is stored in Transient transmission error (SW00EE).
- 4) An exact error code storage area in Transient transmission error history (SW00F0 to SW00FF) is stored in Transient transmission error pointer (SW00EF).
- 5) If Transient transmission error area setting (SB000B) is turned ON, the error code stored in Transient transmission error history (SW00F0 to SW00FF) is retained. (Not overwritten even if another error occurs.)
- 6) Turning ON Clear transient transmission errors (SB000A) will clear the following areas:
  - Transient transmission error (SW00EE)
  - Transient transmission error pointer (SW00EF)

No.	Description	No.	Description
SB000A	Clear transient transmission errors	—	
SB000B	Transient transmission error area setting		
SB00EE	Transient error	SW00EE	Transient transmission error
—		SW00EF	Transient transmission error pointer
		SW00F0 to SW00FF	Transient transmission error history

## (4) Checking cables for faults

The cable condition can be checked not only in the network diagnostics of GX Developer but also with link special relays (SB) and link special registers (SW). (Refer to Section 8.1.4.)

- 1) When a communication error occurs due to a cable fault, the error count is stored in any of the link special registers (SW) in the table below.
- 2) Turning ON Clear retry count (SB0005) will clear Number of retries (SW00C8 and SW00C9).  
Turning ON Clear communication error count (SB0006) will clear Communication errors (SW00B8 to SW00C7).  
Turning ON Clear forward loop transmission errors (SB0007) will clear Line error on the forward loop side (SW00CC).  
Turning ON Clear reverse loop transmission errors (SB0008) will clear Line error on the reverse loop side (SW00CD).

No.	Description	No.	Description
SB0005	Clear retry count	—	—
SB0006	Clear communication error count		
SB0007	Clear forward loop transmission errors		
SB0008	Clear reverse loop transmission errors		
—	—	SW00B8	UNDER on the forward loop side/coaxial bus UNDER
		SW00B9	CRC on the forward loop side/coaxial bus CRC
		SW00BA	OVER on the forward loop side/coaxial bus OVER
		SW00BB	Short frame on the forward loop side/coaxial bus short frame
		SW00BC	Abort on the forward loop side (AB, IF)/coaxial bus abort (AB, IF)
		SW00BD	Timeout on the forward loop side (TIME)/ coaxial bus timeout (TIME)
		SW00BE	Receiving 2k bytes or more on forward loop side (DATA)/coaxial bus receiving 2k bytes or more (DATA)
		SW00BF	DPLL error on the forward loop side/coaxial bus DPLL error
		SW00C0	UNDER on the reverse loop side
		SW00C1	CRC on the reverse loop side
		SW00C2	OVER on the reverse loop side
		SW00C3	Short frame on the reverse loop side
		SW00C4	Abort on the reverse side (AB, IF)
		SW00C5	Timeout on the reverse loop side (TIME)
		SW00C6	Receiving 2k bytes or more on reverse loop side (DATA)
		SW00C7	DPLL error on reverse loop side
SW00C8	Number of retries on the forward loop side/ coaxial bus retries error		
SW00C9	Number of retries on the reverse loop side		
SW00CC	Line error on the forward loop side		
SW00CD	Line error on the reverse loop side		

## (5) Checking the forward/reverse loop in the optical loop system

The forward/reverse loop in the optical loop system can be checked not only in the network diagnostics of GX Developer but also with link special relays (SB) and link special registers (SW). (Refer to Sections 8.1.1 and 8.1.2.)

## (a) Checking the forward/reverse loop of another station

- 1) When an error occurs on the forward or reverse loop, the following link special relay (SB) is turned ON.
  - Forward loop status (SB0091)
  - Forward loop status of remote master station (SB0092) (Except the remote master station)
  - Reverse loop status (SB0095)
  - Reverse loop status of remote master station (SB0096) (Except the remote master station)
- 2) The station where an error occurred can be identified with the following link special registers (SW).
  - Forward loop status of each station (SW0091 to SW0094)
  - Reverse loop status of each station (SW0095 to SW0098)
- 3) If loop switching occurs, the cause of the loop switching is stored in Loop switch data (SW00D0 to SW00DF).  
The position of the loop switch data storage can be checked with Loop switch data pointer (SW00CF).
- 4) Cable disconnection or station failure causes loopback.  
When loopback occurs, any of the following link special relays (SB) is turned ON.
  - Forward loop loopback (SB0099)
  - Reverse loop loopback (SB009A)
- 5) The station where loopback occurred can be identified with the following link special registers (SW).
  - Loopback station (forward loop side) (SW0099)
  - Loopback station (reverse loop side) (SW009A)
- 6) The forward/reverse loop condition of each station can be checked with Loop usage status of each station (SW009C to SW009F).
- 7) The count of loop switching can be checked with Number of loop switches (SW00CE).
- 8) Turning ON Clear loop switch count (SB0009) can clear SW00CE to SW00DF.

No.	Description	No.	Description
SB0009	Clear loop switch count		—
SB0091	Forward loop status	SW0091 to SW0094	Forward loop status of each station
SB0092	Forward loop status of remote master station		
SB0095	Reverse loop status	SW0095 to SW0098	Reverse loop status of each station
SB0096	Reverse loop status of remote master station		
SB0099	Forward loop loopback	SW0099	Loopback station forward loop side)
SB009A	Reverse loop loopback	SW009A	Loopback station (reverse loop side)
—	—	SW009C to SW009F	Loop usage status of each station
		SW00CE	Number of loop switches
		SW00CF	Loop switch data pointer
		SW00D0 to SW00DF	Loop switch data

## (b) Checking the forward/reverse loop of the host

- 1) When an error occurs on the forward or reverse loop, Host loop status (SB0090) turns ON.
- 2) If loopback occurs, the cause of the loopback is stored in Loop switch data (SW00D0 to SW00DF).  
The position of the loop switch data storage can be checked with Loop switch data pointer (SW00CF).
- 3) The loop status of the host can be checked with Loopback information (SW0090).
- 4) The count of loop switching can be checked with Number of loop switches (SW00CE).
- 5) Turning ON Clear loop switch count (SB0009) can clear SW00CE to SW00DF.

No.	Description	No.	Description
SB0009	Clear loop switch count	—	
SB0090	Host loop status	SW0090	Loopback information
—		SW00CE	Number of loop switches
		SW00CF	Loop switch data pointer
		SW00D0 to SW00DF	Loop switch data

**(6) Checking the offline test status**

The test status is checked through the LEDs on the network module, but it also can be checked with link special relays (SB) and link special registers (SW).  
(Refer to Section 4.7.)

**(a) Requesting side**

- 1) When the offline test is instructed, Offline test instruction (SB00AC) is turned ON.  
An offline test item and a faulty station number are stored in Offline test execution item/faulty station (requesting side) (SW00AC).
- 2) Upon completion of the offline test, Offline test completion (SB00AD) is turned ON.  
The offline test result is stored in Offline test result (requesting side) (SW00AD).

No.	Description	No.	Description
SB00AC	Offline test instruction	SW00AC	Offline test execution item/faulty station (requesting side)
SB00AD	Offline test completion	SW00AD	Offline test result (requesting side)

**(b) Responding side(the forward/reverse loop test only)**

- 1) When a response is made to an offline test request from the requesting side, Offline test response (SB00AE) is turned ON.  
An offline test item is stored in Offline test execution item (responding side) (SW00AE).
- 2) Upon completion of the offline test, Offline test response completion (SB00AF) is turned ON.  
The offline test result is stored in Offline test result (responding side) (SW00AF).

No.	Description	No.	Description
SB00AE	Offline test response	SW00AE	Offline testing Execution item (Response side)
SB00AF	Offline test response completion	SW00AF	Offline testing results (Response side)

## (7) Checking the online test status

The test status is checked through LED of the network module main frame, but it also can be checked with link special relay (SB) and link special register (SW).  
(Refer to Section 4.10.)

## (a) Requesting side

- 1) When the online test is instructed, Online test instruction (SB00A8) is turned ON.  
An online test item and a faulty station number are stored in Online test execution item/faulty station (requesting side) (SW00A8).
- 2) Upon completion of the online test, Online test completion (SB00A9) is turned ON.  
The online test result is stored in Online test result (requesting side) (SW00A9).

No.	Description	No.	Description
SB00A8	Online test instruction	SW00A8	Online test execution item/faulty station (requesting side)
SB00A9	Online test completion	SW00A9	Online test result (requesting side)

## (b) Responding side

- 1) When a response is made to an online test request from the requesting side, Online test response (SB00AA) is turned ON.  
An online test item is stored in Online test execution item (responding side) (SW00AA).
- 2) Upon completion of the online test, Online test response completion (SB00AB) is turned ON.  
The online test result is stored in Online test result (responding side) (SW00AB).

No.	Description	No.	Description
SB00AA	Online test response instruction	SW00AA	Online test execution item (responding side)
SB00AB	Online test response completion	SW00AB	Online test result responding side)

**(8) Checking parameter status**

The reflection status and setting contents of parameters can be checked with link special relay (SB) and link special register (SW).

**(a) Checking parameter status of other stations**

- 1) Check the following link special relay (SB) and link special register (SW) with the remote master station.
  - When receiving parameters is completed, Parameter communication status of each station (SB0078) is turned OFF.
  - Stations that are still communicating parameters can be checked with Parameter communication status of each station (SW0078 to SW007B).
- 2) Check the following link special relay (SB) and link special register (SW) with the remote master station.
  - When parameters have an error, Parameter status of each station (SB007C) is turned ON.
  - The station No. of the faulty station is stored in Parameter error status of each station (SW007C to SW007F).
- 3) Details of the parameters for each station can be checked with the link special relay (SB) and link special register (SW) of each station. (Refer to (8)(b) in this Section)

No.	Description	No.	Description
SB0078	Parameter communication status of each station	SW0078 to SW007B	Parameter communication status of each station
SB007C	Parameter status of each station	SW007C to SW007F	Parameter error status of each station

## (b) Checking the parameter status of the host (including the switch setting on the network module)

- 1) Upon completion of receiving parameters, Parameter receive status (SB0054) is turned OFF.
- 2) If any error is found in the parameters, the following link special relays (SB) are turned ON.
  - Setting information (host) (SB0045)
  - Received parameter error (SB0055)
- 3) An error code is stored in Parameter setting status (SW0055).
- 4) If the host is a remote I/O station, the presence of intelligent function parameters can be checked by Parameter information (SW0054).

No.	Description	No.	Description
SB0045	Setting information (host)		—
SB0054	Parameter receive status	SW0054	Parameter information
SB0055	Received parameter error	SW0055	Parameter setting status

- 5) When the parameters are reflected in the network module, contents of parameters are stored in the following link special relay (SB) and link special register (SW).

No.	Description	No.	Description
SB0040	Network type (host)	SW0040	Network No.
	—	SW0042	Station No.
SB0043	Online switch (host)	SW0043	Mode status
SB0044	Station setting (host)	SW0044	Station setting
SB0046	Data link operation designation result (host)	SW0046	Module type
SB0048	Remote master station status (host)		—
SB0056	Communication status	SW0056	Current remote master station
	—	SW0057	Designated remote master station
SB0058	Operation designation at fault of (multiplexed remote master station)		—
	—	SW0059	Total number of link stations
SB005B	END asynchronous settings		—
SB0064	Reserved station designation	SW0064 to SW0067	Reserved station designation
SB0068	Communication mode	SW0068	Communication mode
SB0069	Multiplex transmission designation		—
SB006B	Multiplex remote function designation		—

## (9) Checking the remote master station's CPU module and remote I/O station statuses (Error detection of remote I/O stations)

The status check can be performed not only with the network diagnostics in GX Developer but also with link special relays (SB) and link special registers (SW). (Refer to Sections 8.1.2 and 8.1.3.)

## (a) Checking the remote I/O station status (Error detection of remote I/O stations)

- 1) Baton pass status of each station (SB0070) turns ON when the power is turned OFF or watchdog timer error is occurred on a remote I/O station.

The station No. of the station where the power is turned OFF or watchdog timer error is occurring is stored in baton pass status of each station (SB0070 to SW0073).

- 2) When a stop error occurs on a remote I/O station, CPU operation status of each station (1) (SB0080) is turned ON.

The station No. of the station where a stop error is occurring is stored in CPU operation status of each station (1) (SW0080 to SW0083).

- 3) When a continuation error occurs on a I/O station, CPU operation status of each station (2) (SB0088) is turned ON.

The station No. of the station where a continuation error is occurring is stored in CPU operation status of each station (2) (SW0088 to SW008B).

- 4) Turning ON Clear minor errors (SB000F) clears continuation errors occurred on remote I/O stations.

No.	Description	No.	Description	Description of the errors detectable on remote I/O stations
SB000F	Clear minor errors		—	—
SB0070	Baton pass status of each station	SW0070 to SW0073	Baton pass status of each station	Powering OFF (disconnection) Watchdog timer error
SB0080	CPU operation status of each station (1)	SW0080 to SW0083	CPU operation status of each station (1)	Stop error
SB0088	CPU operation status of each station (2)	SW0088 to SW008B	CPU operation status of each station (2)	Continuation error

**POINT**

Use link special relays (SB) for detection of errors of overall network, and link special registers (SW) for detection of errors of a specific station.

## (b) Checking the remote master station's CPU module status

- 1) Whether the CPU module is in the RUN or STOP status can be checked in CPU RUN status of the remote master station (SB0085). (SB0086 for the multiplexed remote sub-master station)
- 2) When a continuation error occurs with the CPU module, Host CPU status (1) (SB004A) is turned ON.
- 3) When a stop error occurs with the CPU module, Host CPU status (2) (SB004B) is turned ON.
- 4) The CPU module status can be checked with Host CPU status (SW004B).

No.	Description	No.	Description
SB004A	Host CPU status (1)	—	
SB004B	Host CPU status (2)	SW004B	Host CPU status
SB0085	CPU RUN status of the remote master station	—	
SB0086	Remote sub-master station CPU RUN status	—	

## (10) Checking the multiplex transmission status

The multiplex transmission status is checked through the GX Developer network diagnostics, but it also can be checked with link special relay (SB) and link special register (SW). (Refer to Section 8.1.3.)

- 1) If the "With multiplex transmission" box is checked in the supplementary settings of common parameters, Multiplex transmission designation (SB0069) is turned ON.
- 2) An execution of the multiplex transmission function turns ON Multiplex transmission status (SB006A).
- 3) Data showing the forward and reverse loop states during multiplex transmission are stored in the following link special registers (SW).
  - Multiplex transmission status (1) (SW00B0 to SW00B3)
  - Multiplex transmission status (2) (SW00B4 to SW00B7)

No.	Description	No.	Description
SB0069	Multiplex transmission designation	—	
SB006A	Multiplex transmission status	SW00B0 to SW00B3	Multiplex transmission status (1)
		SW00B4 to SW00B7	Multiplex transmission status (2)

(11) Operation status check and operation switching of the multiplexed remote master function

The operation of the multiplexed remote master function can be checked or switched with link special relays (SB) and link special registers (SW).

(a) Checking the operation status of the multiplexed remote master station

- 1) If an error occurs in data link, any of the following link special relays (SB) is turned ON.
  - Baton pass status of the remote master station (SB0071)
  - Remote sub-master station transient transmission status (SB0072)
  - Cyclic transmission status of the remote master station (SB0075)
  - Remote sub-master station cyclic transmission status (SB0076)
- 2) The type of the station that is controlling the cyclic transmission (remote master or remote sub-master station) can be checked in Remote master station cyclic transmission control status (SB0077).

No.	Description	No.	Description
SB0071	Baton pass status of the remote master station	—	
SB0072	Remote sub-master station transient transmission status		
SB0075	Cyclic transmission status of the remote master station		
SB0076	Remote sub-master station cyclic transmission status		
SB0077	Remote master station cyclic transmission control status		

(b) Operation switching of the multiplexed remote master station

- 1) When Remote sub-master station switching command (SB0014) is turned ON, the remote sub-master station running as a master is forced to operate as a sub-master station.
- 2) When the remote sub-master station running as a master accepts the switching, Remote sub-master station switching acceptance status (SB01C4) is turned ON.
- 3) Upon completion of switching from master operation to sub-master operation, Remote sub-master station switching status (SB01C5) is turned ON.
- 4) If the switching fails, an error code is stored in Remote sub-master station switching result (SW01C4).

No.	Description	No.	Description
SB0014	Remote sub-master station switching command	SW01C4	Remote sub-master station switching result
SB01C4	Remote sub-master station switching acceptance status		
SB01C5	Remote sub-master station switching status		

## (c) Checking device ranges of the multiplexed remote master and sub-master stations

- 1) When Send LY/Receive LX device numbers of the multiplexed remote master and sub-master stations (SW01C8 to SW01CF) become valid, Send/receive device number valid/invalid status (SB01C8) is turned ON.
- 2) The send/receive device numbers of the multiplexed remote master and sub-master stations can be checked in SW01C8 to SW01CF.

No.	Description	No.	Description
SB01C8	Send/receive device number valid/invalid status	SW01C8	Send LY device number
		SW01C9	Receive LX device number
		SW01CC	Send LB device number
		SW01CD	Receive LB device number
		SW01CE	Send LW device number
		SW01CF	Receive LW device number

## (12) Checking the redundant multiplexed remote master function support and setting

With link special relays (SB) and link special registers (SW), whether the multiplexed remote master function is supported can be checked and relevant settings can be configured.

- 1) When the network module supports the redundant multiplexed remote I/O networks, Host station's redundant function support information (SB0041) is turned ON.
- 2) To set the time taken from detection of a data link stop until system switching is requested in the redundant system, set a time value in System switching monitoring time setting (SW0018).
- 3) If System switching monitoring time setting valid flag (SB0018) is turned ON, System switching monitoring time setting (SW0018) is enabled.

No.	Description	No.	Description
SB0018	System switching monitoring time setting valid flag	SW0018	System switching monitoring time setting
SB0041	Host station's redundant function support information		—

(13) Setting a link dedicated instruction and checking the processing result

With link special relays (SB) and link special registers (SW), link dedicated instructions can be set and the processing results can be checked.

- 1) Link dedicated instructions can be set with the following link special registers (SW).
  - Number of retries (SW001C)
  - Retry interval (SW001D)
  - Number of gates (SW001E)
- 2) Processing results of the send/receive instructions are stored in the following link special registers (SW).
  - Send/receive instruction (1) processing result (SW0031)
  - Send/receive instruction (2) processing result (SW0033)
  - Send/receive instruction (3) processing result (SW0035)
  - Send/receive instruction (4) processing result (SW0037)
  - Send/receive instruction (5) processing result (SW0039)
  - Send/receive instruction (6) processing result (SW003B)
  - Send/receive instruction (7) processing result (SW003D)
  - Send/receive instruction (8) processing result (SW003F)

No.	Description	No.	Description
—		SW001C	Number of retries
		SW001D	Retry interval
		SW001E	Number of gates
		SW0031	Send/receive instruction (1) processing result
		SW0033	Send/receive instruction (2) processing result
		SW0035	Send/receive instruction (3) processing result
		SW0037	Send/receive instruction (4) processing result
		SW0039	Send/receive instruction (5) processing result
		SW003B	Send/receive instruction (6) processing result
		SW003D	Send/receive instruction (7) processing result
		SW003F	Send/receive instruction (8) processing result

**(14) Checking the network module status**

The network module status is checked through the network diagnostics, but it also can be checked with link special relay (SB) and link special register (SW). (Refer to Section 8.1)

**(a) Checking the error details**

- 1) When an error occurs to the network module, Module status (SB0020) is turned ON.
- 2) An error code is stored in Module status (SW0020).

No.	Description	No.	Description
SB0020	Module status	SW0020	Module status

**(b) Checking the external power supply status**

Whether external power is supplied to the host station or not can be checked with Power supply status of host (SB0042).

External power supply to other stations can be checked with Power supply status of each station (SW008C to SW008F).

No.	Description	No.	Description
SB0042	Power supply status of host	SW008C to SW008F	Power Supply Status of Each Station

## 7 APPLICATION FUNCTIONS

When applying the program examples introduced in this chapter to the actual system, make sure to examine the applicability and confirm that it will not cause system control problems.


Chapter 3

Basic functions	Cyclic transmission function (Periodic communication)	Communicating with I/O module . . . . .	Section 3.2.1 (1)
		Communicating with intelligent function module . . . . .	Section 3.2.1 (2)
	RAS functions	Output reset function for communication errors . . . . .	Section 3.2.2 (1)
		Hardware error time CPU operation mode setting . . . . .	Section 3.2.2 (2)
		Automatic return function . . . . .	Section 3.2.2 (3)
		Loop back function (Optical loop system) . . . . .	Section 3.2.2 (4)
		Station detach function (Coaxial bus systems) . . . . .	Section 3.2.2 (5)
		Transient transmission enabled even at CPU module error . . . . .	Section 3.2.2 (6)
		Checking the transient transmission abnormal direction time . . . . .	Section 3.2.2 (7)
		Diagnostic functions . . . . .	Section 3.2.2 (8)
		Redundant power supply on a remote I/O station . . . . .	Section 3.2.2 (9)
		Online module change on a remote I/O station . . . . .	Section 3.2.2 (10)

Chapter 7

Application functions	Transient transmission function (Non-periodic communication)	Link dedicated instruction	Reading/writing remote I/O station intelligent function module buffer memory (REMPFR/REMT0) . . . . .	Section 7.1.1 (1)
		Remote I/O station system monitor . . . . .		Section 7.2
		Device test for remote I/O station . . . . .		Section 7.3
		Multiplex transmission function (Optical loop system) . . . . .		Section 7.4
		Return sequence station number setting function . . . . .		Section 7.5
		Reserved station function . . . . .		Section 7.6
		Interrupt settings . . . . .		Section 7.7
		I/O assignment function . . . . .		Section 7.8
		Stopping/restarting the cyclic transmission and stopping link refreshing (Network test) . . . . .		Section 7.9
		Multiplexed remote master function (Process PU) . . . . .		Section 7.10
		Multiplexed remote master function for redundant system (Redundant CPU) . . . . .		Section 7.11
		Remote password . . . . .		Section 7.12
	Network diagnostics (Network monitor) . . . . .		Section 8.1	

\*:In the application functions, there are executable functions that can be used by setting the parameters to either the remote master station or remote I/O station. It is possible to confirm whether the parameters are set to either the remote master station or remote I/O station by using the table on the heading for each function.

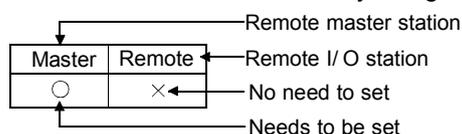


7.1 Transient Transmission Function (Non-Periodical Communication)

The transient transmission function performs data communication only when it is requested between stations.

The transient transmission function can be requested with the link dedicated instructions (REMFR, REMTO, READ and WRITE) GX Developer, the intelligent function module, etc.


In the MELSECNET/H, data communication can be performed with other stations having the same network number (the same network as where the host is connected), as well as with stations having other network numbers.

- 1) Transient transmission function to a station on the same network

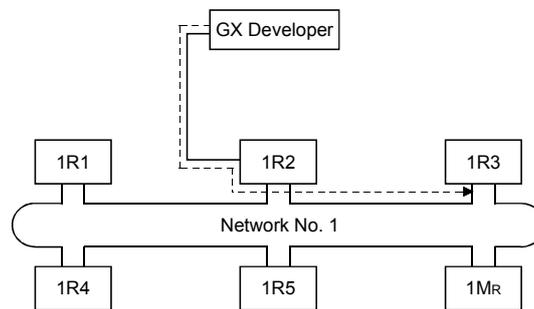

- 2) Transient transmission to stations on other networks (routing function)  
In this case, the routing parameters must be set for the request source and relay stations.

When the source of the request is a remote I/O station, there is no need to set the "routing parameters" in the remote I/O station of the request source.

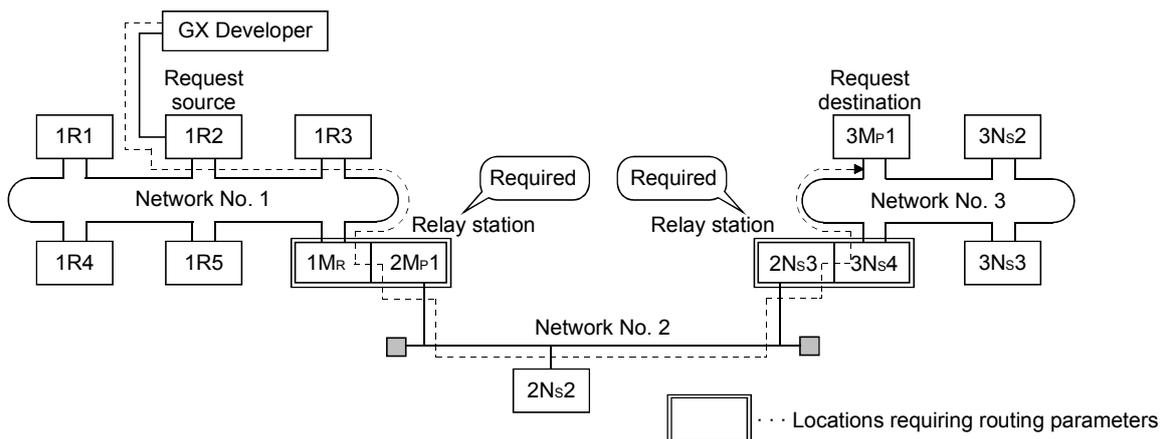

**POINT**  
A remote I/O station can only become a request source and request destination.  
Do not set the relay station.

For details about routing, refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).

7.1.1 Link dedicated instruction

(1) Reading/writing remote I/O station intelligent function module buffer memory (Z(P).REMFR/ Z(P).REMTO)

This section describes the REMFR/REMTO instruction format.

For a program example using the REMFR/REMTO instruction, refer to Section 6.4.2.


The REMFR instruction reads the data from the buffer memory of the intelligent function module mounted to the remote I/O station.

The REMTO instruction writes the data to the intelligent function module buffer memory mounted to the remote I/O station.

POINT
(1) The B/W for the handshake that is required when writing the remote I/O station intelligent function module buffer memory in a MELSECNET/10 network is not needed with REMFR/REMTO instructions. However, they have to be set if input/output X/Y is to operate as a system.
(2) Link dedicated instructions including REMFR/REMTO cannot use the CPU module local device and "use same file as program" as selected file register.
(3) Turn off the executing link instruction after the completion device turns on.

(a) Instruction format

1) Z(P).REMFR (Network No. designation)

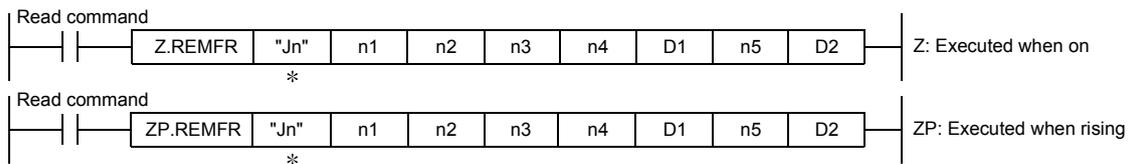

\* : If the originating station is a Universal model QCPU, ""(double quotation) for the first argument can be omitted.


	Description of setting	Setting range
Jn	Target network No.	1 to 239
(n1)	Channel number	1 to 8 Word device * <sup>2</sup>
(n2)	Target number	1 to 64 Word device * <sup>2</sup>
(n3)	Start address input/output number for target intelligent function module The upper 3 digits of the 4-digit expression designates the first address input/output number for the intelligent function module mounted to the remote I/O station that is to be the target.	0 to FE <sub>H</sub> Word device * <sup>2</sup>
(n4)	Read buffer memory start address Designates the start address of the buffer memory for the read destination intelligent function module.	Constant (K,H) Word device * <sup>2</sup>
(D1)	Read data storage start address device (Host) Designates the host start address device for storing the read data.	Word device * <sup>2</sup>
(n5)	Number of read data points (word units)	1 to 960 Word device * <sup>2</sup>
(D2)	Read completion device (Host) Designates the host device to be set to 1 scan on by the read completion. (D2) ····· OFF: Not completed ON: Completed (D2) + 1 ··· OFF: Normal ON: Abnormal	Bit device * <sup>1</sup> Word device bit designation * <sup>3</sup>

\*1: Bit device ····· X, Y, M, L, F, V, B

\*2: Word device ····· T,C, D, W, ST, R, ZR

\*3: Word device bit designation ··· Word device.bit number

2) Z(P).REMTO  
(Network No. designation)

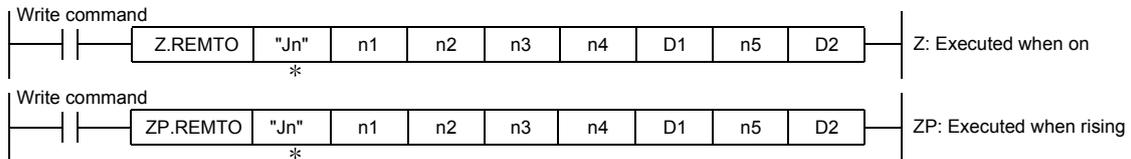

\* : If the originating station is a Universal model QCPU, ""(double quotation) for the first argument can be omitted.

	Description of setting	Setting range
Jn	Target network No.	1 to 239
(n1)	Channel number	1 to 8 Word device * <sup>2</sup>
(n2)	Target number	1 to 64 Word device * <sup>2</sup>
(n3)	Start address input/output number for target intelligent function module The upper 3 digits of the 4-digit expression designates the start address input/output number for the intelligent function module mounted to the remote I/O station that is to be the target.	0 to FE <sub>H</sub> Word device * <sup>2</sup>
(n4)	Write buffer memory start address Designates the start address of the buffer memory for the write destination intelligent function module.	Constant (K,H) Word device * <sup>2</sup>
(D1)	Write data storage start address device (Host) Designates the host start address device for storing the written data.	Word device * <sup>2</sup>
(n5)	Number of write data points (word modules)	1 to 960 Word device * <sup>2</sup>
(D2)	Write completion device (Host) Designates the host device to be set to 1 scan on by the write completion. (D2) ····· OFF: Not completed ON: Completed (D2) + 1 ··· OFF: Normal ON: Abnormal	Bit device * <sup>1</sup> Word device bit designation * <sup>3</sup>


\*1: Bit device ····· X, Y, M, L, F, V, B


\*2: Word device ····· T,C, D, W, ST, R, ZR

\*3: Word device bit designation ··· Word device.bit number


(b) Instruction execution timing


1) Normal completion  
(REMFR instruction)

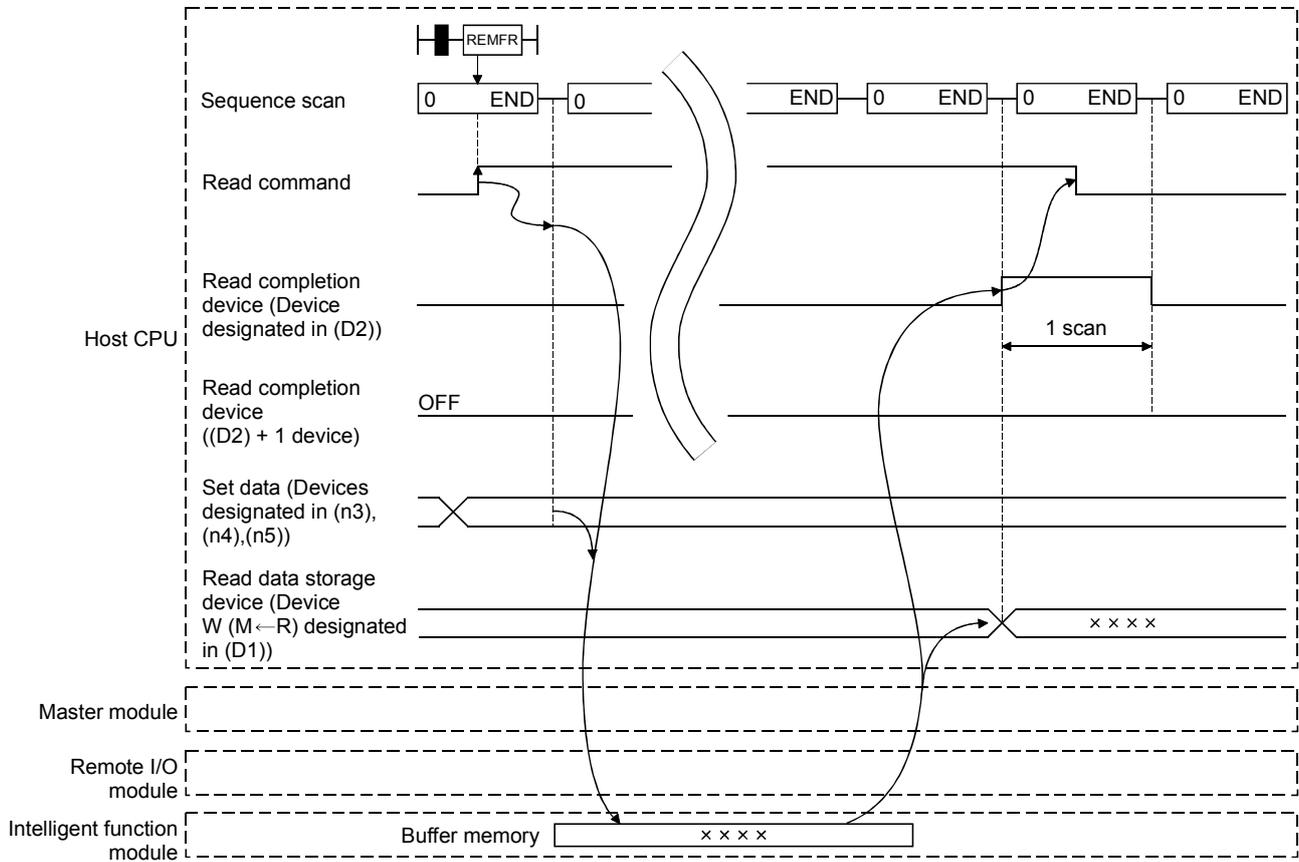

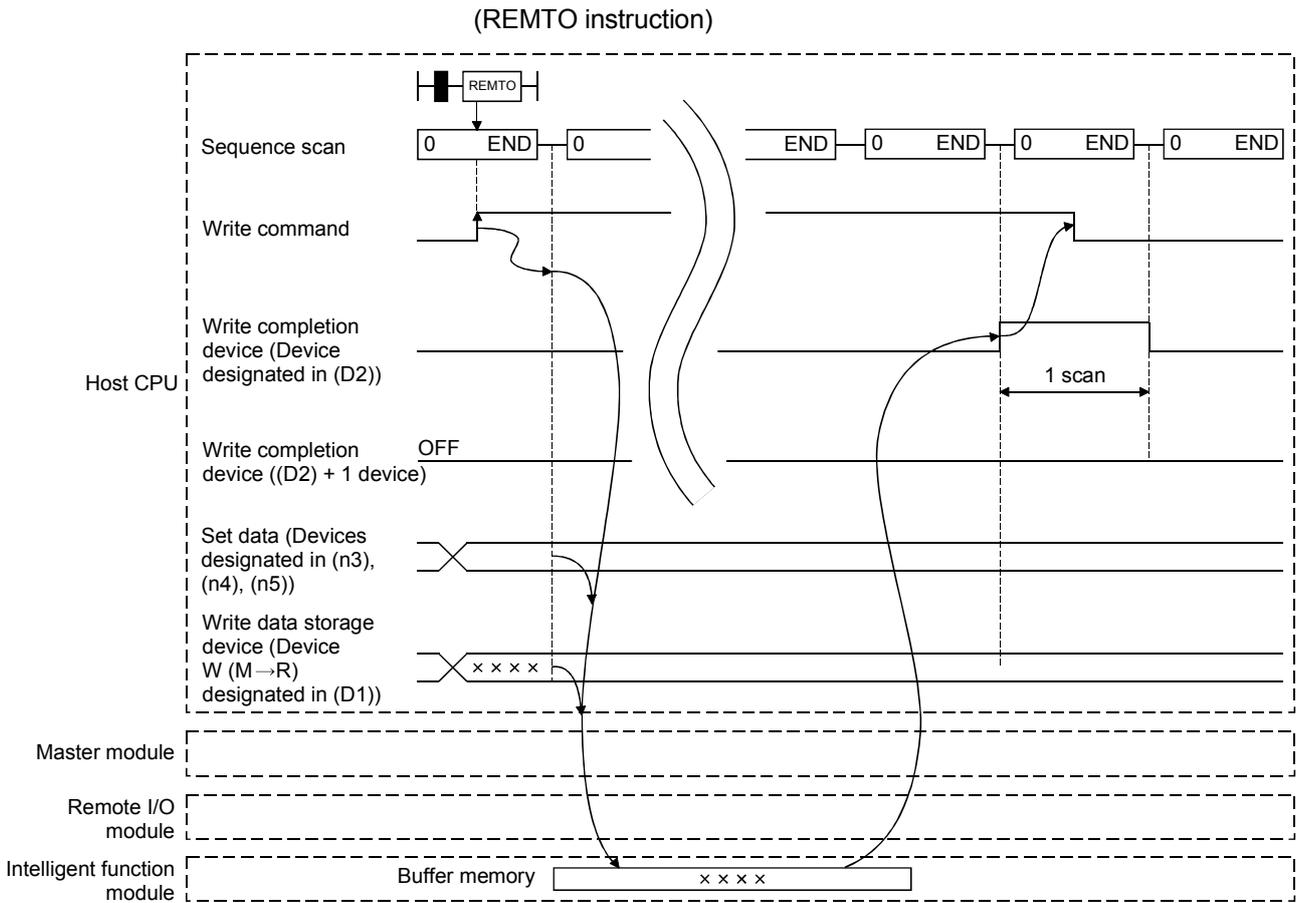

2) Abnormal completion  
(REMFR instruction)

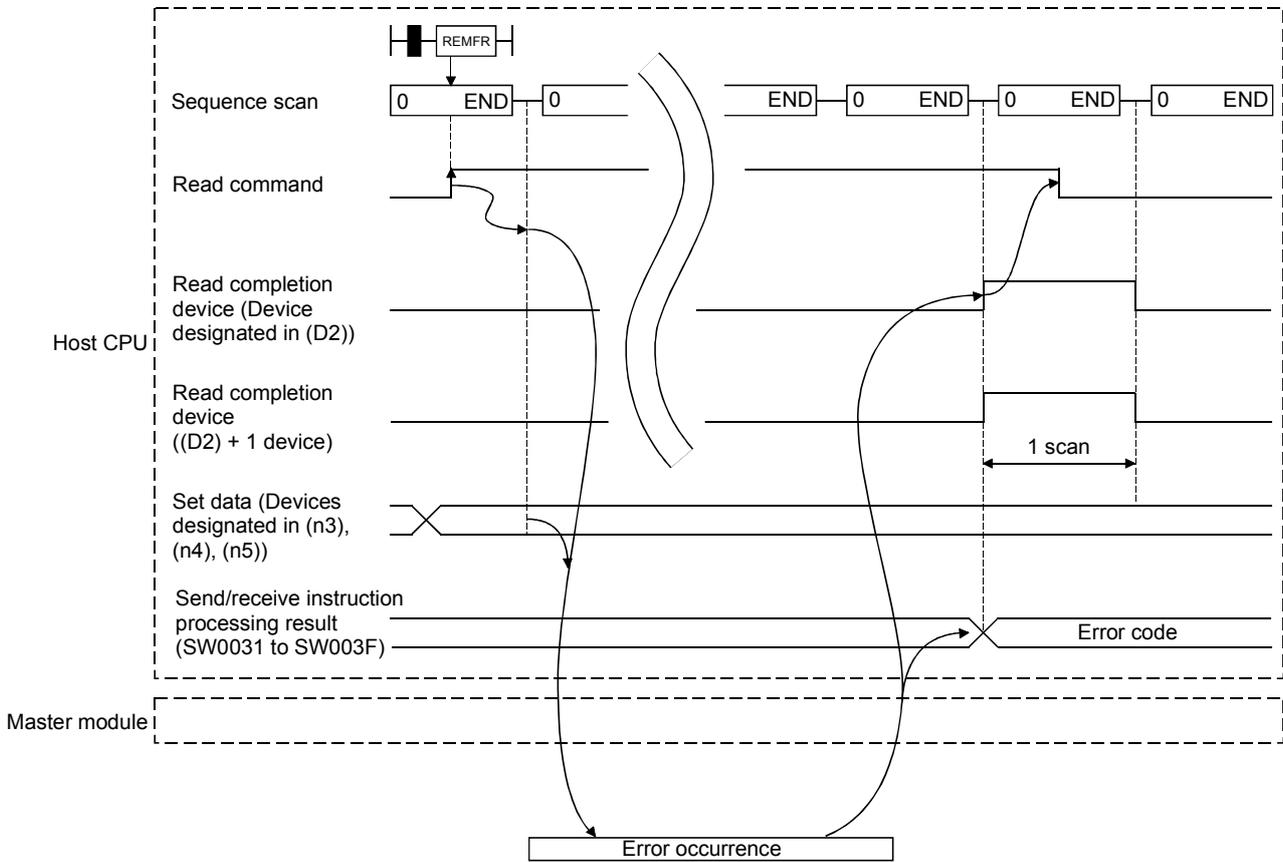

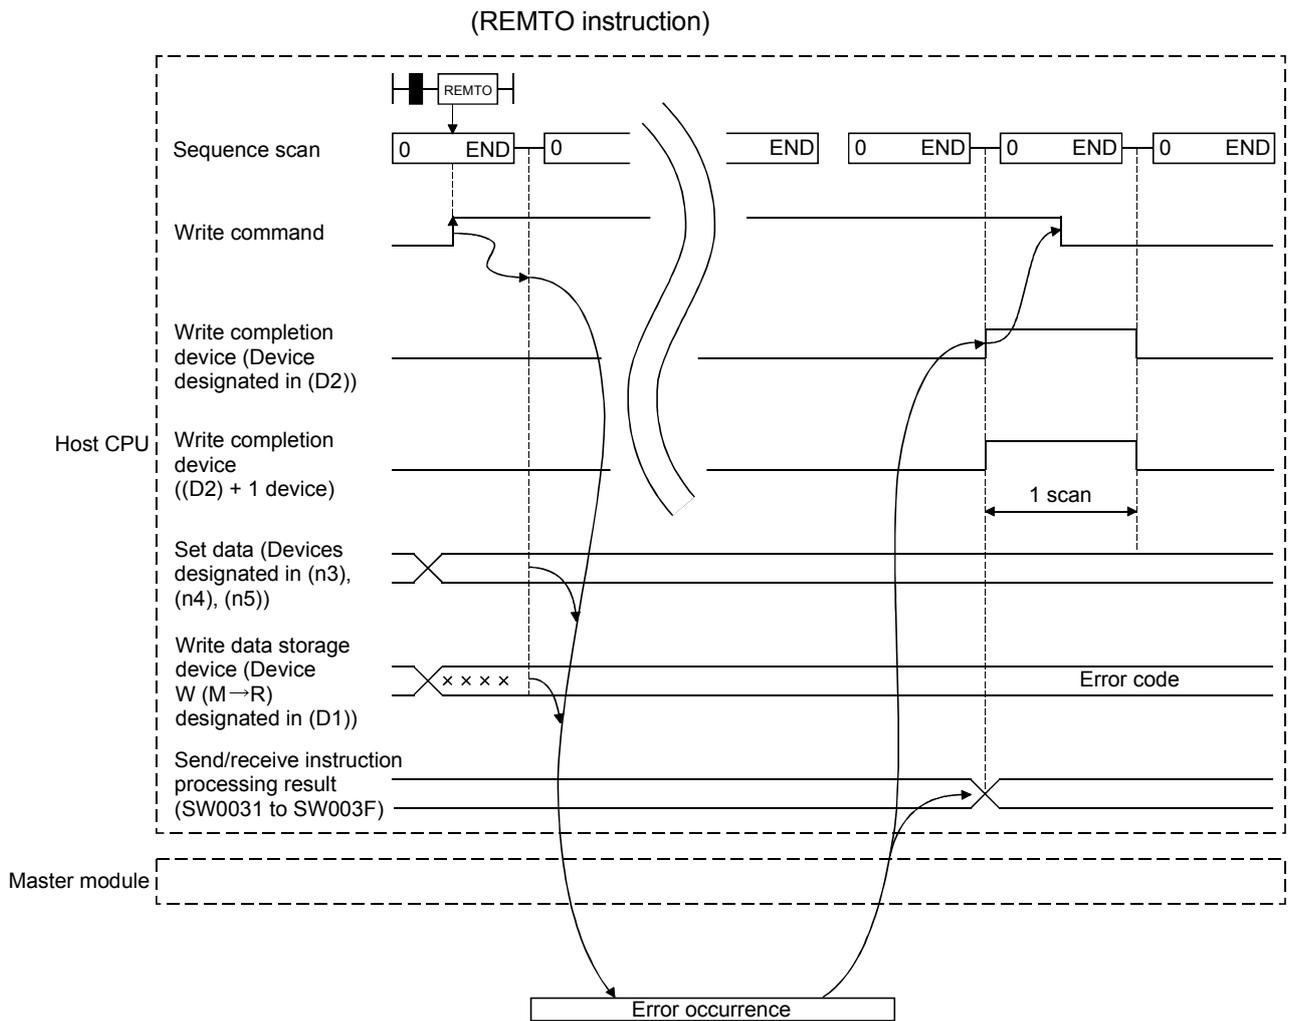


## 7.2 Remote I/O Station System Monitor

It is possible to Remote I/O network can monitor the intelligent function module mounted to the remote I/O station system using GX Developer.


By using this, it is possible to easily diagnose the intelligent function module on the remote I/O station. For details on operating the system monitor, please refer to the operating manual for the GX Developer.

There are 3 methods for performing system monitoring.

- (1) Connecting the GX Developer directly to the remote I/O module  
Select "Remote I/O" in connection destination PLC type for the GX Developer.

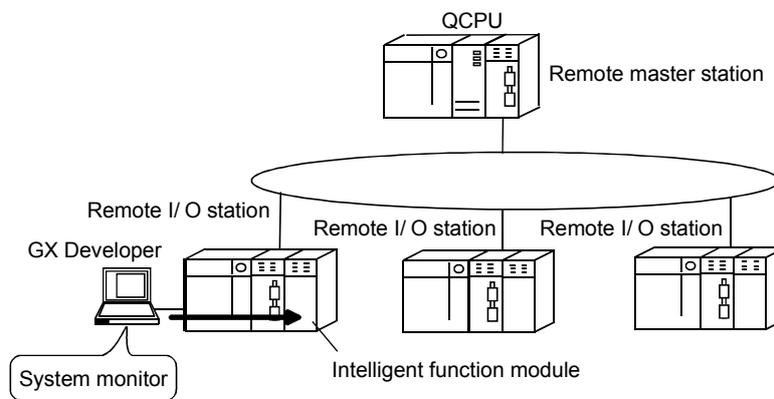

- (2) Connect the GX Developer to the CPU module and perform monitoring via remote master station.  
Select "Remote I/O" in connection destination PLC type for the GX Developer and specify the remote I/O station to be the target in the "Transfer setup" of the "online" menu.

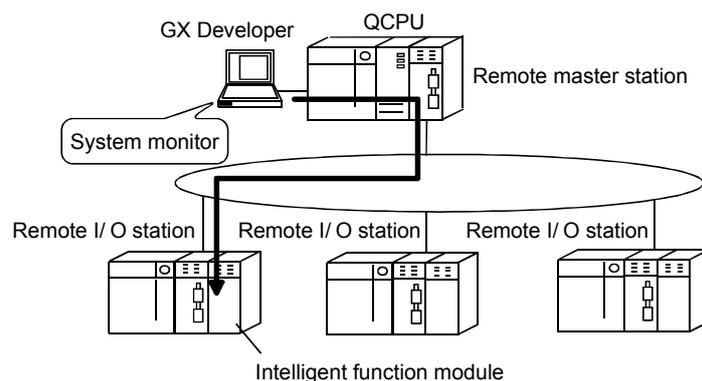

- (3) Connect the GX Developer to a another remote I/O module and monitor via the remote I/O network  
Select "Remote I/O" in connection destination PLC type for the GX Developer and specify the remote I/O station to be the target in the transfer setup of the online menu.

7.3 Device Test for Remote I/O Station

The remote I/O network can use operations of GX Developer connected to the remote I/O station to test the input/output devices of the sequence program without affecting the online system.

To conduct a test without affecting the system, register the device to be tested in "Forced input output registration/cancellation" in "debug" in the online menu. For details about operating the GX Developer, refer to the operating manual for GX Developer.

The test is performed on the following items.


- (1) Stops the Y output from the remote master station to the remote I/O station.

Even when the Y output is set to ON on the sequence program, it is not output from the remote I/O station, allowing output testing of the sequence program to be tested safely. Moreover, if the GX Developer is connected directly to the remote I/O module, forced output from the GX Developer to the remote I/O module can be performed.

At this time, the X input from the remote I/O station is input to the remote master station.

Common parameters


StationNo.	M station -> R station						M station <- R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	16	1020	102F	16	0020	002F	32	1000	101F	32	0000	001F
2	16	1120	112F	16	0020	002F	32	1100	111F	32	0000	001F

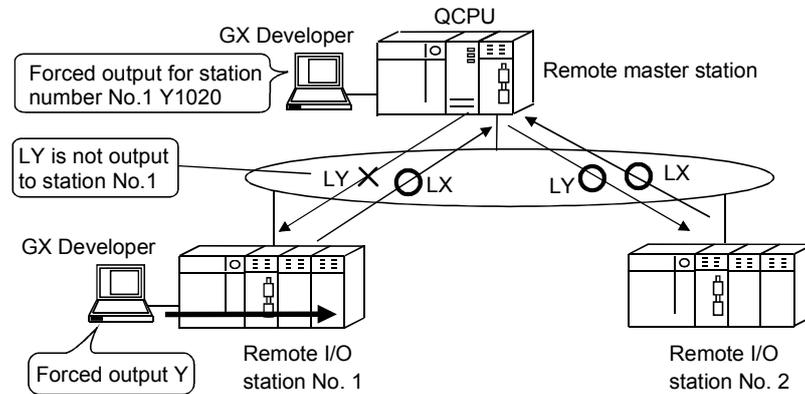

- (2) The remote I/O module stops the X input from the input module  
 At this time, the remote I/O station is performing X/Y communication with the remote master station. The remote master station uses the GX Developer which is connected directly to the remote I/O module to perform make an X input from the GX Developer to the remote I/O station and perform an X input test.

Common parameters

StationNo.	M station → R station						M station ← R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	16	1020	102F	16	0020	002F	32	1000	101F	32	0000	001F
2	16	1120	112F	16	0020	002F	32	1100	111F	32	0000	001F

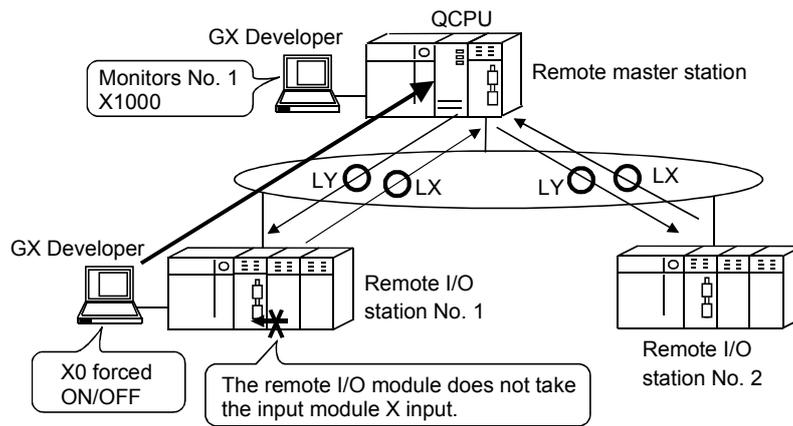

**POINT**


- (1) Always cancel the registration of the forced input/output after the device test has been completed.  
 The REM.LEDs on the remote I/O module for "in device testing" will flash. Once the device testing has been completed, it is possible to check that the REM.LEDs have stopped flashing.  
 If the device test is not cancelled, the remote I/O network could malfunction.
- (2) After the device has been cancelled, the module operates with data remaining from the device test.
  - When the Y output is on with the GX Developer and the device test is cancelled, operation is performed in the Y output on status.
  - When the X input is on with the GX Developer and the device test is cancelled, operation is performed in the X input on status.

7.4 Multiplex Transmission Function (Optical Loop System)


Master	Remote
○	×

The multiplex transmission function allows high-speed communications using duplex transmission paths (both the forward and reverse loops) in the optical loop system. In order to execute the multiplex transmission function, setting for the "Supplementary settings" of the common parameters is required. Note that this setting is not allowed unless the total number of link stations is four stations or more.

- (1) Using the multiplex transmission function, the high-speed communication is performed using both the forward and reverse loops effectively.

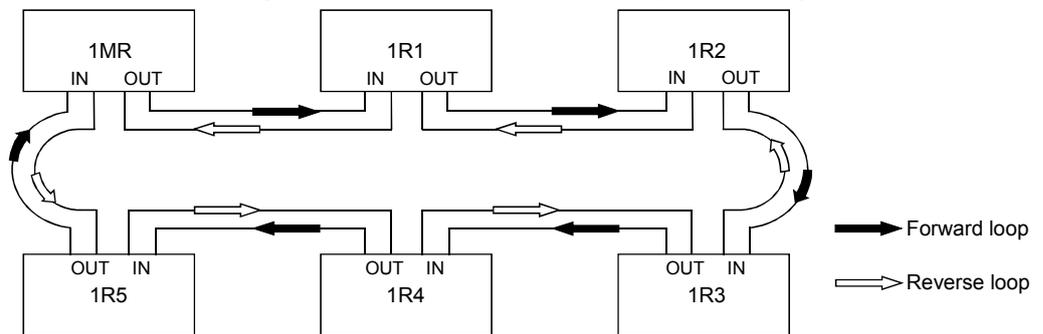

- (2) If an error occurs in the transmission path while the multiplex transmission function is used, data linking continues by communicating only using the transmission path on one side of either the forward or reverse loop, or by switching to the communication using loopback. The transmission speed in this case is 10 Mbps/25Mbps.

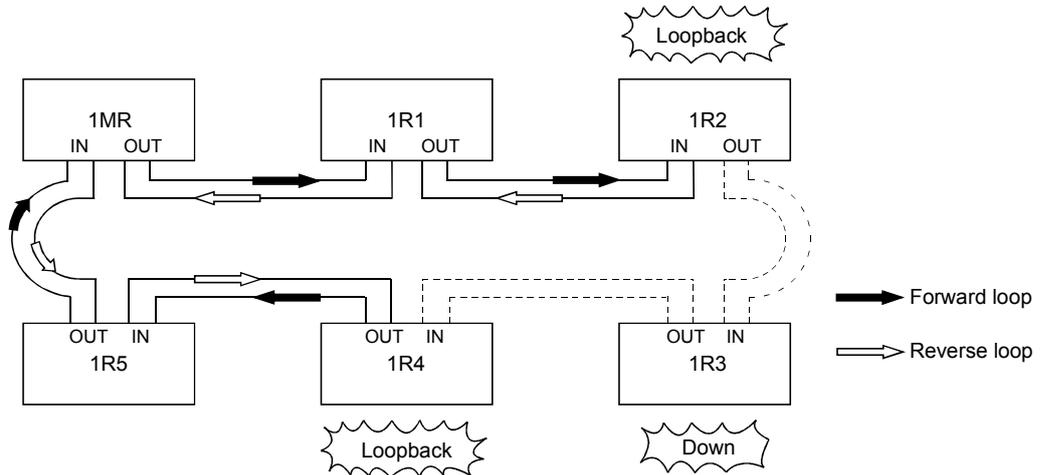

**REMARKS**

The multiplex transmission function is effective only in reducing the link scan time when the number of connected stations is 16 or more and the link devices assigned with common parameters is 2,048 bytes or more. The link scan time will be 1.1 to 1.3 times faster compared to when the multiplex transmission function is not used. If the multiplex transmission function is used in the configuration where the number of connected stations or the assigned link devices is less than the above, the link scan time may be increased compared to the case where the function is not used.

### 7.5 Return Sequence Station Number Setting Function

Master	Remote
○	×

The remote I/O net can set the number of stations for which stations with communication errors during one link scan can perform return sequence. If the number of stations set is large, a large number of communication stations with errors can perform return sequence. However, link scan during return sequence will take longer than a normal link scan so care must be taken to lengthen the link scan to match if the setting for return sequence is increased.

(Normally there is no problem using the default settings.)

The maximum number of return sequence stations is set in the supplementary settings for the common parameters.

Setting range is 1 to 64 stations.

The default is set to 2 stations.

### 7.6 Reserved Station Function

Master	Remote
○	×

The reserved station designation is a function that handles stations to be connected in the future as stations with communication errors. (These stations are not actually connected, but they are included in the total number of stations (remote) in the network.)

Since reserved stations do not affect scan time, full performance can be realized even when they remain reserved.

Reserved stations are set in the common parameters.

7.7 Interrupt Settings


Master	Remote
○	×

The remote master station uses the host interrupt setting parameters to check interrupt conditions at the time data is being received from the remote I/O station. When the interrupt conditions are matched, it issues an interrupt request to CPU module from the master module and starts the interrupt sequence program of the CPU module. Up to 16 interrupt conditions can be set per master module.

[Advantages]

- 1) The startup of the interrupt sequence program of the applicable station can be instructed from remote I/O stations.
- 2) The number of programming steps is reduced and the scan time is shortened because the programming for the startup conditions is not required in the sequence program.

[Visual representation of the function]

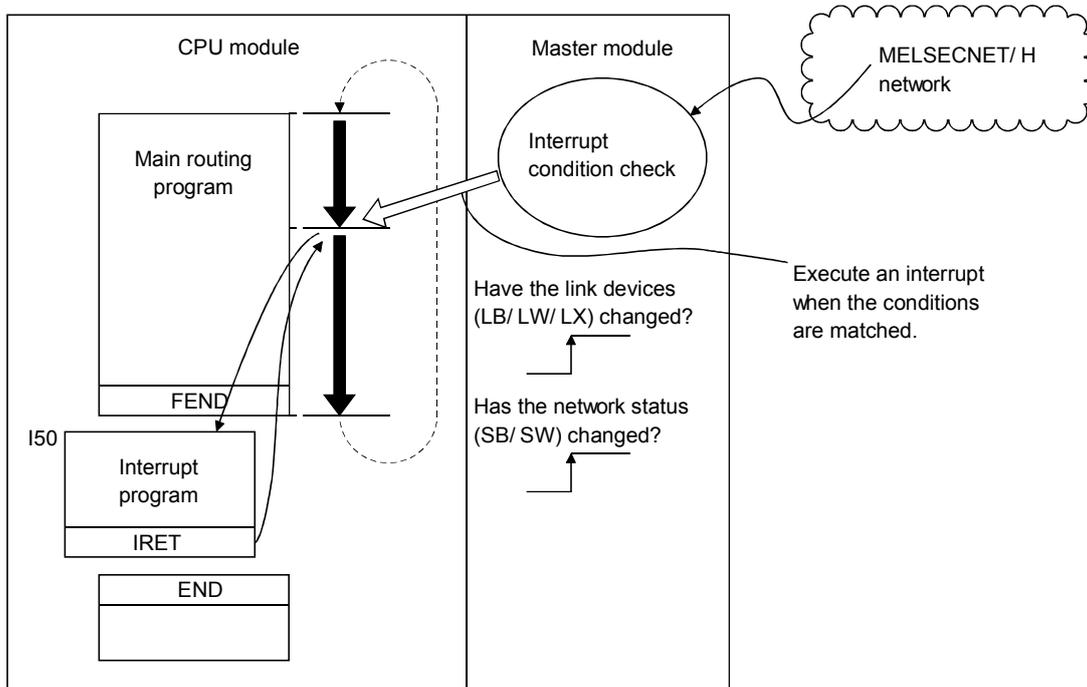

**POINT**

- When multiple interrupt conditions are set, the operation may be delayed if an interrupt request is issued from other stations at the same time because other interrupts have to wait to be processed.
- When executing the interrupt sequence program, it is necessary to execute "EI" (Enable Interrupt) with the main routine program.

**REMARKS**

Since the MELSECNET/H does not support the SEND instruction, the device code RECVS instruction cannot be used. For details about interrupt settings, refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).

7.8 I/O Assignment Function

Master	Remote
×	○




The I/O assignment function is used for the following:

- 1) Reserving points when changing to a module other than 16-point modules
- 2) Preventing I/O number change after module replacement
- 3) Changing I/O numbers to those used in the program
- 4) Setting input response time (I/O response time)
- 5) Setting an output mode for a data link error (Error time output mode setting)
- 6) Setting a remote I/O station operation mode for a hardware error in an intelligent function module (Hardware error time CPU operation mode setting)
- 7) Setting intelligent function module switches

To enable the I/O assignment functions, use GX Developer to set the I/O assignment settings in the PLC parameters for the remote I/O station. The I/O assignments are set within common parameter setting range that has been set in remote master station. As for the I/O assignment settings in the PLC parameters of the remote master station, the I/O assignment within the remote master station are enabled but they are not enabled in the remote I/O station.

Moreover, the I/O assignment of the remote I/O station is only set for remote I/O stations requiring I/O assignment. There is no need to set for all remote I/O stations.

(GX Developer I/O assignment setting screen)

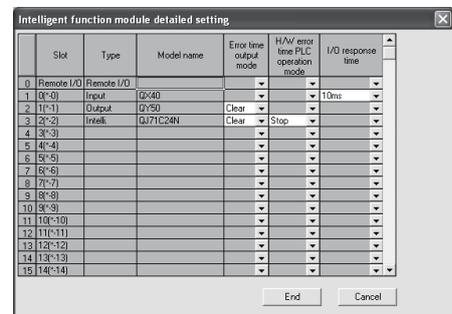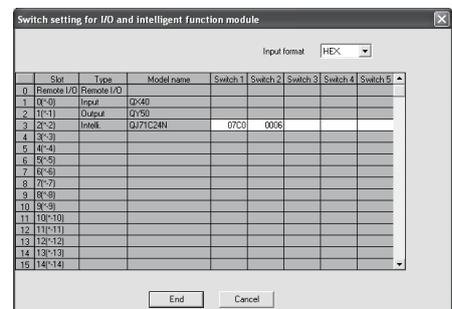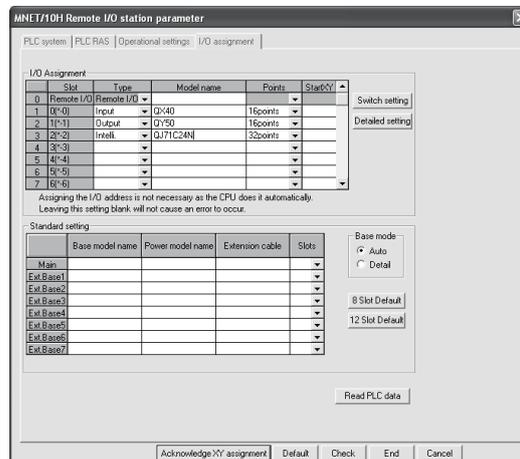


For details about the concepts relating to input/output number assignment and for details about using the GX Developer for I/O assignment, refer to the QCPU User's Manual (Function Explanation, Program Fundamentals).

7.9 Stopping/Restarting the Cyclic Transmission and Stopping Link Refreshing (Network Test)


The remote I/O network can use the "network test" of the GX Developer to stop and restart cyclic data.

This function is useful when other station's data should not be received or when the host's data should not be sent at system startup (when debugging), etc.

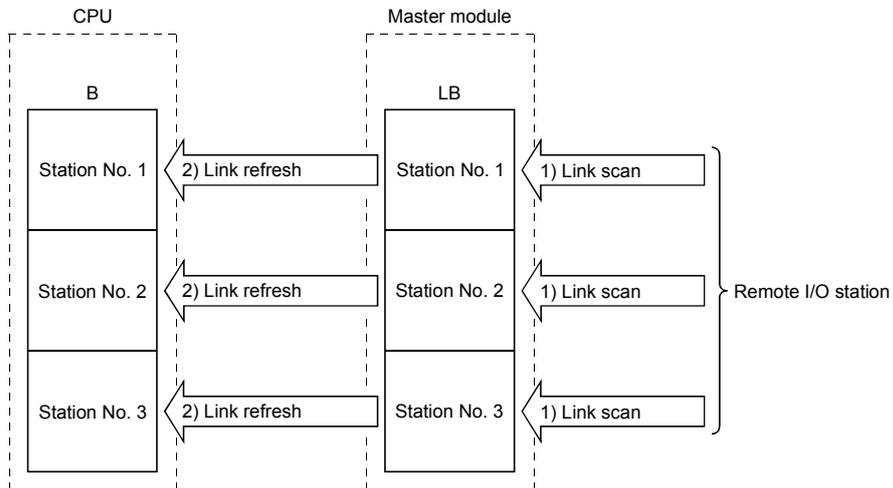


For details about routing, refer to the Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).

- 1) Stopping/restarting the cyclic transmission stops or restarts the data receiving (link scan) between the network modules of the applicable station. However, the data receiving (link refresh) between the programmable controller CPU and master modules cannot be stopped or restarted by this processing.
- 2) Execution using GX Developer  
Through the network test, link startup, link stop and forced link startup can be performed using GX Developer. For details on the network testing methods, refer to the GX Developer Operating Manual.

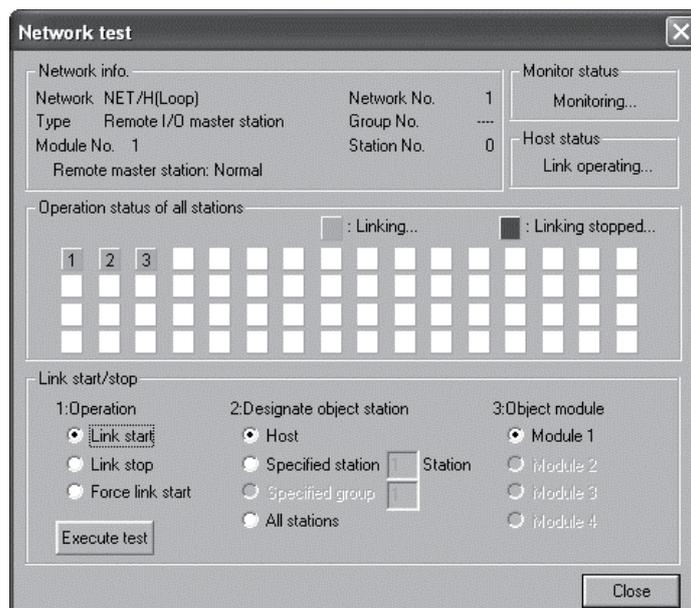

7.10 Multiplexed remote master function (Process CPU)

Multiplex remote master function allows the multiplexed remote sub-master station to take control of the remote I/O stations when the multiplexed remote master station fails.

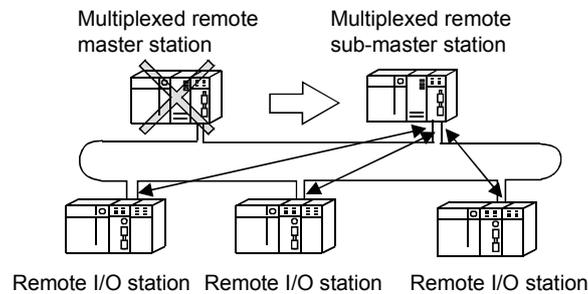

The multiplexed remote master function has the following merits.

Item	Description
(1) Continuation of controlling remote I/O stations when multiplexed remote master station becomes faulty	The multiplexed remote sub-master station (DSM <sub>R</sub> ) takes control of the remote I/O stations (R), when the multiplexed remote master station (DM <sub>R</sub> ) becomes faulty.
(2) Selection of operating station status when multiplexed remote master station returns to system	<p>It is possible to set parameter to select the operating station status when the multiplexed remote master station returns to the system.</p> <p><b>Return to system as control station</b></p> <p>The master operating station (control station) is switched from the multiplexed remote sub-master station (DSM<sub>R</sub>) to the multiplexed remote master station (DM<sub>R</sub>).</p> <p>At the time of switching, the remote I/O stations are reset once.</p> <p><b>Return to system as standby station</b></p> <p>The multiplexed remote sub-master station (DSM<sub>R</sub>) operates continuously as the master operating station (control station).</p> <p>Furthermore, when the multiplexed remote master station has returned to the system as the sub-master operating station (standby station), it is switched to the master operating station (control station) manually.</p>
(3) Startup of multiplexed remote sub-master station only	By setting the same parameters as the multiplexed remote master station (DM <sub>R</sub> ), the multiplexed remote sub-master station (DSM <sub>R</sub> ) can resume control of remote I/O stations if it is powered on and then off while controlling the remote I/O stations (In case that the multiplexed remote master station has been faulty.)

The following describes each item.

(1) Continuation of controlling remote I/O stations when multiplexed remote master station fails

- (a) By mounting the master modules of the multiplexed remote master station and multiplexed remote sub-master station to different programmable controller CPUs, the multiplexed remote sub-master station automatically controls the remote I/O stations if the multiplexed remote master station fails (switching of master operation).

<b>POINT</b>
The transient transmission executed when the master operation station is switched or returns to the system may be unsuccessfully completed. Execute the transient transmission again if it is unsuccessfully completed.

- (b) Since the sub-master operating station smoothly continues the control of the remote I/O stations when the master operation is switched, it always receives cyclic transmission data (M station ← R station: X, B, W) sent from the remote I/O stations if the master operating station is operating normally. Also, the sub-master operating station can execute the link dedicated instructions that perform read to the remote I/O stations (REMFR, READ). The link dedicated instructions for performing write (REMTO, WRITE) cannot be executed from the sub-master operating station as the execution from the master operating station has priority. If executed by the sub-master operating station, such instructions result in normal completion without processing (data not written). (Error will not occur.)

**REMARKS**

When a link dedicated instruction (REMTO or REMFR) for remote I/O stations is executed by mistake between the master station and sub-master station, the execution station shows the following operation status.


Instruction	Execution station	Target station	Operation status of the execution station
REMFR	Master operation station	Sub-master operation station	An error has occurred
	Sub-master operation station	Master operation station	An error has occurred
REMTO	Master operation station	Sub-master operation station	An error has occurred
	Sub-master operation station	Master operation station	Normal end without processing

- (c) To smoothly continue the control of the remote I/O stations when master operation is switched, the data must be always transferred between the multiplexed remote master station and multiplexed remote sub-master station.  
Data transfer reflects the condition statuses of outputs from the multiplexed remote master station to remote I/O stations such as Y output and data output on the remote sub-master station.  
Also, data must be transferred from the multiplexed remote sub-master station before the faulty multiplexed remote master station returns to system and switches to master operation.  
(Information is transferred by cyclic transmission as performed on a PLC to PLC network.)

- (d) The intelligent function modules such as serial communication module, Ethernet module which are mounted to the remote I/O stations can access the station that is currently performing master operation in the MELSEC communication protocol.

Access Destination	Target Station Number to Be Set
Multiplexed remote master station (Station No. 0)	7D <sub>H</sub>
Multiplexed remote sub-master station	Multiplexed remote sub-master station No.
Master operating station	7E <sub>H</sub>

- (e) The outputs of the remote I/O stations are held while master operation is being switched from the multiplexed remote master station to the multiplexed remote sub-master station.

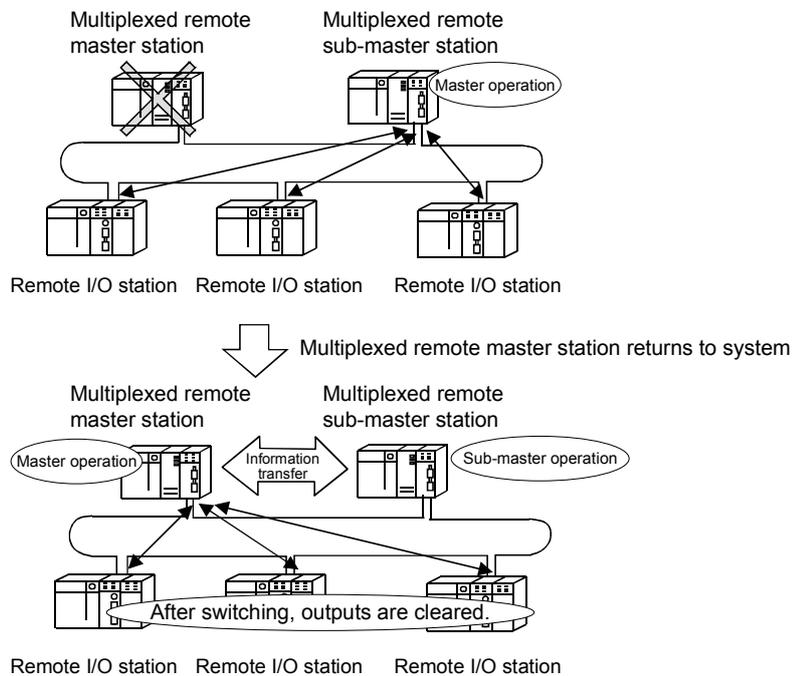

**POINT**

Start up the multiplexed remote sub-master station last (after the data link of the multiplexed remote master station and remote I/O stations is established).  
 To start from a data link using the multiplexed remote master station independently of the startup order, do not set Total stations and Setup common in the parameters of the multiplexed remote sub-master station.

**REMARKS**

The multiplexed remote master station and multiplexed remote sub-master station cannot be mounted together on a single programmable controller CPU.

- (f) Select the multiplexed remote master station or multiplexed remote sub-master station from "Network type" on the "Module count setting screen" of the GX Developer parameters.

• Multiplexed remote master station:

	Module 1
Network type	MNET /H(Multiplexed remote master)

• Multiplexed remote sub-master station:

	Module 1
Network type	MNET /H(Multiplexed remote sub)

Since the multiplexed remote master station needs to recognize the station number of the multiplexed remote sub-master station, set the station number of the multiplexed remote sub-master station on the network range assignment screen of the multiplexed remote master station.


1) Choose station No. of multiplexed remote sub-master station.

2) After choosing station No. of multiplexed remote sub-master station, click this button to complete setting. After the setting is completed, "Sub" appears in Station No. field.

- (g) On the network range assignment screen, assign the ranges for information transfer to/from the multiplexed remote sub-master station and also the ranges for control of the remote I/O stations.

(2) Selection of operating station status when multiplexed remote master station returns to system

It is possible to set the parameter of the multiplexed remote master station to select whether the remote I/O stations will be controlled by the multiplexed remote master station or by the multiplexed remote sub-master station when the multiplexed remote master station returns to system while the remote I/O stations are being controlled by the multiplexed remote sub-master station.

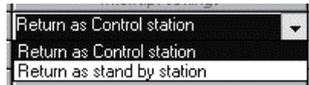


**POINT**

The transient transmission executed when the master operation station is switched or returns to the system may be unsuccessfully completed. Execute the transient transmission again if it is unsuccessfully completed.

(a) Return to system as control station:


The multiplexed remote master station returns to the system as the master operating station (control station).  
 The multiplexed remote master station controls the remote I/O stations. The multiplexed remote sub-master station shifts to sub-master operation.  
 After switching, the outputs of the remote I/O stations are cleared.

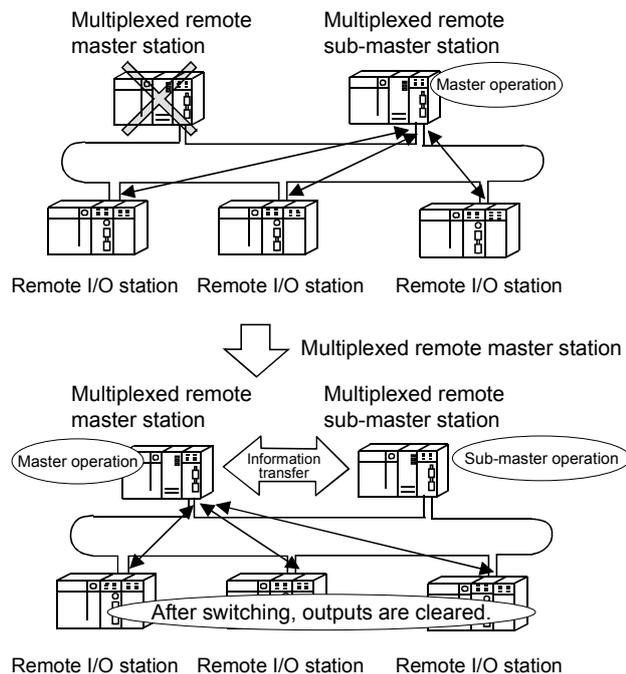


(b) Return to system as standby station:

The multiplexed remote master station returns to the system as the sub-master operating station (standby station).

The multiplexed remote sub-master station continues the control of the remote I/O stations.

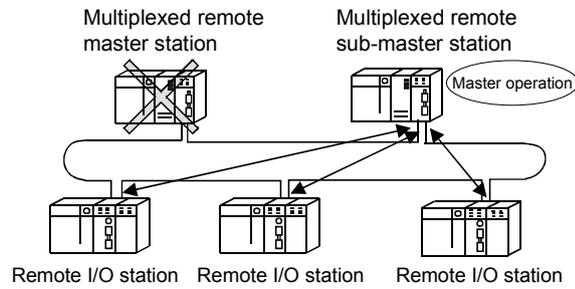


Return of multiplexed remote master station to normal

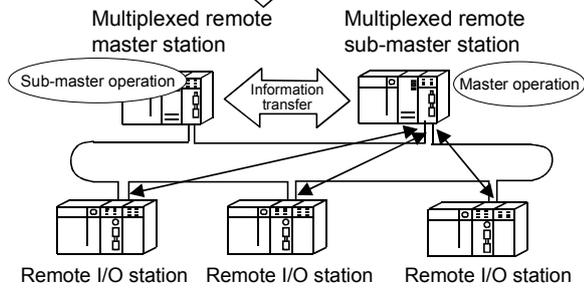

(c) Switching of multiplexed remote master station operation

When the multiplexed remote master station has returned to system, it can be switched to master operation in the following procedure.

- 1) The multiplexed remote sub-master confirms that the multiplexed remote master station has returned to the system by checking the link special relay (SB) status.
- 2) The multiplexed remote sub-master station switches from master operation to sub-master operation by operating the link special relay (SB).
- 3) The multiplexed remote master station switches to master operation when the multiplexed remote sub-master station switches to sub-master operation.

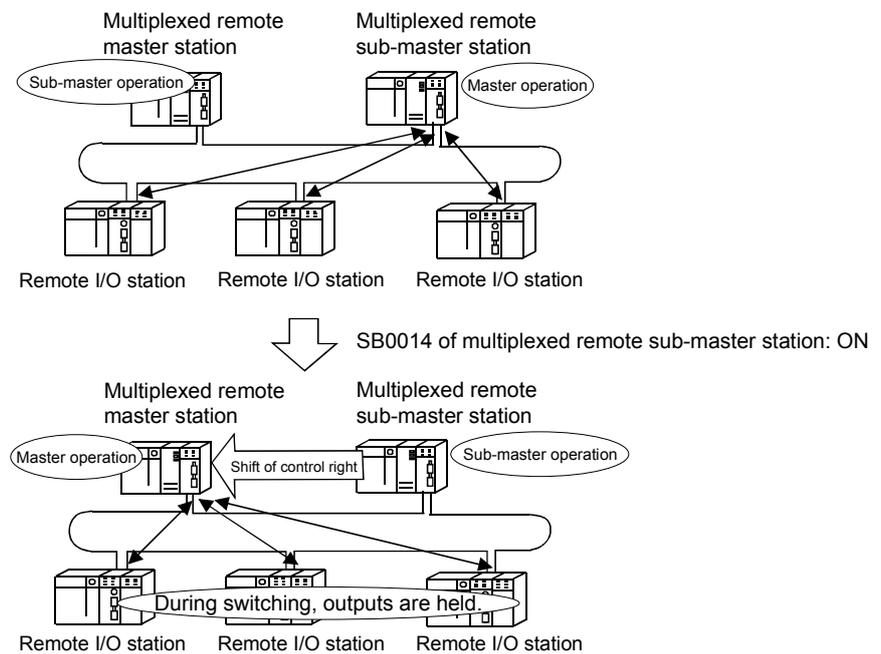


Link special relays used to confirm operating status of multiplexed remote master station

Number	Name	Description
SB0071	Remote master station baton pass status	Indicates the baton pass status of the master station. OFF : Master station baton pass normal ON : Master station baton pass abnormal
SB0075	Remote master station cyclic transmission status	Indicates the cyclic transmission status of the master station. OFF : Master station cyclic transmission normal ON : Master station cyclic transmission abnormal

Link special relays used to switch multiplexed remote sub-master station operation

Number	Name	Description
SB0014	Remote sub-master station switching command	Forcibly directs the remote sub-master station that is performing master operation to shift to sub-master operation. (invalid for redundant systems) OFF : Without directive ON : With directive
SB01C4	Remote sub-master station switching acceptance status	Indicates the status of accepting the directive to shift from master operation to sub-master operation. OFF : Without acceptance ON : With acceptance
SB01C5	Remote sub-master station switching status	Indicates the operation status of a shift from master operation to sub-master operation. OFF : Without shift ON : Shift completion

Program example

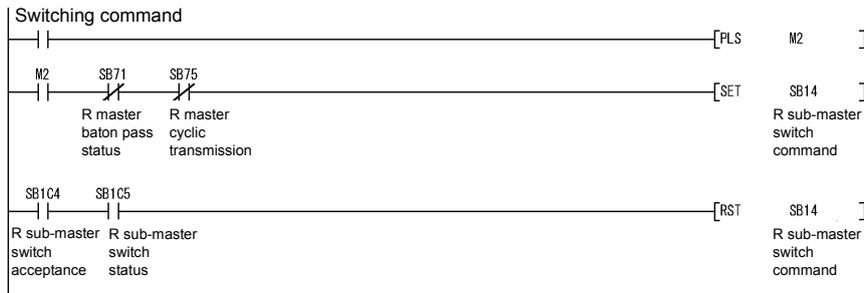


(3) Startup of multiplexed remote sub-master station only

- (a) By setting the same parameters as the multiplexed remote master station, the multiplexed remote sub-master station continues the control of the remote I/O stations if it is powered on and then off while controlling the remote I/O stations.

However, the outputs of the remote I/O stations are cleared when the multiplexed remote sub-master stations resumes the controls.

**POINT**


Except items "Network type" and "Starting I/O No.", set the parameter of the multiplexed remote sub-master station same as the multiplexed remote master station.

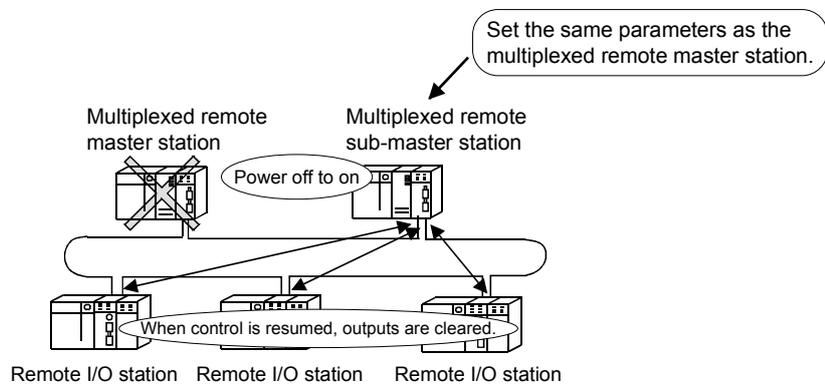

**REMARKS**


If the multiplexed remote master station has returned to the system and performs sub-master operation, the multiplexed remote master station controls the remote I/O stations.

- (b) This function enables the remote I/O stations to be controlled by the multiplexed remote sub-master station alone if the multiplexed remote master station is not made ready at a system startup.

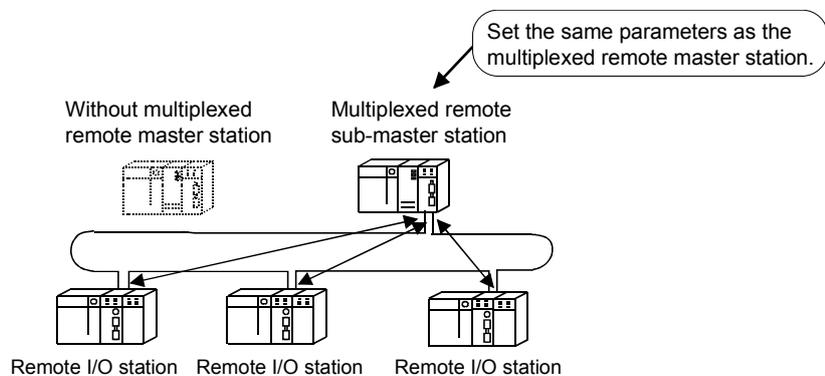


- (4) Communication among multiplexed remote master station, multiplexed remote sub-master station and remote I/O stations
- (a) The input (X) data of the remote I/O station and the link relay (B) and link register (W) data sent by the remote I/O station are transferred to both the multiplexed remote master station and multiplexed remote sub-master station.
  - (b) The output (Y) data of the remote I/O station and the link relay (B) and link register (W) data received by the remote I/O station are normally controlled by the multiplexed remote master station. When the multiplexed remote master station fails, the multiplexed remote sub-master station controls the data.
  - (c) Between the multiplexed remote master station and multiplexed remote sub-master station, data is transferred using X/Y/B/W to ensure that the multiplexed remote sub-master station can control the remote I/O station continuously when the multiplexed remote master station fails.

• LX/LY data flow between stations

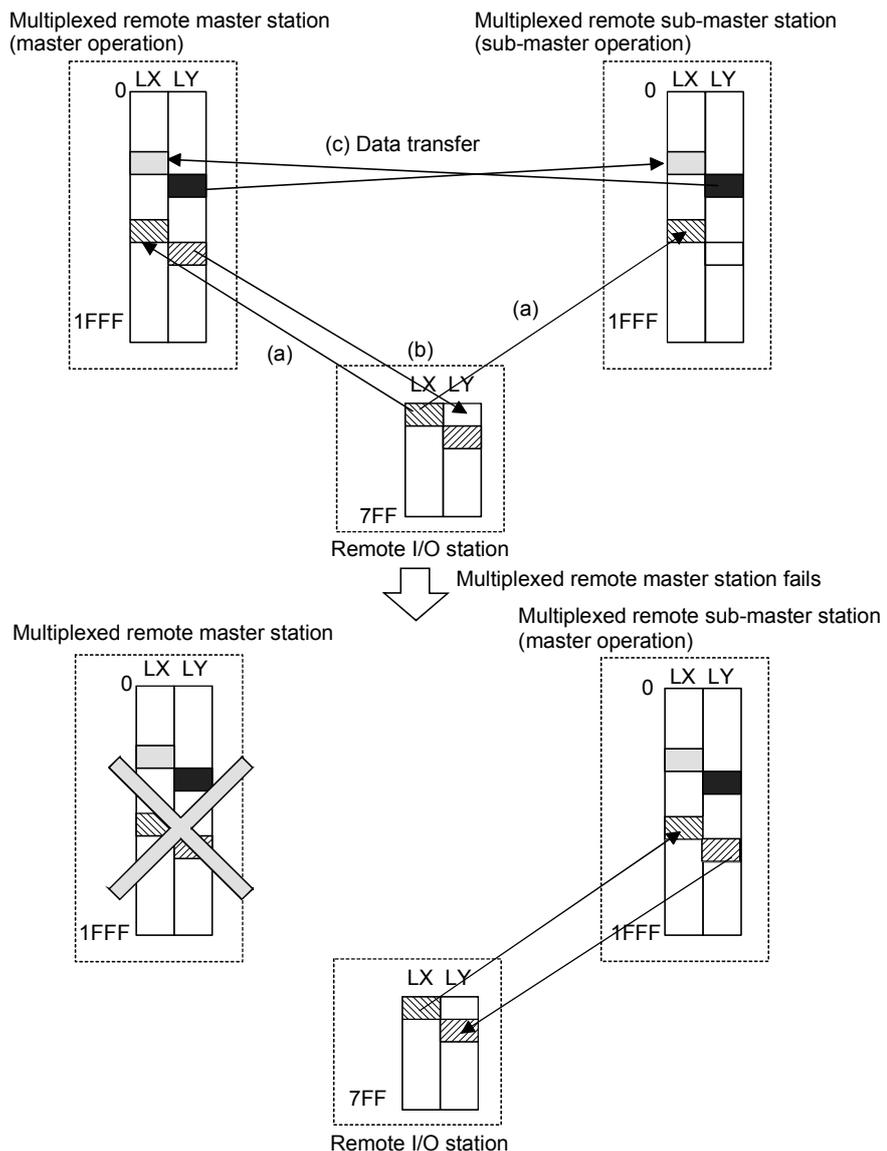


• LB/LW data flow between stations

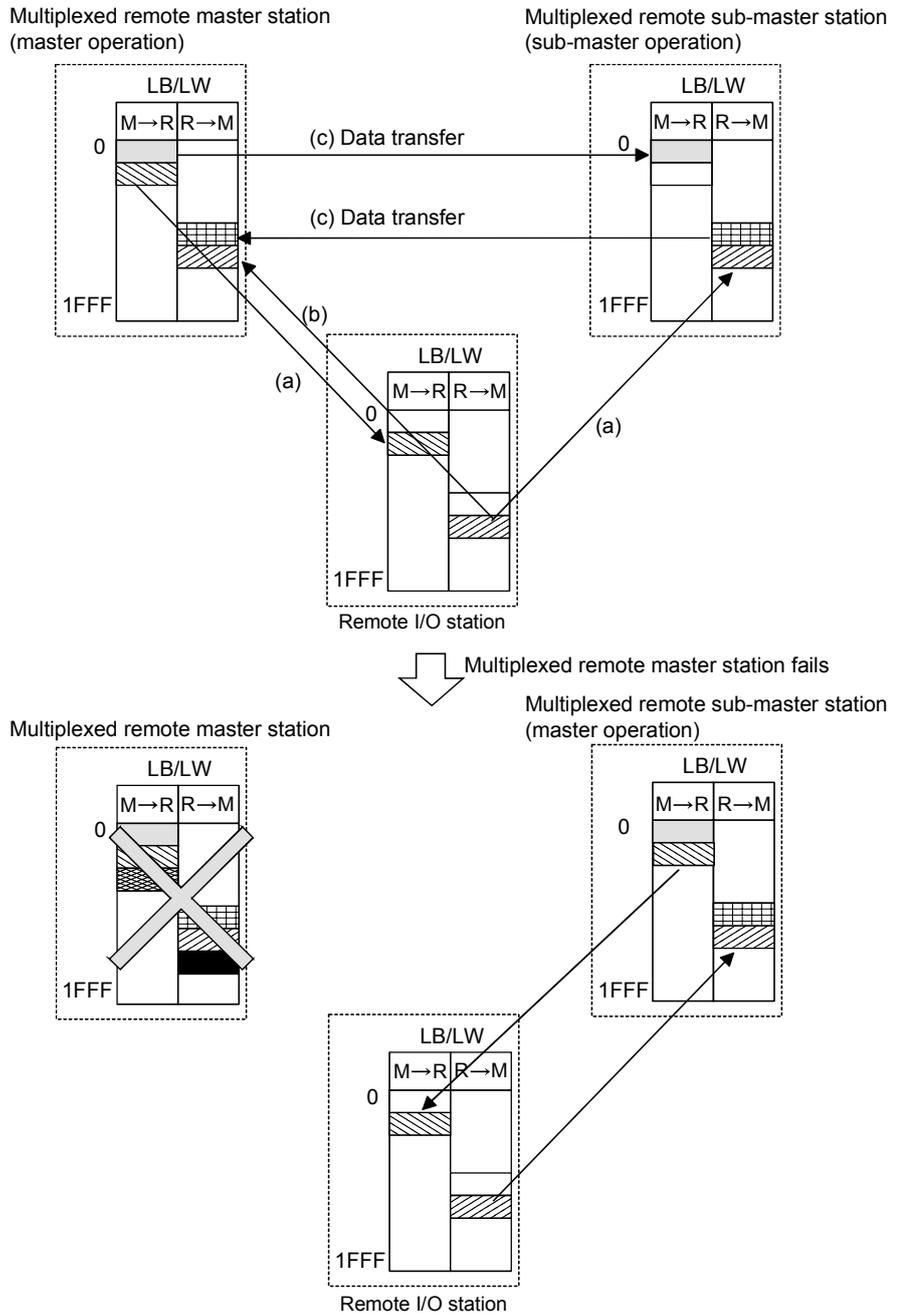

(5) Discrimination by LED indications of multiplexed remote master station and multiplexed remote sub-master station


It is possible to confirm either of the multiplexed remote master station or multiplexed remote sub-master station is controlling the remote I/O stations by ON/OFF status of the MNG LED on the corresponding station.

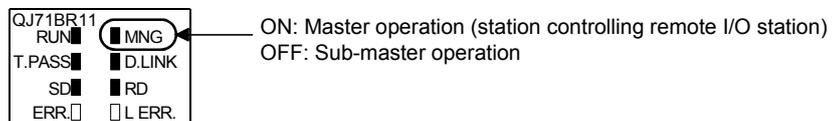


(6) Program example to transfer data between multiplexed remote master station and multiplexed remote sub-master station

The following program example assumes that the same program is used on the multiplexed remote master station and multiplexed remote sub-master station to transfer data between the multiplexed remote master station and multiplexed remote sub-master station.

(a) System configuration

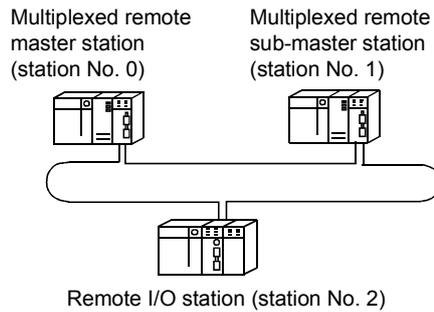

(b) LB and LW range assignment

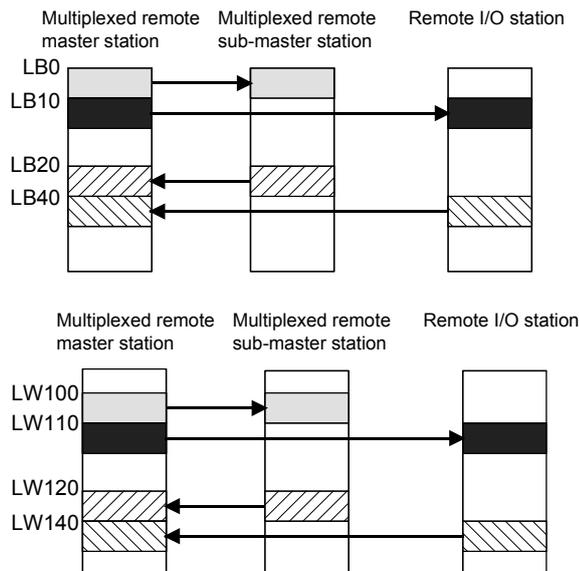

(c) Purpose of using LB/LW for data transfer between multiplexed remote master station and multiplexed remote sub-master station

LB/LW for data transfer transfers from the multiplexed remote master station to the multiplexed remote sub-master station the data that is needed to switch remote I/O station control from the multiplexed remote master station to the multiplexed remote sub-master station.

- (d) Link special relay and link special registers used to make the programs identical

The following link special relay and link special registers can be used to check the send/receive device ranges of the multiplexed remote master station and multiplexed remote sub-master station.

Number	Name	Description
SB01CB	Send/receive device number valid/invalid status	Indicates whether the send/receive device numbers (SW01C8 to SW01CF) of the remote sub-master station are valid or invalid. OFF : Invalid ON : Valid
SW01CC	Send LB device number	For remote master station: The send LB device number to the remote sub-master station is stored. For remote sub-master station: The send LB device number to the remote master station is stored.
SW01CD	Receive LB device number	For remote master station: The receive LB device number from the remote sub-master station is stored. For remote sub-master station: The receive LB device number from the remote master station is stored.
SW01CE	Send LW device number	For remote master station: The send LW device number to the remote sub-master station is stored. For remote sub-master station: The send LW device number to the remote master station is stored.
SW01CF	Receive LW device number	For remote master station: The receive LW device number from the remote sub-master station is stored. For remote sub-master station: The receive LW device number from the remote master station is stored.


The SW01CC to SW01CF values are valid only when SB01C8 is ON.


In this example, the following values are stored into the corresponding link special registers.

Target Station	SW01CC	SW01CD	SW01CE	SW01CF
Multiplexed remote master station	0	20	100	120
Multiplexed remote sub-master station	20	0	120	100

Using the above values, the multiplexed remote master station and multiplexed remote sub-master station can confirm the starting addresses of the LB/LW devices sent/received by themselves.

(e) Program example: For multiplexed remote master station

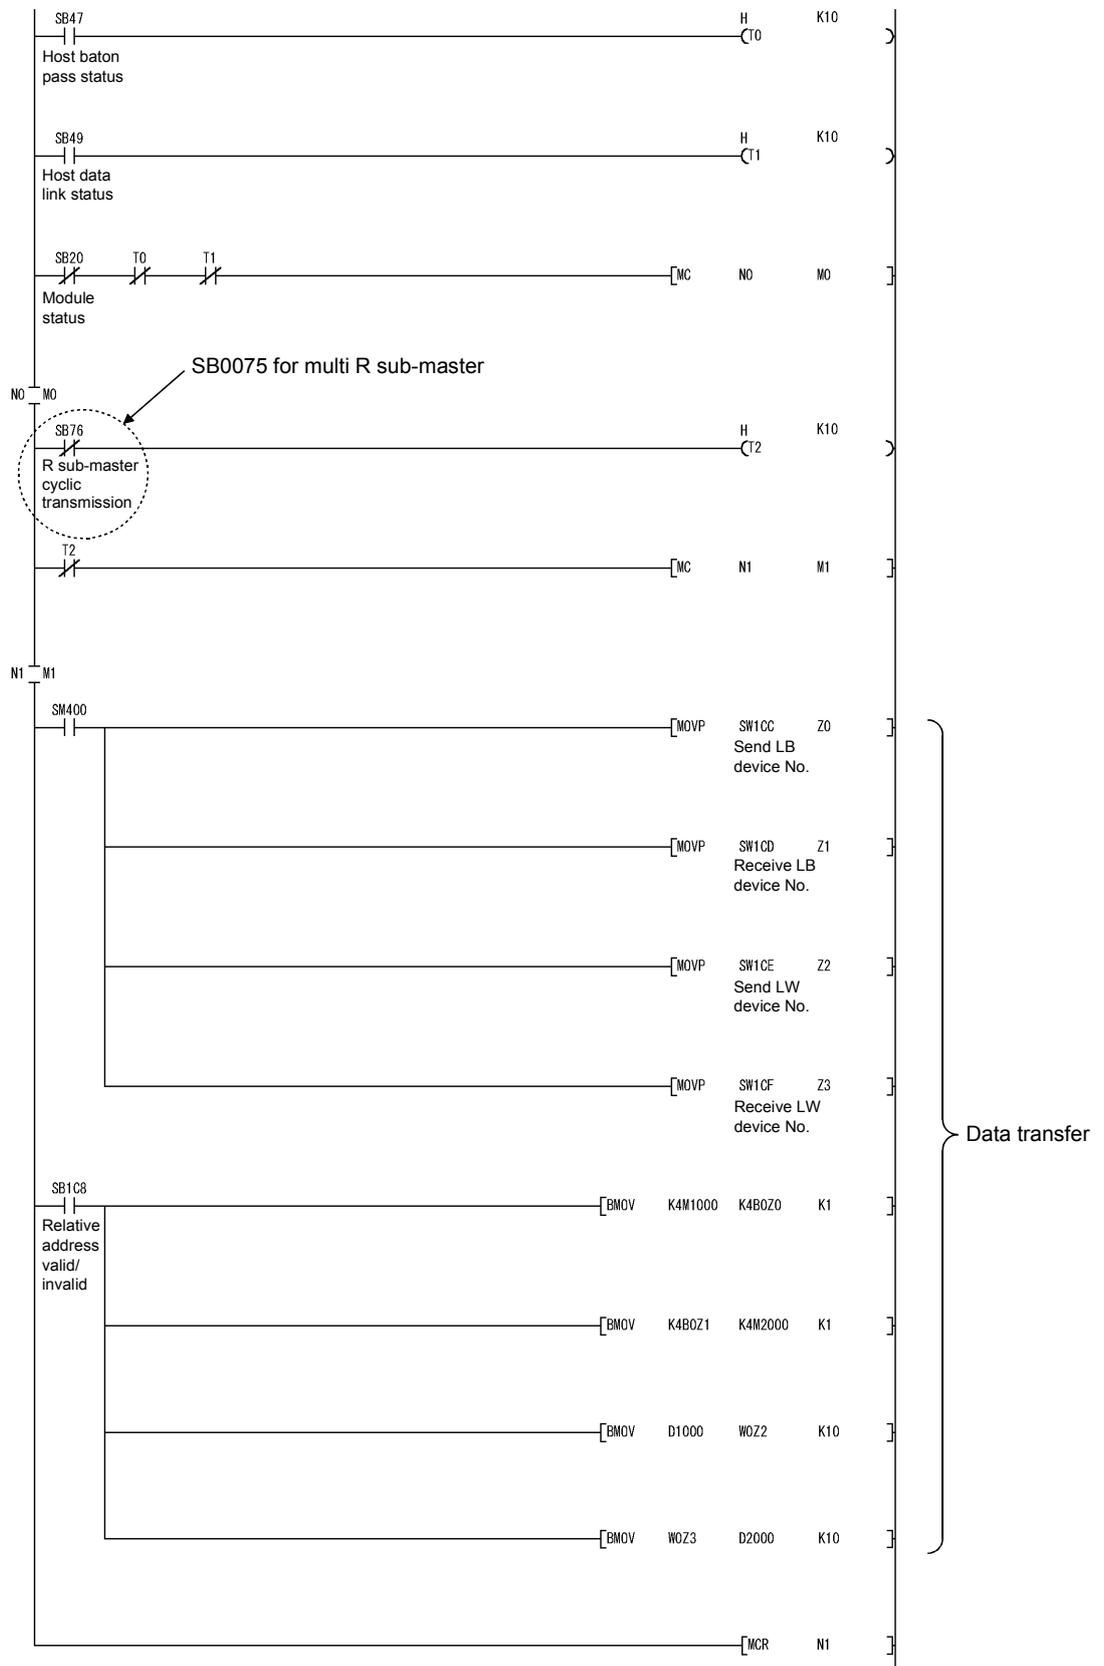

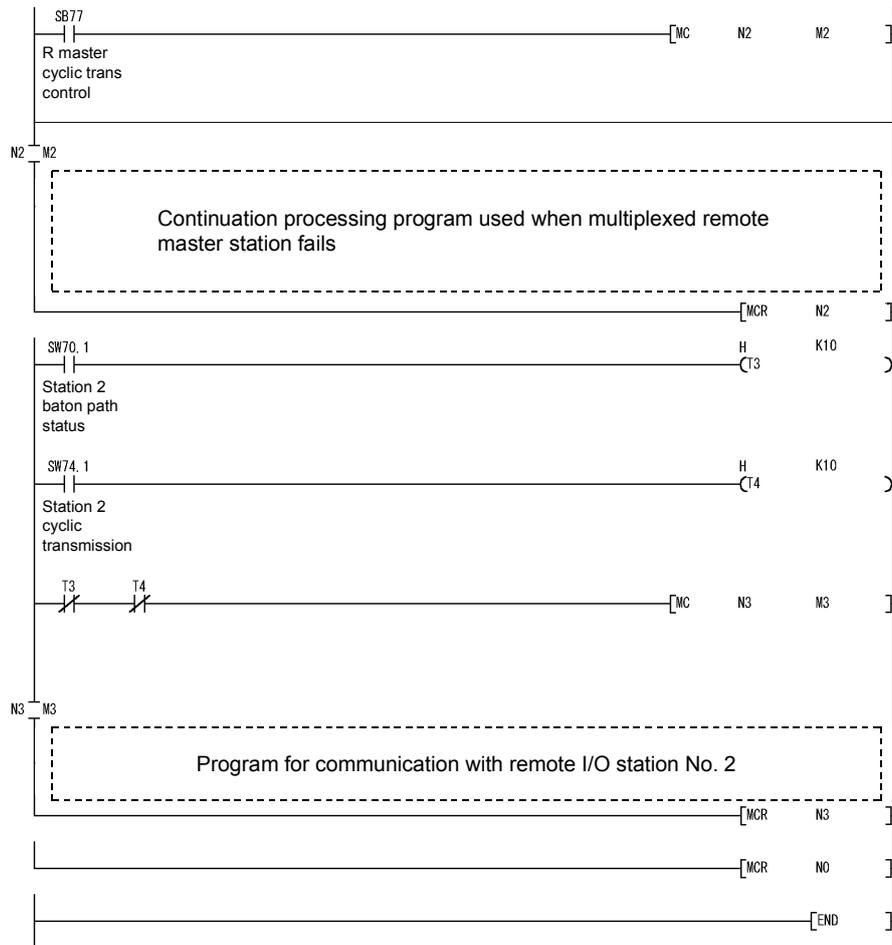

In the timer constant K□, set the following value.

Baton path status (T0, T3)	(Sequence scan time × 4) or more
Cyclic transmission status Parameter communication status (T1, T2, T4)	(Sequence scan time × 3) or more

Reason: The above value should be set to prevent control from being stopped if the network has detected an instantaneous fault due to the cable, noise and so forth.


4 times and 3 times are given as guidelines.

7.11 Multiplexed remote master function for the redundant system (Redundant CPU)

The redundant system uses the multiplexed remote master function to control I/O modules and intelligent function modules.

The multiplexed remote master function for the redundant system continues the control of remote I/O stations when the multiplexed remote master station (control system) fails by switching the multiplexed remote master station from the control system to the standby system and switching the multiplexed remote sub-master station (standby system) from the standby system to the control system.

The multiplexed remote sub-master station (control system) which is controlling a remote I/O station continues the control of the remote I/O station even after the multiplexed remote master station (standby system) returns to the normal status.

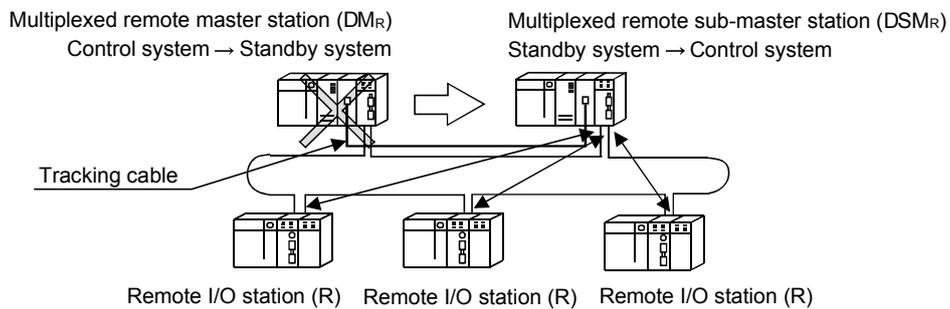

The multiplexed remote master function for the redundant system includes the following features.


Item	Description	Reference section
(1) Backup function of master operation on system switching between control system and standby system	When a power supply error or CPU error occurs in the control system, the Redundant CPU in the standby system continues the operation of the redundant system by switching to the control system. With the system switching, the multiplexed remote sub-master station switched from the standby system to the control system takes over master operation to continue the control of remote I/O stations.	Section 7.11.1
(2) Master operation by the station that has started up as the control system	The master module mounted with the Redundant CPU that has started up as the control system operates as the master station. The master module mounted with the CPU that has started up as the standby system operates as the sub-master station.	Section 7.11.2
(3) System switching request function of control system	The master module mounted in the control system CPU issues the system switching request to the control system CPU when a data link error such as link cable disconnection or transmission error are detected.	Section 7.11.3
(4) Access function by specifying control system or standby system	Access from GX Developer or others to Redundant CPU can be performed by specifying the control system/standby system instead of station No. Therefore, the control system can be accessed any time even if system is switched.	Section 7.11.4

It is not required to create each project for control system/standby system. In a redundant system, parameters and sequence programs common to both systems can be created in one project. Therefore, master modules mounted in both systems can communicate through a network parameter.

### 7.11.1 Backup function of master operation on system switching between control system and standby system

- (a) The redundant system consists of a control system (multiplexed remote master station) and standby system (multiplexed remote sub-master station) of the same system configuration. If a power supply error or CPU error occurs in the control system, the Redundant system switches the standby system to the control system to continue the operation of the redundant system.

With the system switching, the master module mounted in the multiplexed remote master station of the new standby system stops master operation and the multiplexed remote sub-master station of the new control system takes over the master operation to continue the control of remote I/O stations.

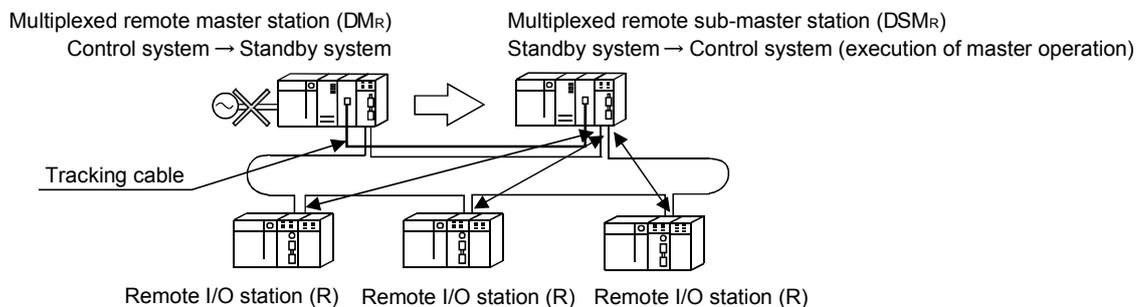

#### POINT


The transient transmission executed when the master operation station is switched or returns to the system may be unsuccessfully completed. Execute the transient transmission again if it is unsuccessfully completed.

- (b) The sub-master station always receives the cyclic transmission data (remote I/O station to master station: X, B, and W) sent by remote I/O stations even while the master station operates normally in order to continue the control of the remote I/O stations smoothly when master operation is switched.
- (c) The multiplexed remote master station and multiplexed remote sub-master station always transfer data to each other through a tracking cable (tracking) in order to continue the control of remote I/O stations smoothly when master operation is switched.


#### POINT

When tracking the link special relay and link special register, do not transfer the link special relays (SB0020 to SB01FF) and link special registers (SW0020 to SW01FF) used by the system.

- (d) The output of the remote I/O station is held while master operation is switched from the multiplexed remote master station to the multiplexed remote sub-master station.

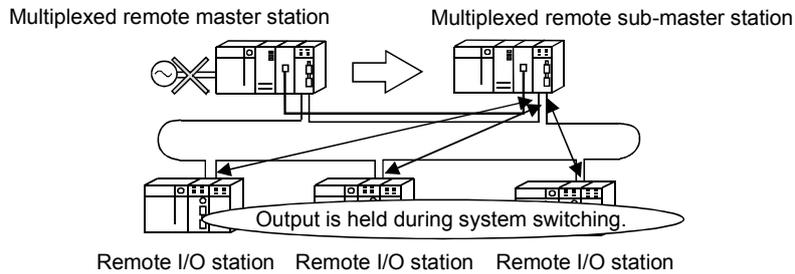

- (e) If the multiplexed remote master station returns to the normal status while the multiplexed remote sub-master station controls remote I/O stations, the multiplexed remote master station will perform sub-master operation as the standby system.

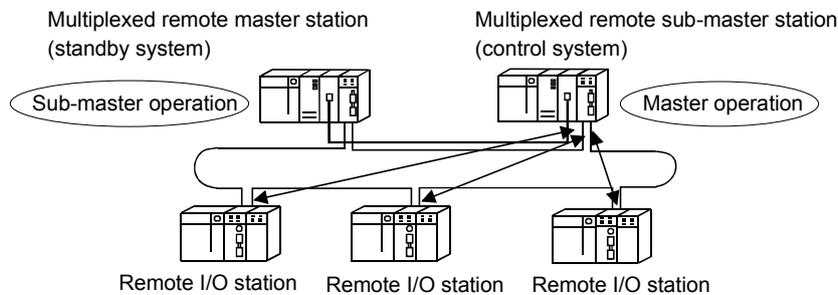


### 7.11.2 Master operation by the station that has started up as the control system

The master module mounted in the station that has started up as the control system performs master operation. The master module mounted in the standby system station performs sub-master operation.

#### REMARKS


For the determination of the control system or standby system, refer to the QnPRHCPU User's Manual (Redundant System).

Which of the multiplexed remote master station or multiplexed remote sub-master station are controlling remote I/O stations can be checked from the MNG LED of each station.

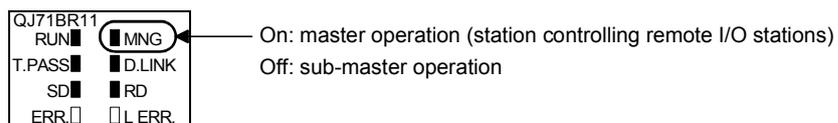


7.11.3 System switching request function of control system

The control system includes the system switching request function, i.e., the master module mounted in the control system CPU issues the system switching request to the control system CPU when it detects the data link error such as link cable disconnection or communication error. This function enables the standby system to continue the control even when the master module of the control system goes down.

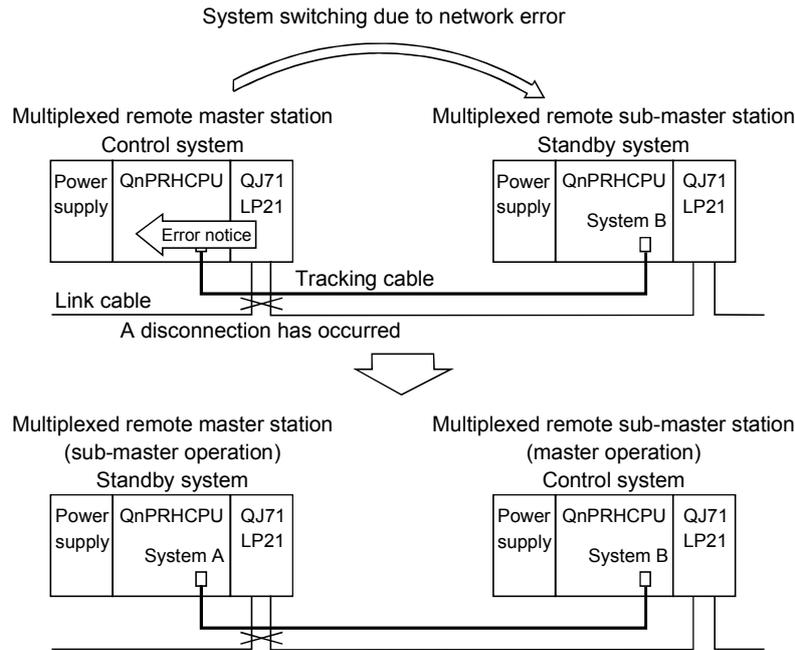

However, if the CPU of the control system cannot perform system switching due to the standby system error, only the master operation of the master module shifts to the master module of the standby system (multiplexed remote sub-master station). In this case, since the CPU of the standby system cannot process the sequence program, the CPU controls the network only. (Various modules mounted in remote I/O stations cannot be controlled.)

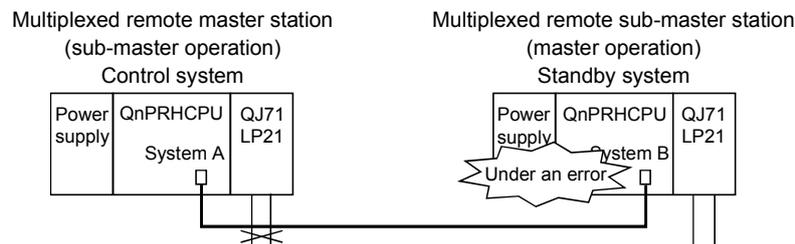

**POINT**

The following must be performed before operating the system

- Powering ON/OFF of other stations (including those on the standby system)

If the above operation is performed during system operation, a MELSECNET/H module on the control system may detect a communication error and a system-switching request may be issued.

When the system-switching request is issued before startup of the standby system, a continue error, "CAN'T SWITCH" may be detected in the control system CPU.

Generally, normal system control is continued even if "CAN'T SWITCH" is detected.

However, in the case of the system where error detection will stop the control, program the system to prevent such a control stop.

For the method for automatically clearing the "CAN'T SWITCH" error, refer to the QnPRHCPU User's Manual (Redundant System).

**REMARKS**

For the details of system switching, refer to QnPRHCPU User's Manual (Redundant System).


The master module issues a system switching request when the status of data link is changed from "under data link" to "data link halted." (when the D.LINK LED of the master module turns off.)

Although the time interval from when the data link is stopped to when the system switching request is issued to the control system CPU is set to two seconds, the interval can be changed using the link special relay (SB) and link special register (SW).

Link special relay and link special register used for setting a system switching monitoring time

Number	Name	Description
SB0018	Switching monitoring time setting enable flag	Indicates whether the switching monitoring time setting is enabled or disabled. OFF : The switching monitoring time setting (SW0018) is disabled. ON : The switching monitoring time setting (SW0018) is enabled.
SW0018	Switching monitoring time setting	Set a time from the detection of a data link halt to issue of system switching request in the redundant system. 0: 2s (default) 1 to 500: in 10ms (set up in 10ms units within the range of 10ms to 5s.)

To reduce the system switching time from 2s to 0.5s, set SB0018/SW0018 in the sequence program as follows.

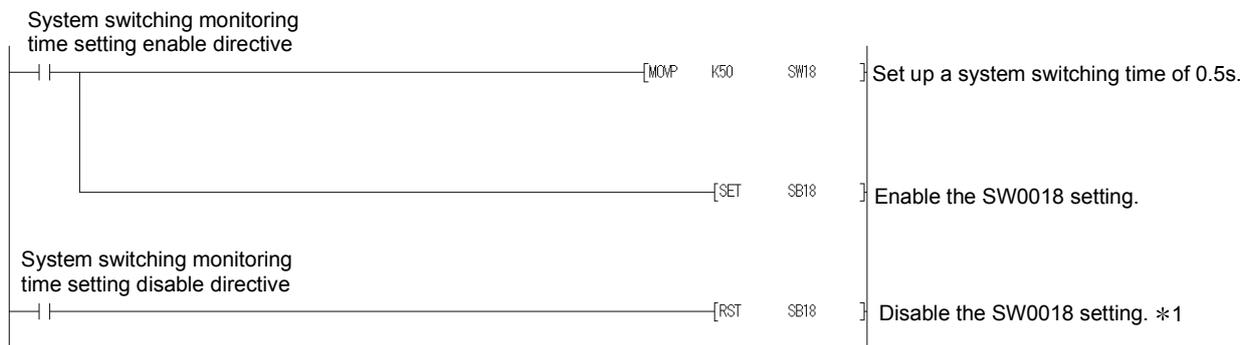


\*1: If SB0018 is disabled (OFF), the system switching monitoring time is 2s (default).

**POINT**

The master module issues the system switching request to the control system CPU even when the data link error is caused by the following accident: the master module mounted in the control system is not connected with a cable or disconnected at the time of power ON.  
The master module issues the system switching request within 4s after power ON.

7.11.4 Access function by specifying the control system or standby system


This function is for making access to the Redundant system by specifying the control system or standby system using GX Developer or other method. By using this function, access to the control system is enabled even after system switching occurs due to error.

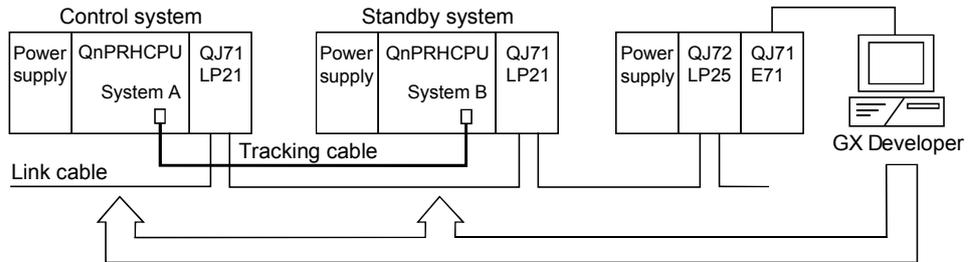

QnPRHCPU can be accessed by specifying either the control system or standby system

The settings on the request source (GX Developer) are as follows.

Specify the control system, standby system, system A, or system B on the connection setup screen in the online menu.

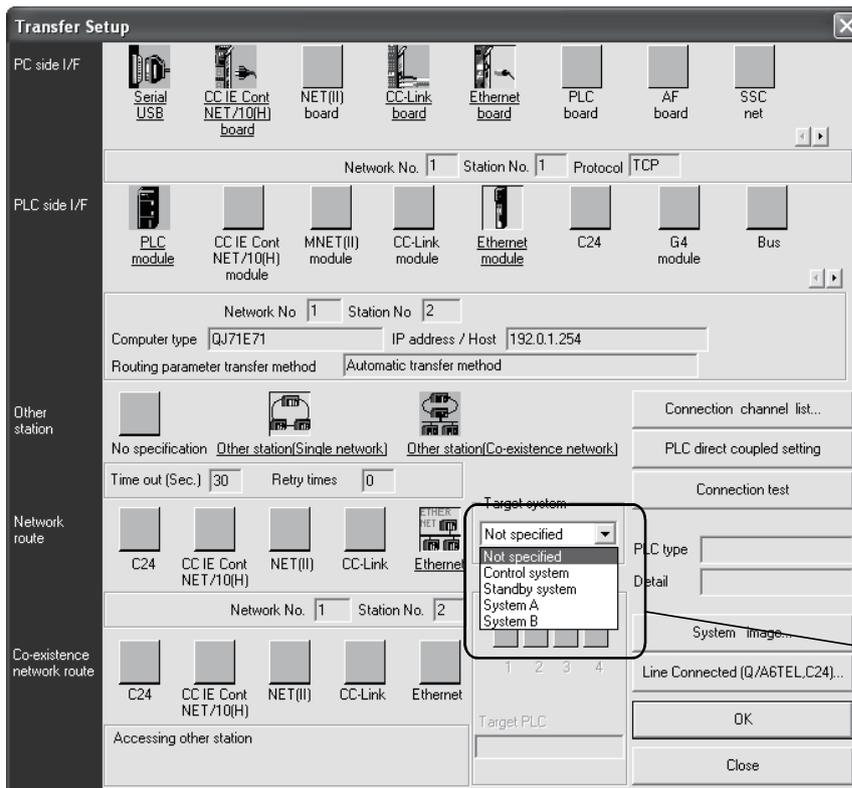

**REMARKS**

For the details of GX Developer operation, refer to the operation manual of GX Developer.

7.12 Remote password

The remote password function is the function for preventing a remote user from illegally connecting to a remote I/O module and programmable controller CPU. The remote password function can be used by setting a remote password for a remote I/O module.

If a remote password has been set up, the serial communication module and Ethernet module check the remote password when a connection request is issued from a remote user to a remote I/O module and programmable controller CPU.

**REMARKS**

The remote password set for the programmable controller CPU of the remote master station does not affect the remote passwords of the remote I/O stations.

(1) Setting, changing and cancelling a remote password

(a) Setting a remote password

Set a remote password on the remote password setting screen of GX Developer. Write the remote password to be set by connecting GX Developer with the target remote I/O module directly.

The remote I/O module transfers the remote password to the specified serial communication module and Ethernet module when the system is powered on or the remote I/O module is reset.


(b) Changing and Cancelling the remote password

By connecting GX Developer with a remote I/O module, the remote password of the connected remote I/O module can be changed and cancelled.

The remote password can be changed by setting a new remote password by GX Developer and writing it into the remote I/O module.

The remote password can be canceled by deleting it by GX Developer and writing it into the remote I/O module.


The figure below shows the outline of setting, changing, and canceling a remote password with the Ethernet module.

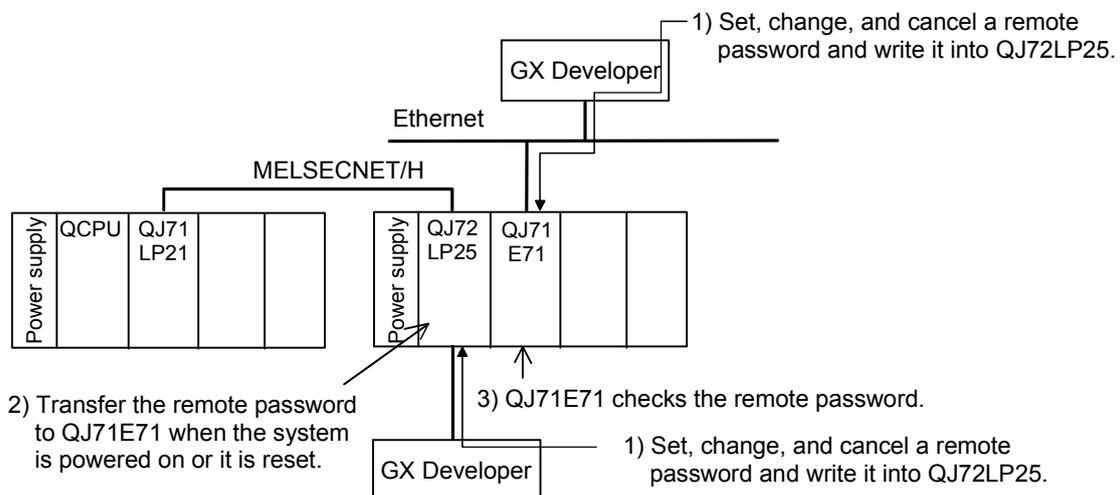

(2) Unlocking and locking the remote password

The remote password is unlocked (connection is allowed) via the modem by the serial communication module or via Ethernet by the Ethernet module. When the remote password is matched, connection to the remote I/O module is allowed.

The figure below shows the outline of unlocking and locking (connection is allowed) a remote password with the Ethernet module.

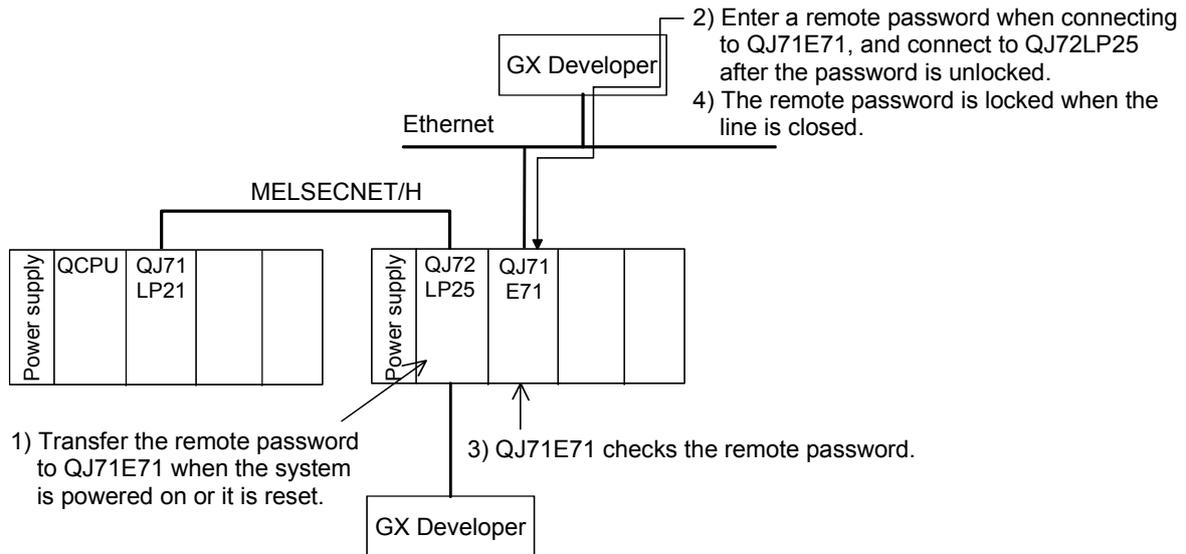

(3) Number of modules for that can be set to check remote passwords


The table below shows the number of modules that can be set to check remote passwords.

Module name	Max. number of modules	Max. number of modules in the system
Ethernet module	4	8
Serial communication module	8	

(4) Setting procedure of remote password

"GX Developer" → "Remote pass" → "Remote password settings" screen → "Remote password detail settings" screen

(a) Setting screen

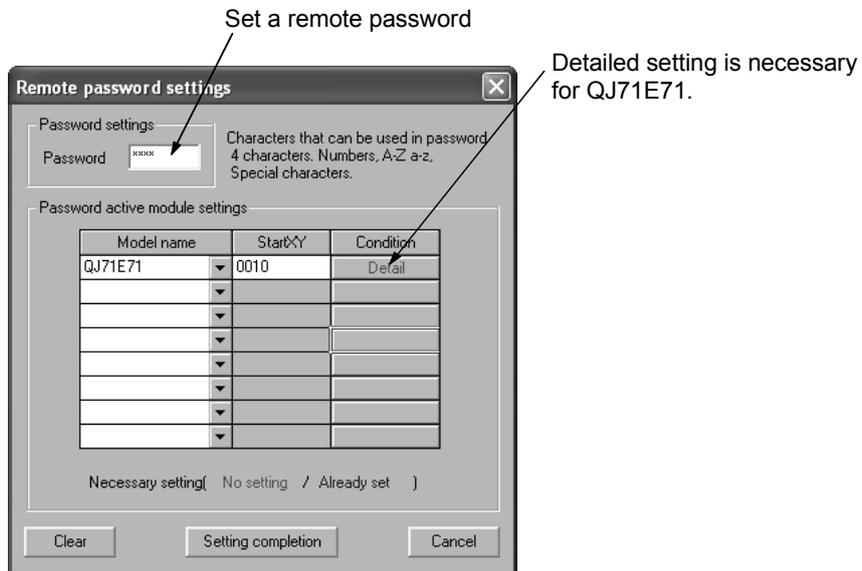

(b) Setting items

Item		Setting	Setting range/option
Password settings		Enter a remote password	4 characters, ASCII code *1
Password active module settings	Model name	Select a model	QJ71E71/QJ71C24/QJ71CMO
	Start XY	Set the module's top address	0000H to 0FE0H
Detail		—	Available or N/A
User connection No.		Set a connection No. for users	Connection No.1 to 16
System connection	Auto open UDP port	Check the remote password valid port	—
	FTP transmission port (TCP/IP)		
	GX Developer transmission port (TCP/IP)		
	GX Developer transmission port (UDP/IP)		
	HTTP port		

\*1: Indicates the upper/lower-case characters (other than " ", i.e., space) that can be input using the keyboard

<b>POINT</b>
<p>For the details of the remote password function, refer to the manuals below.</p> <ul style="list-style-type: none"> <li>• When the serial communication module is used: Q Corresponding Serial Communication Module User's Manual (Application)</li> <li>• When the Ethernet module is used: Q Corresponding Ethernet Interface Module User's Manual (Basic)</li> </ul>

## (5) Error codes detected by remote I/O module

Error code	Error message	LED status	Description	Measures
3400	REMOTE PASS. ERR.	ERR. LED: on	The head I/O number of the target module in the remote password file is set to other than 0 <sub>H</sub> to 0FF0 <sub>H</sub> .	Change the head I/O number of the target module to within the 0 <sub>H</sub> to 0FF0 <sub>H</sub> range.
3401	REMOTE PASS. ERR.	ERR. LED: on	Any of the following modules is not mounted on the slot specified for the head I/O number of the remote password. <ul style="list-style-type: none"> <li>• Serial communication module of function version B or later</li> <li>• Ethernet module of function version B or later</li> </ul>	Mount any of the following modules in the position specified for the head I/O number of the remote password. <ul style="list-style-type: none"> <li>• Serial communication module of function version B or later</li> <li>• Ethernet module of function version B or later</li> </ul>

## (6) Cautions when setting a remote password

- (a) If the starting I/O No. is changed after the remote password is set, the previous remote password set with the Ethernet module/serial communication module becomes invalid.
- (b) Only the remote password set for the directly connected module can be canceled (unlocked) by remote operation of GX Developer. (The remote password for the indirectly connected module cannot be canceled by remote operation.)

## 8 TROUBLESHOOTING

In order to ensure high system reliability, it is important to take precautions before the system is operated and to quickly and effectively correct problems if they do occur. This is why it is important to perform off-line testing of the network and checking of the cables when first starting the system.

Make sure to perform the following checks, which are explained in Chapter 4, "Setup and Procedures Before Starting the Operation."

- 1) Standalone operation check and operational setting of the network module
- 2) Offline tests:
  - Hardware test, Internal self-loopback test, self-loopback test and forward loop/reverse loop test.
- 3) Check the connection of the data link cable.
  - Network diagnostic loop test (requires optical system)

Even with this, if an error does occur, it is important to quickly and accurately understand the nature of the problem. The following are three methods for confirming the contents of an error.

### (1) Network diagnostics to remote master station with GX Developer

#### (a) Line monitor (refer to Section 8.1)

The status of the following four types of networks can be checked by monitoring the line:

- 1) Status of the entire network: Host information
- 2) Data link status and parameter status, etc. of each station:
  - Other station information
- 3) Control station information, detailed data link information, etc.:
  - Network monitor details
- 4) Loop switch count, line error, communication error, etc.:
  - Error history monitor

#### (b) Diagnostic tests (refer to Sections 4.10)

The following four items can be checked or executed through the diagnostic tests:

- 1) Wiring status (IN/OUT, etc.) of the data link cable:
  - Loop test (required for optical loop system)
- 2) Setting status of numbers: control station/remote master station duplication, network numbers and group numbers: Setup confirmation test
- 3) The order of stations connected in the direction of the forward loop and the reverse loop: Station order check test
- 4) Setting status of the routing parameters: Communication test

### (2) Confirmation by error code: Refer to Section 8.3

When either cyclic transmission or transient transmission using link dedicated instructions or GX Developer (communication with other stations) was not normally performed, an error code is stored in the link special register and the system monitor.

The contents of the error can be checked by this error code.

### (3) Confirmation by the LED displays on the front of the network module (Refer to Section 4.2)

With the LED displays, the following errors can be checked: whether the host is operating or stopped, whether the station acts as a control station or a normal station, whether the baton pass is being executed, whether data linking is being executed, whether data is being transmitted/received, and whether any error has occurred.

### 8.1 Network Diagnostics (Network Monitor)


The status of the remote I/O network can be checked using the network diagnostic function of GX Developer.

When an error occurs, the faulty station can be identified using the host information, other station information, and error history monitor functions of the network.


GX Developer network diagnosis can be implemented for the remote master station and remote I/O station \*1.

\*1: Use GX Developer Version 6.01B or later when executing network diagnosis from the remote I/O station.

The following lists the items that can be checked with the network diagnostic function.

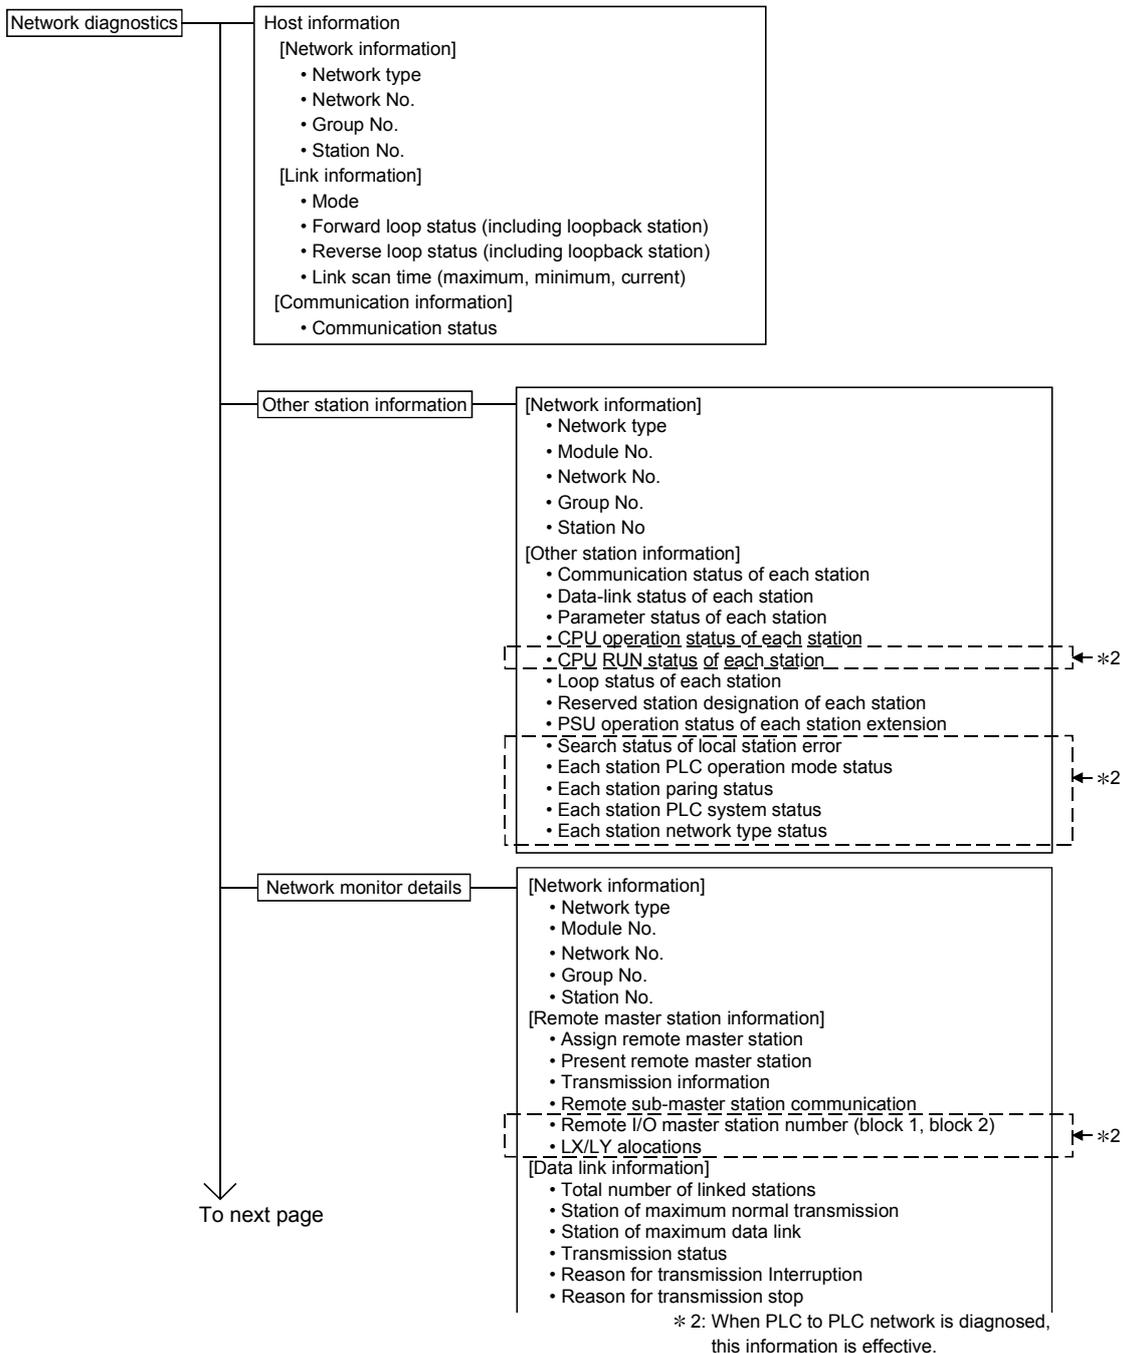

To next page

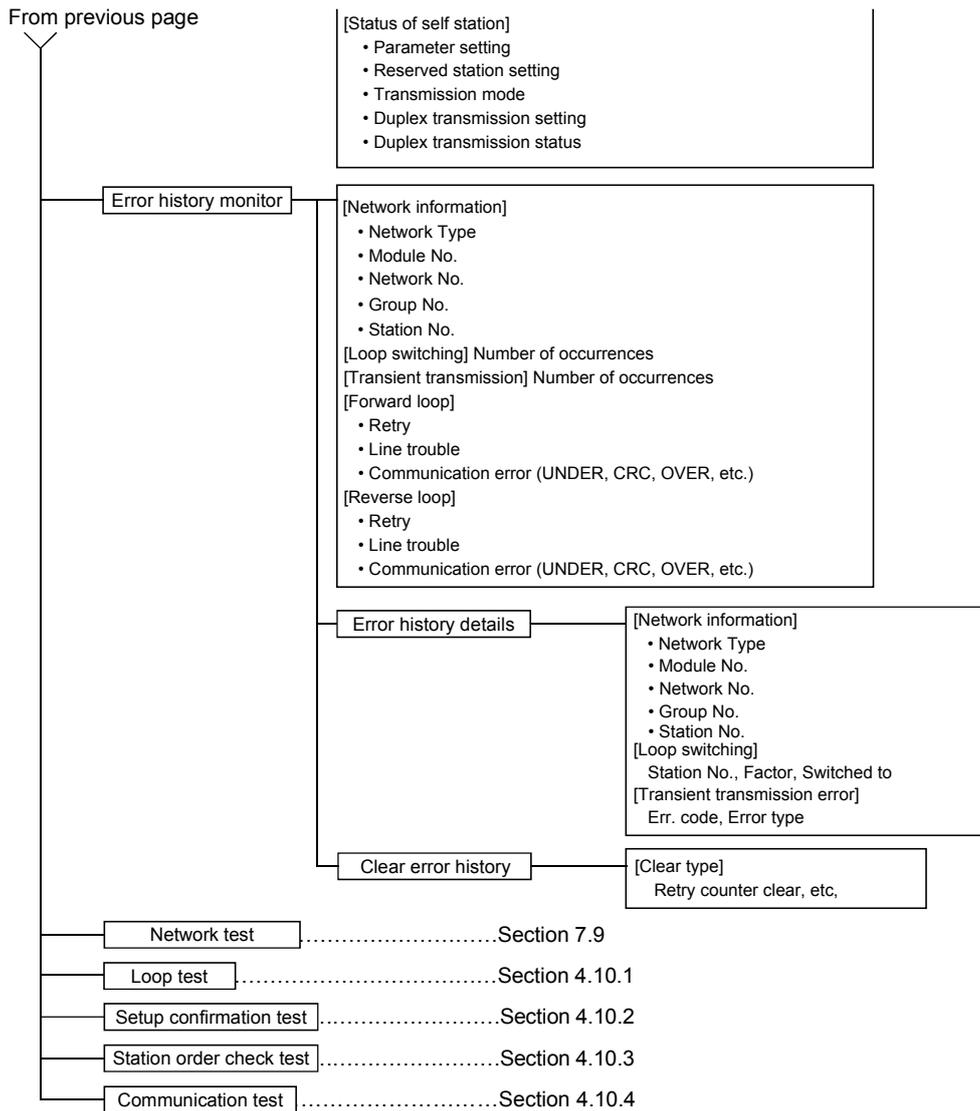


POINT
<p>(1) The target of the network diagnostics is the host's network designated as the connection destination.</p> <p>(2) If the connection target is specified as other station or the redundant CPU is specified as control system, standby system, system A, or system B, the network monitor can check only the information of the host and other stations.</p> <p>(3) The network diagnostics cannot be displayed correctly while the network module is executing the offline test.</p> <p>(4) When the link dedicated instruction is used to access the other station programmable controller during network diagnosis, the execution of the link dedicated instruction may be delayed.</p> <p>After taking the following measures, perform network diagnosis processing and execute the link dedicated instruction.</p> <ul style="list-style-type: none"><li>• Execute the COM instruction.</li><li>• Secure the communication processing security time for 2 to 3ms. For the High Performance model QCPU, Process CPU, and Redundant CPU, set it by the special register SD315. For the Universal model QCPU, set it by the service processing setting of the PLC parameter (PLC system) of GX Developer.</li></ul>

**REMARKS**

SB□□□□ and SW□□□□ found in the explanations of each item indicate the link special relay (SB) or the link special register (SW) used for monitoring.

## 8.1.1 Host information

With the host information, the information of the entire network of the connection destination and the status of the host can be checked.

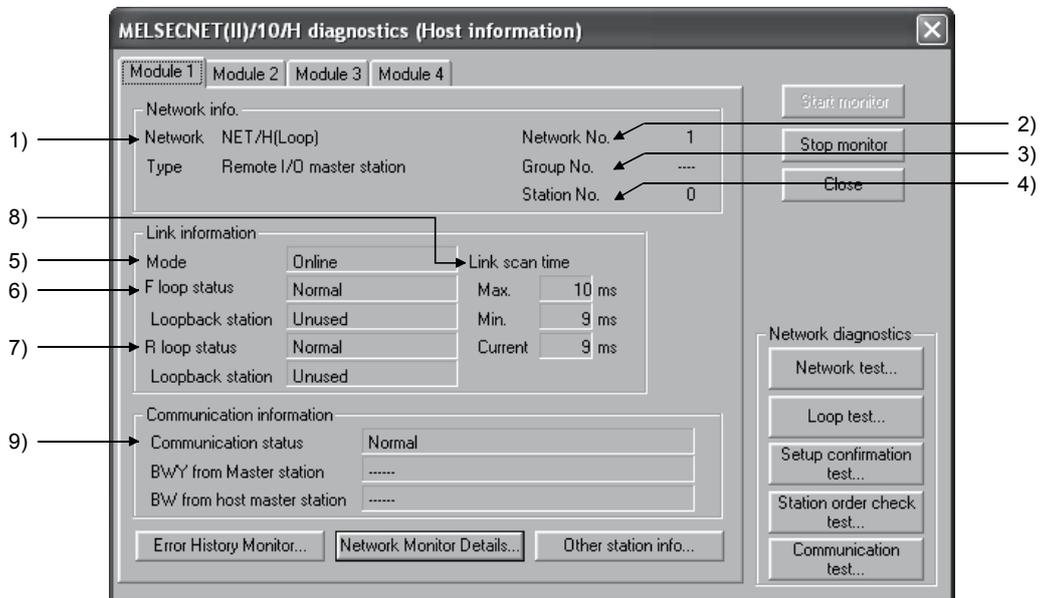

## [Network info.]

- 1) Network type (SB0040, SB0044, SB0057, SW0046)  
Displays the network type of the host.
  - MELSECNET/H (loop) remote I/O master station
  - MELSECNET/H (bus) remote I/O master station
- 2) Network No. (SW0040)  
Displays the network No. of the host.
- 3) Group No. (SW0041)  
Displays the group No. of the host.  
"---" is displayed in case of remote I/O network.
- 4) Station No. (SW0042)  
Displays the station No. of the host.

[Link information]

- 5) Mode (SW0043)  
Displays the operation mode of the host.
  - Online
  - Offline (debug mode)
  - Offline
  - Forward loop test
  - Reverse loop test
  - Station-to-station test (Station that executes tests)
  - Station-to-station test (Station to be tested)
- 6) F loop status (SB0091), Loopback station (SB0099)  
Displays the status of the forward loop side.
  - Loop status : Normal/abnormal
  - Loopback : Unused/"executed station number"
 "---" is displayed in case of bus type.
- 7) R loop status (SB0095), Loopback station (SB009A)  
Displays the status of the reverse loop side.
  - Loop status : Normal/abnormal
  - Loopback : Unused/"executed station number"
 "---" is displayed in case of bus type.
- 8) Link scan time (SW006B/SW006C/SW006D)  
Displays the maximum/minimum/current value of the link scan time of the host.

(Unit [ms])

Station type	Remote master station	Remote I/O station
Constant link scan		
No	Measured value (Displays the maximum/minimum/current value the link scan actually took.)	
Yes	Measured value (Displays the maximum/minimum/current value the link scan actually took.	Constant link scan $\pm 2$ ms


[Communication information]

- 9) Communication status (SB0047)  
Displays the communication status of the host.
  - Data link being executed (SB0047: Off)
  - Data link stopped (SB0047: On)

<b>POINT</b>	On the multiplexed remote sub-master station, link information and communication information are not displayed.
--------------	---

8.1.2 Other station information

With the other station information, the status of the communication, data link, parameters, CPU, loop and reserved station status of each station can be checked. The buttons 3) and 7) can be selected only when diagnosis is executed from the remote master station.

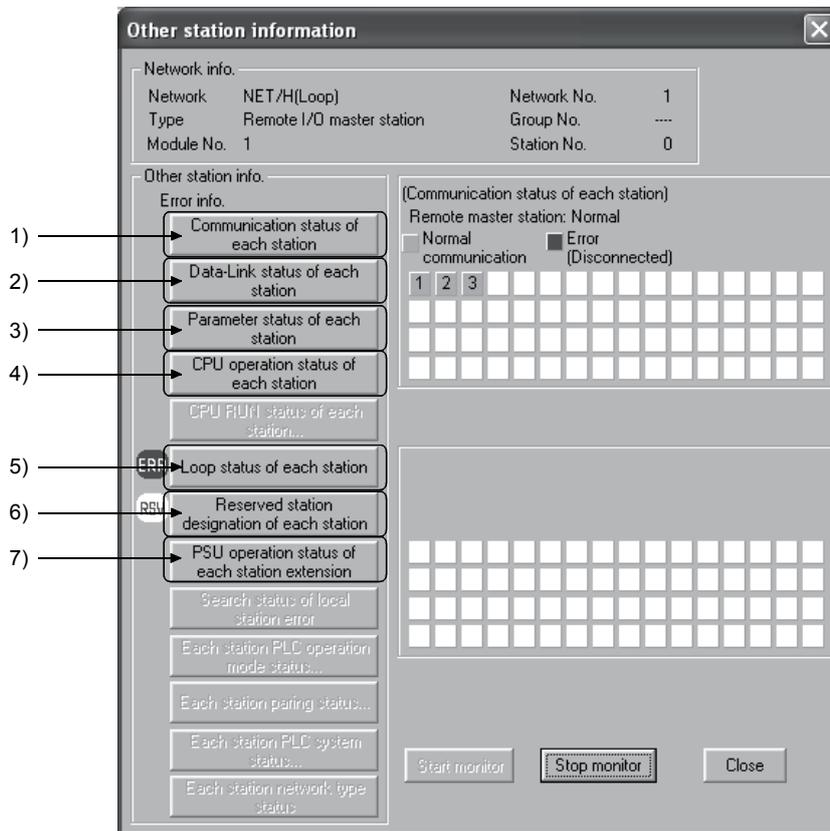

[Network info.]

This area displays the same information as the host information in Section 8.1.1.

[Other station info.]

When any faulty station, STOP-status station, reserved station, or externally-powered station is detected, the Error info. area displays the corresponding mark as follows.

Status	Display
When a faulty or STOP-status station is detected	ERR
When a reserved station exists	RSV
When power is supplied to a module with external power supply	PWR

By clicking each item button, the corresponding status of each station is displayed.

This information is displayed for the number of stations that equals to the "total number of link stations" set with the network parameters.

1) Communication status of each station (SW0070 to 73)


Displays the status of the baton pass (whether or not the transient transmission is possible).

- Normal display : Communication normal station or reserved station
- Highlighted display : Communication abnormal station (disconnected status)

- 2) Data-Link status of each station (SW0074 to 77)  
Displays the status of the cyclic transmission.
  - Normal display : Normal station or reserved station
  - Highlighted display : Abnormal station (data link not executed)
- 3) Parameter status of each station  
Displays the parameter communication status of each station (SW0078 to 7B).
  - Normal display : Other than during parameter communication, reserved station or unconnected station
  - Highlighted display : During parameter communicationDisplays the abnormal parameter status of each station (SW007C to 7F).
  - Normal display : Normal parameter, reserved station or unconnected station
  - Highlighted display : Abnormal parameter
- 4) CPU operation status of each station (SW0080 to 83, SW0088 to 8B)  
The operation status of the remote I/O module is displayed.  
When the communication status of each station is normal, the display is effective.
  - Normal indication : Normal, reserved station, and unconnected station
  - Reversed indication : Error : minor  
Severe : moderate (watchdog timer error etc.),  
major (hardware error etc.)
- 5) Loop status of each station (SW0091 to 94, SW0095 to 98)  
Displays the status of the forward/reverse loops in case of the optical loop system.
  - Normal display : Normal, reserved station or unconnected station
  - Highlighted display : Abnormal
- 6) Reserved station designation each station (SW0064 to 67)  
Displays the setting status of a reserved station.
  - Normal display : Unreserved station
  - Highlighted display : Reserved station
- 7) PSU operation status of each station extension (SW008C to 8F)  
Displays the supply status of the external power 24 V DC of the network module.  
When the communication status of each station is normal, the display is effective.
  - Normal display : Not powered by 24 V DC or network module without supply terminal
  - Highlighted display : 24 V DC powered

## 8.1.3 Network monitor details

The remote master station information, data link information and parameter status of the host station can be confirmed.

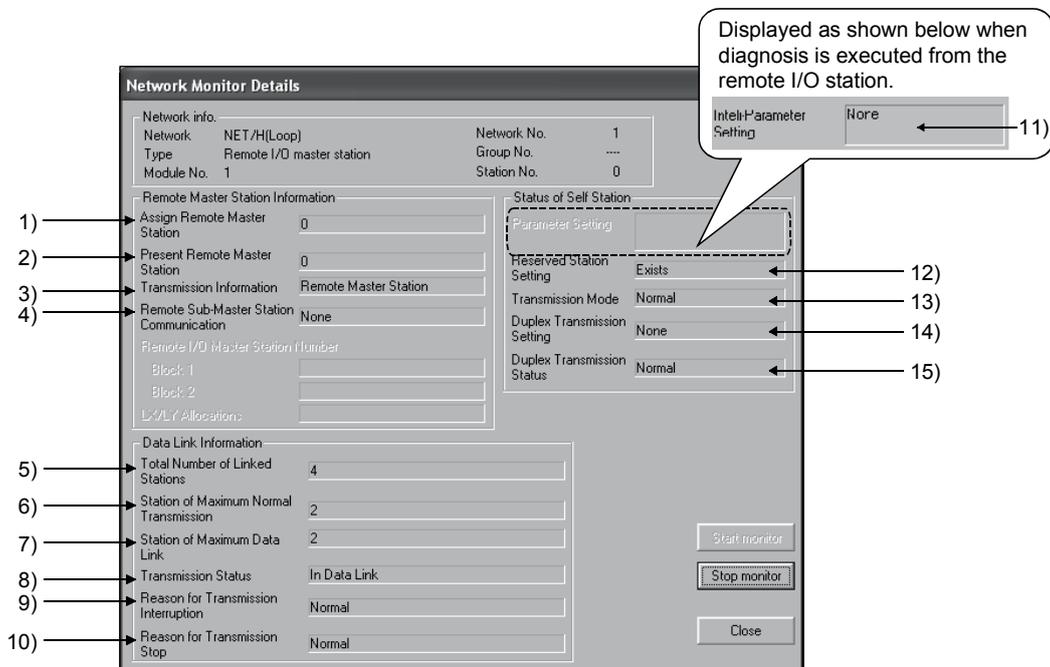

## [Network info.]

This area displays the same information as the host information in Section 8.1.1.

## [Remote master station info.]

- 1) Assign remote master station (SW0057)  
Displays the station number (0) of the remote master station.
- 2) Present remote master station (SW0056)  
Displays the station number of the station that actually controls the remote I/O station.
- 3) Transmission information (SB0056)  
Displays the station type that controls the remote I/O station.  
When the remote master station becomes faulty, the indication automatically changes to the remote sub-master station.
  - Remote master station communication/remote sub-master station communication
- 4) Remote sub-master station communication (SB0058)  
Displays the cyclic transmission specification status (communication by remote sub-master station) when the remote master station becomes faulty.
  - Yes/No

## [Data link information]

- 5) Total number of link stations  
Displays the total number of the link stations set with the parameter plus one (for the remote master station).
- 6) Station of maximum normal transmission (SW005A)  
Displays the highest station number that is executing the baton pass normally (the status where the transient transmission is possible).  
The T.PASS LED of the network module turns on for stations executing the baton pass normally.
- 7) Station of maximum data link (SW005B)  
Displays the highest station number that is executing data linking normally (cyclic transmission and transient transmission).  
The D.LINK LED of the network module turns on for stations executing data linking normally.
- 8) Transmission status (SW0047)  
Displays the communication status of the host.

Indication	Description
In Data Link	Data link is being executed.
Suspend Data link (Other)	Other station stopped the cyclic transmission.
Suspend Data link (Host)	The host station stopped the cyclic transmission.
Baton Pass (No area)	No area is assigned for the host's B/W transmission.
Baton Pass (Parameter Halt)	An error is identified in the host's parameters.
Baton Pass (No Receive)	The common parameters have not been received.
Disconnecting (No Baton)	Station numbers are duplicated or the cable is not connected.
Disconnecting (Link Error)	The cable is not connected.
In Test	The online/offline test is being executed.
Resetting	Hardware fault

- 9) Reason for transmission interruption (SW0048)  
Displays the causes why the host cannot communicate (transient transmission).  
For details on actions to take, refer to Section 8.3, "Error Codes."

Indication	Description/Action
Normal	Communications being executed normally
Offline	In offline status
Offline Test	The offline test being executed
Initial state	Error occurred (Error code: F101, F102, F105)
Shift Control Station	Error occurred (Error code: F104, F106)
Online testing	Error occurred (Error code: F103, F109, F10A)
Baton disappearance	Error occurred (Error code: F107)
Baton repetition	Error occurred (Error code: F108)
Same Station Present	Error occurred (Error code: F10B)
Control Station repetition	Error occurred (Error code: F10C)
Reception retry error	Error occurred (Error code: F10E)
Transmission retry error	Error occurred (Error code: F10F)
Timeout error	Error occurred (Error code: F110)
Network Disorder	Error occurred (Error code: F112)
Disconnecting...	Error occurred (Error code: F11B)
No baton to local station	Error occurred (Error code: F11F)
Error code:****	Error occurred (Refer to the displayed error code.)

## 10) Reason for transmission stop (SW0049)

Displays the causes why the host's data linking (cyclic transmission) was disabled.

Indication	Description
Normal	Communications being executed normally
There is a stop instruction (All)	Cyclic transmission to all stations is stopped from the host or other station.
There is a stop instruction (Host)	Cyclic transmission of the host station is stopped.
Stop instruction present (□)	Cyclic transmission of the host station is stopped from other station (station No. □).
No Parameter	No parameter can be received.
Illegal Parameter	Set parameters are not correct.
Host PLC Error	A moderate or major error occurred in the CPU module of the host station.
Suspend Communication	Data link error occurred on the host station.

[Status of self station]

## 11) Intelli-parameter setting (SB0054)

Displays the information of parameters written in the remote I/O station.

- Available/None

## 12) Reserved station setting (SB0064)

Displays the designation status of reserved stations.

- Yes/No

## 13) Transmission mode (SB0068)

Displays the link scan status.

- Normal mode
- Constant link scan

## 14) Duplex transmission setting (SB0069)

Displays the designation status of the multiplex transmission.

- Normal transmission
- Multiplex transmission

"----" is displayed for the bus type system.

## 15) Duplex transmission status (SB006A)

Displays the status of the multiplex transmission.

- Normal transmission
- Multiplex transmission

"----" is displayed for the bus type system.


REMARKS
---------

- (1) A station that detected a forward loop error executes the reverse loopback.
- (2) A station that detected a reverse loop error executes the forward loopback.

## 8.1.4 Error history monitor

With the error history monitor information, the status of the forward/reverse loop errors, communication errors, and transient transmission errors that have occurred can be checked. In addition, the detailed error history display and the error history can be cleared on this screen.

## (1) Error history monitor

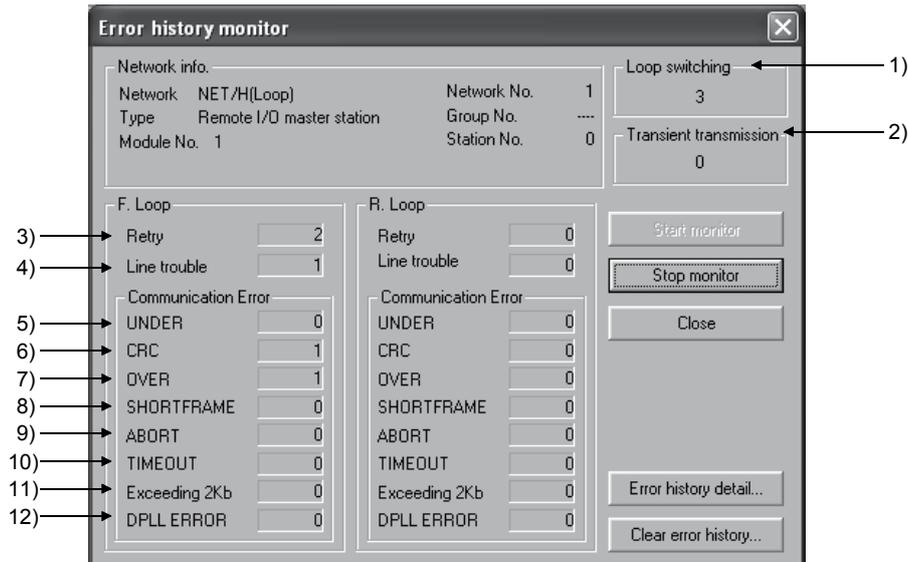

## [Network info.]

This area displays the same information as the host information in Section 8.1.1.

## 1) Loop switching (SW00CE)

Displays how many times loops were switched.

<Error Cause> Station's power-ON/OFF, faulty cable, noise, etc.

<Corrective Action> Refer to POINT on the next page.

## 2) Transient transmission (SW00EE)

Displays how many transient transmission errors have occurred.

<Error Cause> Power-OFF of the destination station, failure of the destination station's CPU module, faulty cable, noise, etc.

<Corrective Action > Check the error code of the transient transmission error from "Error history detail..." and correct the error referring to Section 8.3.

## 3) Retry (SW00C8, SW00C9)

Displays the number of retries (communication retries when a communication error occurs.)

<Error Cause> Station's power-ON/OFF, faulty cable, noise, etc.

<Corrective Action> Refer to POINT on the next page.

## 4) Line trouble (SW00CC, SW00CD)

Display how many line errors have occurred.

<Error Cause> Power-OFF of the adjacent station, faulty cable, noise, etc.

<Corrective Action> Refer to POINT on the next page.

- 5) UNDER (SW00B8, SW00C0)  
Displays how many UNDER errors have occurred.  
<Error Cause> Power-ON/OFF of the adjacent station, faulty cable, etc.  
<Corrective Action> Refer to the following POINT.
- 6) CRC (SW00B9, SW00C1)  
Displays how many CRC errors have occurred.  
<Error Cause> Isolation of the sending station, faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 7) OVER (SW00BA, SW00C2)  
Displays how many OVER errors have occurred.  
<Error Cause> Faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 8) SHORTFRAME (SW00BB, SW00C3)  
Displays how many short frame errors (messages too short) have occurred.  
<Error Cause> Faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 9) ABORT (SW00BC, SW00C4)  
Displays how many AB and IF errors have occurred.  
<Error Cause> Isolation of the sending station, faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 10) TIMEOUT (SW00BD, SW00C5)  
Displays how many timeout errors have occurred.  
<Error Cause> Data link monitoring time too short, faulty cable, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 11) Exceeding 2 kb (SW00BE, SW00C6)  
Display how many times messages exceeding 2k bytes were received.  
<Error Cause> Faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.
- 12) DPLL ERROR (SW00BF, SW00C7)  
Displays how many times the DPLL errors occurred.  
<Error Cause> Faulty cable, hardware failure, noise, etc.  
<Corrective Action> Refer to the following POINT.


POINT
-------

The number of each error occurrence does not necessarily mean a problem unless the count value rises frequently during operation. If it rises frequently, observe the following.

- 1) Check the power-ON/OFF status of the host and other stations.
- 2) Check the condition of the cables and connectors. (Disconnection or looseness of the connectors, cable breakage, cable length, etc.)
- 3) Perform the self-loopback test, internal self-loopback test and hardware test.
- 4) Perform the station-to-station test, forward/reverse loop test.
- 5) Referring to the user's manual (for hardware) of the network module, perform the wiring again. Also, set the system again referring to the user's manual of the CPU module.

(2) Error history monitor details

Displays the causes of loop switches and the history of the transient transmission errors.

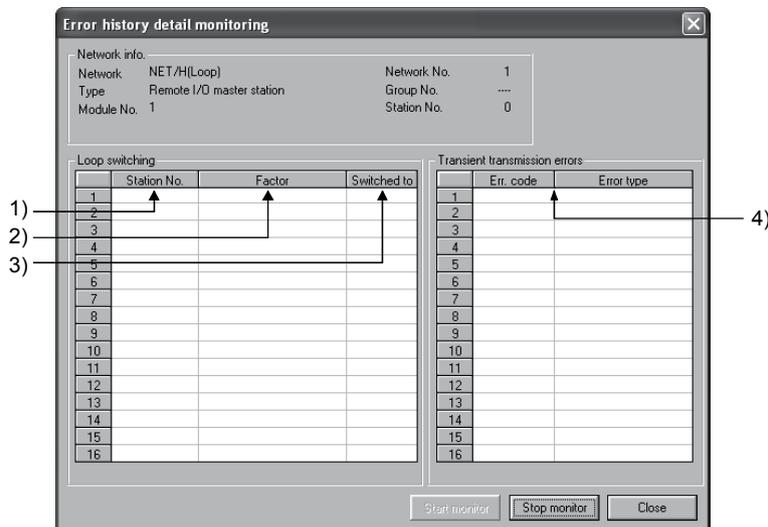

[Loop switching]


- 1) Station No. (SW00E0 to 00E7)  
Displays the number of the station (not necessarily an adjacent station) that requested the loop switch and loopback.
- 2) Factor (SW00D0 to 00DF)  
Displays the reason why the loop switch and loop back are executed.
  - Normal return
  - Forward loop hardware error : Cable or optical module error
  - Reverse loop hardware error : Cable or optical module error
- 3) Switched to (SW00D0 to 00DF)  
Displays the data link status after the loop switch.
  - Multiplex transmission: Forward loop/reverse loop normal
  - Forward loop transmission
  - Reverse loop transmission
  - Loopback transmission

[Transient transmission errors]

- 4) Err. code, Error type (SW00F0 to 00FF)  
Displays the error code.  
Refer to Section 8.3

(3) Clear of error history

Select the check box of the items whose error history should be cleared from the list of clear types. The error history can be cleared for each clear type.

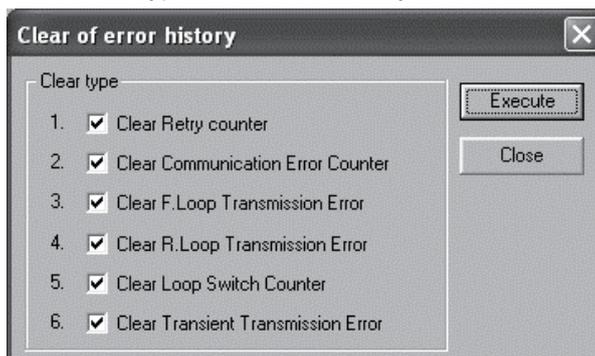

8.2 Troubleshooting

Check the programmable controller CPU for an error before starting the troubleshooting of the network module and network.  
 If the RUN LED of the programmable controller CPU is off/flickering or the ERR. LED is on, identify the error that occurred in the programmable controller CPU, and take corrective action.

(1) Check that the host has joined the network.


Start the troubleshooting of the host by monitoring the status of the host.

First, check whether or not the host has joined the network.


This is important because it is not possible to monitor the status of other stations and to perform troubleshooting on other stations unless the host has joined the network.

The troubleshooting flowchart shown below explains the sequence from checking an error to enabling a baton pass (in order to join the network).

(a) For the master module

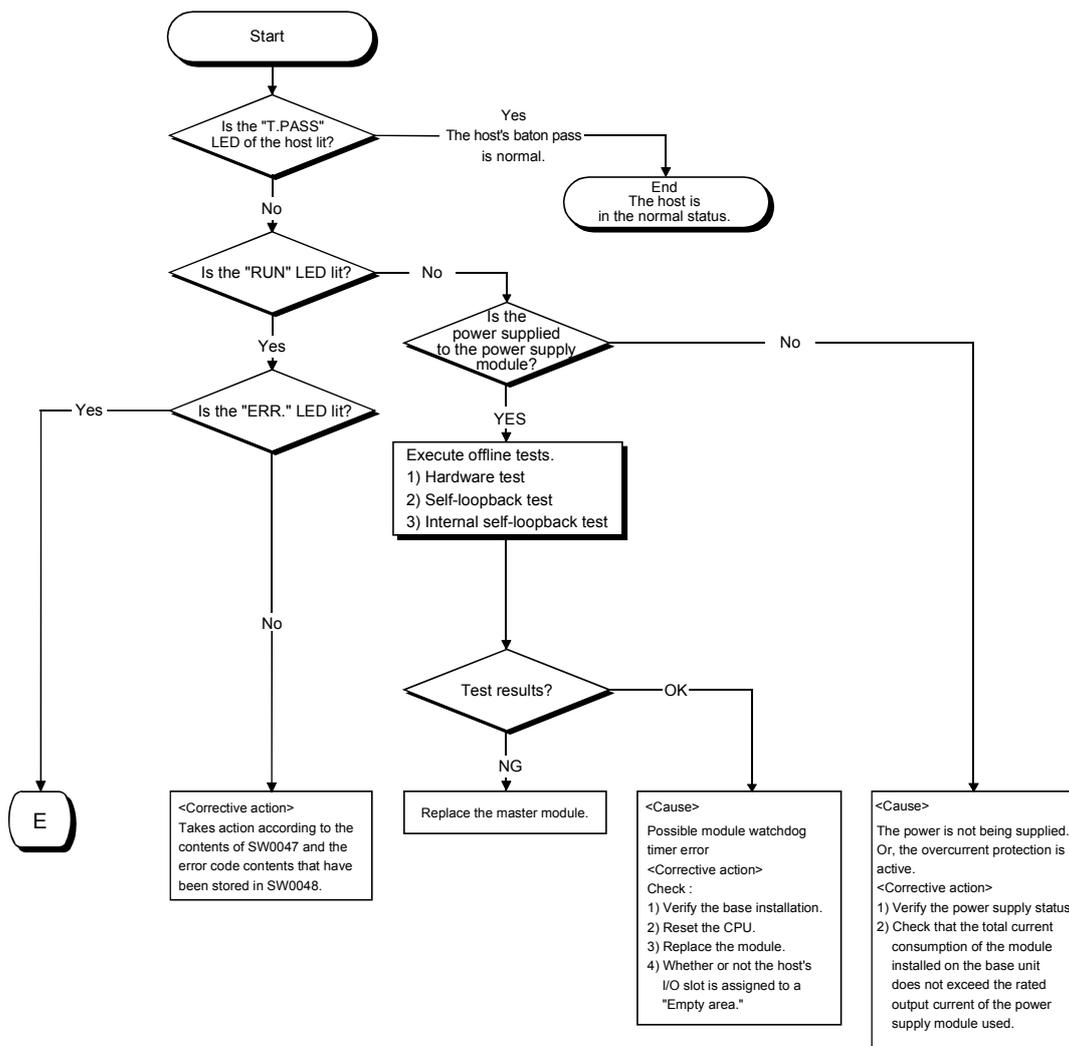

(b) For the remote I/O module

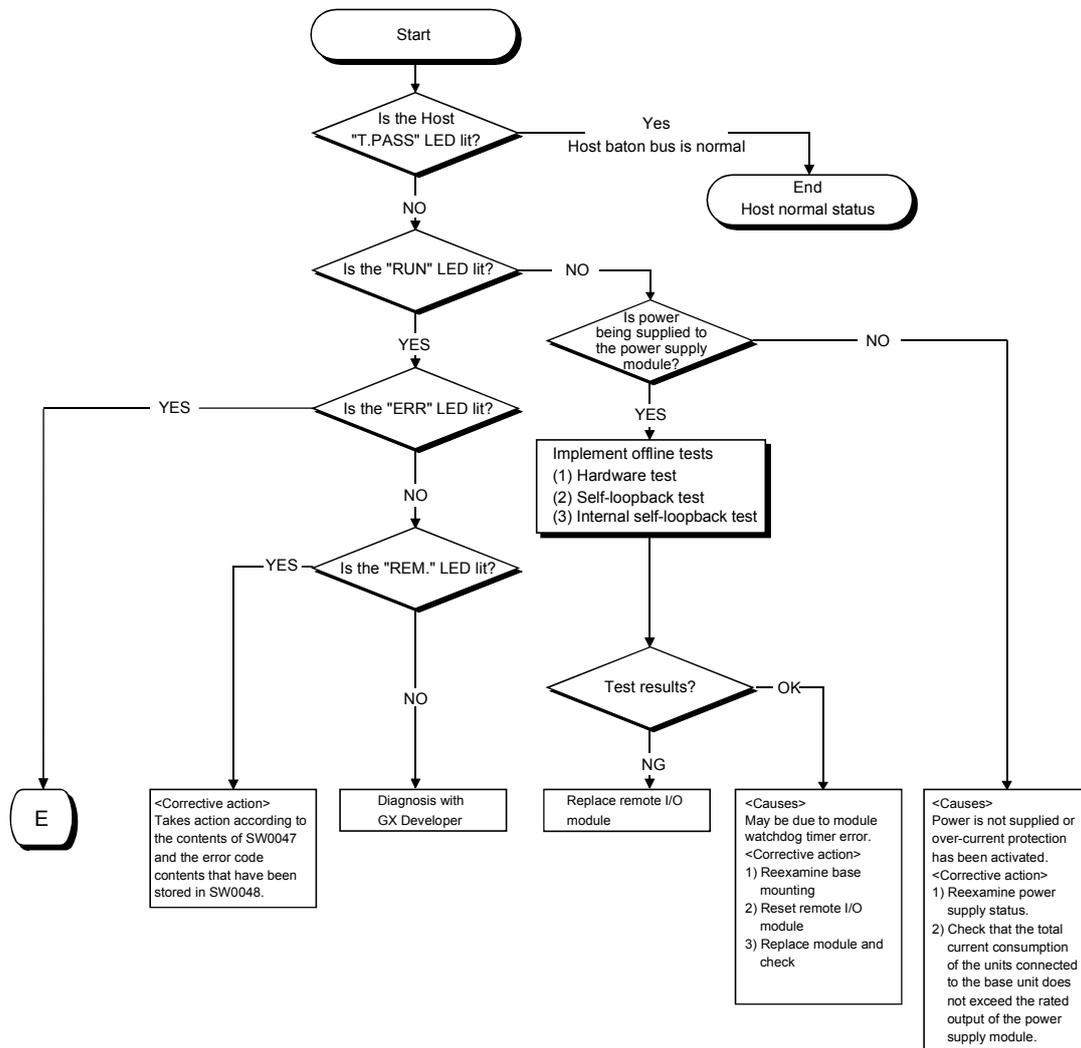



<b>POINT</b>
<p>If the "T. PASS" LED turns on and off improperly and looks instable, refer to the following.</p> <p>&lt;Cause&gt; The line status is assumed to be instable.</p> <p>&lt;Troubleshooting&gt;</p> <ol style="list-style-type: none"> <li>1) Check the connector for loose connection and the cable for a break.</li> <li>2) Check that the cable used conforms to the specifications.</li> <li>3) Check that the overall length and interstation distance conform to the specifications. (Refer to Section 4.8 Cable Connection.)</li> </ol>


(2) From monitoring the network status to troubleshooting of a faulty station

The following flowchart illustrates the procedure for monitoring the status of the entire network, detecting a faulty station, and then performing troubleshooting for the applicable station.


The status of the entire network is monitored with GX Developer.

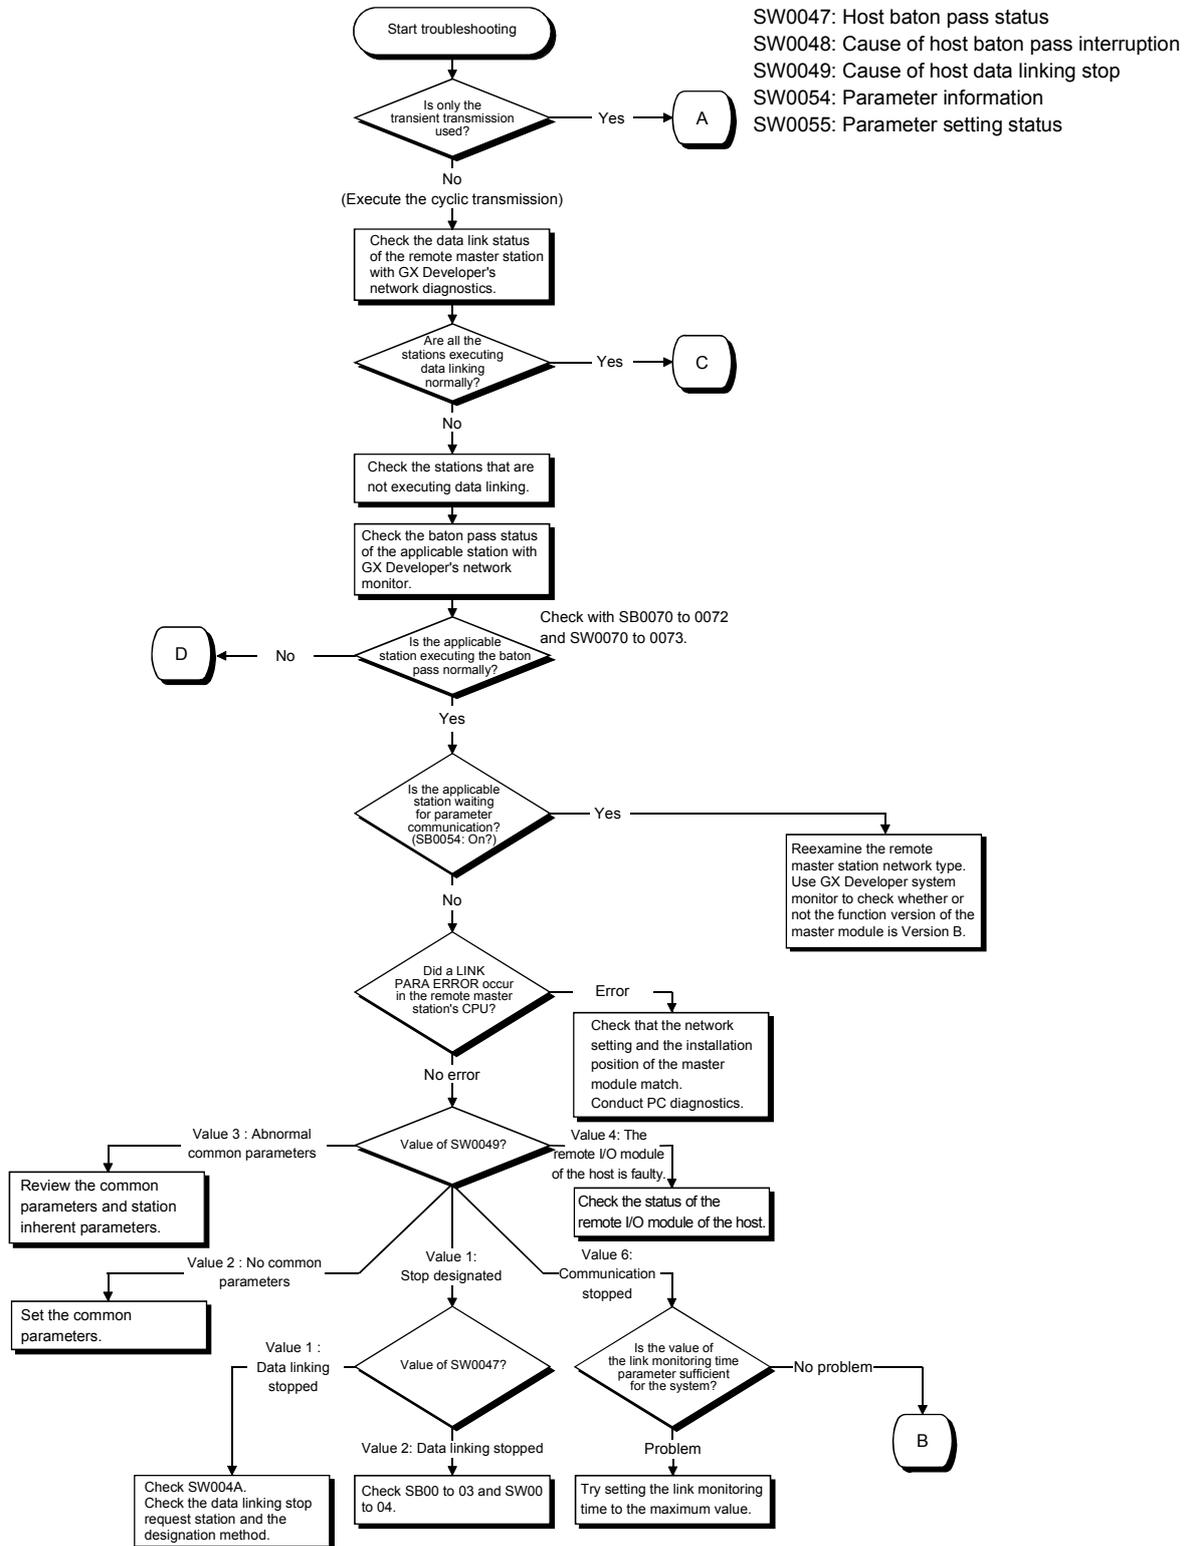

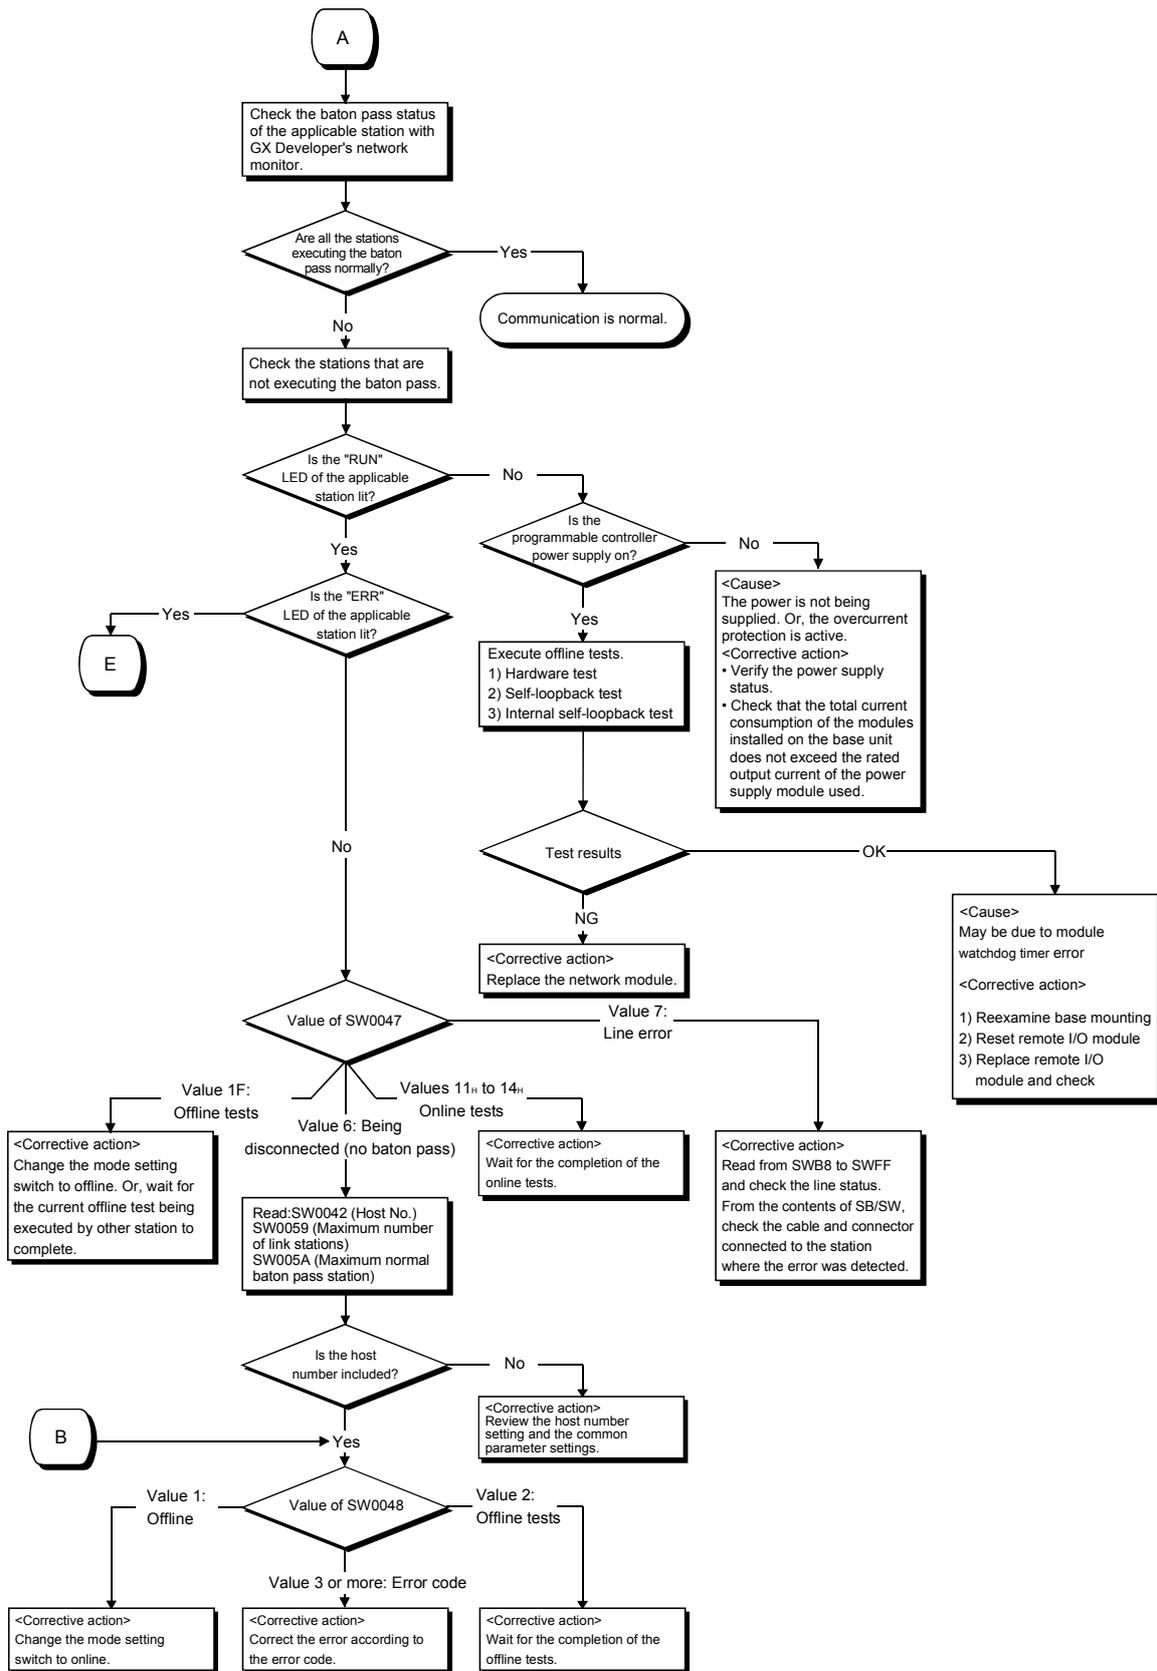

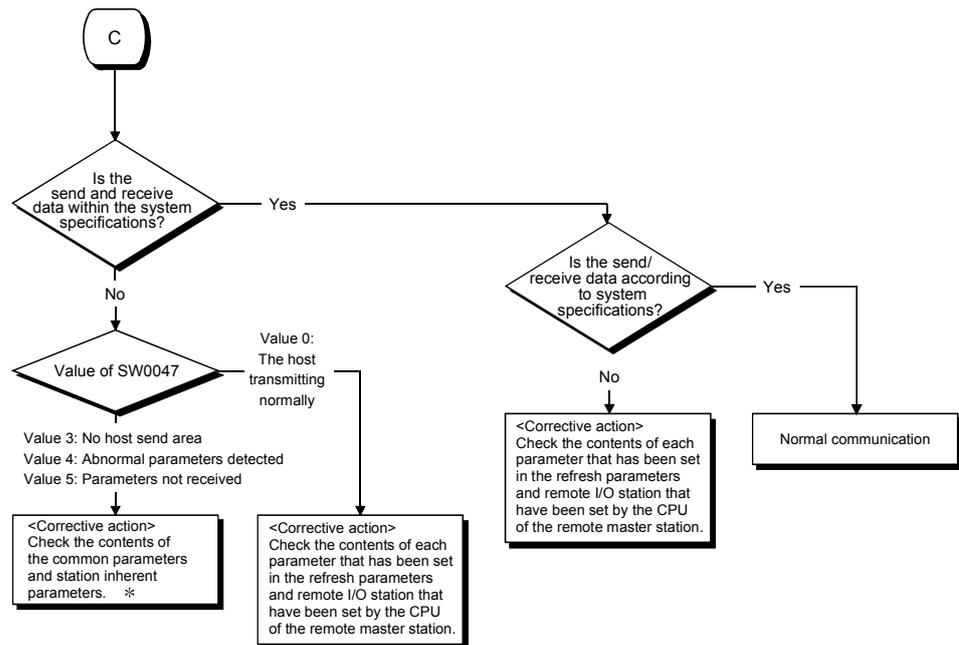

\* : If SW0047=3, consider the following as a possible cause.  
 Only the station number has been set in the common parameters and there is no link device assignment.

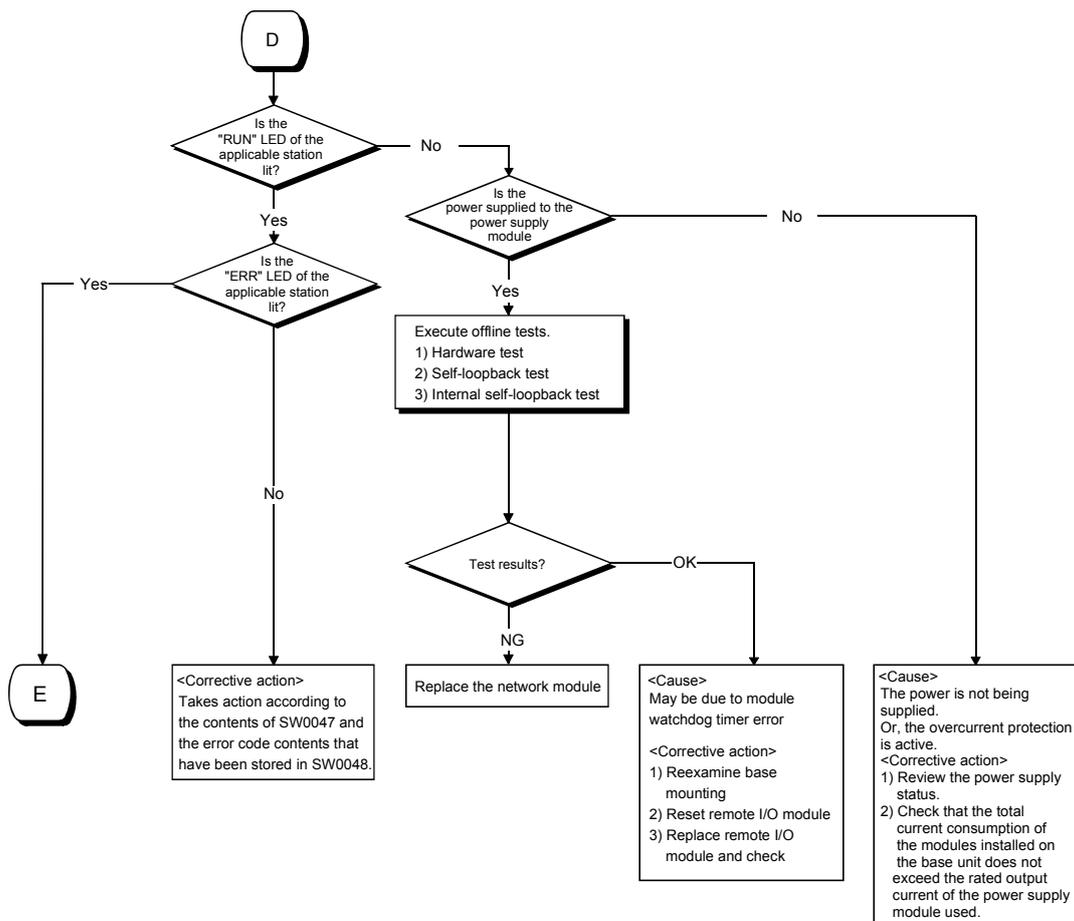



<Cause 1>

M/S error or SW error is assumed.

<Corrective action 1>

- 1) Check for duplicate station number, remote master station duplication or switch setting error.
- 2) Take corrective action according to the contents of SW0047 and the error code stored in SW0048.

<Cause 2>

Programmable controller CPU or remote I/O station error is assumed.

<Corrective action 2>

Check the programmable controller CPU or remote I/O station error in the PLC diagnostics and restore the CPU to normal. (Refer to Section 8.2.1.)

## 8.2.1 Items to be checked first

Check item	Checking procedure
Monitor the transmission status of each station with GX Developer's network diagnostics.	Check the CPU module status of the faulty station, the status of the network modules, the loop status of each station to search for the location where the error occurred.
Is the "ERR." LED of the CPU module still lit or flickering?	Read the error code using GX Developer, and take proper measures against the error. (For details, refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection). Check the following when LINK PARA. ERROR occurs. 1) Check whether the starting I/O No. in the network setting matches the slot where the network module is installed. (Refer to Section 5.1.2.) 2) Check for consistency in the network type and the station number of the network module. (Refer to Section 5.1.1.) 3) Check if the PLC side device ranges in Refresh parameters are within the ranges set in [PLC parameter] - [Device]. (Refer to Section 5.1.5 (2).) If refresh parameters have not been set, set them according to the changes made in [Device] under [PLC parameter]. (Refer to Section 5.1.5 (3).)
Are LEDs of the remote I/O station operating normally?	Check the "RUN", "ERR", and "L ERR" LEDs and take the corrective action if any error is found. (Refer to Section 4.2.)
Are the "RUN," "REM.," "T.PASS," and "D.LINK" LEDs of the remote I/O module on? Are the "ERR.," and "L ERR" LEDs OFF?	If the "RUN," "REM.," "T.PASS," and "D.LINK" LEDs are OFF or the "ERR." and "L ERR." LEDs are ON, diagnose the remote I/O module by GX Developer. (Refer to Section 4.2.) If the "T. PASS", "L ERR." LED turns on and off improperly and looks instable, refer to the following. <Cause> The line status is assumed to be instable. <Troubleshooting> 1) Check the connector for loose connection and the cable for a break. 2) Check that the cable used conforms to the specifications. 3) Check that the overall length and interstation distance conform to the specifications. (Refer to Section 4.8 Cable Connection.)
Are "RUN", "REM." LEDs on the remote I/O module on?	If the LEDs are out, use GX Developer to diagnose the remote I/O module.
Has the error reset process using SM50/SD50 been performed after the online module change function was executed on a remote I/O station?	Perform the error reset process by the procedure below after executing the online module change function. 1) Perform the error reset process on the remote I/O station. 2) Perform the error reset process on the programmable controller CPU of the master station.
Are the ERR contacts of the power supply modules of the remote master station and remote I/O station ON?	1) If the ERR contact of the power supply module of the remote master station is OFF, check the status of the power supply connected to the power supply module of the remote master station, or diagnose by GX Developer if a stop error has not occurred on the CPU module of the remote master station. 2) If the ERR contact of the power supply module of a remote I/O station is OFF, check the status of the power supply connected to the power supply module of the remote I/O station, or diagnose by GX Developer if a stop error has not occurred on the remote I/O module of the remote I/O station. However, the ERR contact of the power supply module of the remote I/O station is turned off instantaneously when parameters are received from the remote master station after the parameters of the remote I/O station are changed. (The ERR contact is turned on when communication becomes ready due to the reception of parameters.)

## 8.2.2 Unable to perform data link in the entire system

Check item	Checking procedure
Monitor the communication status of each station with GX Developer's network diagnostics.	Check the line condition with GX Developer's network diagnostic loop test (only in case of optical loop test). Check the faulty station's CPU module and network module. Check the network module and data link cable with the self-loopback test and station-to-station test of the offline tests. Check whether data linking is stopped for all stations.
Are the network parameters set for the remote master station?	Check whether the network parameters from the remote master station's CPU module are set.
Are the switch settings of the remote master station's master module correct?	Check the station number setting switch and mode setting switch.
Are the switches of the network modules on all stations set in the correct position?	Make sure that the mode setting switches of the network modules on all stations are in the same position.
Is the link monitoring time set to a sufficient value?	Set the link monitoring time to the maximum value and check whether or not data linking can be performed.
Did the remote master station go down?	Check the on/off status of the LEDs of the master modules of the remote master station.

## 8.2.3 Data link was disabled by resetting or powering off a station

Check item	Checking procedure
Is the cable wired properly?	Check the wiring status with GX Developer's network diagnostic loop test. (Refer to Section 4.10.1.) In the case of the coaxial bus system, check the coaxial connector connection on each station and connections between the coaxial cables and coaxial connectors.
Are the cables disconnected?	Check the status of each station to see whether the entire system is faulty or a specific station is faulty, and locate the faulty area.
Are the switches of the network modules on all stations set in the correct position?	Make sure that the mode setting switches of the network modules on all stations are in the same position.
Is the setting of the link monitoring time sufficient?	Set the link monitoring time to the maximum value and check whether or not data linking is possible. If the "L ERR" LED of a normal station is lit, check the TIME error with the GX Developer's network diagnostics.

**POINT**

Do not reset stations which are adjacent each other an optical loop system (adjacent stations on the wire) simultaneously (resetting by the reset switch of the remote I/O station or resetting by the key switches of the programmable controller CPUs of the remote master station and remote sub-master station). Otherwise, data link may not be able to be established.  
If initialization and so on is necessary on adjacent stations simultaneously, turn off and on the power supply.

## 8.2.4 Unable to perform data link of a specific station

Check item	Checking procedure
Monitor the transmission status of each station.	Perform line monitoring of the network diagnostics of GX Developer, check for any abnormally communicating station and check the loop status. Also, check whether or not data linking is stopped. In case of an optical loop system, check the line condition and transmission status of each station as well, using the loop test of GX Developer's network diagnostics.
Is the network module of the faulty station normal?	Check whether or not an error or problem occurred in the CPU module and network module of the faulty station.
Was the loop error caused by the network module or the data link cable?	Check whether or not the network module works normally with the self-loopback test of the offline tests. Check whether or not the data link cable is normal with the loop test of the offline tests.
Are the remote master station's parameters correct?	Check that the total number of link stations is set to the largest number of the connected stations or more, and check that the stations that cannot communicate are designated as reserved stations.
Are the control station's parameters normal?	Read the network parameters from the faulty station's CPU module and check that the network settings such as the network type, start I/O number and network number are correct.
Are the switch settings of the network module correct?	Check the station number setting switch and the mode setting switch.
Has any data link cable been disconnected?	Perform the line monitoring or loop test in Network diagnostics of GX Developer to check the wiring status.

## 8.2.5 Transmitted/received data are abnormal

## (1) The cyclic transmission data is abnormal

Check item	Checking procedure
Is the sequence program correct?	Stop the CPU modules of both the remote master station and turn the link device of the sending station on and off by GX Developer's test operation to check whether or not data is sent to the receiving station. If it is normal, review the sequence program. If it is abnormal, review the remote master station's common parameters and refresh parameters.
Are the parameter settings of the remote master station correct?	Review the range of the link devices assigned to the sending station. Check the setting of the refresh parameters to see in what range of LB/LW/LX/LY of the network module the device range used by the sequence program is stored.

## (2) The transient transmission is abnormal

Check item	Checking procedure
Did an error occur while the transient transmission was being executed?	Check the error code at the transient transmission execution and correct the error according to the error code table in Section 8.3.
	Confirm the message screen of GX Developer and the error code of the response packet of the dedicated instruction/MELSEC communication protocol, and take measures based on the error code table in section 8.3.
	Confirm if transient transmission is executed for ACPU, QnACPU, or QCPU (except for Redundant CPU) by specifying the control system or standby system (error code 4B00).
	Confirm if transient transmission is executed for a single CPU system by specifying a CPU No. of a multiple CPU system (error code 4B00).
Response timeout occurs.	Confirm if a value out of the available range is set up for the CPU type of the target station.
Has the transient transmission is executed routing via the network module of standby system within the redundant system?	Change the routing settings of the network module on the control system.
Has a stop error occurred on the route CPU module or the CPU module of the target station in the redundant system?	Clear the stop error on the route CPU module or CPU module of the target station. Change the route station No. or the station No. of the target station.
Are the routing parameter settings correct?	Check the routing parameters with the communication test of GX Developer's network diagnostics.
Is the network No. parameter correct?	Check the network No. parameter. If the parameter is not set, the network No. has been set to 1 (default); so check other station's network No..

## 8.2.6 Link dedicated instruction execution is not complete

Check item	Checking procedure
Is the link dedicated instruction issuing station online?	Place the link dedicated instruction issuing station online and execute the link dedicated instruction. Use SB0043 as an interlock to confirm the online status in the sequence program.

## 8.2.7 Multiplexed remote I/O network for redundant system does not operate normally

- (1) Redundant CPU does not perform system switching even when the data link cable is disconnected.

Check item	Checking procedure
Isn't the power supply module of the standby system turned off?	Confirm the status of the external power supply of the standby system.
Hasn't a stop error occurred on the standby system CPU?	Connect GX Developer to the standby system CPU and execute PLC diagnostics to check if any error has occurred.
Hasn't a stop error occurred on the master module mounted on the main base unit of the standby system?	Confirm the operation status of the master module of the standby system.

- (2) Errors on a remote I/O station cannot be detected by the programmable controller CPU of the master operation station.

Check item	Checking procedure
Hasn't an error occurred on a remote I/O station of function of version C or older?	Check the product information of the remote I/O module of the remote I/O station by the system monitor of GX Developer.

- (3) Cyclic data are turned off continuously or instantaneously when system switching is performed on Redundant CPU.

Check item	Checking procedure
Is the send range of the host a tracking range?	Confirm if the devices in the send range of the host is set as tracking devices with the parameters of GX Developer.

## 8.2.8 Unable to detect a minor error (continue error) on a remote I/O station

Check item	Check procedure
Has SB000F of the remote master station turned ON?	Turn OFF SB000F of the remote master station.

8.2.9 Checking online for incorrect optical fiber cable connection

This section explains the checking procedure for incorrect optical fiber cable connection (IN-IN, OUT-OUT) during online and the link special registers (SW009C to SW009F) used for the check.


Unlike the loop test, the checking procedure given in this section allows a check without stopping a data link.

If incorrect cable connection is found, correct the wiring after shutting off all phases of the system.

<b>POINT</b>
<p>Before starting the check given in this section, make sure that the following conditions are satisfied.</p> <p>If these are not satisfied, conduct a loop test to make a check.</p> <ul style="list-style-type: none"> <li>▪ The optical fiber cables have no breaks. (Both the forward and reverse loop cables are normal.)</li> <li>▪ There are no stations having data link error (power off, MELSECNET/H module failure).</li> </ul>

(1) Checking procedure


Follow the procedure given below to check for incorrect optical fiber cable connection (IN-IN, OUT-OUT) during online.

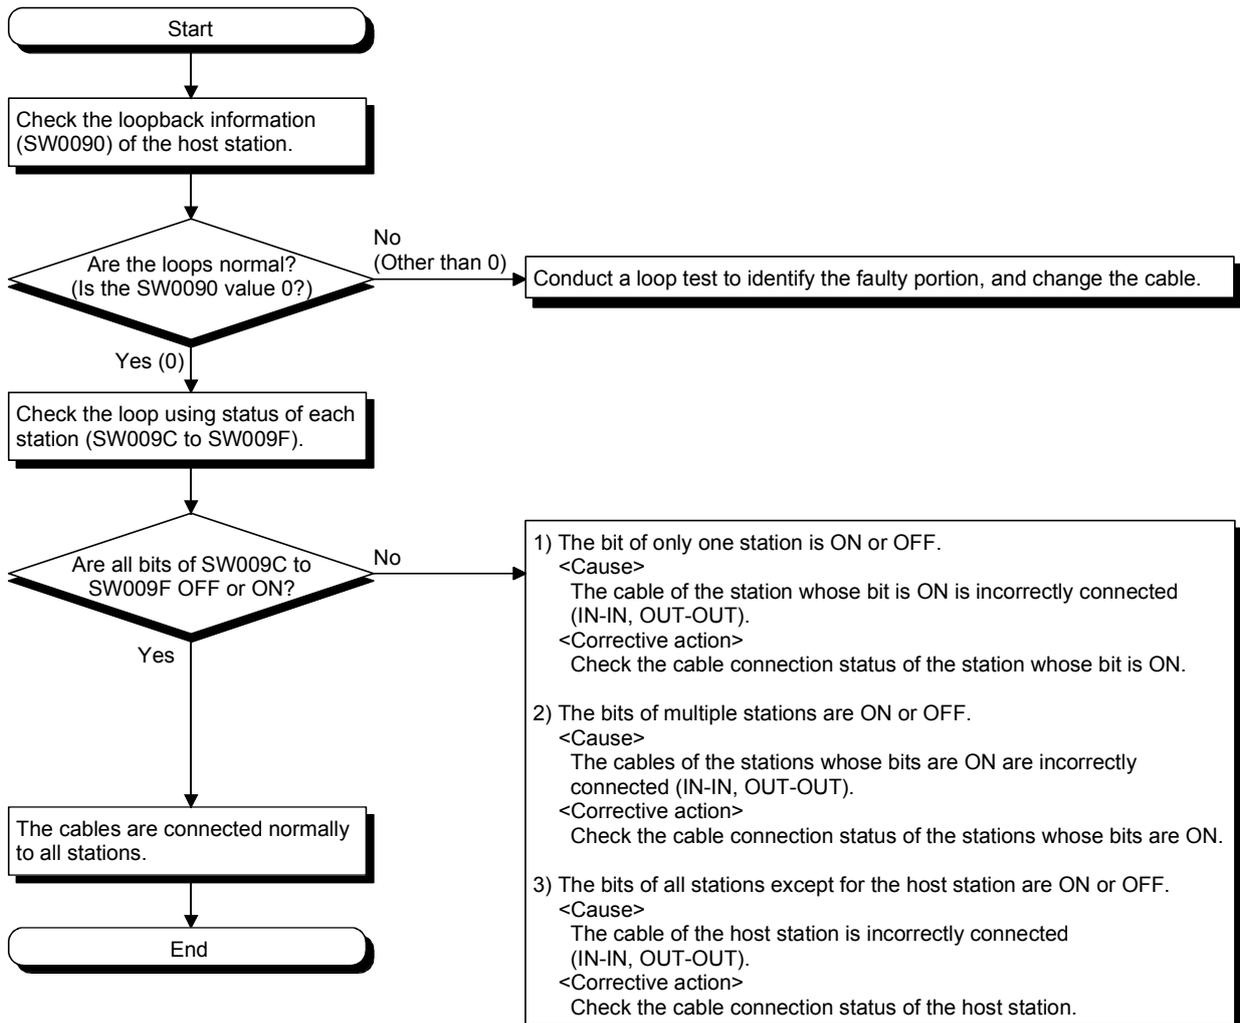

(2) Example of checking SW009C to SW009F

(a) When cables are connected incorrectly at a remote I/O station (Station No.2)

1) Wiring diagram

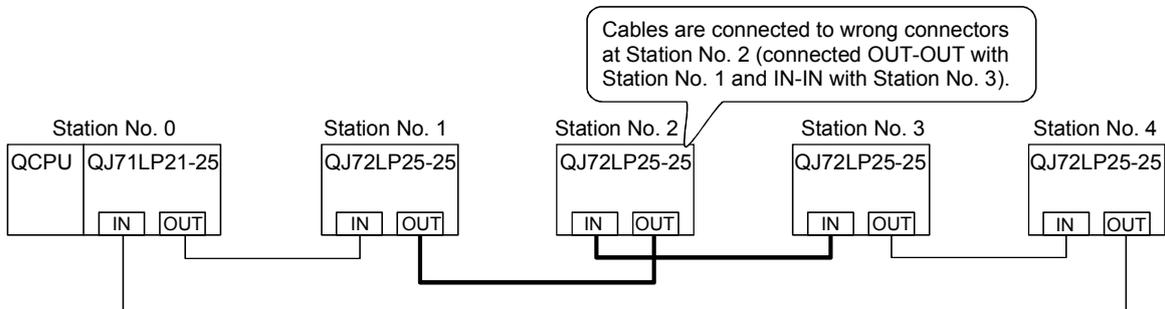


2) SW009C to SW009F status

Station No.	SW009C to SW009F status																																				
Station No. 1	Only Station No. 2 (bit 1) is ON or OFF.																																				
Station No. 3	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		0	0	1	0	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		0	0	1	0																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				
Station No. 4	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		1	1	0	1	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		1	1	0	1																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				
Station No. 2	All stations (bit 0, bit 2, bit 3) than Station No. 2 (bit 1) are ON or OFF.																																				
	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		1	1	0	1	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		1	1	0	1																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				

(b) When cables are connected incorrectly at the remote master station (Station No.0)

1) Wiring diagram

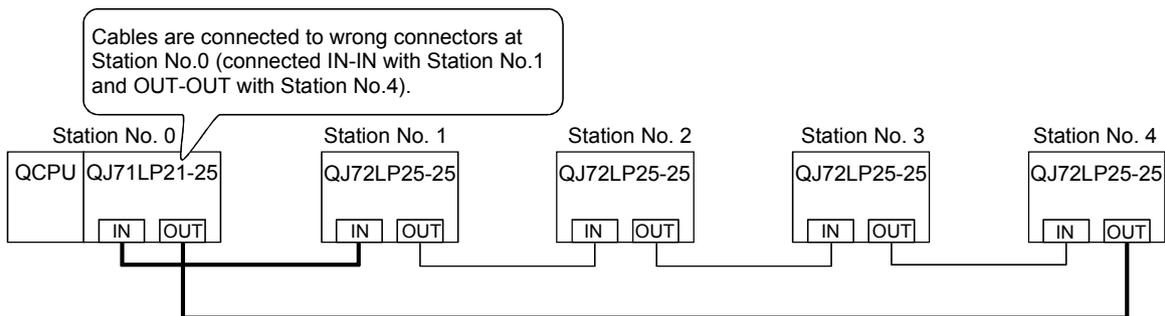

2) SW009C to SW009F status

Station No.	SW009C to SW009F status																																				
Station No. 1	All areas for Station No.1 to 4 (bit0 to bit3) turn ON.																																				
Station No. 2	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		1	1	1	1	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		1	1	1	1																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				
Station No. 3	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		1	1	1	1	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		1	1	1	1																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				
Station No. 4	<table border="1"> <tr> <td>b15</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW009C</td> <td>0</td> <td></td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>SW009D</td> <td colspan="6">0</td> </tr> <tr> <td>SW009E</td> <td colspan="6">0</td> </tr> <tr> <td>SW009F</td> <td colspan="6">0</td> </tr> </table>		b15	to	b4	b3	b2	b1	b0	SW009C	0		1	1	1	1	SW009D	0						SW009E	0						SW009F	0					
b15	to	b4	b3	b2	b1	b0																															
SW009C	0		1	1	1	1																															
SW009D	0																																				
SW009E	0																																				
SW009F	0																																				

8.3 Error Codes

8.3.1 MELSECNET/H error code list


When data linking cannot be performed using the cyclic transmission, or when communication cannot be performed normally using the transient transmission with an instruction of a sequence program or GX Developer, the error codes (hexadecimal) are stored in the link special register or displayed on the GX Developer's system monitor.

(1) Checking error codes with GX Developer


Check error codes with GX Developer by the procedure below.

- (a) Select "System Monitoring" from the "Diagnose" menu of GX Developer to display the system monitoring screen.
- (b) On the displayed system monitoring screen, double-click the network module you confirm to select it. After it is selected, the module detailed information screen is displayed for the remote master station and the PC diagnosis screen is displayed for remote I/O stations.

Remote master station system monitor

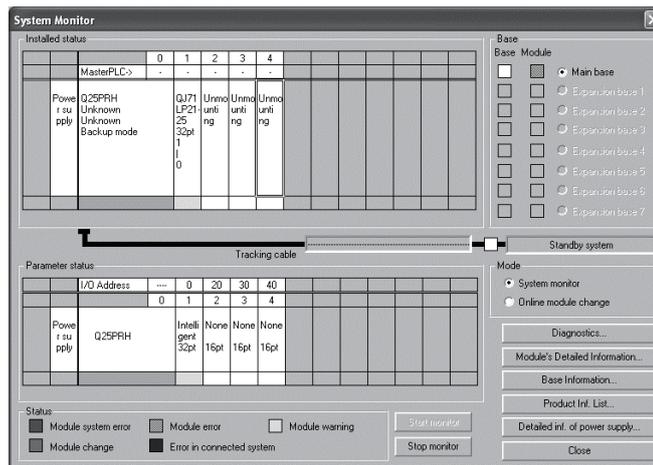

Remote I/O station system monitor

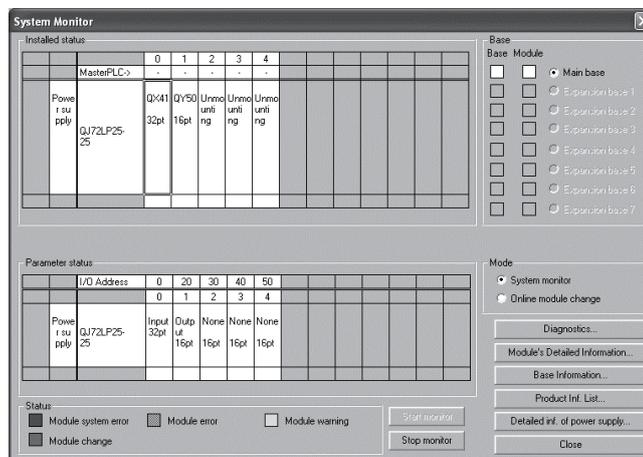

- (c) For the remote master station, check the code, history, description, and action of the error that occurred on the network module on the portions of the module detailed information screen shown below.  
For the error code of the transient instruction issued by a programmable controller program, check the device data of section (3).

Module detailed information screen for remote master station




Check the codes, history, description, and action of an error of the master module

For remote I/O stations, check the present error and its history on the PC diagnosis screen. \*1

The **Clear log** button clears the error history.

PLC diagnosis screen of remote I/O station

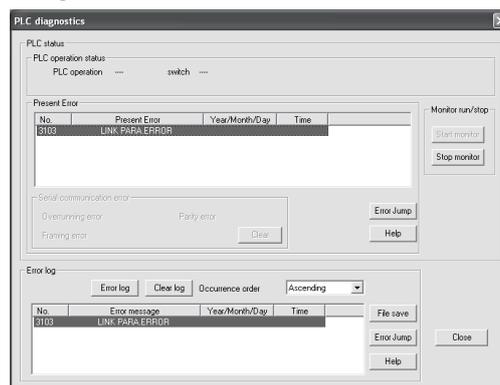

When the remote I/O network starts, if the remote I/O station starts earlier than the remote master station, an error will occur at the remote I/O station and the time of the error will appear as 2000 year 0 month 00 day 0:0:0. Also, if communication is interrupted due to a broken cable or other reason, time data will not be renewed after the communication has been disrupted.

\*1: When the first five digits of serial No. of the remote I/O module is "10012" or later, the error history is retained even if the power is turned off.

**(2) Checking error codes with devices**

To monitor the error code from an Ethernet module and so on using the MELSEC communication protocol, check the link special register below.

- 1) SW0020: Module status
- 2) SW0048: Cause of baton pass interruption
- 3) SW0049: Cause of data link stop
- 4) SW004B: Host CPU status
- 5) SW004D: Data linking start status (host)
- 6) SW004F: Data linking stop status (host)
- 7) SW0051: Data linking start status (entire system)
- 8) SW0053: Data linking stop status (entire system)
- 9) SW0055: Parameter setting status
- 10) SW00EE: Transient transmission error
- 11) SW00EF: Transient transmission error pointer
- 12) SW00F0 to 00FF: Transient transmission error history
- 13) SW01C4: Remote sub-master station switching result



Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F10B	Duplicate station number error	Review the station number setting. The setup confirmation test of network diagnosis is effective.
F10C	Duplicate control station error	Review the station number setting. The setup confirmation test of network diagnosis is effective.
F10D	Offline status	Review the mode setting, and change it to online.
F10E	Number of receive error retries exceeded	Check for faulty cables, faulty hardware, incorrect cable wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations.
F10F	Number of send error retries exceeded	
F110	Timeout error	The setup confirmation test and loop test of network diagnosis are effective.
F111	Corresponding station error (Baton pass to the corresponding station not executed)	Review the status of the corresponding station and the parameter and switch settings (to see if there is a parameter error and the corresponding station is the control station and properly set). Confirm the power supply status of the corresponding station (to see if it is repeatedly turned on and off). Check for faulty cables, faulty hardware, incorrect cable wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations. The setup confirmation test and loop test of network diagnosis are effective.
F112	Faulty loop status	Check for faulty cables, faulty hardware, incorrect wiring, and duplication of station numbers, control stations, and remote master stations. Confirm the power supply status of each module (to see if it is repeatedly turned on and off). Confirm whether network modules in MESLECNET/H and MELSECNET/10 modes exist together (confirm the control station type).
F113	Send failure (Baton pass to the host station not executed)	Retry after a little while. If the error reoccurs as a result of a retry, check for faulty cables, faulty hardware, incorrect cable wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations. Wait until SB0047 (baton pass status) and SB0049 (data link status) are recovered.
F114	Send failure	Retry after a little while. If the error reoccurs as a result of a retry, check for faulty cables, faulty hardware, incorrect cable wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations. Wait until SB0047 (baton pass status) and SB0049 (data link status) are recovered.
F115	Improper function code	Check for faulty cables, faulty hardware, incorrect wiring, duplication of station numbers, and duplication of control stations.
F116	Delayed online test processing	
F117	Send failure	Check for faulty cables, hardware failure, noise, incorrect wiring, and absence of terminal resistors (when a bus is used).
F118	Send failure (baton regeneration)	Wait until SB0047 (baton pass status)/SB0049 (data link status) is turned off (normal).
F11A	Send failure (multiplex transmission stopped)	Wait for a while and execute again.
F11B	Being disconnected	Review the parameter and switch settings (to see if there is a parameter error and the corresponding station is the control station or remote master station and properly set). Check for faulty cables, faulty hardware, noise, incorrect wiring, and duplication of station numbers, control stations, and remote master stations.
F11C	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F11F	Initial status (no baton addressed to host)	Check for the operation status of the control/sub-control station, faulty cables, incorrect cable wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations. Confirm whether network modules in MESLECNET/H and MELSECNET/10 modes exist together (confirm the control station type).
F120	Destination station specification error	Check for faulty cables, faulty hardware, incorrect wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, control stations, and remote master stations.
F122	Send failure (coaxial bus system)	Check for coaxial cable connection, proper connector connection, connection of terminating resistor, or faulty cables.
F221	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F222	No free area in the receive buffer (buffer-full error)	Retry after a little while. If the error reoccurs as a result of a retry, review the number of transient communication times and communication interval of the entire system. Turn off the power supply to the entire system, and turn it on again.
F224	Receive data size error	The hardware of the module on the transient transmission source station is faulty. Contact your local Mitsubishi representative.
F225	Logical channel number error	The hardware of the module on the transient transmission source station is faulty. Contact your local Mitsubishi representative.
F226	Channel number error	Check if the logical channel number designated in the execution source of the SEND instruction is set in the target network module. Alternatively, specify the logical channel number set in the target network module.
F228	SEND instruction target station error	Review the target network number and target station No. in the control data at the execution source of the SEND instruction.
F301	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F701	Send-target station number error (station No. 0 specified)	The hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F702	Send-target station number error (station No. 65 or higher number specified)	
F703	Destination group number error	Review the destination group number.
F706	Received data size error	The cable is faulty, or The hardware of the network module is faulty. If a communication error has occurred, review the cable. If not, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F707	Number of relay stations invalid	Set stations to which data can be sent. Review the system. Review the routing parameters.
F708	Receiving group number error	Review the group number of the target station.
F709	Receiving network number error	Review the network No. of network parameter for a host station and a target station. If the parameter is not set, the network No. is preset to 1 (default); so check the network No. of other stations.
F70A	System error	The cable is faulty, or the hardware of the network module is faulty. If a communication error has occurred, review the cable. If not, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F70B	Response wait timeout	Wait until SB0047 (baton pass status) and SB0049 (data link status) are recovered.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F70C	System error	The cable is faulty, or the hardware of the network module is faulty. If a communication error has occurred, review the cable.
F70E	System error	If not, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F710	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F711	System error	
F712	System error	
F781	System error	The hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F782	Connection target specification error	Check if C24 connection or CC-Link connection is specified for access to other stations. If the setting is correct, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F783	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F7C1	Host station channel in use	The same channel cannot be used at the same time. Change the channel number. Alternatively, do not use the same channel at the same time.
F7C2	Target station channel in use	Retry the SEND instruction after a little while. Check if the target station uses the channel concerned to execute the instruction, or if RECV processing is executed. Check if another station executes the SEND instruction to the target station's channel.
F7C3	Arrival monitoring timeout	<When this error occurs by the RECV instruction> When another station is executing the SEND instruction, increase the value of the arrival monitoring time. Alternatively, start the RECV instruction by turning the RECV instruction execution request flag to ON. <When this error occurs in other cases> Increase the value of the arrival monitoring time. Confirm the operation status of the target station, the network status, and the relay station status (in the case of sending to other network).
F7C4	Resend count-out	Increase the arrival monitoring time. Re-execute the REMFR/REMTO instruction. Confirm the operation status of the target station, the network status, and the relay station status (in the case of sending to other network).
F7C5	SEND instruction target station error	Review the target network number and target station No. in the request control data of send/receive instructions.
F7C6	Channel number setting out of range	Set the channel numbers of the host station and of the target station in the request control data of send/receive instructions within a range between 1 and 64.
F7C7	Target station specification error (host station specification)	Specify the target station number in the request control data of send/receive instructions to other than the number of host station.
F7C8	Execution type specification error	When the execution/abnormal completion type in the request control data of send/receive instructions is specified for all stations or groups, set "No arrival confirmation" for the execution type.
F7C9	Resend count setting out of range	Set the resent count of the request control data of send/receive instructions within a range between 0 and 15 (times).
F7CA	Arrival monitoring time setting out of range	Set the arrival monitoring time of the request control data of send/receive instructions within a range between 0 and 32767 (seconds).
F7CB	Sent data length setting out of range (SEND instruction)	Set the sent data length of the request control data of the SEND instruction within a range between 1 and 960 (words).

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F7CD	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F7E1	Control data error	Confirm the set values (mode, etc.) in the control data of a dedicated instruction.
F7E2	System error	The hardware of the network module is faulty.
F7E3	System error	Contact your local Mitsubishi representative.
F7E4	Target CPU module type error	Check if the CPU module model of the target station specified in the WRITE, READ, REQ, RRUN, RSTOP, RTMRD, and RTMWR instructions is out of applicable range.
F7E5	Post-transmission event wait timer time-out	Re-execute the REMFR or REMTO instruction after a little while. Confirm the operation status of the target station, the network status, and the relay station status (in the case of sending to other network).
F7E7	Buffer memory address error	Check if the buffer memory address specified in the REMFR and REMTO instructions exceeds 8000H.
F7E8	Network type error	Check if the network number specified in the REMFR and REMTO instructions represents a PLC to PLC network.
F7E9	Instruction not executable error	Check if the host station is data-linked when the REMFR or REMTO instruction is executed.
F800	Mode switch setting error	Confirm the setting of the mode switch. If the error reoccurs after resetting, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F801	Network number setting error	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty.
F802	Group number error	Contact your local Mitsubishi representative.
F803	Station number setting error	Check if the station number is within a range of 1 to 64. If the error reoccurs even if the station number is set between 1 and 64, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F804	DIP switch setting error	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F805	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F806	System error	The hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F808	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F80A	System error	
F80B	System error	
F80C	System error	
F80D	System error	
F80E	System error	
F80F	System error	
F811	System error	
F812	System error	
F813	Parameter data error (parameter)	
F814	Parameter data error (code)	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F820	Link parameter error	Replace the network module of the normal station with the one compatible with the MELSECNET/H Extended mode. Change the network type of the normal station to that of the control station. Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F821	Station-specific parameter error	Review station-specific parameters. Set common parameters $\geq$ station-specific parameters for the sending range of the host station. If no station-specific parameters are set, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F822	System error	The hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F823	Parameter consistency error	Set common parameters $\geq$ station-specific parameters for the sending range of the host station. If no station-specific parameters are set, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F825	CPU parameter check error	Perform Write to PLC on the network parameters for the control station again. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F826	Parameter mismatch error	Set parameters suitable for the sub control station, or activate it as a control station. Review and reset the parameters for the master and sub master stations. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F828	No control station shift setting	Set "with data link by the sub control station when the control station is down."
F829	Pairing setting error	On the network parameter at control station, set the pairing setting on the Redundant CPU or unset the pairing setting on all the CPUs other than the Redundant CPU.
F82A	Network type mismatch (normal station detected)	Match the network type set for the normal station with the one set for the control station.
F82B	Network type mismatch (control station detected)	
F830	System error	The hardware of the CPU or network module is faulty.
F831	System error	Contact your local Mitsubishi representative.
F832	Data link startup condition error	If the data link is stopped under all station specification, start it by all station specification. If the data link is stopped under specific station specification, start it from the station, or forcibly start it.
F833	Keyword error	Start the data link from the station where it was discontinued, or forcibly start it.
F834	System error	The cable is faulty, or the hardware of the network module is faulty.
F835	System error	If a communication error has occurred, review the cable.
F836	System error	If not, the hardware of the network module is faulty. Contact your local Mitsubishi representative.
F837	Exceeded number of retries	Check the status of the control station and of the remote master station (to see if resetting or an error occurs in the middle of the operation).
F838	Relevant timer timeout	Check the status of the control station and of the remote master station (to see if resetting or an error occurs in the middle of the operation).
F839	No link parameter (communication impossible)	Register link parameters
F83A	SW0000 out of range error	Correct the contents of SW0000.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
F83B	Forced switching impossible error	Check if the following conditions are met: <ul style="list-style-type: none"> <li>• The system is a multiplexed remote I/O network system.</li> <li>• Check if "Return as a standby station" is set as the parameter for the master station.</li> <li>• The host station is operating as a master station.</li> <li>• The operating sub master station is in data-linking.</li> </ul>
F840	Low speed cyclic parameter error	Create new network parameters and perform Write to PLC.
F841	System error	If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F842	System error	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F843	System error	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
F901	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
F902	System error	Check the system configuration to see if there are eight or more relay networks in the MELSECNET/H.
F903	System error	The hardware of the CPU or network module is faulty.
F904	System error	Contact your local Mitsubishi representative.
F905	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FD01	CRC error (offline test)	There is no need to take corrective measures because the system retries the operation. If the error frequently occurs, check for faulty cables, faulty hardware, noise, absence of terminating resistor (in the case of the bus), and incorrect wiring.
FD02	Overflow error (offline test)	
FD03	AB. IF error (offline test)	
FD04	TIME error (offline test)	
FD05	Data error (offline test)	
FD06	Under error (offline test)	
FD07	Send failure	
FD08	Send failure (coaxial bus system)	Check if a coaxial cable is not connected or is loose or faulty and if the terminating resistor is not connected.
FD09	Loop status changed (offline loop test)	There is no need to take corrective measures because the system retries the operation (do not switch the loop in the middle of the operation).
FD0A	Unstable communication (offline loop test)	If the error frequently occurs, check the line and the wiring status.
FD0B	Wiring error (offline loop test)	Check the wiring.
FD0C	System error	There is a problem with the hardware of the network module. Contact your local Mitsubishi representative.
FD11	Error occurred during test execution	Execute after the completion of the test from other station.
FD12	Disconnecting error	Review the cause for why the station is being disconnected.
FD13	System error	Set the total number of link stations with a common parameter. Set a station number that is equal to the host station number or larger.
FD14	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FD15	System error	
FD16	System error	
FD17	System error	
FD18	System error	
FD19	System error	
FD1A	Station with duplicated station number	Check the duplicate station number, and correct it.
FD1B	Test abort error	The ongoing test was interrupted due to the resetting of the test executing station. There is a faulty station on the networks.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
FD1C	Interruption error due to loop switching during test	There is no need to take corrective measures because the system retries the operation (do not switch the loop in the middle of the operation). If the error frequently occurs, check the line and the wiring status.
FD1D	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FD1E	Bus topology, test disabled error	Conduct a test that can be executed in the bus topology.
FD20	Mode error	Create new network parameters and perform Write to PLC. If the error reoccurs, the hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
FD21	Hardware error (send interrupt error)	The cable was disconnected during the online test.
FD22	Hardware error (receive interrupt error)	Reconnect the cable, and continue the online test.
FD23	Data comparison error	Check for faulty cables, faulty hardware, incorrect wiring, absence of terminating resistor (in the case of the bus), and duplication of station numbers, and control stations.
FD24	Retry over	
FD25	Input port initial value check error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FD26	Light check forward side error	There is a problem with the cable.
FD27	Light check reverse side error	Connect a proper cable, and perform an online test.
FD28	RAM check error	
FD29	ROM check error	The hardware of the network module is faulty.
FD2A	Timer function check error	Contact your local Mitsubishi representative.
FD2B	WDT function check error	
FD31	Duplicate online diagnostics request error	Execute online diagnostics after another is completed.
FD32	System error	The hardware of the network module is faulty.
FD33	System error	Contact your local Mitsubishi representative.
FD35	Response wait time-out occurred	
FD36	Action wait time-out occurred	Retry after a little while.
FD37	Another online diagnosis executed	Check the status of the relevant station and of the line.
FD38	Duplicate message error	
FD39	Communication test request destination error (host station)	Change the test request destination.
FD3A	Communication test request destination error (station to which the test cannot be requested)	<p>A station to which a test request is not available was specified.</p> <div style="text-align: right;"> <span style="border: 1px solid black; padding: 2px;">C</span> : CPU module  <span style="border: 1px solid black; padding: 2px;">N</span> : Network module  <span style="background-color: #cccccc; border: 1px solid black; padding: 2px;"> </span> : Communication request disabled station </div> <pre> graph TD     GX[GX Developer] --- Bus     subgraph Bus         direction LR         S1["C N"]         S2["C N"]         S3["C N N"]         S4["C N"]         S5["C N N"]         S6["C N"]         S7["C N"]     end     Bus --- S1     Bus --- S2     Bus --- S3     Bus --- S4     Bus --- S5     Bus --- S6     Bus --- S7 </pre>
FE20	Received data error	Review the routing parameters, or replace the relay CPU module with the AnU or QnA CPU module compatible with the MELECNET/10.
FE21	ZNRD/ZNWR device range error	Review the range of the device to be accessed with the ZNRD/ZNWR instructions to the ACPU.
FE22	AnU request error	Check if access to other station is made from GX Developer with a project of a different CPU type.
FE23	System error	The hardware of the source module starting dedicated instructions and MC protocol is faulty. Contact your local Mitsubishi representative.
FE24	System error	Confirm the status of the target station and relay station CPU modules. Alternatively, change the CPU module concerned.

Table 8.1 Error code list (Continued)

Error No.	Description of error	Corrective measure
FE25	System error	Confirm the power supply status (insufficient voltage, instantaneous interruption, overvoltage, etc.) of the target station for transient transmission and the relay station. Alternatively, change the CPU module concerned.
FE26	System error	Confirm the operation status (WDT error, etc.) of the target station and relay station CPU modules. Alternatively, change the CPU module concerned.
FE27	System error	The hardware of the CPU or network module is faulty. Contact your local Mitsubishi representative.
FE30	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FE31	System error	
FE32	System error	
FE34	System error	
FE36	System error	
FE37	System error	
FE38	System error	
FE39	System error	
FE3B	System error	The hardware of the network module is faulty. Contact your local Mitsubishi representative.
FE3C	System error	
FE3D	System error	
FE3E	System error	
FE3F	System error	

### 8.3.2 Error codes detected on remote I/O stations and equivalent to CPU module error codes

The remote I/O station performs some of the same processes as the CPU module. Accordingly, the remote I/O station detects the same error codes <sup>\*1</sup><sup>\*2</sup> as in the CPU module.

When an error occurs, the error code, error message or any other information can be read by GX Developer.

For details about operating GX Developer, refer to the GX Developer Operating Manual.

\*1 : CPU module error codes are classified into minor, moderate, and major errors as shown below.

- Minor error: Errors that may allow the CPU module to continue the operation, e.g., battery error.  
(Error code: 1300 to 10000)
- Moderate error: Errors that may cause the CPU module to stop the operation, e.g., watchdog timer error.  
(Error code: 1300 to 10000)
- Major error: Errors that may cause the CPU module to stop the operation, e.g., RAM error.  
(Error code: 1000 to 1299)

Determine the error level, i.e. whether the operation can be continued or stopped, by referring to "Operating Statuses of CPU" described in Section 8.3.2 (1) "Error Code List"

\*2 : If any error code not listed in this section is detected, please consult your local Mitsubishi representative.

## (1) Error code list

The following shows the error messages of the error codes, the contents and causes, and the corrective actions.

Error Code (SD0)	Error Message	Common Information (SD5 to SD15)	Individual Information (SD16 to SD26)	LED Status		CPU Operation Statuses	Diagnostic Timing	
				REM	ERR.			
1000	MAIN CPU DOWN	-	-	Off	On	Stop	Always	
1005	MAIN CPU DOWN	-	-	Off	On	Stop	Always	
1009 <sup>*3</sup>	MAIN CPU DOWN	-	-	Off	On	Stop	Always	
1109 <sup>*5</sup>	RAM ERROR	-	-	Off	On	Stop	Always	
1300	FUSE BREAK OFF	Module No.	-	Off	On	Stop/ Continue *1	Always	
1401	SP. UNIT DOWN	Module No.	-	Off	On	Stop/ Continue *1	At power ON/ At reset <sup>*2</sup> / When intelligent function module is accessed.	

\*1: Remote I/O operation can be set in the parameters at error occurrence.

\*2: A remote I/O station is reset by the following:

- 1) Pressing the reset switch of the remote I/O station
- 2) Resetting the CPU module on the remote master station, or turning it to RUN from STOP when the remote I/O station is in the following status:
  - The remote I/O station has not been reset after modification of some remote I/O station parameters.
  - A stop error has occurred on the remote I/O station.

\*3: Function version is D or later.

\*5: The first 5 digits of serial No. is 08062 or greater.

Error code	Error Contents and Cause	Corrective Action
1000	Run mode suspended or failure of main CPU • Malfunctioning due to noise or other reason • Hardware fault	<ul style="list-style-type: none"> <li>• Take noise reduction measures.</li> <li>• Reset the Remote I/O module.</li> </ul> If the same error is displayed again, this suggests a Remote I/O module hardware fault. (Contact your local Mitsubishi representative.)
1005	Run mode suspended or failure of main CPU • Malfunctioning due to noise or other reason • Hardware fault	<ul style="list-style-type: none"> <li>• Take noise reduction measures.</li> <li>• Reset the Remote I/O module.</li> </ul> If the same error is displayed again, this suggests a Remote I/O module hardware fault. (Contact your local Mitsubishi representative.)
1009	<ul style="list-style-type: none"> <li>• A failure is detected on the power supply module, Remote I/O module, base unit or extension cable.</li> <li>• When using the redundant base unit, the redundant power supply module failure in both systems and/or the redundant base unit failure are detected.</li> </ul>	Reset the Remote I/O module. If the same error is displayed again, this suggests a Remote I/O module hardware fault. (Contact your local Mitsubishi representative.)
1109	The work area RAM in the Remote I/O module is faulty.	This suggests a Remote I/O module hardware fault. (Contact your local Mitsubishi representative.)
1300	There is an output module with a blown fuse.	Check FUSE. LED of the output modules and replace the module whose LED is lit. (The module with a blown fuse can also be identified using GX Developer. Check the special registers SD1300 to SD1331 to see if the bit corresponding to the module is "1".)
1401	<ul style="list-style-type: none"> <li>• There was no response from the intelligent function module in the initial processing.</li> <li>• The size of the buffer memory of the intelligent function module is invalid.</li> </ul>	This suggests the intelligent function module, Remote I/O module and/or base unit is expecting a hardware fault (Contact your local Mitsubishi representative.)

Error Code (SD0)	Error Message	Common Information (SD5 to SD15)	Individual Information (SD16 to SD26)	LED Status		CPU Operation Statuses	Diagnostic Timing	
				REM	ERR.			
1403	SP. UNIT DOWN	Module No.	-	Off	On	Stop/ Continue * 1	Always	
1413	CONTROL-BUS.ERR.	-	-	Off	On	Stop	Always	
1414	CONTROL-BUS.ERR.	Module No.	-	Off	On	Stop	Always	
1415 * 4	CONTROL-BUS.ERR.	Base No.	-	Off	On	Stop	Always	
1510 * 3	SINGLE PS. DOWN	Base No. / Power supply No.	-	Off	On	Continue	Always	
1520 * 3	SINGLE PS. ERROR	Base No. / Power supply No.	-	Off	On	Continue	Always	
1610	FLASH ROM ERROR	-	-	Off	On	Continue	When writing to flash ROM	
2000	UNIT VERIFY ERR.	Module No.	-	Off	On	Stop/ Continue * 1	Always	
2011 * 3	BASE LAY ERROR	Base No.	-	Off	On	Stop	At power ON/ At reset * 2	
2100	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset * 2	
2103	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset * 2	

\* 1: Remote I/O operation can be set in the parameters at error occurrence.

\* 2: A remote I/O station is reset by the following:

- 1) Pressing the reset switch of the remote I/O station
- 2) Resetting the CPU module on the remote master station, or turning it to RUN from STOP when the remote I/O station is in the following status:
  - The remote I/O station has not been reset after modification of some remote I/O station parameters.
  - A stop error has occurred on the remote I/O station.

\* 3: Function version is D or later.

\* 4: The first 5 digits of serial No. is 08022 or greater.

Error code	Error Contents and Cause	Corrective Action
1403	<ul style="list-style-type: none"> <li>• There was no response from the intelligent function module when the END instruction is executed.</li> <li>• An error is detected at the intelligent function module.</li> <li>• The I/O module (intelligent function module) is nearly removed, completely removed, or mounted during running.</li> </ul>	The Remote I/O module, base unit and/or the intelligent function module that was accessed is experiencing a hardware fault. (Contact your local Mitsubishi representative.)
1413	An error is detected on the system bus. <ul style="list-style-type: none"> <li>• Self-diagnosis error of the system bus</li> <li>• Self-diagnosis error of the CPU module</li> </ul>	Reset the Remote I/O module. If the same error is displayed again, the intelligent function module, Remote I/O module or base unit is faulty.(Contact your local Mitsubishi representative.)
1414	An error is detected on the system bus.	
1415	Fault of the main or extension base unit was detected.	
1510	The voltage of one power supply module dropped on the redundant base unit.	Check the power supplied to the redundant power supply modules mounted on the redundant base unit.
1520	A fault of one redundant power supply module was detected in the redundant power supply system.	Hardware fault of the redundant power supply module. (Contact your local Mitsubishi representative, explaining a detailed description of the problem.)
1610	The number of writing to flash ROM (Error history) exceeds 100,000 times. (Number of writings > 100, 000 times)	Change the Remote I/O module.
2000	The I/O module status is different from the I/O module information at power ON. <ul style="list-style-type: none"> <li>• The I/O module (intelligent function module) is nearly removed, completely removed, or mounted during running.</li> </ul>	<ul style="list-style-type: none"> <li>• Read the error common information at the GX Developer, and check and/or change the module that corresponds to the numerical value (module number) there.</li> <li>• Alternatively, monitor special registers SD1400 to SD1431 using GX Developer, and check and replace the module where the bit of its data is "1".</li> </ul>
2011	The QA1S6□B or QA6□B was used as the base unit.	Do not use the QA1S6□B or QA6□B as the base unit.
2100	<ul style="list-style-type: none"> <li>• In the I/O assignment setting of PLC parameter, Intelli (intelligent function module) was assigned to an I/O module or vice versa.</li> <li>• In the I/O assignment setting of the PLC parameter, switch setting was made to the module that has no switch setting.</li> <li>• A value smaller than the points for the actually mounted intelligent function module is set in the I/O assignment setting of the PLC parameter.</li> </ul>	<ul style="list-style-type: none"> <li>• Make the PLC parameter's I/O assignment setting again so it is consistent with the actual status of the intelligent function module and the Remote I/O module.</li> <li>• Delete the switch setting in the I/O assignment setting of the PLC parameter.</li> </ul>
2103	The QI60 is loaded.	Remove the QI60.

Error Code (SD0)	Error Message	Common Information (SD5 to SD15)	Individual Information (SD16 to SD26)	LED Status		CPU Operation Statuses	Diagnostic Timing	
				REM	ERR.			
2106	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
2107	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
2121	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
2122	SP. UNIT LAY ERR.	-	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
2124	SP. UNIT LAY ERR.	-	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
2125	SP. UNIT LAY ERR.	Module No.	-	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
3000	PARAMETER ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	
3001	PARAMETER ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset* <sup>* 2</sup>	

\*2: A remote I/O station is reset by the following:

- 1) Pressing the reset switch of the remote I/O station
- 2) Resetting the CPU module on the remote master station, or turning it to RUN from STOP when the remote I/O station is in the following status:
  - The remote I/O station has not been reset after modification of some remote I/O station parameters.
  - A stop error has occurred on the remote I/O station.

Error code	Error Contents and Cause	Corrective Action
2106	<ul style="list-style-type: none"> <li>• 5 or more Q series Ethernet modules were installed.</li> <li>• 65 or more Q series CC-Link modules were installed.</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce the Q series Ethernet modules to 4 or less.</li> <li>• Reduce the Q series CC-Link modules to 64 or less.</li> </ul>
2107	The start X/Y set in the PLC parameter's I/O assignment settings is overlapped with the one for another module.	Make the PLC parameter's I/O assignment setting again so it is consistent with the actual status of the intelligent function module.
2121	A CPU module has been mounted on the base unit.	Do not mount a remote I/O module and a CPU module on the same system.
2122	The QA1S6□B/QA6□B are used for the main base unit.	Replace the main base unit with a usable one.
2124	<ul style="list-style-type: none"> <li>• A module is installed to the 65th or higher slot.</li> <li>• A module is installed to the slot whose number is greater than the number of slots specified in the base setting.</li> <li>• A module is installed to the location corresponding to the I/O points of the 4,096 or greater.</li> <li>• A module is installed to the location across the I/O points of 4096.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the module installed to the 65th or later slot.</li> <li>• Remove the module installed at the slot whose number is greater than the number of slots specified in the base setting.</li> <li>• Remove the module installed to the location of I/O points, 4,096 or greater.</li> <li>• Replace the last module with a module which does not exceed the number of occupied points of 4096.</li> </ul>
2125	<ul style="list-style-type: none"> <li>• A module which the QCPU cannot recognise has been installed.</li> <li>• There was no response form the intelligent function module.</li> </ul>	<ul style="list-style-type: none"> <li>• Install a usable module.</li> <li>• The intelligent function module is experiencing a hardware fault.(Contact your local Mitsubishi representative.)</li> </ul>
3000	<ul style="list-style-type: none"> <li>• In the PLC parameter, points for the empty slot are not set within the range available for the remote I/O module.</li> <li>• The parameter settings in the error individual information (special register SD16) are illegal.</li> </ul>	<ul style="list-style-type: none"> <li>• Read the detailed information of the error using the peripheral device, check the parameter items corresponding to those numerical values (parameter numbers), and correct when necessary.</li> </ul>
3001	The parameter settings are corrupted.	<ul style="list-style-type: none"> <li>• Rewrite corrected parameters to the Remote I/O module, reload the Remote I/O station power supply and/or reset the module.</li> <li>• If the same error occurs, it is thought to be a hardware error. (Contact your local Mitsubishi representative.)</li> </ul>

Error Code (SD0)	Error Message	Common Information (SD5 to SD15)	Individual Information (SD16 to SD26)	LED Status		CPU Operation Statures	Diagnostic Timing	
				REM	ERR.			
3103	LINK PARA. ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	
3104	LINK PARA. ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	
3105	LINK PARA. ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	
3106	LINK PARA. ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	
3107	LINK PARA. ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	
3300	SP. PARA ERROR	File name	Parameter number	Off	On	Stop	At power ON/ At reset * 2	

\*2: A remote I/O station is reset by the following:

- 1) Pressing the reset switch of the remote I/O station
- 2) Resetting the CPU module on the remote master station, or turning it to RUN from STOP when the remote I/O station is in the following status:
  - The remote I/O station has not been reset after modification of some remote I/O station parameters.
  - A stop error has occurred on the remote I/O station.

Error code	Error Contents and Cause	Corrective Action
3103	<ul style="list-style-type: none"> <li>• Although the number of modules has been set to 1 or greater number in the Ethernet module count parameter setting, the number of actually mounted module is 0.</li> <li>• The start I/O No. of the Ethernet network parameter differs from the I/O No. of the actually mounted module.</li> </ul>	<ul style="list-style-type: none"> <li>• Correct and write the network parameters.</li> <li>• If the error occurs after correction, it suggests a hardware fault. (Contact your local Mitsubishi representative.)</li> </ul>
3104	<ul style="list-style-type: none"> <li>• The network number, station number or group number set in the network parameter is out of range.</li> <li>• The specified I/O No. is outside the range of the used remote I/O module.</li> <li>• The Ethernet-specific parameter setting is not normal.</li> </ul>	<ul style="list-style-type: none"> <li>• Correct and write the network parameters.</li> <li>• If the error occurs after correction, it suggests a hardware fault. (Contact your local Mitsubishi representative.)</li> </ul>
3105	<ul style="list-style-type: none"> <li>• Though the number of CC-Link modules set in the network parameters is one or more, the number of actually mounted modules is zero.</li> <li>• The start I/O No. in the common parameters is different from that of the actually mounted module.</li> <li>• The station type of the CC-Link module count setting parameters is different from that of the actually mounted station.</li> </ul>	<ul style="list-style-type: none"> <li>• Correct and write the network parameters.</li> <li>• If the error occurs after correction, it suggests a hardware fault. (Contact your local Mitsubishi representative.)</li> </ul>
3106	The link refresh parameter for CC-Link is out of range.	Check the parameter setting.
3107	<ul style="list-style-type: none"> <li>• The CC-Link parameter setting is incorrect.</li> <li>• The set mode is not allowed for the version of the mounted CC-Link</li> </ul>	Check the parameter setting.
3300	The start I/O number in the intelligent function module parameter set on GX Configurator differs from the actual I/O number.	Check the parameter setting.

Error Code (SD0)	Error Message	Common Information (SD5 to SD15)	Individual Information (SD16 to SD26)	LED Status		CPU Operation Statuses	Diagnostic Timing
				REM	ERR.		
3301	SP. PARA ERROR	File name	Parameter No.	Off	On	Stop	At power ON/ At reset <sup>*2</sup>
3400 <sup>*3</sup>	REMOTE PASS. ERR.	-	-	Off	On	Stop	At power ON/ At reset <sup>*2</sup>
3401 <sup>*3</sup>	REMOTE PASS. ERR.	-	-	Off	On	Stop	At power ON/ At reset <sup>*2</sup>

\*2: A remote I/O station is reset by the following:

- 1) Pressing the reset switch of the remote I/O station
- 2) Resetting the CPU module on the remote master station, or turning it to RUN from STOP when the remote I/O station is in the following status:
  - The remote I/O station has not been reset after modification of some remote I/O station parameters.
  - A stop error has occurred on the remote I/O station.

\*3: Function version is D or later.

Error code	Error Contents and Cause	Corrective Action
3301	The intelligent function module's refresh parameter setting is outside the available range.	Check the parameter setting.
3400	The head I/O number of the target module in the remote password file is set to other than 0 <sub>H</sub> to 0FF0 <sub>H</sub> .	Change the head I/O number of the target module to within the 0 <sub>H</sub> to 0FF0 <sub>H</sub> range.
3401	Any of the following modules is not mounted on the slot specified for the head I/O number of the remote password. <ul style="list-style-type: none"><li>• Serial communication module of function version B or later</li><li>• Ethernet module of function version B or later</li></ul>	Mount any of the following modules in the position specified for the head I/O number of the remote password. <ul style="list-style-type: none"><li>• Serial communication module of function version B or later</li><li>• Ethernet module of function version B or later</li></ul>

## 8.4 Canceling a Minor Error (Continue Error) on a Remote I/O Station

An error of a remote I/O module can be canceled if it is a type of errors that allows the module operation to continue, as in the case of CPU modules.

The following explains errors that can be canceled and how to cancel them.

### (1) Errors that can be canceled

The errors shown below can be canceled.

For error details, refer to Section 8.3.2.

Error code	Error message
1300	FUSE BREAK OFF * <sup>1</sup>
1401	SP. UNIT DOWN * <sup>1</sup>
1403	SP. UNIT DOWN * <sup>1</sup>
1510	SINGLE PS. DOWN
1520	SINGLE PS. ERROR
2000	UNIT VERIFY ERR. * <sup>1</sup>

\*1: Can be canceled only when "Continue" is set in the CPU module on the remote master station and in PLC parameter (Error time operation mode, H/W error time CPU operation mode) for the remote I/O station.

If "Stop" has been selected, the error cannot be canceled because it is regarded as a moderate error (stop error).

### (2) How to cancel an error

The following shows how to cancel an error.

Item	Operation	Availability		Reference section
		GX Developer	Sequence program	
Canceling a specific remote I/O station error	Manipulate the remote master station and a remote I/O station to cancel only a specific remote I/O station error.	○	×	8.4.1
Canceling errors of all remote I/O stations	Manipulate the remote master station to cancel errors of all remote I/O stations.	○	○	8.4.2

○: Available      ×: N/A

### 8.4.1 Canceling a specific remote I/O station error

This section explains how to cancel an error of a specific remote I/O station by manipulating the remote master station and the remote I/O station.

#### (1) Procedures for error cancellation

Use GX Developer and perform the following steps 1) to 7).

[Remote I/O station side]

- 1) Remove the cause of the remote I/O station error.
- 2) Store the error code to be canceled into special register SD50 of the remote I/O module.
- 3) Turn OFF and then ON special relay SM50 of the remote I/O module.
- 4) The error in the remote I/O module is removed.

[Remote master station side]

- 5) Store the error code to be canceled into special register SD50 of the CPU module.
- 6) Turn OFF and then ON special relay SM50 of the CPU module.
- 7) The error in the CPU module is removed.

#### (2) Precautions for error cancellation

##### (a) Status after error cancellation

When the error is cancelled, the related special relay, special register and LEDs return to the status before the error occurrence.

If the same error occurs again after error cancellation, it is registered to the error history again.

##### (b) In the case of the multiplexed remote I/O network that supports redundant systems

After canceling the error in the control system CPU, cancel it in the standby system CPU.

Cancel a standby CPU error by either of the following:

- Using SM50 and SD50 of the standby system CPU
- Using SM1649 and SD1649 of the control system CPU

#### REMARKS

For detailed error cancellation of the CPU module, refer to the following manuals.

- QCPU User's Manual (Function Explanation, Program Fundamentals)
- QnPRHCPU User's Manual (Redundant System)

### 8.4.2 Canceling errors of all remote I/O stations

This section explains how to manipulate the remote master station to cancel errors of all remote I/O stations.

POINT
<p>(1) For canceling errors of all remote I/O stations, use a master module and remote I/O modules whose serial No. (first five digits) is "08112" or later. For a module whose serial No. (first five digits) is "08111" or earlier, follow the steps described in Section 8.4.1.</p> <p>(2) Errors of all remote I/O stations can be canceled only while the remote master station performs baton (or token) passing (SB0047 is OFF).</p> <p>(3) In multiplexed remote I/O networks (including those supporting redundant systems), this cancel operation is available only from the station acting as a master.</p>

#### (1) Procedures for error cancellation

Use the sequence program or GX Developer and perform the following steps 1) to 8).

For sample programs, refer to section (3).

[Remote I/O station side]

- 1) Remove the cause of the remote I/O station error.

[Remote master station side]

- 2) Turn ON link special relay SB000F of the master module.  
Doing so will cancel errors of all remote I/O stations.
- 3) Check that the master module is in the following status.  
<Remote I/O network>  
Check that link special relay SB0088 is OFF.  
<Multiplexed remote I/O network (including the one that supports redundant systems)>  
With link special registers SW0088 to SW008B, check that the bit corresponding to the remote I/O station is 0.
- 4) Turn OFF link special relay SB000F of the master module.
- 5) The error of the remote I/O module is canceled.  
For the blown fuse error or the I/O module verification error, perform steps 6) to 8).
- 6) Store the error code to be canceled into special register SD50 of the CPU module.
- 7) Turn OFF and then ON special relay SM50 of the CPU module.
- 8) The error in the CPU module is canceled.

**(2) Precautions for error cancellation****(a) SB000F after error cancellation**

Always turn OFF SB000F after canceling an error.

Even if a minor error (continue error) occurs on a remote I/O station while SB000F is ON, the error will not be detected.

**(b) Status after error cancellation**

When the error is cancelled, the related special relay, special register and LEDs return to the status before the error occurrence.

If the same error occurs again after error cancellation, it is registered to the error history again.

**(c) In the case of the multiplexed remote I/O network that supports redundant systems**

After canceling the error in the control system CPU, cancel it in the standby system CPU.

To cancel a standby CPU error, use SM1649 and SD1649 of the control system CPU.


**REMARKS**

For detailed error cancellation of the CPU module, refer to the following manuals.

- QCPU User's Manual (Function Explanation, Program Fundamentals)
- QnPRHCPU User's Manual (Redundant System)

(3) Sample programs


(a) For a remote I/O network

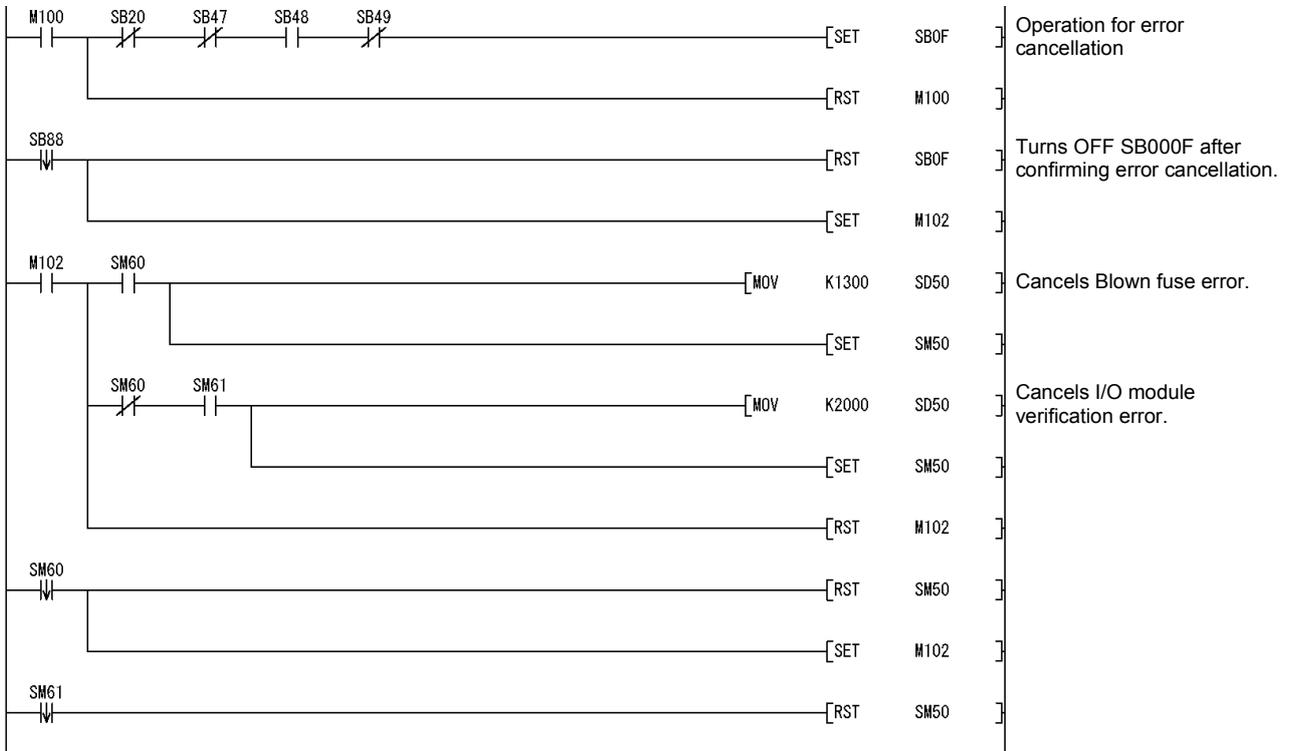


(b) For a multiplexed remote I/O network

The following is a program example used in common to remote master and remote sub-master stations.

Write it to both remote master and remote sub-master stations.

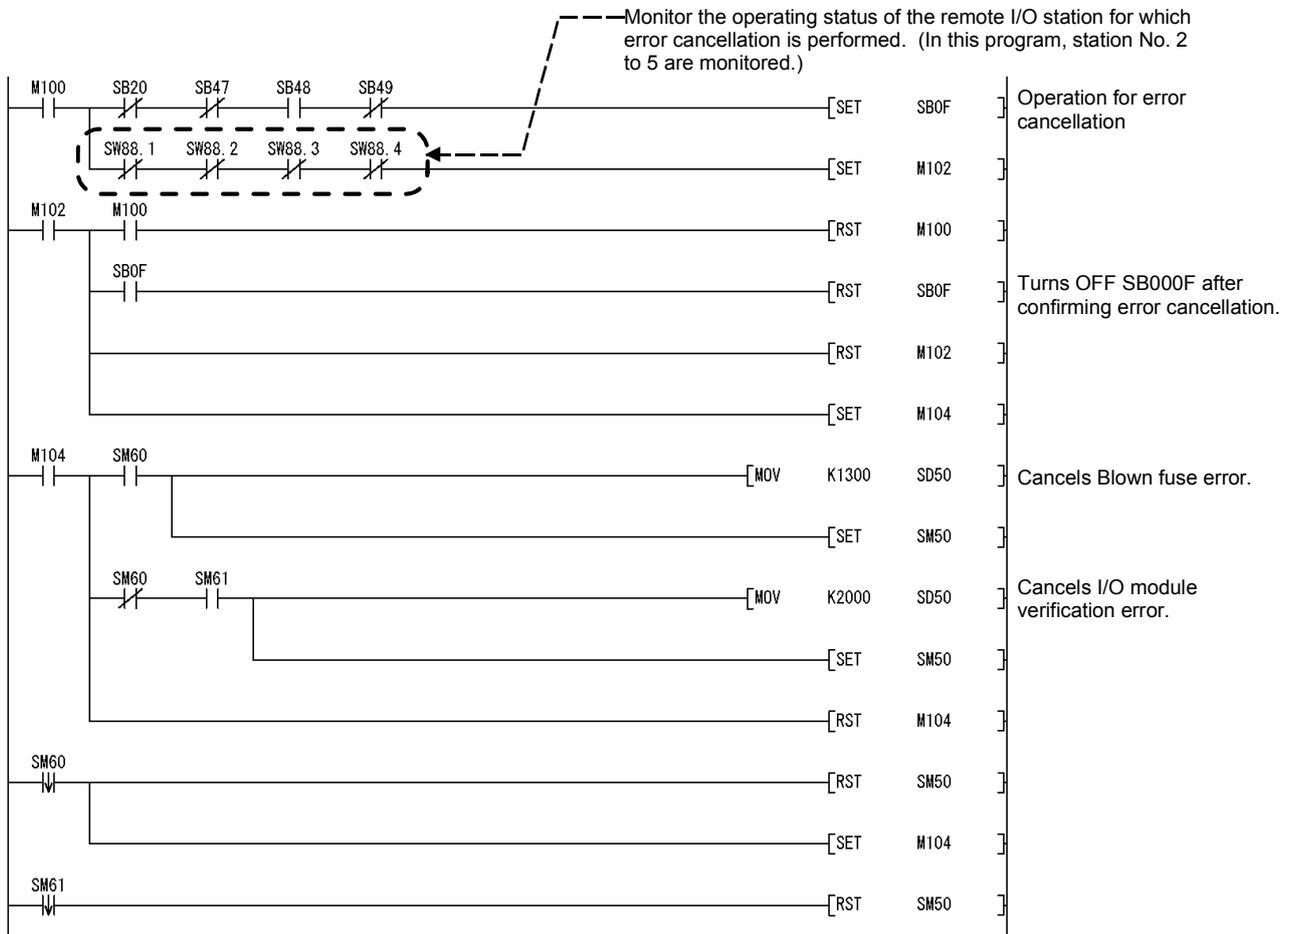


(c) For a multiplexed remote I/O network that supports redundant systems

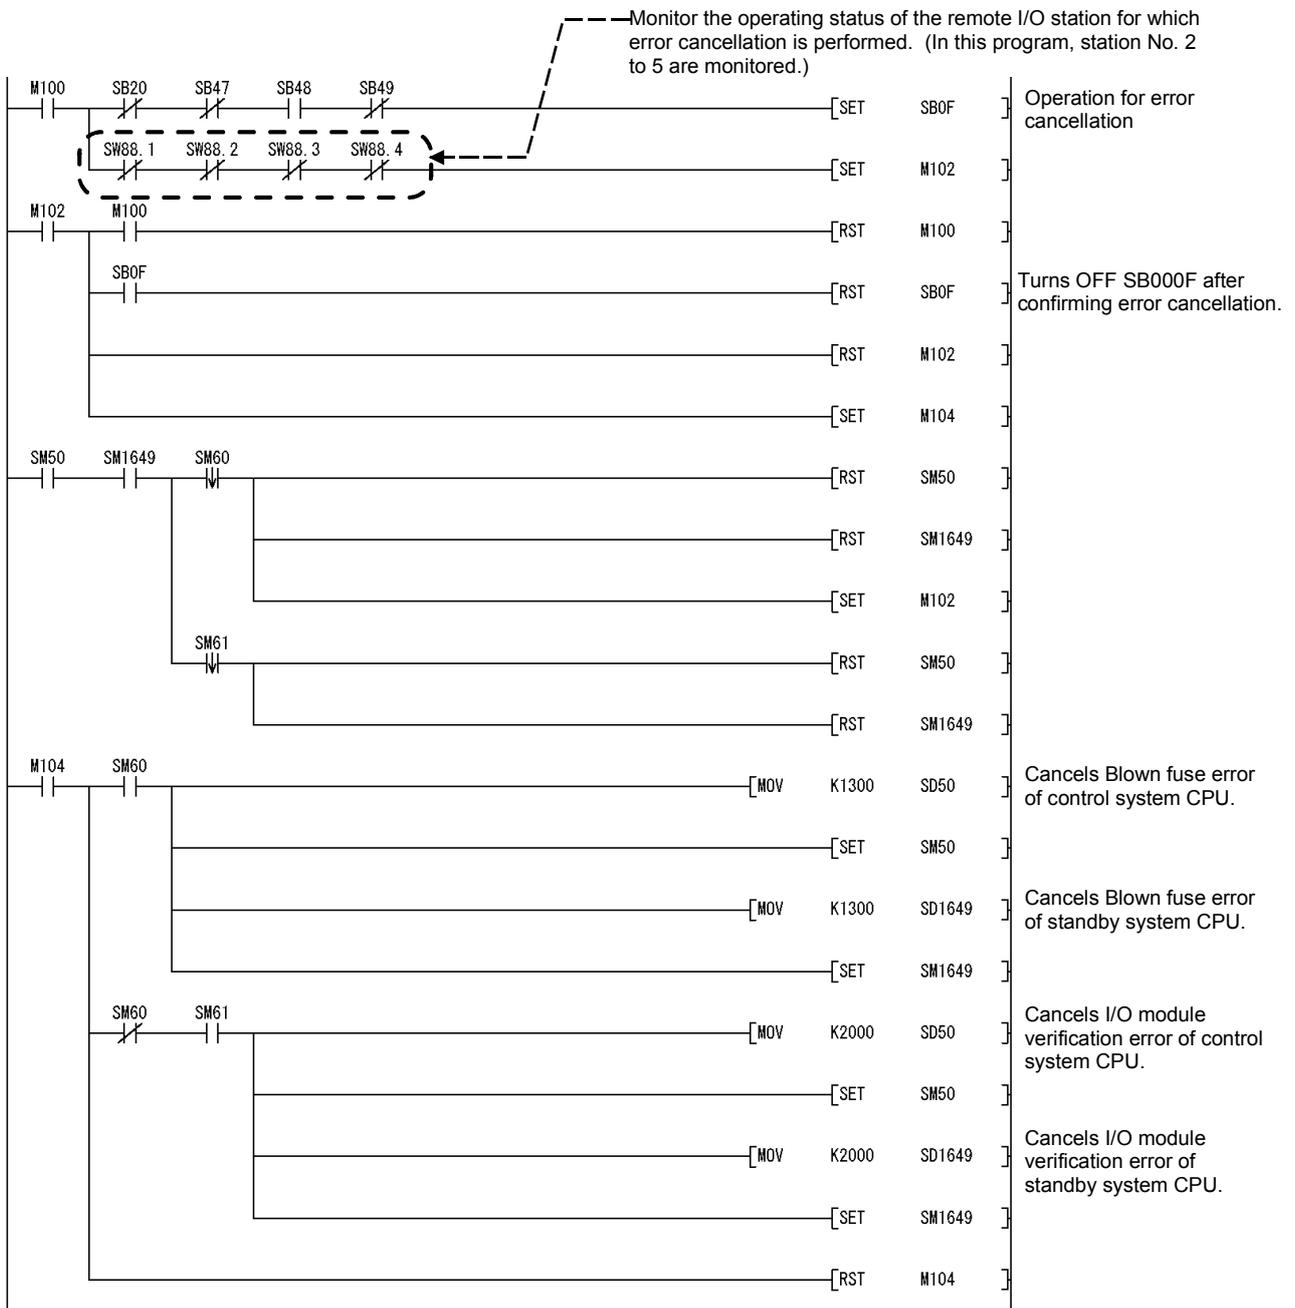

### 8.5 Procedure for Replacing a Normally Operating Redundant Power Supply Module

This section explains the procedure for replacing a redundant power supply module that is normally operating.

The replacement is available on a remote I/O station without SINGLE PS.DOWN (error code 1510) being detected.

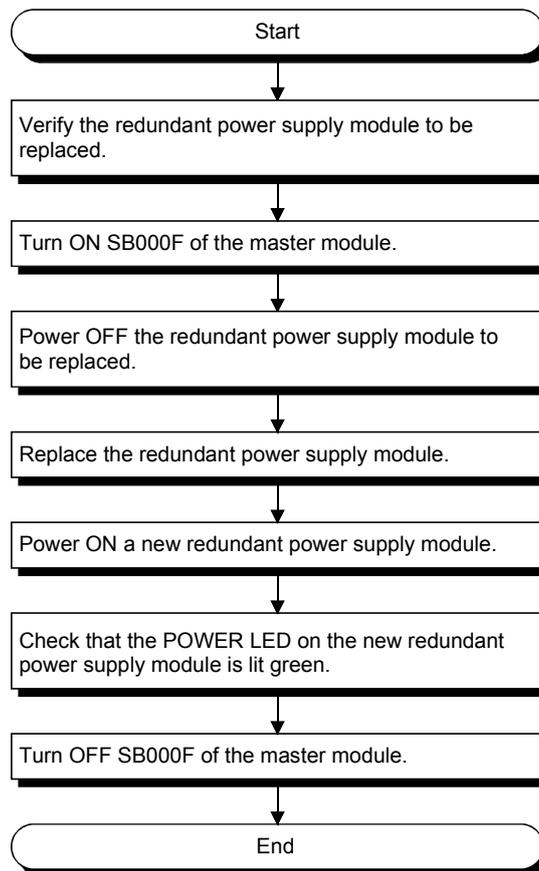
**POINT**

- (1) This replacement procedure is executable when the first five digits of serial No. for the master module and remote I/O modules are "08112" or later.
- (2) This replacement procedure is executable only while the remote master station performs baton (or token) passing (SB0047 is OFF).
- (3) In a multiplexed remote I/O network (including the one that supports redundant systems), SB000F can be manipulated only from the station acting as a master.

8.6 H/W Information

H/W information screen displays details of the LED and switch information of the network modules. To display the H/W information screen, click the **H/W information** button on the system monitor window of GX Developer.

(1) H/W information on the master module

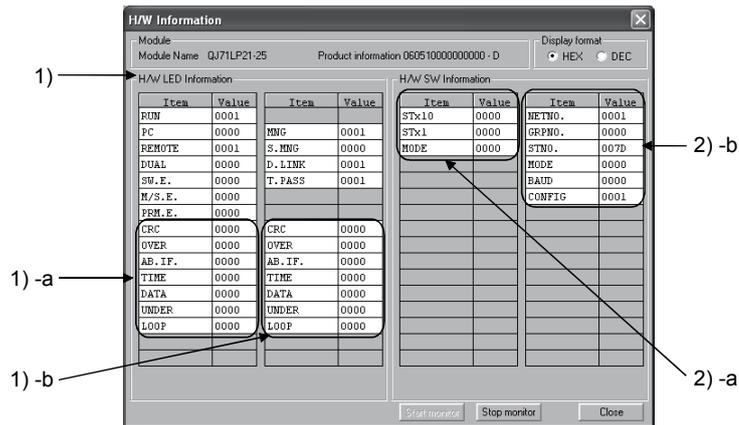

The following explains each of these items.

1) H/W LED information

This shows the LED information on the master module.  
The value for each item is displayed as: 0001 on, 0000 off.

Item	Description
PC	PLC to PLC network: on
REMOTE	Remote I/O network: on
DUAL	In multiplex transmission: on
SW. E	Switch setting error: on
M/S. E.	Duplicate station number or remote master station on same network: on
PRM. E.	Parameter error: on
MNG	Remote master station set or multiplexed remote master station performing master operation: on
S. MNG	Multiplexed remote master station performing master operation: on
D. LINK	In data link: on
T. PASS	Baton pass participation: on
CRC	Error during code check of receiving data: on 1)-a: Forward loop    1)-b: Reverse loop
OVER	Error when receive data processing has been delayed: on 1)-a: Forward loop    1)-b: Reverse loop
AB.IF.	Error when "1" over specification is continuously received or when the received data length is short 1)-a: Forward loop    1)-b: Reverse loop
TIME	Error when data link monitor timer has operated: on 1)-a: Forward loop    1)-b: Reverse loop
DATA	Error when error data of 2k-byte or more has been received: on 1)-a: Forward loop    1)-b: Reverse loop
UNDER	Error internal processing of send data is not fixed interval: on 1)-a: Forward loop    1)-b: Reverse loop
LOOP	Error when there is loop error: on 1)-a: Forward loop    1)-b: Reverse loop

(2) H/W switch information

This indicates the switch setting data for the master module.

2)-a: Shows the switch settings for the hardware mounted to the master module.

Item	Description
STx10	10 position of station number setting switch.
STx 1	1 position of station number setting switch.
MODE	Mode setting switch.

2)-b: Shows the switch data that has been actually set on the master module.

Item	Description	Display range								
NETNO.	Setting value of network No.	0 to 239								
GRPNO.	Setting value of group number	0 to 9								
STNO.	Setting of station number	1 to 64 (7DH: remote master station)								
MODE	Setting value of operation mode	0: Online 7: Self loopback-test 8: Internal self- loopback test 9: Hardware test								
BAUD	25 Mbps compatible	0: 10 Mbps 1: 25 Mbps								
CONFIG	Return mode, parameter status setting value	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <table border="1" style="border-collapse: collapse;"> <tr> <td style="padding: 2px;">b15</td> <td style="padding: 2px;">b9</td> <td style="padding: 2px;">b7</td> <td style="padding: 2px;">b0</td> </tr> <tr> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td style="text-align: center;">1</td> </tr> </table> </div> <div> <p>1: Fixed</p> <p>Return mode</p> <p>0: Remote master station returns as master operating station (control station).</p> <p>1: Remote master station returns as sub-master operating station (standby station).</p> <p>Parameter status</p> <p>0: Without parameters for remote sub-master station</p> <p>1: With parameters for remote master station/remote sub-master station</p> </div> </div>	b15	b9	b7	b0	0	0	0	1
b15	b9	b7	b0							
0	0	0	1							

(2) H/W information for remote I/O module

Use the following SB/SW to confirm the H/W information of the remote I/O module.

For details, refer to Appendix 2 and Appendix 3.

Setting status of the remote I/O module	SB0040 to 44 SB0058 to 69	SW0040 to 46 SW0054 to 68
Operating status of the remote I/O module	SB0047 to 49	SW0047 to 4A

## APPENDIX

## Appendix 1 Precautions when Changing Over from a MELSECNET/10 Remote I/O Network to a MELSECNET/H Remote I/O Network.

The following describes the precautions to take when switching from an AnUCPU, QnACPU MELSECNET/10 remote I/O network to a QCPU MELSECNET/H remote I/O network.

(1) Cannot be mixed with other network modules.

MELSECNET/10 network modules and MELSECNET/H network modules cannot be mixed.

- MELSECNET/H remote I/O modules cannot be connected to MELSECNET/10 master modules.
- MELSECNET/10 remote I/O modules cannot be connected to MELSECNET/H master modules.

When changing remote I/O modules, use MELSECNET/H for all network modules.

(2) Switch settings for network module

The network number setting switches and condition setting switches for the MELSECNET/10 network modules are not found on the MELSECNET/H network module.

These settings must be made by the network parameters.

(3) Correction of remote master station network parameters

The network parameters for the remote master station require the corrections shown in (2) above.

(4) Setting of parameters to remote I/O station

- The I/O assignment settings set by the network parameters of the MELSECNET/10 remote I/O network master module is set by the remote I/O module PLC parameters on the MELSECNET/H remote I/O network.
- When changing the intelligent function modules mounted to the remote I/O station, there is a need to make switch settings using the remote I/O station PLC parameters. For details, refer to the user's manual for the intelligent function module being used.

(5) Correcting the sequence program

There is no need to change sequence programs such as the interlock program that used link special relays and link special resistors and the remote access program that used data link commands.

However, the data link instructions (ZNFR/ZNTO instructions) used for accessing the buffer memory of the intelligent function module of the remote I/O station and the data link instructions (ZNRD/ZNWR instructions) used for reading/writing of the remote station word device cannot be used on the MELSECNET/H remote I/O network. Accordingly, on the MELSECNET/H, rewrite the ZNFR/ZNTO instructions to REMFR/REMTO instructions and the ZNRD/ZNWR instructions to READ/WRITE instructions.

- The link special relays and link special register operations used in the MELSECNET/10 remote I/O network are the same in the MELSECNET/H network.

(6) Distance between stations using optical fiber cable

When the remote I/O network speed is changed to 25 Mbps, the distance between stations connected by optical fiber cable will become shorter.

Accordingly, the communication speed can either be set to 10 Mbps or another optical fiber cable can be installed.

(7) The multiplex master function has been changed in the following specifications.

Processing when the faulty multiplexed remote master station has returned to system normally:

- The multiplexed remote master station of the MELSECNET/10 cannot participate in a data link if it returns to normal while the remote I/O stations are being controlled by the multiplexed remote sub-master station.
- The multiplexed remote master station of the MELSECNET/H can participate in a data link as the sub-master/master operating station by making parameter setting.

(8) The parallel master function cannot be used since it is not supported.

## Appendix 2 Link Special Relay (SB) List

The link special relay (SB) turns on/off by various factors that occur during data linking. Thus, by monitoring or using it in the sequence program, the abnormal status of the data link can be checked.

Moreover, the link special relays (SB) that stores the link status are used for the detailed information of the network diagnostics of GX Developer.

For a list of the device numbers for each display item, see Section 8.1, "Network Diagnostics (Line Monitor)."

### (1) Mounting multiple network modules

The link special relay (SB) of each network module is refreshed by the link special relay (SB) of the CPU module shown below when the refresh parameters of each network module remain default.

Module installing position	Module 1	Module 2	Module 3	Module 4
Device number	SB0000 to 01FF	SB0200 to 03FF	SB0400 to 05FF	SB0600 to 07FF

### (2) Range turned ON/OFF by user and range turned ON/OFF by system

In the link special relay (SB), there are ranges the user can set on and off (SB0000 to SB001F) and ranges the system can set on and off (SB0020 to SB01FF). (When the unit mounting position is unit 1.)

(3) Link special relay (SB) list

Assignments of SB0000 to SB01FF are shown in the special relay (SB) list.

POINT
(1) Do not turn ON the area of the No. which does not exist in the link special relay (SB) list. Turning ON the area of the number which does not exist in the list may cause malfunction of the programmable controller system.
(2) For how to use link special relays (SB), refer to Section 6.6.


Table 1 Link special relay (SB) list

No.	Name	Description	Use permitted/prohibited									
			Control station		Normal station		Remote master station		Remote I/O station			
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial		
* 1 * 3 SB0000 (0)	Link startup (host)	Restarts the host's cyclic transmission. Off: Start not instructed On: Start instructed (valid at rise) * 2	○	○	○	○	○	○	○	○	○	○
* 1 * 3 SB0001 (1)	Link stop (host)	Stops the host's cyclic transmission. Off: Stop not instructed On: Stop instructed (valid at rise) * 2	○	○	○	○	○	○	○	○	○	○
* 1 * 3 SB0002 (2)	System link startup	Restarts the cyclic transmission according to the contents of SW0000 to SW0004. Off: Start not instructed On: Start instructed (valid at rise) * 2	○	○	○	○	○	○	○	○	○	○
* 1 * 3 SB0003 (3)	System link stop	Stops the cyclic transmission according to the contents of SW0000 to SW0004. Off: Stop not instructed On: Stop instructed (valid at rise) * 2	○	○	○	○	○	○	○	○	○	○
SB0005 (5)	Clear retry count	Clears the retry count (SW00C8 to SW00C9) to 0. Off: Clear not instructed On: Clear instructed (valid when on) * 2	○	○	○	○	○	○	○	○	○	○
* 1 SB0006 (6)	Clear communication error count	Clears the communication error (SW00B8 to SW00C7) to 0. Off: Clear not instructed On: Clear instructed (valid when on) * 2	○	○	○	○	○	○	○	○	○	○

[Availability column] Optical: optical loop, Coaxial: coaxial bus  
○: Available, ×: Not available


\* 1: Used in the network tests of peripheral devices.

\* 2: SB0000 to SB0003 become valid when only one point turns on.

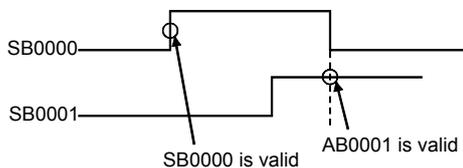

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 1 Link special relay (SB) list (Continued)

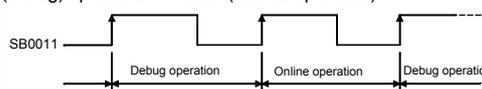No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SB0007 (7)	Clear forward loop transmission errors	Clears the line abnormal detection (SW00CC) of the forward loop side to 0. Off: Clear not instructed On: Clear instructed (valid when on)	○	×	○	×	○	×	○	×
SB0008 (8)	Clear reverse loop transmission errors	Clears the line abnormal detection (SW00CD) of the reverse loop side to 0. Off: Clear not instructed On: Clear instructed (valid when on)	○	×	○	×	○	×	○	×
* 6 SB0009 (9)	Clear loop switch count	Clears the loop switch count (SW00CE to SW00E7) to 0. Off: Clear not instructed On: Clear instructed (valid when on)	○	×	○	×	○	×	○	×
SB000A (10)	Clear transient transmission errors	Clears the transient transmission errors (SW00EE, SW00EF) to 0. Off: Clear not instructed On: Clear instructed (valid when on)	○	○	○	○	○	○	○	○
SB000B (11)	Transient transmission error area setting	Designates whether to overwrite or retain the transient transmission errors (SW00F0 to SW00FF). Off: Overwrite On: Retain	○	○	○	○	○	○	○	○
* 3 * 4 SB000F (15)	Clear minor errors	Clears all of minor errors detected by remote I/O stations. This error clear is executed on all remote I/O stations. While SB000F is ON, no minor error is detected on all remote I/O stations. In a multiplexed remote I/O network (including the one that supports redundant systems), this can be manipulated only from the station acting as a master. Off: Clear not instructed On: Clear instructed (valid when on)	×	×	×	×	○	○	×	×
SB0011 (17)	Data link operation designation	Designates the data link operation. Off: No switch instruction On: Switch instruction (valid when on) When On is detected, data link switches from Online (normal data link) operation to Online (debug) operation, or from Online (debug) operation to Online (normal operation). 	○	○	○	○	○	○	○	○
SB0014 (20)	Remote sub-master station switching command	Forcibly directs the remote sub-master station that is performing master operation to shift to sub-master operation. (It is invalid for the redundant system.) Off: Without directive On: With directive	×	×	×	×	○	○	×	×
SB0018 (24)	System switching monitoring time setting valid flag	Indicates whether the system switching monitoring time setting (SW0018) is valid or invalid in case of a data link error. Off: Invalid On: Valid (valid at the time of startup)	○	○	○	○	○	○	×	×
SB0020 (32)	Module status	Indicates the network module status. Off: Normal On: Abnormal	○	○	○	○	○	○	×	×
SB0040 (64)	Network type (host)	Indicates the network type set with the parameters of the host's network module. Off: PLC to PLC network On: Remote I/O network	○	○	○	○	○	○	○	○
SB0041 (65)	Host station's redundant function support information	Indicates the station supports the redundant function or not. Off: Redundant function not supported On: Redundant function supported	○	○	○	○	○	○	○	○
SB0042 (66)	Power supply status of host	Indicates the external power supply status to the host's QJ71LP21S-25. (When using QJ71LP21-25, 0 is ON.) Off: Not supplied (EXT.PW LED is OFF.) On: Supplied (EXT.PW LED is ON.)	○	×	○	×	○	×	○	×
SB0043 (67)	Online switch (host)	Indicates the mode set by the switch of the host's network module. Off: Online (mode setting is 0 or 4); "Parameter setting mode becomes valid" On: Other than online (mode setting is other than 0)	○	○	○	○	○	○	○	○

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.  
 \* 4: Minor errors are the type of errors that do not affect the CPU operation. (Refer to Section 8.3.2)  
 \* 6: The SB0009 should be kept on until the SW00CE becomes "0."

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SB0044 (68)	Station setting (host)	When PLC to PLC network Indicates the station type set with the parameter of the host's network module. Off: Normal station On: Control station	○	○	○	○	×	×	×	×
		When remote I/O network Indicates the station type set with the parameter of the host's network module. Off: Remote I/O station or multiplexed remote sub-master station On: Remote master station or multiplexed remote master station	×	×	×	×	○	○	○	○
SB0045 (69)	Setting information (host)	Indicates the switch setting information (including parameter settings) of the host's network module. Off: Normal On: Abnormal setting	○	○	○	○	○	○	○	○
SB0046 (70)	Data link operation designation result (host)	Indicates the switch setting information (including parameter settings) of the host's network module. Off: Normal data linking On: Operating in debug mode	○	○	○	○	○	○	○	○
SB0047 (71)	Baton pass status (host)	Indicates the host's baton pass status (transient transmission enabled). Off: Normal On: Abnormal When an error is identified, the cause of the error can be checked in Baton pass status (host) (SW0047) and Cause of baton pass interruption (SW0048).	○	○	○	○	○	○	○	○
* 3 SB0048 (72)	Control station status (host)	When PLC to PLC network Indicates the host's status. Off: Normal station On: Control station (SB0044 is on) Sub-control station (SB0044 is off)	○	○	○	○	×	×	×	×
	Remote master station status (host)	When remote I/O network Indicate the host status Off: Remote I/O station On: SB0044=On Remote master station or multiplexed remote master station SB0044=Off Remote I/O station or multiplexed remote sub-master station	×	×	×	×	○	○	○	○
SB0049 (73)	Host data link status	Indicates the host's data link operation status. Off: Normal On: Abnormal When an error is identified, the cause of the error can be checked in Cause of data link stop (SW0049).	○	○	○	○	○	○	○	○
* 4 SB004A (74)	Host CPU status (1)	Indicates the host's CPU status. Off: Normal On: Minor error occurred	○	○	○	○	○	○	×	×
* 5 SB004B (75)	Host CPU status (2)	Indicates the host's CPU status. Off: Normal On: A serious or fatal error occurred	○	○	○	○	○	○	×	×
* 3 SB004C (76)	Cyclic transmission start acknowledgment status (host)	Indicates the startup acknowledgment status of the cyclic transmission. Off: Not acknowledged (SB0000 is off) On: Start acknowledged (SB0000 is on)	○	○	○	○	○	○	○	○
* 3 SB004D (77)	Cyclic transmission start completion status (host)	Indicates the completion status of the cyclic transmission. Off: Not completed (SB0000 is off) On: Start completed (SB0000 is on)	○	○	○	○	○	○	○	○
* 3 SB004E (78)	Cyclic transmission stop acknowledgment status (host)	Indicates the stop acknowledgment status of the cyclic transmission. Off: Not acknowledged (SB0001 is off) On: Stop acknowledged (SB0001 is on)	○	○	○	○	○	○	○	○
* 3 SB004F (79)	Cyclic transmission stop completion status (host)	Indicates the stop completion status of the cyclic transmission. Off: Not completed (SB0001 is off) On: Stop completed (SB0001 is on)	○	○	○	○	○	○	○	○

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.  
 \* 4: Minor errors are the type of errors that do not affect the CPU operation. (Refer to Section 8.3.2)  
 \* 5: Serious errors are the type of errors that stop the CPU operation.  
 Fatal errors are also the type of errors that stop the CPU operation. (Refer to Section 8.3.2)

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited									
			Control station		Normal station		Remote master station		Remote I/O station			
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial		
* 3 SB0050 (80)	Cyclic transmission start acknowledgment status (system)	Indicates the startup acknowledgment status of the cyclic transmission. Off: Not acknowledged (SB0002 is off) On: Start acknowledged (SB0002 is on)	○	○	○	○	○	○	○	○	○	○
* 3 SB0051 (81)	Cyclic transmission start completion status (system)	Indicates the completion status of the cyclic transmission. Off: Not completed (SB0002 is off) On: Start completed (SB0002 is on)	○	○	○	○	○	○	○	○	○	○
* 3 SB0052 (82)	Cyclic transmission stop acknowledgment status (system)	Indicates the stop acknowledgment status of the cyclic transmission. Off: Not acknowledged (SB0003 is off) On: Stop acknowledged (SB0003 is on)	○	○	○	○	○	○	○	○	○	○
* 3 SB0053 (83)	Cyclic transmission stop completion status (system)	Indicates the stop completion status of the cyclic transmission. Off: Not completed (SB0003 is off) On: Stop completed (SB0003 is on)	○	○	○	○	○	○	○	○	○	○
SB0054 (84)	Parameter receive status	Indicates the parameter receive status. Off: Receive completed On: Not received	○	○	○	○	○	○	○	○	○	○
SB0055 (85)	Received parameter error	Indicates the status of the received parameters. Off: Parameters normal On: Parameters abnormal	○	○	○	○	○	○	○	○	○	○
* 3 SB0056 (86)	Communication status	Indicates the status of the transient transmission Off: Transient transmission by the control station On: Transient transmission by the sub-control station	○	○	○	○	○	○	○	○	○	○
SB0057 (87)	Parameter type	Indicates the parameter type. Off: MELSECNET/10 parameter On: MELSECNET/H parameter	○	○	○	○	○	○	○	○	○	○
SB0058 (88)	Operation designation at fault of control station	On PLC to PLC network Indicates the setting of "With data link by sub control station when control station is down." Off: Cyclic transmission made by sub control station when control station fails. On: Cyclic transmission not made by sub control station when control station becomes faulty	○	○	○	○	×	×	×	×	×	×
	Operation designation at fault of (multiplexed) remote master station	On remote I/O network Indicates the status of designating cyclic transmission when the (multiplexed) remote master station fails. Off: Cyclic transmission made by multiplexed remote sub-master station when multiplexed remote master station fails (multiplexed remote I/O network) On: Cyclic transmission not made when remote master station fails (remote I/O network)	×	×	×	×	○	○	○	○	○	○
SB0059 (89)	Low-speed cyclic designation	Indicates whether or not there are any parameter settings for the low-speed cyclic transmission. Off: No settings On: Settings exist	○	○	○	○	○	○	○	○	○	○
SB005A (90)	Parameter type 2	Indicates the parameter type of the control station. Off: MELSECNET/10 mode, MELSECNET/H mode On: MELSECNET/H Extended mode	○	○	○	○	×	×	×	×	×	×
SB005B (91)	END asynchronous settings	Indicates the END asynchronous settings status of the remote I/O network. Off: END asynchronous settings disabled On: END asynchronous settings enabled	×	×	×	×	○	○	×	×	×	×
SB005C (92)	I/O master station (Block 1)	Indicates the I/O master station setting (Common parameter setting) of block 1. (Valid when SB0049 is OFF) Off: No setting On: Setting exists. (Station No. is stored in SW005C.)	○	○	○	○	×	×	×	×	×	×
SB005D (93)	I/O master station (Block 2)	Indicates the I/O master station setting (Common parameter setting) of block 2. (Valid when SB0049 is OFF) Off: No setting On: Setting exists. (Station No. is stored in SW005D.)	○	○	○	○	×	×	×	×	×	×
SB0064 (100)	Reserved station designation	Indicates whether or not the station is reserved. (Valid when the SB0049 is off.) Off: No reserved station On: Reserved station exists Turns off when the SW0064 to SW0067 are all "0."	○	○	○	○	○	○	○	○	○	○

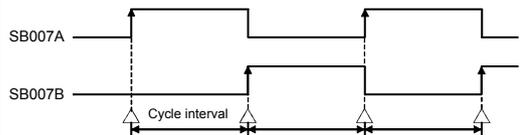
\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited								
			Control station		Normal station		Remote master station		Remote I/O station		
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	
SB0068 (104)	Communication mode	Indicates the link scan mode (status of supplementary settings of the common parameters). (Valid when the SB0049 is off.) Off: Normal mode On: Constant scan mode	○	○	○	○	○	○	○	○	○
SB0069 (105)	Multiplex transmission designation	Indicates the transmission designation status (status of supplementary settings of the common parameters). (Valid when the SB0049 is off.) Off: Normal transmission designation On: Multiplex transmission designation	○	×	○	×	○	×	○	×	○
*3 SB006A (106)	Multiplex transmission status	Indicates the transmission status. Off: Normal transmission On: Multiplex transmission In the case of multiplex transmission, the status of each station can be checked in Multiplex transmission status (1) (SW00B0 to SW00B3) and (2) (SW00B4 to SW00B7).	○	×	○	×	○	×	○	×	○
*3 SB006B (107)	Multiplex remote function designation	Indicates the status of designating the multiplex remote function. Off: Not designated. On: Designated.	×	×	×	×	○	○	○	○	○
*3 SB0070 (112)	Baton pass status of each station	Indicates the baton pass status of each station. (Not applicable to reserved stations and the station with the maximum station number or higher) Off: All stations normal On: Faulty station exists When any faulty station exists, each station status can be checked in Baton pass status of each station (SW0070 to SW0073).	○	○	○	○	○	○	○	○	○
*3 SB0071 (113)	Baton pass status of the remote master station	Indicates the baton pass status of the master station. (Including when there is an online loop test.) Off: Master station baton pass normal. On: Master station baton pass error.	×	×	×	×	○	○	○	○	○
*3 SB0072 (114)	Remote sub-master station transient transmission status	Indicates the transient transmission status of the remote sub-master station. Off: Normal On: Abnormal	×	×	×	×	○	○	○	○	○
*3 SB0074 (116)	Cyclic transmission status of each station	Indicates the cyclic transmission status of each station. (Not applicable to reserved stations and the station with the maximum station number or higher) Off: All stations are executing data linking On: Stations that are not executing data linking exist When any non-executing station exists, each station status can be checked in Cyclic transmission status of each station (SW0074 to SW0077).	○	○	○	○	○	○	○	○	○
*3 SB0075 (117)	Cyclic transmission status of the remote master station	Indicates the master station cyclic transmission status. (Includes online loop test.) Off: Master station cyclic transmission normal. On: Master station cyclic transmission error.	×	×	×	×	○	○	○	○	○
*3 SB0076 (118)	Remote sub-master station cyclic transmission status	Indicates the cyclic transmission status of the remote sub-master station. (Including the status at an online loop test) Off: Cyclic transmission normal On: Cyclic transmission abnormal	×	×	×	×	○	○	○	○	○
*3 SB0077 (119)	Remote master station cyclic transmission control status	Indicates the station type that is controlling cyclic transmission at the remote I/O stations. Off: Remote master station On: Remote sub-master station	×	×	×	×	○	○	○	○	○
*3 SB0078 (120)	Parameter communication status of each station	Indicates the parameter transmission status of each station. (Not applicable to reserved stations and the station with the maximum station number or higher) Off: Executing communication other than parameter communication On: Executing parameter communication Stations that are communicating parameters can be checked in Parameter communication status of each station (SW0078 to SW007B).	○	○	×	×	○	○	×	×	×

\*3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
* 3 SB007A (122)	Low-speed cyclic communication status	Indicates the low-speed cycle communication status. It is indicated to have transmitted by turning the bit on for either the SB007A or SB007B.  	○	○	○	○	×	×	×	×
* 3 SB007B (123)										
* 3 SB007C (124)	Parameter status of each station	Indicates the parameter status of each station. (Not applicable to reserved stations and the station with the maximum station number and higher) Off: No station detected parameter errors On: A station detected parameter errors Stations that have parameter errors can be checked in Parameter error status of each station (SW007C to SW007F).	○	○	×	×	○	○	×	×
* 3 * 5 SB0080 (128)	CPU operation status of each station (1)	Indicates the operation status of each station's CPU on the PLC-to-PLC network (including the host station). Off: All stations normal On: A moderate or serious error identified If a moderate or serious error is identified, the status of each station can be checked in CPU operation status of each station (1) (SW0080 to SW0083).	○	○	○	○	×	×	×	×
		Indicates the operation status of each remote I/O station on the remote I/O network (including the host station). Off: All stations normal On: Error station identified If any error station is identified, the status of each station can be checked in CPU operation status of each station (1) (SW0080 to SW0083).	×	×	×	×	○	○	○	○
* 3 SB0084 (132)	CPU RUN status of each station	Indicates the CPU RUN status of each station. Off: All stations are in the RUN or STEP RUN status On: Stations in the STOP or PAUSE status exist (including the host) When some stations are in the STOP or PAUSE status, each station status can be checked in CPU RUN status of each station (SW0084 to SW0087).	○	○	○	○	×	×	×	×
* 3 SB0085 (133)	CPU RUN status of the remote master station	Indicates the CPU run status of remote master station. Off: Run or STEP RUN status On: STOP or PAUSE status	×	×	×	×	○	○	○	○
* 3 SB0086 (134)	Remote sub-master station CPU RUN status	Indicates the CPU status of the multiplexed remote sub-master station. Off: RUN or STEP RUN status On: STOP or PAUSE status	×	×	×	×	○	○	○	○
* 3 * 4 SB0088 (136)	CPU operation status of each station (2)	Indicates the operation status of each station's CPU or of each remote I/O station (including the host station). Off: All stations normal On: Stations with minor errors exist If any station with a minor error exists, the status of each station can be checked in CPU operation status of each station (2) (SW0088 to SW008B).	○	○	○	○	○	○	○	○
* 3 SB008C (140)	External power supply information	Indicates the information of the external power supply (including the host). Off: All stations are without external power supply On: Stations with external power supply exist When any station with external power supply exists, the status of each station can be checked in Power supply status of each station (SW008C to SW008F).	○	×	○	×	×	×	×	×

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

\* 4: Minor errors are the type of errors that do not affect the CPU operation. (Refer to Section 8.3.2)

\* 5: Serious errors are the type of errors that stop the CPU operation.

Fatal errors are also the type of errors that stop the CPU operation. (Refer to Section 8.3.2)

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
*3 SB008D (141)	Module type of each station	Indicates the module type of each station. Off: All stations are NET/10 type modules On: NET/10H type modules exist	○	○	○	○	×	×	×	×
SB0090 (144)	Host loop status	Indicates the host's loop status. Off: Normal On: Abnormal When an error is identified, the error details can be checked by Loopback information (SW0090).	○	×	○	×	○	×	○	×
*3 SB0091 (145)	Forward loop status	Indicates the status of stations connected to the forward loop. Off: All stations normal On: Faulty stations exist When any faulty station exists, the status of each station can be checked in Forward loop status of each station (SW0091 to SW0094).	○	×	○	×	○	×	○	×
*3 SB0092 (146)	Forward loop status of remote master station	Indicates the forward loop status of the remote master station. Off: Normal On: Error	×	×	×	×	×	×	○	×
*3 SB0095 (149)	Reverse loop status	Indicates the status of stations connected to the reverse loop. Off: All stations normal On: Faulty stations exist When any faulty station exists, the status of each station can be checked in Reverse loop status of each station (SW0095 to SW0098).	○	×	○	×	×	×	○	×
*3 SB0096 (150)	Reverse loop status of remote master station	Indicates the reverse loop status of the remote master station. Off: Normal On: Error	×	×	×	×	×	×	○	×
*3 SB0099 (153)	Forward loop loopback	Indicates the loopback status of the forward loop while the system is operating. Off: Not executed On: Executing stations exist (Executing stations are stored in the SW0099)	○	×	○	×	○	×	○	×
*3 SB009A (154)	Reverse loop loopback	Indicates the loopback status of the reverse loop while the system is operating. Off: Not executed On: Executing stations exist (Executing stations are stored in the SW009A)	○	×	○	×	○	×	○	×
*3 SB009C (156)	Send transmission path mismatch status	Indicates the status of the transmission path used for sending by other stations. Off: All matched On: Mismatching stations exist	○	○	○	○	○	○	○	○
*3 SB00A0 (160)	RECV instruction execution request flag (1)	Stores the data reception status of channel 1 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A1 (161)	RECV instruction execution request flag (2)	Stores the data reception status of channel 2 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A2 (162)	RECV instruction execution request flag (3)	Stores the data reception status of channel 3 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A3 (163)	RECV instruction execution request flag (4)	Stores the data reception status of channel 4 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A4 (164)	RECV instruction execution request flag (5)	Stores the data reception status of channel 5 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A5 (165)	RECV instruction execution request flag (6)	Stores the data reception status of channel 6 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
*3 SB00A6 (166)	RECV instruction execution request flag (7)	Stores the data reception status of channel 7 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
* 3 SB00A7 (167)	RECV instruction execution request flag (8)	Stores the data reception status of channel 8 of the host station. Off: No data reception On: Data received	○	○	○	○	×	×	×	×
SB00A8 (168)	Online test instruction	Indicates the online test instruction status. Off: Not instructed On: Instructed	○	○	○	○	○	○	○	○
SB00A9 (169)	Online test completion	Indicates the online test completion status. Off: Not completed On: Completed If "Completed" is indicated, the online test information can be obtained in Online test execution item/faulty station (requesting side) (SW00A8) and Online test result (requesting side) (SW00A9).	○	○	○	○	○	○	○	○
SB00AA (170)	Online test response instruction	Indicates the online test response status. Off: No response On: Responded	○	○	○	○	○	○	○	○
SB00AB (171)	Online test response completion	Indicates the online test response completion status. Off: Response not completed On: Response completed If "Response completed" is indicated, the online test information can be obtained in Online test execution item/faulty station (responding side) (SW00AA) and Online test result (responding side) (SW00AB).	○	○	○	○	○	○	○	○
SB00AC (172)	Offline test instruction	Indicates the offline test instruction status. Off: Not instructed On: Instructed	○	○	○	○	○	○	○	○
SB00AD (173)	Offline test completion	Indicates the offline test completion status. Off: Not completed On: Completed If "Completed" is indicated, the offline test information can be obtained in Offline test execution item/faulty station (requesting side) (SW00AC) and Offline test result (requesting side) (SW00AD).	○	○	○	○	○	○	○	○
SB00AE (174)	Offline test response	Indicates the response status for offline test. Off: No response On: Response	○	○	○	○	○	○	○	○
SB00AF (175)	Offline test response completion	Indicates the response status for offline test end. Off: Response not completed On: Response completed If "Response completed" is indicated, the offline test information can be obtained in Offline test execution item (responding side) (SW00AE) and Offline test result (responding side) (SW00AF).	○	○	○	○	○	○	○	○
SB00EE (238)	Transient error	Indicates the transient transmission error status. Off: No error On: Errors exist	○	○	○	○	○	○	○	○
* 3 SB01C4 (452)	Remote sub-master station switching acceptance status	Indicates the status of accepting the directive to shift from master operation to sub-master operation. Off: Without acceptance On: With acceptance	×	×	×	×	○	○	×	×
* 3 SB01C5 (453)	Remote sub-master station switching status	Indicates the operation status of a shift from master operation to sub-master operation. Off: Without shift On: Shift completion	×	×	×	×	○	○	×	×
* 3 SB01C8 (456)	Send/receive device number valid/invalid status	Indicates whether the send/receive device numbers (SW01C8 to SW01CF) of the remote master station or remote sub-master station are valid or invalid. Off: Invalid On: Valid	×	×	×	×	○	○	×	×

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 1 Link special relay (SB) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
* 3 SB01E0 (480)	Network type consistency check	Indicates whether there is a mismatch between the network types of the control station and normal stations on the network. • When the control station is in the MELSECNET/H Extended mode Off: All normal stations are set to the MELSECNET/H Extended mode. On: There is a normal station set to the MELSECNET/H mode or MELSECNET/10 mode. • When the control station is in the MELSECNET/H mode or MELSECNET/10 mode Off: All normal stations are set to the MELSECNET/H mode or MELSECNET/10 mode. On: There is a normal station set to the MELSECNET/H Extended mode.	○	○	○	○	×	×	×	×
* 3 SB01F4 (500)	Redundant system status (1)	Indicates the operation mode of each station's CPU. Off: CPUs of all stations in backup mode On: Separate mode (excluding reserved stations and stations of the number exceeding the maximum) This relay turns off when all of SW01F4 to SW01F7 are "0."	○	○	○	○	×	×	×	×
* 3 SB01F8 (504)	Redundant system status (2)	Indicates the pairing setting status of each station. Off: No pairing setting On: Pairing set station exists (excluding stations of the number exceeding the maximum) This relay turns off when all of SW01F8 to SW01FB are "0."	○	○	○	○	×	×	×	×
* 3 SB01FC (508)	Redundant system status (3)	Indicates the operation status of each station's CPU (control system/standby system). Off: Control system CPUs on all stations On: Standby system CPU exists (excluding reserved stations and stations after the maximum station number) This relay turns off when all of SW01FC to SW01FF are "0."	○	○	○	○	×	×	×	×

\* 3: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

### Appendix 3 Link Special Register (SW) List

In the link special register (SW), the data linking information is stored as numeric values. Thus, faulty areas and causes of errors can be checked using or monitoring the link special registers in the sequence programs.

Moreover, the link special register (SW) that stores the link status is used for the detailed information of the network diagnostics of GX Developer. For a list of the device numbers for each display item, see refer to Section 8.1, "Network Diagnostics (Line Monitor)."

#### (1) Mounting multiple network modules

The link special register (SW) of each network module is refreshed by the link special register (SW) of the CPU module shown below when the refresh parameters of each network module remain default.

Module installing position	Module 1	Module 2	Module 3	Module 4
Device number	SW0000 to 01FF	SW0200 to 03FF	SW0400 to 05FF	SW0600 to 07FF

#### (2) Range turned ON/OFF by user and range turned ON/OFF by system

The link special register (SW) has the user setting area range (SW0000 to SW001F) and the system setting area range (SW0020 to SW01FF). (When the module is installed in the position of Module 1)

(3) Link special register (SW) list

Assignments of SW0000 to SW01FF are shown in the special register(SW) list.

POINT
(1) Do not write data to the area of the No. which does not exist in the link special register (SW) list. Writing data to the area of the No. which does not exist in the list may cause malfunction of the programmable controller system.
(2) For how to use link special register (SW), refer to Section 6.6.

Table 2 Link special register (SW) list

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 1 SW0000 (0)		Sets the station that stops/restarts data linking. 00h: Host 01h: All stations 02h: Designated station 80h: Host (forced stop/restart) 81h: All stations (forced stop /restart) 82h: Designated station (forced stop /restart)	○	○	○	○	○	○	○	○																																																							
* 1 SW0001 (1) SW0002 (2) SW0003 (3) SW0004 (4)	Link stop/startup direction content	Sets whether the designated station should execute data linking. (When the SW0000 is 02h or 82h.) Sets the bits to 1 for stations whose data linking is stopped/restarted. 0: Invalid data linking stop/restart instruction 1: Valid data linking stop/restart instruction  <table border="1" style="margin-left: 20px;"> <tr> <td></td> <td>b15</td> <td>b14</td> <td>b13</td> <td>b12</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW0001</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0002</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0003</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0004</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </table> <p style="font-size: small; margin-left: 20px;">The numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0001	16	15	14	13	to	5	4	3	2	1	SW0002	32	31	30	29	to	21	20	19	18	17	SW0003	48	47	46	45	to	37	36	35	34	33	SW0004	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0001	16	15	14	13	to	5	4	3	2	1																																																							
SW0002	32	31	30	29	to	21	20	19	18	17																																																							
SW0003	48	47	46	45	to	37	36	35	34	33																																																							
SW0004	64	63	62	61	to	53	52	51	50	49																																																							
SW0008 (8)	Logical channel setting (channel 1)	Sets the logical channel number for physical channel number 1. (Valid only for channels on the receiving side) 0 : Logical channel number 1 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×																																																							
SW0009 (9)	Logical channel setting (channel 2)	Sets the logical channel number for physical channel number 2. (Valid only for channels on the receiving side) 0 : Logical channel number 2 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×																																																							
SW000A (10)	Logical channel setting (channel 3)	Sets the logical channel number for physical channel number 3. (Valid only for channels on the receiving side) 0 : Logical channel number 3 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×																																																							

[Availability column] Optical: optical loop, Coaxial: coaxial bus  
○: Available, ×: Not available

\* 1: Used in the network test of GX Developer.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SW000B (11)	Logical channel setting (channel 4)	Sets the logical channel number for physical channel number 4. (Valid only for channels on the receiving side) 0 : Logical channel number 4 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×
SW000C (12)	Logical channel setting (channel 5)	Sets the logical channel number for physical channel number 5. (Valid only for channels on the receiving side) 0 : Logical channel number 5 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×
SW000D (13)	Logical channel setting (channel 6)	Sets the logical channel number for physical channel number 6. (Valid only for channels on the receiving side) 0 : Logical channel number 6 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×
SW000E (14)	Logical channel setting (channel 7)	Sets the logical channel number for physical channel number 7. (Valid only for channels on the receiving side) 0 : Logical channel number 7 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×
SW000F (15)	Logical channel setting (channel 8)	Sets the logical channel number for physical channel number 8. (Valid only for channels on the receiving side) 0 : Logical channel number 8 (default) 1 to 64 : Other logical channel number is set.	○	○	○	○	×	×	×	×
SW0018 (24)	System switching monitoring time setting	Set the time from the occurrence of a data link error to the recognition of data link stop in the redundant system. 0 : 2 seconds (default) 1 to 500 : Units of 10 ms (Units of 10 ms for 10 ms to 5 seconds)	○	○	○	○	○	○	×	×
* 2 SW001C (28)	Number of retries	Indicates the change of the number of retries for the time of the issue of a request in send and receive instructions. 0 : 7 times (default) 1 to 7 : Setting exists	○	○	○	○	○	○	×	×
* 2 SW001D (29)	Retry interval	Indicates the change of the retry interval for the time of the issue of a request in send and receive instructions. 0 : 100 ms (default) 1 to FE <sub>H</sub> : Setting exists (unit: ms)	○	○	○	○	○	○	×	×
* 2 SW001E (30)	Number of gates	Indicates the change of the number of gates for the time of the issue of a request in send and receive instructions. 0 : 7 (default) 1 to EF <sub>H</sub> : Setting exists	○	○	○	○	○	○	×	×
SW0020 (32)	Module status	Stores the status of the network module. 0 : Normal Other than 0 : Abnormal (refer to the error codes in Section 8.3) FF <sub>H</sub> : Module error	○	○	○	○	○	○	×	×
SW0031 (49)	ZNRD instruction processing result	Indicates the processing result of the ZNRD instruction. 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	×	×	×	×
	Send/receive instruction (1) processing result	Indicates the processing results of the SEND/RECV/READ/ WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/ REMTO instructions (when physical channel 1 is used). 0 : Normal completion Other than 0 : Abnormal completion (see the error codes in Section 8.3)	○	○	○	○	○	○	×	×

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special Register (SW) List (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SW0033 (51)	ZNWR instruction processing result	Indicates the processing result of the ZNWR instruction. 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	×	×	×	×
	Send/receive instruction (2) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 2 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW0035 (53)	Send/receive instruction (3) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 3 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW0037 (55)	Send/receive instruction (4) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 4 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW0039 (57)	Send/receive instruction (5) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 5 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW003B (59)	Send/receive instruction (6) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 6 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW003D (61)	Send/receive instruction (7) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 7 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW003F (63)	Send/receive instruction (8) processing result	Indicates the processing results of the SEND/RECV/READ/WRITE/REQ/RECVS/RRUN/RSTOP/RTMRD/RTMWR/REMFR/REMTO instructions (when physical channel 8 is used). 0 : Normal completion Other than 0 : Abnormal completion (refer to the error codes in Section 8.3)	○	○	○	○	○	○	×	×
SW0040 (64)	Network No.	Stores the network number of the host. Range: 1 to 239	○	○	○	○	○	○	○	○
SW0041 (65)	Group No.	Stores the group number of the host. 0 : No group designation 1 to 32 : Group No.	○	○	○	○	○	○	×	×
SW0042 (66)	Station No.	Stores the station No. of host station. 1 to 64 : Station No. 7D <sub>H</sub> : Remote master station	○	○	○	○	○	○	○	○
SW0043 (67)	Mode status	Stores the mode status of the host. 0 : Online 2 : Offline 3 or more : Applicable test	○	○	○	○	○	○	○	○

Table 2 Link special register (SW) list (Continued)

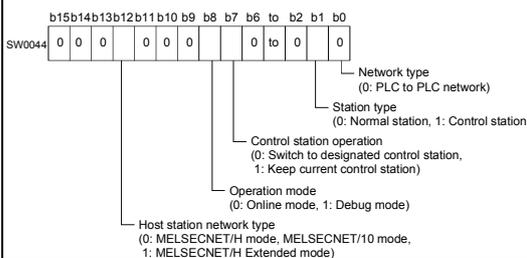
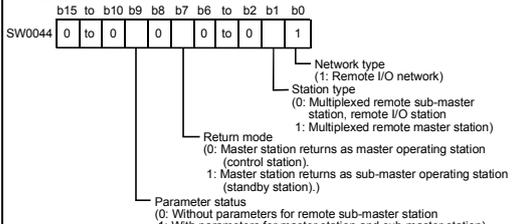
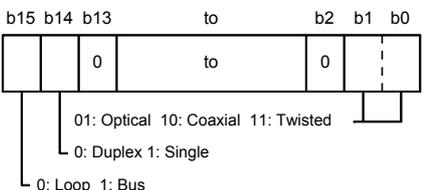
No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SW0044 (68)	Station setting	<p>On PLC to PLC network: Stores the condition setting switch status of the host.</p> <p>0: Off 1: On</p>  <p>Network type (0: PLC to PLC network) Station type (0: Normal station, 1: Control station) Control station operation (0: Switch to designated control station, 1: Keep current control station) Operation mode (0: Online mode, 1: Debug mode) Host station network type (0: MELSECNET/H mode, MELSECNET/10 mode, 1: MELSECNET/H Extended mode)</p>	○	○	○	○	×	×	×	×
		<p>On remote I/O network: Stores the condition setting switch status of the host.</p> <p>0: Off 1: On</p>  <p>Network type (1: Remote I/O network) Station type (0: Multiplexed remote sub-master station, remote I/O station, 1: Multiplexed remote master station) Return mode (0: Master station returns as master operating station (control station), 1: Master station returns as sub-master operating station (standby station).) Parameter status (0: Without parameters for remote sub-master station, 1: With parameters for master station and sub-master station)</p>	×	×	×	×	○	○	○	○
SW0046 (70)	Module type	<p>Stores the network module type of the host.</p>  <p>01: Optical 10: Coaxial 11: Twisted 0: Duplex 1: Single 0: Loop 1: Bus</p>	○	○	○	○	○	○	○	○
SW0047 (71)	Baton pass status (host)	<p>Stores the baton pass status of the host.</p> <p>00h: Executing data linking 01h: Data linking stopped (instructed by other station) 02h: Data linking stopped (instructed by host) 03h: Executing baton pass (parameter received (no transmission area in the host)) 04h: Executing baton pass (parameter error) 05h: Executing baton pass (parameter not received) 06h: Being disconnected (no baton pass) 07h: Being disconnected (line error) 11h: Loop test 12h: Setup confirmation test 13h: Station order check test 14h: Communication test 1Fh: Offline test</p>	○	○	○	○	○	○	○	○
SW0048 (72)	Cause of baton pass interruption	<p>Stores the cause of baton pass interruption of the host.</p> <p>0 : Normal communication 1 : Offline 2 : Offline test 3 or more : Cause of interruption (refer to the error codes in Section 8.3)</p>	○	○	○	○	○	○	○	○
SW0049 (73)	Cause of data link stop	<p>Stores the cause of data linking stop of the host.</p> <p>0: Normal 1: Stop instructed 2: No common parameters 3: Common parameter error 4: Host CPU error 6: Communication aborted</p>	○	○	○	○	○	○	○	○

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																													
			Control station		Normal station		Remote master station		Remote I/O station																							
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																						
*2 SW004A (74)	Data linking stop request station	Stores the station that stopped the host data linking. (Valid when the SW0049 is 1.) SW004A <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td>b15</td><td>b14</td><td>to</td><td>b7</td><td>b6</td><td>b5</td><td>b4</td><td>b3</td><td>b2</td><td>b1</td><td>b0</td> </tr> <tr> <td>0</td><td></td><td>to</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> 0: Host 1 to 64: Station number 0: Station number designated 1: All stations designated b0 to b6 store 7D <sub>H</sub> if a data link stop request is received from the remote master station/multiplexed remote master station.	b15	b14	to	b7	b6	b5	b4	b3	b2	b1	b0	0		to	0								○	○	○	○	○	○	○	○
b15	b14	to	b7	b6	b5	b4	b3	b2	b1	b0																						
0		to	0																													
*2 SW004B (75)	Host CPU status	Indicates the CPU status of the host. 0 : Normal Other than 0 : Abnormal (For the error codes, refer to Section 8.3 or the "Error Code" chapter of QCPU User's Manual (Hardware Design, Maintenance and Inspection).)	○	○	○	○	○	○	×	×																						
*2 SW004D (77)	Data linking start status (host)	Stores the result of starting cyclic transmission with Link startup (host) (SB0000). 0 : Normal Other than 0 : Abnormal (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○																						
*2 SW004F (79)	Data linking stop status (host)	Stores the result of stopping cyclic transmission with Link stop (host) (SB0001). 0 : Normal Other than 0 : Abnormal (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○																						
*2 SW0051 (81)	Data linking start status (entire system)	Stores the result of starting cyclic transmission with System link startup (SB0002). 0 : Normal Other than 0 : Abnormal (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○																						
*2 SW0053 (83)	Data linking stop status (entire system)	Stores the result of stopping cyclic transmission with System link stop (SB0003). 0 : Normal Other than 0 : Abnormal (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○																						
SW0054 (84)	Parameter information	At the PLC to PLC network. Stores the parameter information. (When the SB0054 and SB0055 are off.) b15 b14 to b2 b1 b0 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td>0</td><td></td><td>to</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> Type 0: Not designated 1: Designated 00: Use only common parameters 01: Common parameters + station specific parameters 10: Use only default parameters 11: Default parameters + station specific parameters	0		to	0								○	○	○	○	×	×	×	×											
		0		to	0																											
(When the SB0055 is on.) b15 to b4 b3 b2 b1 b0 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td>0</td><td></td><td>to</td><td>0</td><td>0</td><td>1</td><td>1</td><td>1</td><td>1</td> </tr> </table> = 0F <sub>H</sub> : Parameter error Check the error code in the SW0055.	0		to	0	0	1	1	1	1																							
0		to	0	0	1	1	1	1																								
		When remote I/O net Stores the parameter information. (When the SB0054 and SB0055 are off.) b15 to b3 b2 b1 b0 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td>0</td><td></td><td>to</td><td>0</td><td></td><td>0</td><td>0</td> </tr> </table> Intelligent function module parameter 0: No 1: Yes	0		to	0		0	0	×	×	×	×	×	×	○	○															
0		to	0		0	0																										

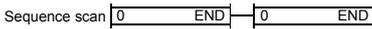
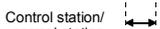
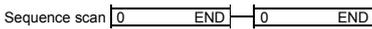
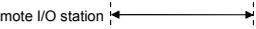
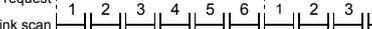
\*2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																													
			Control station		Normal station		Remote master station		Remote I/O station																																																							
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																						
SW0055 (85)	Parameter setting status	At the PLC to PLC network. Stores the status of the parameters. 0 : Normal parameter 1 or more : Abnormal parameter (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○	○	○																																																				
* 2 SW0056 (86)	Current control station  Current remote master station	At the PLC to PLC network. Stores the number of the station that actually operates as the control station (including a sub-control station). Range: 1 to 64  When remote I/O network Stores the station number controlling the current baton pass. 7DH : Remote master station or multiplexed remote master station 1 to 64 : Multiplexed remote sub-master station	○	○	○	○	×	×	×	×	○	○																																																				
SW0057 (87)	Designated control station  Designated remote master station	At the PLC to PLC network. Stores the number of the station that is set as the control station. Range: 1 to 64 0: Designated control station error  When remote I/O network. 7DH : Remote master station Other than 7DH : Remote master station error.	○	○	○	○	×	×	×	×	○	○																																																				
SW0059 (89)	Total number of link stations	Stores the total number of link stations that is set with the parameters. Range: 1 to 64 (64 when there is no parameter.)	○	○	○	○	○	○	○	○	○	○																																																				
* 2 SW005A (90)	Maximum baton pass station	Stores the maximum station number among the stations executing the baton pass. Range: 1 to 64	○	○	○	○	○	○	○	○	○	○																																																				
* 2 SW005B (91)	Maximum cyclic transmission station	Stores the maximum station number among the stations executing the cyclic transmission. Range: 1 to 64	○	○	○	○	○	○	○	○	○	○																																																				
SW005C (92)	I/O master station (block 1)	Stores the station number of the I/O master station of block 1 with PLC to PLC network. 0 : None 1 to 64 : Station number Valid when the SB0049 is off.	○	○	○	○	×	×	×	×	×	×																																																				
SW005D (93)	I/O master station (block 2)	Stores the station number of the I/O master station of block 2 with PLC to PLC network. 0 : None 1 to 64 : Station number Valid when the SB0049 is off.	○	○	○	○	×	×	×	×	×	×																																																				
SW0064 (100) SW0065 (101) SW0066 (102) SW0067 (103)	Reserved station designation	Stores the stations that are set as reserved stations. 0: Other than reserved station 1: Reserved station Valid when the SB0049 is off.  <table border="1" style="margin-left: 40px;"> <tr> <td>b15</td><td>b14</td><td>b13</td><td>b12</td><td>to</td><td>b4</td><td>b3</td><td>b2</td><td>b1</td><td>b0</td> </tr> <tr> <td>SW0064</td><td>16</td><td>15</td><td>14</td><td>13</td><td>to</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td> </tr> <tr> <td>SW0065</td><td>32</td><td>31</td><td>30</td><td>29</td><td>to</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td> </tr> <tr> <td>SW0066</td><td>48</td><td>47</td><td>46</td><td>45</td><td>to</td><td>37</td><td>36</td><td>35</td><td>34</td><td>33</td> </tr> <tr> <td>SW0067</td><td>64</td><td>63</td><td>62</td><td>61</td><td>to</td><td>53</td><td>52</td><td>51</td><td>50</td><td>49</td> </tr> </table> <p style="font-size: small; margin-left: 40px;">Numbers 1 to 64 in the above table indicate the station numbers.</p>	b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0064	16	15	14	13	to	5	4	3	2	1	SW0065	32	31	30	29	to	21	20	19	18	17	SW0066	48	47	46	45	to	37	36	35	34	33	SW0067	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0064	16	15	14	13	to	5	4	3	2	1																																																						
SW0065	32	31	30	29	to	21	20	19	18	17																																																						
SW0066	48	47	46	45	to	37	36	35	34	33																																																						
SW0067	64	63	62	61	to	53	52	51	50	49																																																						
SW0068 (104)	Communication mode	Stores the status of the constant link scan settings. 0 : No storage 1 to 500 : Setting time (ms) Valid when the SB0049 is off.	○	○	○	○	○	○	○	○	○	○																																																				

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																																		
			Control station		Normal station		Remote master station		Remote I/O station																																																												
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																											
* 2 SW006B (107)	Maximum link scan time	Stores the maximum/minimum/current values of the link scan time (unit: ms). The values for the control station and normal stations vary.	○	○	○	○	○	○	○	○	○	○	○																																																								
* 2 SW006C (108)	Minimum link scan time	(PLC to PLC network) Sequence scan  Link scan  Control station/normal station 	○	○	○	○	○	○	○	○	○	○	○																																																								
* 2 SW006D (109)	Current link scan time	When the constant scan is set, the values are as follows: Control station (Setting value) < { Measured link scan value + KB of the link scan time equation } → Measured link scan value + KB of the link scan time equation (Setting value) > { Measured link scan value + KB of the link scan time equation } → Measured link scan value Normal station → Constant link scan that has been set. (Remote I/O network) Sequence scan  Link scan  Remote master station  Remote I/O station 	○	○	○	○	○	○	○	○	○	○	○																																																								
* 2 SW006E (110)	Low-speed cyclic scan time	Stores the number of link scans in the send interval of the low-speed cyclic transmission. Low-speed cyclic send request  Link scan  Low-speed cyclic transmission  Send interval	○	○	○	○	×	×	×	×	×	×	×																																																								
* 2 SW0070 (112)/ SW0071 (113)/ SW0072 (114)/ SW0073 (115)	Baton pass status of each station	Stores the baton pass status of each station (including the host). <Online> 0: Normal (including the stations with the maximum station number and smaller numbers as well as reserved stations) 1: Abnormal <Offline test> 0: Normal 1: Abnormal (including the stations with the maximum station number and smaller numbers as well as reserved stations) <table border="1" data-bbox="542 1512 973 1657"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0070</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0071</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0072</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0073</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <small>Numbers 1 to 64 in the above table indicate the station numbers.</small>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0070	16	15	14	13	to	5	4	3	2	1	SW0071	32	31	30	29	to	21	20	19	18	17	SW0072	48	47	46	45	to	37	36	35	34	33	SW0073	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																											
SW0070	16	15	14	13	to	5	4	3	2	1																																																											
SW0071	32	31	30	29	to	21	20	19	18	17																																																											
SW0072	48	47	46	45	to	37	36	35	34	33																																																											
SW0073	64	63	62	61	to	53	52	51	50	49																																																											

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 2 SW0074 (116)/ SW0075 (117)/ W0076 (118)/ SW0077 (119)	Cyclic transmission status of each station	<p>Stores the cyclic transmission status of each station (including the host).</p> <p>0: Executing cyclic transmission (including the station with the maximum station number and smaller number as well as reserved stations)</p> <p>1: Cyclic transmission not executed</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0074</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0075</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0076</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0077</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p> <p>If a CPU module installed together with QJ71LP21S-25 is turned OFF, detection of a data link error may take more time than usual.</p> <p>For immediate detection of a data link error, program an interlock using the link relay (LB) in each station's send range.</p> <p>For details, refer to the Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network).</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0074	16	15	14	13	to	5	4	3	2	1	SW0075	32	31	30	29	to	21	20	19	18	17	SW0076	48	47	46	45	to	37	36	35	34	33	SW0077	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0074	16	15	14	13	to	5	4	3	2	1																																																							
SW0075	32	31	30	29	to	21	20	19	18	17																																																							
SW0076	48	47	46	45	to	37	36	35	34	33																																																							
SW0077	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW0078 (120)/ SW0079 (121)/ SW007A (122)/ SW007B (123)	Parameter communication status of each station	<p>Stores the parameter communication status of each station.</p> <p>0: Executing communication other than parameter communication (including the stations with the maximum station number and smaller numbers as well as reserved stations)</p> <p>1: Executing parameter communication</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0078</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0079</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW007A</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW007B</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0078	16	15	14	13	to	5	4	3	2	1	SW0079	32	31	30	29	to	21	20	19	18	17	SW007A	48	47	46	45	to	37	36	35	34	33	SW007B	64	63	62	61	to	53	52	51	50	49	○	○	×	×	○	○	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0078	16	15	14	13	to	5	4	3	2	1																																																							
SW0079	32	31	30	29	to	21	20	19	18	17																																																							
SW007A	48	47	46	45	to	37	36	35	34	33																																																							
SW007B	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW007C (124)/ SW007D (125)/ SW007E (126)/ SW007F (127)	Parameter error status of each station	<p>Stores the parameter status of each station</p> <p>0: Normal parameter (including the maximum station number and smaller numbers as well as reserved stations)</p> <p>1: Abnormal parameter</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW007C</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW007D</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW007E</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW007F</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW007C	16	15	14	13	to	5	4	3	2	1	SW007D	32	31	30	29	to	21	20	19	18	17	SW007E	48	47	46	45	to	37	36	35	34	33	SW007F	64	63	62	61	to	53	52	51	50	49	○	○	×	×	○	○	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW007C	16	15	14	13	to	5	4	3	2	1																																																							
SW007D	32	31	30	29	to	21	20	19	18	17																																																							
SW007E	48	47	46	45	to	37	36	35	34	33																																																							
SW007F	64	63	62	61	to	53	52	51	50	49																																																							
* 2 * 11 SW0080 (128)/ SW0081 (129)/ SW0082 (130)/ SW0083 (131)	CPU operation status of each station (1)	<p>Stores each station's CPU status (including the host).</p> <p>Valid only for stations registered as normal in the SW0070 to SW0073.</p> <p>0: Normal (including the stations with the maximum station number and smaller numbers as well as reserved stations)</p> <p>1: Serious/fatal error</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0080</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0081</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0082</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0083</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0080	16	15	14	13	to	5	4	3	2	1	SW0081	32	31	30	29	to	21	20	19	18	17	SW0082	48	47	46	45	to	37	36	35	34	33	SW0083	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0080	16	15	14	13	to	5	4	3	2	1																																																							
SW0081	32	31	30	29	to	21	20	19	18	17																																																							
SW0082	48	47	46	45	to	37	36	35	34	33																																																							
SW0083	64	63	62	61	to	53	52	51	50	49																																																							

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

\* 11: Serious errors are the type of errors that stop the CPU operation.

Fatal errors are also the type of errors that stop the CPU operation. (Refer to Section 8.3.2)

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 2 SW0084 (132)/ SW0085 (133)/ SW0086 (134)/ SW0087 (135)	CPU RUN status of each station	Stores the CPU RUN status of each station (including the host). The standby-system Q4ARCPU stores the key switch status at normal state. Valid only for stations registered as normal in the SW0070 to SW0073. 0: RUN or STEP RUN (including the stations with the maximum station number and smaller numbers as well as reserved stations) 1: STOP, PAUSE, ERROR  <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0084</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0085</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0086</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0087</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p style="font-size: small;">Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0084	16	15	14	13	to	5	4	3	2	1	SW0085	32	31	30	29	to	21	20	19	18	17	SW0086	48	47	46	45	to	37	36	35	34	33	SW0087	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0084	16	15	14	13	to	5	4	3	2	1																																																							
SW0085	32	31	30	29	to	21	20	19	18	17																																																							
SW0086	48	47	46	45	to	37	36	35	34	33																																																							
SW0087	64	63	62	61	to	53	52	51	50	49																																																							
* 2 * 10 SW0088 (136)/ SW0089 (137)/ SW008A (138)/ SW008B (139)	CPU operation status of each station (2)	Stores each station's CPU status (including the host). Valid only for stations registered as normal in the SW0070 to SW0073. 0: Normal (including the stations with the maximum station number and smaller numbers as well as reserved stations) 1: Minor error  <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0088</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0089</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW008A</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW008B</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p style="font-size: small;">Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0088	16	15	14	13	to	5	4	3	2	1	SW0089	32	31	30	29	to	21	20	19	18	17	SW008A	48	47	46	45	to	37	36	35	34	33	SW008B	64	63	62	61	to	53	52	51	50	49	○	○	○	○	○	○	○	○
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0088	16	15	14	13	to	5	4	3	2	1																																																							
SW0089	32	31	30	29	to	21	20	19	18	17																																																							
SW008A	48	47	46	45	to	37	36	35	34	33																																																							
SW008B	64	63	62	61	to	53	52	51	50	49																																																							

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

\* 10: Minor errors are the type of errors that do not affect the CPU operation. (Refer to Section 8.3.2)

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
* 2 SW008C (140) SW008D (141) SW008E (142) SW008F (143)	Power supply status of each station	<p>Indicates whether external power supply is available to each station (For QJ71LP21-25, 0 is ON.) Valid only for stations registered as normal in the SW0070 to SW0073.</p> <p>0: Without external power supply (Including stations reserved or numbered greater than the maximum) 1: With external power supply</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW008C</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW008D</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW008E</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW008F</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW008C	16	15	14	13	to	5	4	3	2	1	SW008D	32	31	30	29	to	21	20	19	18	17	SW008E	48	47	46	45	to	37	36	35	34	33	SW008F	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW008C	16	15	14	13	to	5	4	3	2	1																																																							
SW008D	32	31	30	29	to	21	20	19	18	17																																																							
SW008E	48	47	46	45	to	37	36	35	34	33																																																							
SW008F	64	63	62	61	to	53	52	51	50	49																																																							
SW0090 (144)	Loopback information	<p>Stores the loop status of the host.</p> <p>0: Loop normal 1: Forward loop error 2: Reverse loop error 3: Loopback 4: Data linking disabled</p>	○	×	○	×	○	×	○	×																																																							
* 2 SW0091 (145) SW0092 (146) SW0093 (147) SW0094 (148)	Forward loop status of each station	<p>Stores the forward loop status of each station (including the host).</p> <p>0: Normal (including the station with the maximum station number and smaller stations as well as reserved stations) 1: Abnormal</p> <p>Disconnected station remains in the status when it was disconnected.</p> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW0091</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW0092</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW0093</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW0094</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0091	16	15	14	13	to	5	4	3	2	1	SW0092	32	31	30	29	to	21	20	19	18	17	SW0093	48	47	46	45	to	37	36	35	34	33	SW0094	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	○	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0091	16	15	14	13	to	5	4	3	2	1																																																							
SW0092	32	31	30	29	to	21	20	19	18	17																																																							
SW0093	48	47	46	45	to	37	36	35	34	33																																																							
SW0094	64	63	62	61	to	53	52	51	50	49																																																							

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																													
			Control station		Normal station		Remote master station		Remote I/O station																																																							
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																						
* 2 SW0095 (149) SW0096 (150) SW0097 (151) SW0098 (152)	Reverse loop status of each station	Stores the reverse loop status of each station (including the host). 0: Normal (including the stations with the maximum station number and smaller numbers as well as reserved stations) 1: Abnormal Disconnected station remains in the status when it was disconnected.  <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>b15</td><td>b14</td><td>b13</td><td>b12</td><td>to</td><td>b4</td><td>b3</td><td>b2</td><td>b1</td><td>b0</td> </tr> <tr> <td>SW0095</td><td>16</td><td>15</td><td>14</td><td>13</td><td>to</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td> </tr> <tr> <td>SW0096</td><td>32</td><td>31</td><td>30</td><td>29</td><td>to</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td> </tr> <tr> <td>SW0097</td><td>48</td><td>47</td><td>46</td><td>45</td><td>to</td><td>37</td><td>36</td><td>35</td><td>34</td><td>33</td> </tr> <tr> <td>SW0098</td><td>64</td><td>63</td><td>62</td><td>61</td><td>to</td><td>53</td><td>52</td><td>51</td><td>50</td><td>49</td> </tr> </table> <small>Numbers 1 to 64 in the above table indicate the station numbers.</small>	b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW0095	16	15	14	13	to	5	4	3	2	1	SW0096	32	31	30	29	to	21	20	19	18	17	SW0097	48	47	46	45	to	37	36	35	34	33	SW0098	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	○	×
b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW0095	16	15	14	13	to	5	4	3	2	1																																																						
SW0096	32	31	30	29	to	21	20	19	18	17																																																						
SW0097	48	47	46	45	to	37	36	35	34	33																																																						
SW0098	64	63	62	61	to	53	52	51	50	49																																																						
* 2 SW0099 (153)	Loopback station (forward loop side)	Stores the number of stations executing the loopback on the forward loop side. 1 to 64 : Station No. 7DH : Remote master station	○	×	○	×	○	×	○	×																																																						
* 2 SW009A (154)	Loopback station (reverse loop side)	Stores the number of stations executing the loopback on the reverse loop side. 1 to 64 : Station No. 7DH : Remote master station	○	×	○	×	○	×	○	×																																																						
* 2 SW009C (156) SW009D (157) SW009E (158) SW009F (159)	Loop usage status of each station	Stores the loop usage status during transmission at each station, separately for each of the forward and reverse loops. 0: Using the forward loop side (including the stations with the maximum station number and smaller numbers as well as reserved stations) 1: Using the reverse loop side  <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>b15</td><td>b14</td><td>b13</td><td>b12</td><td>to</td><td>b4</td><td>b3</td><td>b2</td><td>b1</td><td>b0</td> </tr> <tr> <td>SW009C</td><td>16</td><td>15</td><td>14</td><td>13</td><td>to</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td> </tr> <tr> <td>SW009D</td><td>32</td><td>31</td><td>30</td><td>29</td><td>to</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td> </tr> <tr> <td>SW009E</td><td>48</td><td>47</td><td>46</td><td>45</td><td>to</td><td>37</td><td>36</td><td>35</td><td>34</td><td>33</td> </tr> <tr> <td>SW009F</td><td>64</td><td>63</td><td>62</td><td>61</td><td>to</td><td>53</td><td>52</td><td>51</td><td>50</td><td>49</td> </tr> </table> <small>Numbers 1 to 64 in the above table indicate the station numbers.</small>	b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW009C	16	15	14	13	to	5	4	3	2	1	SW009D	32	31	30	29	to	21	20	19	18	17	SW009E	48	47	46	45	to	37	36	35	34	33	SW009F	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	○	×
b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW009C	16	15	14	13	to	5	4	3	2	1																																																						
SW009D	32	31	30	29	to	21	20	19	18	17																																																						
SW009E	48	47	46	45	to	37	36	35	34	33																																																						
SW009F	64	63	62	61	to	53	52	51	50	49																																																						
SW00A8 (168)	Online test execution item/faulty station (requesting side)	Stores both the online test item requested by the requesting station and the faulty station. (Valid when the SB00A9 is on.) Stations disconnected from the network are not included among the faulty stations because there is no response.  <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>b15</td><td>to</td><td>b8</td><td>b7</td><td>to</td><td>b0</td> </tr> <tr> <td>SW00A8</td><td></td><td>to</td><td></td><td>to</td><td></td> </tr> </table> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="border: 1px solid black; padding: 2px; border-radius: 5px;"> <small>When there are multiple faulty stations, the station number detected first is stored.</small> </div> <div style="text-align: left;"> <small>10H: Loop test 20H: Setup confirmation test 30H: Station order check test 40H: Communication test</small> </div> </div>	b15	to	b8	b7	to	b0	SW00A8		to		to		○	○	○	○	○	○	○	○																																										
b15	to	b8	b7	to	b0																																																											
SW00A8		to		to																																																												
SW00A9 (169)	Online test result (requesting side)	Stores the online result on the requesting side. (Valid when the SB00A9 is on.) 0 : Test normal Other than 0 : Test error content (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○																																																						

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
SW00AA (170)	Online test execution item (responding side)	Stores the online test items on the responding side. (Valid when the SB00AB is on.) Stations disconnected from the network are not included among the faulty stations because there is no response.  10H: Loop test 20H: Setup confirmation test 30H: Station order check test 40H: Communication test	○	○	○	○	○	○	○	○
SW00AB (171)	Online test result (responding side)	Stores the online test result of the responding side. (Valid when the SB00AB is on.) 0 : Test normal Other than 0 : Test error content (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○
SW00AC (172)	Offline test execution item/faulty station (requesting side)	Stores the offline test items and faulty station on the requesting side. (Valid when the SB00AD is on.) Stations disconnected from the network are not included among the faulty stations because there is no response. Any given station number (0 to 64, 7D <sub>H</sub> ) is saved in the maximum faulty station number (b8 to b15) for the loop test.  3: Loop test (forward loop) 4: Loop test (reverse loop) 5: Station-to-station test (master station) 6: Station-to-station test (slave station) 7: Self-loopback test 8: Internal self-loopback test	○	○	○	○	○	○	○	○
SW00AD (173)	Offline test result (requesting side)	Stores the offline result of the requesting side. (Valid when the SB00AD is on.) 0 : Test normal Other than 0 : Test error content (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○
SW00AE (174)	Offline test execution item (responding side)	Stores the request-side offline test items and error stations. (Enabled when SB00AF is on.) When station breaks from network, it is not included with error stations because there is no response.  3: Loop test (forward loop) 4: Loop test (reverse loop)	○	○	○	○	○	○	○	○
SW00AF (175)	Offline test result (responding side)	Stores results of request-side offline test. (Enabled when SB00AF is on.) 0 : Test normal Other than 0 : Test error content (refer to the error codes in Section 8.3)	○	○	○	○	○	○	○	○

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 2 SW00B0 (176) SW00B1 (177) SW00B2 (178) SW00B3 (179)	Multiplex transmission status (1)	Stores each station's forward loop usage status during multiplex transmission. 0: Uses other than the forward loop 1: Uses the forward loop  <table border="1"> <tr> <td></td> <td>b15</td> <td>b14</td> <td>b13</td> <td>b12</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW00B0</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW00B1</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW00B2</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW00B3</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </table> <small>Numbers 1 to 64 in the above table indicate the station numbers.</small>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW00B0	16	15	14	13	to	5	4	3	2	1	SW00B1	32	31	30	29	to	21	20	19	18	17	SW00B2	48	47	46	45	to	37	36	35	34	33	SW00B3	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	○	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW00B0	16	15	14	13	to	5	4	3	2	1																																																							
SW00B1	32	31	30	29	to	21	20	19	18	17																																																							
SW00B2	48	47	46	45	to	37	36	35	34	33																																																							
SW00B3	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW00B4 (180) SW00B5 (181) SW00B6 (182) SW00B7 (183)	Multiplex transmission status (2)	Stores each station's reverse loop usage status during multiplex transmission. 0: Uses other than the reverse loop 1: Uses the reverse loop  <table border="1"> <tr> <td></td> <td>b15</td> <td>b14</td> <td>b13</td> <td>b12</td> <td>to</td> <td>b4</td> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>SW00B4</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW00B5</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW00B6</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW00B7</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </table> <small>Numbers 1 to 64 in the above table indicate the station numbers.</small>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW00B4	16	15	14	13	to	5	4	3	2	1	SW00B5	32	31	30	29	to	21	20	19	18	17	SW00B6	48	47	46	45	to	37	36	35	34	33	SW00B7	64	63	62	61	to	53	52	51	50	49	○	×	○	×	○	×	○	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW00B4	16	15	14	13	to	5	4	3	2	1																																																							
SW00B5	32	31	30	29	to	21	20	19	18	17																																																							
SW00B6	48	47	46	45	to	37	36	35	34	33																																																							
SW00B7	64	63	62	61	to	53	52	51	50	49																																																							
* 3 SW00B8 (184)	UNDER on the forward loop side/coaxial bus UNDER	Accumulates and stores the number of "UNDER" errors on the forward loop side for the optical loop, or the number of "UNDER" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○																																																						
* 3 SW00B9 (185)	CRC on the forward loop side/coaxial bus CRC	Accumulates and stores the number of "CRC" errors on the forward loop side for the optical loop, or the number of "CRC" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○																																																						
* 3 SW00BA (186)	OVER on the forward loop side/coaxial bus OVER	Accumulates and stores the number of "OVER" errors on the forward loop side for the optical loop, or the number of "OVER" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○																																																						
* 3 SW00BB (187)	Short frame on the forward loop side/coaxial bus short frame	Accumulates and stores the number of "short frame" errors on the forward loop side for the optical loop, or the number of "short frame" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○																																																						
* 3 SW00BC (188)	Abort on the forward loop side (AB, IF)/coaxial bus abort (AB, IF)	Accumulates and stores the number of "AB, IF" errors on the forward loop side for the optical loop, or the number of "AB, IF" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○																																																						

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

\* 3: To reset the SW00B8 to SW00C7, turn on the SB0006.

The number of times information stored in the SW00B8 to SW00C7 will not cause any problems if they are counted up gradually over a long period of time. If they are counted up rapidly in a short period of time (while monitoring with GX Developer, etc.), the cable may be faulty.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited								
			Control station		Normal station		Remote master station		Remote I/O station		
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	
* 3 SW00BD (189)	Timeout on the forward loop side (TIME)/ coaxial bus timeout (TIME)	Accumulates and stores the number of "TIME" errors on the forward loop side for the optical loop, or the number of "TIME" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○
* 3 SW00BE (190)	Receiving 2k bytes or more on forward loop side (DATA)/coaxial bus receiving 2k bytes or more (DATA)	Accumulates and stores the number of "DATA" errors on the forward loop side for the optical loop, or the number of "DATA" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○
* 3 SW00BF (191)	DPLL error on the forward loop side/coaxial bus DPLL error	Accumulates and stores the number of "DPLL" errors on the forward loop side for the optical loop, or the number of "DPLL" errors of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	○	○	○	○	○	○	○	○
* 3 SW00C0 (192)	UNDER on the reverse loop side	Accumulates and stores the number of "UNDER" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C1 (193)	CRC on the reverse loop side	Accumulates and stores the number of "CRC" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C2 (194)	OVER on the reverse loop side	Accumulates and stores the number of "OVER" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C3 (195)	Short frame on the reverse loop side	Accumulates and stores the number of "Short frame" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C4 (196)	Abort on the reverse loop side (AB, IF)	Accumulates and stores the number of "AB,IF" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C5 (197)	Timeout on the reverse loop side (TIME)	Accumulates and stores the number of "TIME" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C6 (198)	Receiving 2k bytes or more on reverse loop side (DATA)	Accumulates and stores the number of "DATA" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×
* 3 SW00C7 (199)	DPLL error on reverse loop side	Accumulates and stores the number of "DPLL" errors on the reverse loop side. Other than 0: Number of errors Turning ON Clear communication error count (SB0006) clears the stored value.	○	×	○	×	○	×	○	×	×

\* 3: To reset from the SW00B8 to C7, turn on the SB0006.  
The numbers of times stored in the SW00B8 to SW00C7 will not cause any problems if they are counting up gradually over a long period of time. If they are counted up rapidly in a short period of time (while monitoring with GX Developer, etc.), the cable may be faulty.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
* 4 SW00C8 (200)	Number of retries on the forward loop side/ coaxial bus retries error	Accumulates and stores the number of retries on the forward loop side for the optical loop, or the number of retries of the coaxial bus for the coaxial bus. Other than 0: Number of errors Turning ON Clear retry count (SB0005) clears the stored value.	○	○	○	○	○	○	○	○
* 4 SW00C9 (201)	Number of retries on the reverse loop side	Accumulates and stores the number of retries on the reverse loop side. Other than 0: Number of errors Turning ON Clear retry count (SB0005) clears the stored value.	○	×	○	×	○	×	○	×
* 5 SW00CC (204)	Line error on the forward loop side	Accumulates and stores the number of detected line errors on the forward loop side. Other than 0: Number of detected line errors Turning ON Clear forward loop transmission errors (SB0007) clears the stored value.	○	×	○	×	○	×	○	×
* 6 SW00CD (205)	Line error on the reverse loop side	Accumulates and stores the number of detected line errors on the reverse loop side. Other than 0: Number of detected line errors Turning ON Clear reverse loop transmission errors (SB0008) clears the stored value.	○	×	○	×	○	×	○	×
* 7 SW00CE (206)	Number of loop switches	Accumulates and stores the number of loop checks conducted. Other than 0: Number of loop switches Turning ON Clear loop switch count (SB0009) clears the stored value.	○	×	○	×	○	×	○	×
* 7 SW00CF (207)	Loop switch data pointer	Stores the pointer that indicates the next loop switch data. 0 to 15: Loop switch data (SW00D0 to SW00DF) Turning ON Clear loop switch count (SB0009) clears the stored value.	○	×	○	×	○	×	○	×

- \* 4: This may be counted up at power on/reset, but it is not an error.  
Clear with the SB0005 when the number of retries is not required before starting data linking.
- \* 5: To reset the SW00CC, turn on the SB0007.
- \* 6: To reset the SW00CD, turn on the SB0008.
- \* 7: To reset the SW00CE to SW00E7, turn on the SB0009.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 7 SW00D0 (208) to SW00DF (223)	Loop switch data	<p>Stores the cause and status of the loop switch. Whether the data should be overwritten or retained is set in the common parameters.</p> <p>&lt;Cause&gt; The bit corresponding to each error is set to 1.</p> <p>All 0: Return direction</p> <p>&lt; Status after the switching&gt;</p> <p>0: Multiplex transmission (Forward loop/reverse loop normal)</p> <p>1: Data link by forward loop</p> <p>2: Data linking by reverse loop</p> <p>3: Data linking by loopback</p> <p>Turning ON Clear loop switch count (SB0009) clears the stored value.</p>	○	×	○	×	○	×	○	×																																																							
* 7 * 8 SW00E0 (224) to SW00E7 (231)	Switch request station	<p>Stores the number of the stations that requested the loop switch.</p> <p>Turning ON Clear loop switch count (SB0009) clears the stored value.</p>	○	×	○	×	○	×	○	×																																																							
* 2 SW00E8 (232) to SW00EB (235)	Module type of each station	<p>Stores each station's module type.</p> <p>0: MELSECNET/10 module</p> <p>1: MELSECNET/H module</p> <table border="1"> <thead> <tr> <th>SW00E8</th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td></td> </tr> <tr> <td>SW00E9</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW00EA</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW00EB</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>	SW00E8	b15	b14	b13	b12	to	b4	b3	b2	b1	b0	16	15	14	13	to	5	4	3	2	1		SW00E9	32	31	30	29	to	21	20	19	18	17	SW00EA	48	47	46	45	to	37	36	35	34	33	SW00EB	64	63	62	61	to	53	52	51	50	49	○	○	○	○	×	×	×	×
SW00E8	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
16	15	14	13	to	5	4	3	2	1																																																								
SW00E9	32	31	30	29	to	21	20	19	18	17																																																							
SW00EA	48	47	46	45	to	37	36	35	34	33																																																							
SW00EB	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW00EC (236)	Low-speed cyclic transmission start execution results	<p>Stores execution results for low-speed cyclic transmission start execution results.</p> <p>0 : Test normal</p> <p>Other than 0 : Test error content (refer to the error codes in Section 8.3)</p>	○	○	○	○	×	×	×	×																																																							

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

\* 7: To reset the SW00CE to SW00E7, turn on the SB0009.

\* 8: For the loop switch request station, stations other than the ones at both ends of the loop may be stored because the loop switch request is issued by the station that first detected the loop error.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited							
			Control station		Normal station		Remote master station		Remote I/O station	
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial
*9 SW00EE (238)	Transient transmission error	Accumulates and stores the number of transient transmission errors. Other than 0: Number of errors Turning ON Clear transient transmission errors (SB000A) clears the stored value.	○	○	○	○	○	○	○	○
*9 SW00EF (239)	Transient transmission error pointer	Stores the pointer that sets the data for the next transient transmission error. Turning ON Clear transient transmission errors (SB000A) clears the stored value.	○	○	○	○	○	○	○	○
*2 SW00F0 (240) to SW00FF (255)	Transient transmission error history	Stores the error codes of the transient transmission errors (refer to the error codes in Section 8.3).	○	○	○	○	○	○	○	○
*2 SW01C4 (452)	Remote sub-master station switching result	Stores the result of a shift from master operation to sub-master operation. 0 : Normal completion 1 or later : Abnormal completion (refer to Section 8.3 for error codes)	×	×	×	×	○	○	×	×
*2 SW01C8 (456)	Send LY device number	(Valid only when SB01C8 is ON) For remote master station : The send LY device number to the remote sub-master station is stored. In 1 point units. For remote sub-master station : The send LY device number to the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×
*2 SW01C9 (457)	Receive LX device number	(Valid only when SB01C8 is ON) For remote master station : The receive LX device number from the remote sub-master station is stored. In 1 point units. For remote sub-master station : The receive LX device number from the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×
*2 SW01CC (460)	Send LB device number	(Valid only when SB01C8 is ON) For remote master station : The send LB device number to the remote sub-master station is stored. In 1 point units. For remote sub-master station : The send LB device number to the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×
*2 SW01CD (461)	Receive LB device number	(Valid only when SB01C8 is ON) For remote master station : The receive LB device number from the remote sub-master station is stored. In 1 point units. For remote sub-master station : The receive LB device number from the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×
*2 SW01CE (462)	Send LW device number	(Valid only when SB01C8 is ON) For remote master station : The send LW device number to the remote sub-master station is stored. In 1 point units. For remote sub-master station : The send LW device number to the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×
*2 SW01CF (463)	Receive LW device number	(Valid only when SB01C8 is ON) For remote master station : The receive LW device number from the remote sub-master station is stored. In 1 point units. For remote sub-master station : The receive LW device number from the remote master station is stored. In 1 point units.	×	×	×	×	○	○	×	×

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.  
\* 9: To reset the SW00EE to SW00EF, turn on the SB000A.

Table 2 Link special register (SW) list (Continued)

No.	Name	Description	Use permitted/prohibited																																																														
			Control station		Normal station		Remote master station		Remote I/O station																																																								
			Optical	Coaxial	Optical	Coaxial	Optical	Coaxial	Optical	Coaxial																																																							
* 2 SW01E0 (480)/ SW01E1 (481)/ SW01E2 (482)/ SW01E3 (483)	Network type consistency check	<p>Indicates whether there is a mismatch between the network types of the control station and normal stations on the network.</p> <ul style="list-style-type: none"> <li>When the control station is in the MELSECNET/H Extended mode                             <ul style="list-style-type: none"> <li>0: Set to the MELSECNET/H Extended mode. (Including stations of station Nos. greater than the maximum, reserved stations and communication error stations)</li> <li>1: Set to the MELSECNET/H mode or MELSECNET/10 mode.</li> </ul> </li> <li>When the control station is in the MELSECNET/H mode or MELSECNET/10 mode                             <ul style="list-style-type: none"> <li>0: Set to the MELSECNET/H mode or MELSECNET/10 mode. (Including stations of station Nos. greater than the maximum, reserved stations and communication error stations)</li> <li>1: Set to the MELSECNET/H Extended mode.</li> </ul> </li> </ul> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW01E0</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW01E1</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW01E2</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW01E3</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>1 to 64 in the table indicate the station Nos.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW01E0	16	15	14	13	to	5	4	3	2	1	SW01E1	32	31	30	29	to	21	20	19	18	17	SW01E2	48	47	46	45	to	37	36	35	34	33	SW01E3	64	63	62	61	to	53	52	51	50	49	○	○	○	○	×	×	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW01E0	16	15	14	13	to	5	4	3	2	1																																																							
SW01E1	32	31	30	29	to	21	20	19	18	17																																																							
SW01E2	48	47	46	45	to	37	36	35	34	33																																																							
SW01E3	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW01F4 (500)/ SW01F5 (501)/ SW01F6 (502)/ SW01F7 (503)	Redundant system status (1)	<p>Indicates the operation mode of each station's CPU.</p> <ul style="list-style-type: none"> <li>0: Backup mode (including the single CPU system) (including stations exceeding the maximum station number and reserved stations)</li> <li>1: Separate mode</li> </ul> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW01F4</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW01F5</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW01F6</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW01F7</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW01F4	16	15	14	13	to	5	4	3	2	1	SW01F5	32	31	30	29	to	21	20	19	18	17	SW01F6	48	47	46	45	to	37	36	35	34	33	SW01F7	64	63	62	61	to	53	52	51	50	49	○	○	○	○	×	×	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW01F4	16	15	14	13	to	5	4	3	2	1																																																							
SW01F5	32	31	30	29	to	21	20	19	18	17																																																							
SW01F6	48	47	46	45	to	37	36	35	34	33																																																							
SW01F7	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW01F8 (504)/ SW01F9 (505)/ SW01FA (506)/ SW01FB (507)	Redundant system status (2)	<p>Indicates the pairing setting status of each station.</p> <p>In the case of a redundant system, the bit of the station with the larger number is turned on (1).</p> <ul style="list-style-type: none"> <li>0: No pairing designation (including the single CPU system) (including stations exceeding the maximum station number)</li> <li>1: Station with pairing designation</li> </ul> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW01F8</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW01F9</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW01FA</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW01FB</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW01F8	16	15	14	13	to	5	4	3	2	1	SW01F9	32	31	30	29	to	21	20	19	18	17	SW01FA	48	47	46	45	to	37	36	35	34	33	SW01FB	64	63	62	61	to	53	52	51	50	49	○	○	○	○	×	×	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW01F8	16	15	14	13	to	5	4	3	2	1																																																							
SW01F9	32	31	30	29	to	21	20	19	18	17																																																							
SW01FA	48	47	46	45	to	37	36	35	34	33																																																							
SW01FB	64	63	62	61	to	53	52	51	50	49																																																							
* 2 SW01FC (508)/ SW01FD (509)/ SW01FE (510)/ SW01FF (511)	Redundant system status (3)	<p>Indicates the operation status of each station's CPU (control system/standby system).</p> <ul style="list-style-type: none"> <li>0: The host station CPU is on the control system (including the single CPU system) (including stations exceeding the maximum station number and reserved stations).</li> <li>1: The host system CPU is on the standby system.</li> </ul> <table border="1"> <thead> <tr> <th></th> <th>b15</th> <th>b14</th> <th>b13</th> <th>b12</th> <th>to</th> <th>b4</th> <th>b3</th> <th>b2</th> <th>b1</th> <th>b0</th> </tr> </thead> <tbody> <tr> <td>SW01FC</td> <td>16</td> <td>15</td> <td>14</td> <td>13</td> <td>to</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> </tr> <tr> <td>SW01FD</td> <td>32</td> <td>31</td> <td>30</td> <td>29</td> <td>to</td> <td>21</td> <td>20</td> <td>19</td> <td>18</td> <td>17</td> </tr> <tr> <td>SW01FE</td> <td>48</td> <td>47</td> <td>46</td> <td>45</td> <td>to</td> <td>37</td> <td>36</td> <td>35</td> <td>34</td> <td>33</td> </tr> <tr> <td>SW01FF</td> <td>64</td> <td>63</td> <td>62</td> <td>61</td> <td>to</td> <td>53</td> <td>52</td> <td>51</td> <td>50</td> <td>49</td> </tr> </tbody> </table> <p>Numbers 1 to 64 in the above table indicate the station numbers.</p>		b15	b14	b13	b12	to	b4	b3	b2	b1	b0	SW01FC	16	15	14	13	to	5	4	3	2	1	SW01FD	32	31	30	29	to	21	20	19	18	17	SW01FE	48	47	46	45	to	37	36	35	34	33	SW01FF	64	63	62	61	to	53	52	51	50	49	○	○	○	○	×	×	×	×
	b15	b14	b13	b12	to	b4	b3	b2	b1	b0																																																							
SW01FC	16	15	14	13	to	5	4	3	2	1																																																							
SW01FD	32	31	30	29	to	21	20	19	18	17																																																							
SW01FE	48	47	46	45	to	37	36	35	34	33																																																							
SW01FF	64	63	62	61	to	53	52	51	50	49																																																							

\* 2: Valid only when SB0047 is off. When it turns on (error), the last data are retained.

Appendix 4 Special Relay (SM) for Remote I/O Modules List

Special relays SM are internal relays whose specifications are decided by the programmable controller. For this reason, they cannot be used by sequence programs in the same way as the normal internal relays. However, they can be turned ON or OFF as needed in order to control the CPU modules and remote I/O modules.

Use the GX Developer to monitor and control the ON/OFF functions of the remote I/O module's special relay. Connect the GX Developer to the remote master station or the remote I/O module, then operate the online menu monitor and the device test.

The following table applies only to special relays related to remote I/O modules.

The headings in the table that follows have the following meanings.

Item	Function of Item
Number	• Indicates the number of the special relay.
Name	• Indicates the name of the special relay.
Meaning	• Indicates the nature of the special relay.
Explanation	• Contains detailed information about the nature of the special relay.
Set by (When set)	<ul style="list-style-type: none"> <li>• Indicates whether the relay is set by the system or user, and, if it is set by the system, when setting is performed.</li> <li>&lt;Set by&gt; <ul style="list-style-type: none"> <li>S : Set by system</li> <li>U : Set by user (in sequence program or test operation at a peripheral device)</li> <li>S/U : Set by both system and user</li> </ul> </li> <li>&lt;When set&gt; → indicated only if setting is done by system. <ul style="list-style-type: none"> <li>Each END : Set during each END processing</li> <li>Initial : Set only during initial processing (when power supply is turned ON, or when going from STOP to RUN)</li> <li>Status change : Set only when there is a change in status</li> <li>Error : Set when error is generated</li> <li>Instruction execution : Set when instruction is executed</li> <li>Request : Set only when there is a user request (through SM, etc.)</li> <li>System switch : Set when the system is switched</li> </ul> </li> </ul>
Corresponding ACPU M9 □□□	<ul style="list-style-type: none"> <li>• Indicates special relay M9 □□□/□ corresponding to the ACPU. (Indicates M9 □□□ format change when there has been a change in contents. Basic model QCPU and Redundant CPU are not supported.)</li> <li>• Items indicated as "New" have been newly added for Q/QnACPU</li> </ul>
Applicable CPU	<ul style="list-style-type: none"> <li>• Indicates the applicable CPU module.</li> <li>○ : Can be applied to all types of QCPU and QnACPU</li> <li>QCPU: Can be applied to all Q-series CPU</li> <li>Q00J/Q00/Q01: Can be applied to Basic model QCPU</li> <li>Qn(H) : Can be applied to High Performance model QCPU</li> <li>QnPH : Can be applied to Process CPU</li> <li>QnPRH : Can be applied to Redundant CPU</li> <li>QnU : Can be applied to Universal model Q CPU</li> <li>QnA: Can be applied to QnA series and Q2ASCPU series</li> <li>Remote: Can be applied to the MELSECNET/H remote I/O modules.</li> <li>Each CPU module type name: Can be applied only to the specific CPU module. (e.g. Q4ARCPU, Q3ACPU)</li> </ul>

For details on the following items, refer to these manuals:

- CPU → • QCPU User's Manual (Function Explanation, Program Fundamentals)
- Networks → • Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
  - Q corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)
  - For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- SFC → • QCPU(Q Mode)/QnACPU Programming Manual (SFC)

(1) Diagnostic Information  
Special Relay List

Number	Name	Meaning	Explanation	Set by (When Set)	Corresponding ACPU M9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SM0	Diagnostic errors	OFF: No error ON : Error	<ul style="list-style-type: none"> <li>ON if diagnosis results show error occurrence (Includes when an annunciator is ON, and when an error is detected with CHK instruction)</li> <li>Stays ON subsequently even if normal operations restored</li> </ul>	S (Error)	New	QnA Qn(H) QnPH QnPRH Rem
			<ul style="list-style-type: none"> <li>ON if diagnosis results show error occurrence (Includes when an annunciator is ON)</li> <li>Stays ON subsequently even if normal operations restored</li> </ul>	S (Error)	New	Q00J/ Q00/Q01 QnU
SM1	Self-diagnostic error	OFF: No self-diagnosis errors ON : Self-diagnosis	<ul style="list-style-type: none"> <li>ON if diagnosis results show error occurrence (Does not include when an annunciator is ON or when an error is detected by the CHK instruction)</li> <li>Stays ON subsequently even if normal operations restored</li> </ul>	S (Error)	M9008	QnA Qn(H) QnPH QnPRH Rem
			<ul style="list-style-type: none"> <li>ON if diagnosis results show error occurrence (Does not include when an annunciator is ON)</li> <li>Stays ON subsequently even if normal operations restored</li> </ul>	S (Error)	New	Q00J/ Q00/Q01 QnU
SM5	Error common information	OFF: No error common information ON : Error common information	<ul style="list-style-type: none"> <li>When SM0 is ON, ON if there is error common information</li> </ul>	S (Error)	New	○ Rem
SM16	Error individual information	OFF: No error common information ON : Error common information	<ul style="list-style-type: none"> <li>When SM0 is ON, ON if there is error individual information</li> </ul>	S (Error)	New	
SM50	Error reset	OFF → ON : Error reset	<ul style="list-style-type: none"> <li>Conducts error reset operation</li> </ul>	U	New	
SM60	Blown fuse detection	OFF: Normal ON : Module with blown fuse	<ul style="list-style-type: none"> <li>Comes ON even if there is only one output module with a blown fuse</li> <li>Stays ON subsequently even if normal operations restored</li> <li>Blown fuse state is checked even for remote I/O station output modules.</li> </ul>	S (Error)	M9000	○ Rem
SM61	I/O module verification error	OFF: Normal ON : Error	<ul style="list-style-type: none"> <li>Comes ON if there is a discrepancy between the actual I/O modules and the registered information when the power is turned on</li> <li>Stays ON subsequently even if normal operations restored</li> <li>I/O module verification is also conducted for remote I/O station modules.</li> </ul>	S (Error)	M9002	

(2) System information  
Special Relay List

Number	Name	Meaning	Explanation	Set by (When Set)	Corresponding ACPU M9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SM206	PAUSE enable coil	OFF: PAUSE disabled ON : PAUSE enabled	<ul style="list-style-type: none"> <li>PAUSE state is entered if this relay is ON when the remote PAUSE contact goes ON</li> </ul>	U	M9040	○
	Device test request acceptance status	OFF: Device test not yet executed ON : Device test executed	<ul style="list-style-type: none"> <li>Comes ON when the device test mode is executed on GX Developer.</li> </ul>	S (Request)	New	Remote
SM213	Clock data read request	OFF: Ignored ON : Read request	<ul style="list-style-type: none"> <li>When this relay is ON, clock data is read to SD210 through SD213 as BCD values.</li> </ul>	U	M9028	○ Rem
SM250	Max. loaded I/O read	OFF: Ignored ON : Read	<ul style="list-style-type: none"> <li>When this relay goes from OFF to ON, maximum loaded I/O number is read to SD250.</li> </ul>	U	New	QnA Qn(H) QnPH QnPRH Rem
SM280	CC-Link error	OFF: Normal ON : Error	<ul style="list-style-type: none"> <li>Goes ON when a CC-Link error is detected in any of the installed CC-Link module. Goes OFF when normal operation is restored.</li> </ul>	S (Status change)	New	Qn(H) QnPH QnPRH Rem
			<ul style="list-style-type: none"> <li>Goes ON when a CC-Link error is detected in any of the installed CC-Link module. Stays ON even after normal operation is restored.</li> </ul>	S (Error)	New	QnA

(3) Scan information  
Special Relay List

Number	Name	Meaning	Explanation	Set by (When Set)	Corresponding ACPU M9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SM551	Reads module service interval	OFF: Ignored ON : Read	<ul style="list-style-type: none"> <li>When this goes from OFF to ON, the module service interval designated by SD550 is read to SD551 to 552.</li> </ul>	U	New	QnA Qn(H) QnPH QnPRH Rem

(4) Redundant power supply module information  
Special Relay List

Number	Name	Meaning	Explanation	Set by (When Set)	Corresponding ACPU M9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SM 1780	Power supply off detection flag	OFF: No redundant power supply module with input power OFF detected ON : Redundant power supply module with input power OFF detected	<ul style="list-style-type: none"> <li>Turns ON when one or more redundant power supply modules with input power OFF are detected.</li> <li>Turns on if any of SD1780 bits is on.</li> <li>Turns off if all bits of SD1780 are off.</li> <li>Turns OFF when the main base unit is not the redundant main base unit (Q3□RB).</li> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> </ul>	S (Each END)	New	Qn(H) <sup>2</sup> QnPH <sup>2</sup> QnPRH Rem
SM 1781	Power supply failure detection flag	OFF: No faulty redundant power supply module detected ON : Faulty redundant power supply module detected	<ul style="list-style-type: none"> <li>Turns ON when one or more faulty redundant power supply modules are detected.</li> <li>Turns on if any of SD1781 bits is on.</li> <li>Turns off if all bits of SD1781 are off.</li> <li>Turns OFF when the main base unit is not the redundant main base unit (Q3□RB).</li> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> </ul>	S (Each END)		
SM 1782	Momentary power failure detection flag for power supply 1 *1		<ul style="list-style-type: none"> <li>Turns ON when a momentary power failure of the input power supply to the power supply 1 or 2 is detected one or more times. After turning ON, remains ON ever if the power supply recovers from the momentary power failure.</li> </ul>			
SM 1783	Momentary power failure detection flag for power supply 2 *1	OFF: No momentary power failure detected ON : Momentary power failure detected	<ul style="list-style-type: none"> <li>Turns OFF the flag (SM1782, SM1783) of the power supply 1/2 when the CPU module starts.</li> <li>When the input power to one of the redundant power supply modules turns OFF the corresponding flag turns OFF.</li> <li>This relay turns OFF when the main base unit is not the redundant main base unit (Q3□RB).</li> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> </ul>	S (Each END)		

\*1: The "power supply 1" indicates the redundant power supply module mounted on the POWER 1 slot of the redundant base unit (Q3□RB/Q6□RB/Q6□WRB).  
The "power supply 2" indicates the redundant power supply module mounted on the POWER 2 slot of the redundant base unit (Q3□RB/Q6□RB/Q6□WRB).  
\*2: The module whose serial No. (first five digits) is "07032" or later.  
However, for the multiple CPU system configuration, this applies to all CPU modules whose serial No. (first five digits) is "07032" or later.

Appendix 5 Special Register (SD) for Remote I/O Module List

Special registers SD are internal registers whose specifications are decided by the programmable controller. For this reason, they cannot be used by sequence programs in the same way as the normal internal registers. However, they can be used to write data as needed in order to control the CPU modules and remote I/O modules. Data stored in the special registers is stored as BIN values unless otherwise specified. Use the GX Developer, or use a READ/WRITE command sent by the sequence program, to monitor and write to the remote I/O module's special register. Connect the GX Developer to the remote master station or the remote I/O module, then operate the online menu monitor and the device test. The sequence program will read the special register according to the READ command, and write to the special register according to the WRITE command.

The following table applies only to special registers related to remote I/O modules. The headings in the table that follows have the following meanings.

Item	Function of Item
Number	• Indicates special register number
Name	• Indicates name of special register
Meaning	• Indicates contents of special register
Explanation	• Discusses contents of special register in more detail
Set by (When set)	<ul style="list-style-type: none"> <li>• Indicates whether the relay is set by the system or user, and, if it is set by the system, when setting is performed.</li> <li>&lt;Set by&gt; <ul style="list-style-type: none"> <li>S : Set by system</li> <li>U : Set by user (sequence programs or test operations from peripheral devices)</li> <li>S/U : Set by both system and user</li> </ul> </li> <li>&lt;When set&gt; → Indicated only for registers set by system <ul style="list-style-type: none"> <li>Each END : Set during each END processing</li> <li>Initial : Set only during initial processing (when power supply is turned ON, or when going from STOP to RUN)</li> <li>Status change : Set only when there is a change in status</li> <li>Error : Set when error occurs</li> <li>Instruction execution : Set when instruction is executed</li> <li>Request : Set only when there is a user request (through SM, etc.)</li> <li>System switch : Set when the system is switched</li> </ul> </li> </ul>
Corresponding ACPU M9 □ □ □	<ul style="list-style-type: none"> <li>• Indicates corresponding special register in ACPU (D9 □ □ □)( Indicates M9 □ □ □ format change when there has been a change in contents. Basic model QCPU and Redundant CPU are not supported)</li> <li>• Items indicated as "New" have been newly added for QnACPU</li> </ul>
Applicable CPU	<ul style="list-style-type: none"> <li>• Indicates the applicable CPU module.</li> <li>○ : Can be applied to all types of QCPU and QnACPU</li> <li>QCPU: Can be applied to all Q-series CPU</li> <li>Q00J/Q00/Q01: Can be applied to Basic model QCPU</li> <li>Qn(H) : Can be applied to High Performance model QCPU</li> <li>QnPH : Can be applied to Process CPU</li> <li>QnPRH : Can be applied to Redundant QCPU</li> <li>QnU : Can be applied to Universal model QCPU</li> <li>QnA: Can be applied to QnA series and Q2ASCPU series</li> <li>Rem: Can be applied to the MELSECNET/H remote I/O modules.</li> <li>Each CPU module type name: Can be applied only to the specific CPU module. (e.g. Q4ARCPU, Q3ACPU)</li> </ul>

For details on the following items, refer to these manuals:

- CPU → • QCPU User's Manual (Function Explanation, Program Fundamentals)
- Networks → • Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
  - Q corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)
  - For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- SFC → • QCPU(Q mode)/QnACPU Programming Manual (SFC)

(1) Diagnostic Information  
Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU									
SD0	Diagnostic errors	Diagnosis error code	<ul style="list-style-type: none"> <li>Error codes for errors found by diagnosis are stored as BIN data.</li> <li>Contents identical to latest fault history information.</li> </ul>	S (Error)	D9008 format change										
SD1	Clock time for diagnosis error occurrence	Clock time for diagnosis error occurrence	<ul style="list-style-type: none"> <li>Year (last two digits) and month that SD0 data was updated is stored as BCD 2-digit code.</li> </ul> <p>(Example)</p> <table border="1"> <tr> <td>B15 to B8</td> <td>B7 to B0</td> <td></td> </tr> <tr> <td>Year (0 to 99)</td> <td>Month (1 to 12)</td> <td>: October, 1995</td> </tr> <tr> <td colspan="2"></td> <td>H9510</td> </tr> </table>	B15 to B8	B7 to B0		Year (0 to 99)	Month (1 to 12)	: October, 1995			H9510	S (Error)	New	
B15 to B8			B7 to B0												
Year (0 to 99)			Month (1 to 12)	: October, 1995											
		H9510													
SD2	<ul style="list-style-type: none"> <li>The day and hour that SD0 was updated is stored as BCD 2-digit code.</li> </ul> <p>(Example)</p> <table border="1"> <tr> <td>B15 to B8</td> <td>B7 to B0</td> <td></td> </tr> <tr> <td>Day (1 to 31)</td> <td>Hour (0 to 23)</td> <td>: 10 p.m. on 25th</td> </tr> <tr> <td colspan="2"></td> <td>H2510</td> </tr> </table>	B15 to B8	B7 to B0		Day (1 to 31)	Hour (0 to 23)	: 10 p.m. on 25th			H2510					
B15 to B8	B7 to B0														
Day (1 to 31)	Hour (0 to 23)	: 10 p.m. on 25th													
		H2510													
SD3	<ul style="list-style-type: none"> <li>The minute and second that SD0 data was updated is stored as BCD 2-digit code.</li> </ul> <p>(Example)</p> <table border="1"> <tr> <td>B15 to B8</td> <td>B7 to B0</td> <td></td> </tr> <tr> <td>Minutes (0 to 59)</td> <td>Seconds (0 to 59)</td> <td>: 35 min. 48 sec.</td> </tr> <tr> <td colspan="2"></td> <td>(past the hour)</td> </tr> <tr> <td colspan="2"></td> <td>H3548</td> </tr> </table>	B15 to B8	B7 to B0		Minutes (0 to 59)	Seconds (0 to 59)	: 35 min. 48 sec.			(past the hour)			H3548		
B15 to B8	B7 to B0														
Minutes (0 to 59)	Seconds (0 to 59)	: 35 min. 48 sec.													
		(past the hour)													
		H3548													
SD4	Error information categories	Error information category code	<ul style="list-style-type: none"> <li>Category codes which help indicate what type of information is being stored in the common information areas (SD5 through SD15) and the individual information areas (SD16 through SD26) are stored here.</li> </ul> <table border="1"> <tr> <td>B15 to B8</td> <td>B7 to B0</td> <td></td> </tr> <tr> <td>Individual information category codes</td> <td>Common information category codes</td> <td></td> </tr> </table> <ul style="list-style-type: none"> <li>The common information category codes store the following codes:                             <ol style="list-style-type: none"> <li>0 : No error</li> <li>1 : Module No. (Slot No./CPU No./Base No.) * 1</li> <li>2 : File name/Drive name</li> <li>3 : Time (value set)</li> <li>4 : Program error location</li> <li>5 : System switching cause (specific to Q4AR, Redundant CPU)</li> <li>6 : Reason(s) for tracking capacity excess error (specific to Redundant CPU)</li> <li>7 : Base No./Power supply No.(For Universal model QCPU, first five digits of serial number is "10042" or later is supported.)</li> <li>8 : Tracking transmission data classification (specific to Redundant CPU)</li> </ol> <p>* 1: For a multiple CPU system with Basic model QCPU, High Performance model QCPU, Process CPU, or Universal model QCPU, the module number or CPU number is stored depending on the error that occurred. (Refer to the corresponding error code for which number has been stored.) CPU No. 1: 1, CPU No. 2: 2, CPU No. 3: 3, CPU No. 4: 4</p> </li> <li>The individual information category codes store the following codes:                             <ol style="list-style-type: none"> <li>0 : No error</li> <li>1 : (Empty)</li> <li>2 : File name/Drive name</li> <li>3 : Time (value actually measured)</li> <li>4 : Program error location</li> <li>5 : Parameter number</li> <li>6 : Annunciator (F)number</li> <li>7 : CHK instruction malfunction number (except for Basic model QCPU and Universal model QCPU)</li> <li>8 : Reason(s) for system switching failure (specific to Redundant CPU)</li> <li>12: File diagnostic information (specific to Universal model QCPU)</li> <li>13: Parameter No./CPU No. (specific to Universal model QCPU)</li> </ol> </li> </ul>	B15 to B8	B7 to B0		Individual information category codes	Common information category codes		S (Error)	New	○ Rem			
B15 to B8	B7 to B0														
Individual information category codes	Common information category codes														

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9	Applicable CPU																																								
SD5 SD6 SD7 SD8 SD9 SD10 SD11 SD12 SD13 SD14 SD15	Error common information	Error common information	<p>• Common information corresponding to the error codes (SD0) is stored here.</p> <p>• The following four types of information are stored here:</p> <p>• The error common information type can be judged by the "common information category code" in SD4. (The values of the "common information category code" stored in SD4 correspond to following ① to ⑤.)</p> <p>① Slot No.</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD5</td> <td>Slot No./CPU No.* 1* 2* 3* 4</td> </tr> <tr> <td>SD6</td> <td>I/O No.*5</td> </tr> <tr> <td>SD7</td> <td rowspan="10">(Empty)</td> </tr> <tr><td>SD8</td></tr> <tr><td>SD9</td></tr> <tr><td>SD10</td></tr> <tr><td>SD11</td></tr> <tr><td>SD12</td></tr> <tr><td>SD13</td></tr> <tr><td>SD14</td></tr> <tr><td>SD15</td></tr> </tbody> </table> <p>* 1: For a multiple CPU system with Basic model QCPU, High Performance model QCPU, Process CPU, or Universal model QCPU, the slot number or CPU number is stored depending on the error that occurred. (Refer to the corresponding error code for which number has been stored.) CPU No. 1: 1, CPU No. 2: 2, CPU No. 3: 3, CPU No. 4: 4</p> <p>* 2: If a fuse blown or I/O module verify error occurred in the module loaded in the MELSECNET/H remote I/O station, the network number is stored into the upper 8 bits and the station number into the lower 8 bits. Use the I/O No. to check the module where the fuse blown or I/O module verify error occurred.</p> <p>* 3: 255 is stored into SD5 of the Basic model QCPU when an instruction, etc. has been executed for the module later than the one on the last slot where a module can be mounted.</p> <p>* 4: Definitions of base No. and slot No. &lt;Base No.&gt; Value used to identify the base unit on which the CPU module has been mounted. The following shows the definition of the base No.</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Base No.</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Indicates the main base unit mounted with the CPU module.</td> </tr> <tr> <td>1 to 7</td> <td>Indicates the extension base unit. The stage number setting made by the stage number setting connector on the extension base unit is the base No. When stage number setting is extension 1: Base No. = 1 When stage number setting is extension 7: Base No. = 7</td> </tr> </tbody> </table> <p>&lt;Slot No.&gt; Value used to identify the slot of each base unit and the module mounted on that slot.</p> <ul style="list-style-type: none"> <li>• The I/O slot 0 (slot on the right side of the CPU slot) of the main base unit is defined as the slot of "Slot No. = 0".</li> <li>• The slot Nos. are consecutively assigned to the slots of the base units in order of the main base unit and extension base units 1 7.</li> <li>• When the number of base unit slots has been set in the I/O assignment setting of the PLC parameter dialog box, the slot Nos. are assigned for only the number of set slots.</li> </ul> <p>* 5: When FFFF<sub>H</sub> is stored into SD6 (I/O No.), the I/O No. cannot be identified due to overlapping I/O No., etc. in the I/O assignment setting of the PLC parameter dialog box. Therefore, identify the error location using SD5.</p> <p>② File name/Drive name</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD5</td> <td>Drive</td> </tr> <tr> <td>SD6</td> <td rowspan="5">File name (ASCII code: 8 characters)</td> </tr> <tr> <td>SD7</td> </tr> <tr> <td>SD8</td> </tr> <tr> <td>SD9</td> </tr> <tr> <td>SD10</td> <td>Extension*6 2EH(.)</td> </tr> <tr> <td>SD11</td> <td>(ASCII code: 3 characters)</td> </tr> <tr> <td>SD12</td> <td rowspan="4">(Empty)</td> </tr> <tr><td>SD13</td></tr> <tr><td>SD14</td></tr> <tr><td>SD15</td></tr> </tbody> </table> <p>(Example) File name= ABCDEFGH. IJK B15 to B8 B7 to B0 42H(B) 41H(A) 44H(D) 43H(C) 46H(F) 45H(E) 48H(H) 47H(G) 49H(I) 2EH(.) 4BH(K) 4AH(J)</p>	Number	Meaning	SD5	Slot No./CPU No.* 1* 2* 3* 4	SD6	I/O No.*5	SD7	(Empty)	SD8	SD9	SD10	SD11	SD12	SD13	SD14	SD15	Base No.	Definition	0	Indicates the main base unit mounted with the CPU module.	1 to 7	Indicates the extension base unit. The stage number setting made by the stage number setting connector on the extension base unit is the base No. When stage number setting is extension 1: Base No. = 1 When stage number setting is extension 7: Base No. = 7	Number	Meaning	SD5	Drive	SD6	File name (ASCII code: 8 characters)	SD7	SD8	SD9	SD10	Extension*6 2EH(.)	SD11	(ASCII code: 3 characters)	SD12	(Empty)	SD13	SD14	SD15	S (Error)	New	○ Rem
Number			Meaning																																											
SD5			Slot No./CPU No.* 1* 2* 3* 4																																											
SD6			I/O No.*5																																											
SD7			(Empty)																																											
SD8																																														
SD9																																														
SD10																																														
SD11																																														
SD12																																														
SD13																																														
SD14																																														
SD15																																														
Base No.				Definition																																										
0			Indicates the main base unit mounted with the CPU module.																																											
1 to 7	Indicates the extension base unit. The stage number setting made by the stage number setting connector on the extension base unit is the base No. When stage number setting is extension 1: Base No. = 1 When stage number setting is extension 7: Base No. = 7																																													
Number	Meaning																																													
SD5	Drive																																													
SD6	File name (ASCII code: 8 characters)																																													
SD7																																														
SD8																																														
SD9																																														
SD10		Extension*6 2EH(.)																																												
SD11	(ASCII code: 3 characters)																																													
SD12	(Empty)																																													
SD13																																														
SD14																																														
SD15																																														

\*6: Extension names are shown below.

SDn Higher8 bits	SDn+1		Extension name	File type
	Lower8 bits	Higher8 bits		
51H	50H	41H	QPA	Parameters
51H	50H	47H	QPG	• Sequence program • SFC program
51H	43H	44H	QCD	Device comment
51H	44H	49H	QDI	Device initial value
51H	44H	52H	QDR	File register
51H	44H	53H	QDS	Simulation data (For QnA)
51H	44H	4CH	QDL	Local device (Excluding Basic model QCPU)
51H	54H	44H	QTD	Sampling trace data (Excluding Basic model QCPU)
51H	54H	4CH	QTL	Status latch data (For QnA)
51H	54H	50H	QTP	Program trace data (For QnA)
51H	54H	52H	QTR	SFC trace file (For QnA)
51H	46H	44H	QFD	Trouble history data (Excluding Basic model QCPU and Universal model QCPU)
51H	53H	54H	QST	SP.DEVST/S.DEVLD instruction file (Universal model QCPU only)

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU																																		
SD5	Error common information	Error common information	<p>③ Time (value set)</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD5</td> <td>Time : 1 μs units (0 to 999 μs)</td> </tr> <tr> <td>SD6</td> <td>Time : 1 ms units (0 to 65535 ms)</td> </tr> <tr> <td>SD7</td> <td rowspan="8">(Empty)</td> </tr> <tr> <td>SD8</td> </tr> <tr> <td>SD9</td> </tr> <tr> <td>SD10</td> </tr> <tr> <td>SD11</td> </tr> <tr> <td>SD12</td> </tr> <tr> <td>SD13</td> </tr> <tr> <td>SD14</td> </tr> <tr> <td>SD15</td> </tr> </tbody> </table>	Number	Meaning	SD5	Time : 1 μs units (0 to 999 μs)	SD6	Time : 1 ms units (0 to 65535 ms)	SD7	(Empty)	SD8	SD9	SD10	SD11	SD12	SD13	SD14	SD15	S (Error)	New	○ Rem																		
Number			Meaning																																					
SD5			Time : 1 μs units (0 to 999 μs)																																					
SD6			Time : 1 ms units (0 to 65535 ms)																																					
SD7			(Empty)																																					
SD8																																								
SD9																																								
SD10																																								
SD11																																								
SD12																																								
SD13																																								
SD14																																								
SD15																																								
SD6																																								
SD7																																								
SD8																																								
SD9																																								
SD10																																								
SD11																																								
SD12																																								
SD13																																								
SD14																																								
SD15	<p>④ Program error location</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD5</td> <td rowspan="4">File name (ASCII code: 8 characters)</td> </tr> <tr> <td>SD6</td> </tr> <tr> <td>SD7</td> </tr> <tr> <td>SD8</td> </tr> <tr> <td>SD9</td> <td>Extension*1 <input type="text"/> 2EH(.)</td> </tr> <tr> <td>SD10</td> <td>(ASCII code: 3 characters)</td> </tr> <tr> <td>SD11</td> <td>Pattern*2</td> </tr> <tr> <td>SD12</td> <td>Block No.</td> </tr> <tr> <td>SD13</td> <td>Step No./transition No.</td> </tr> <tr> <td>SD14</td> <td>Sequence step No. (L)</td> </tr> <tr> <td>SD15</td> <td>Sequence step No. (H)</td> </tr> </tbody> </table> <p>* 2: Contents of pattern data</p> <table border="1"> <tr> <td>15</td><td>14</td><td>to</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td>←(Bit number)</td> </tr> <tr> <td>0</td><td>0</td><td>to</td><td>0</td><td>0</td><td>*</td><td>*</td><td>*</td><td></td> </tr> </table> <p>(Not used)</p> <ul style="list-style-type: none"> <li>└ SFC block designation present (1)/absent (0)</li> <li>└ SFC step designation present (1)/absent (0)</li> <li>└ SFC transition designation present (1)/absent (0)</li> </ul>	Number	Meaning	SD5	File name (ASCII code: 8 characters)	SD6	SD7	SD8	SD9	Extension*1 <input type="text"/> 2EH(.)	SD10	(ASCII code: 3 characters)	SD11	Pattern*2	SD12	Block No.	SD13	Step No./transition No.	SD14	Sequence step No. (L)	SD15	Sequence step No. (H)	15	14	to	4	3	2	1	0	←(Bit number)	0	0	to	0	0	*	*	*	
Number	Meaning																																							
SD5	File name (ASCII code: 8 characters)																																							
SD6																																								
SD7																																								
SD8																																								
SD9	Extension*1 <input type="text"/> 2EH(.)																																							
SD10	(ASCII code: 3 characters)																																							
SD11	Pattern*2																																							
SD12	Block No.																																							
SD13	Step No./transition No.																																							
SD14	Sequence step No. (L)																																							
SD15	Sequence step No. (H)																																							
15	14	to	4	3	2	1	0	←(Bit number)																																
0	0	to	0	0	*	*	*																																	
SD5			<p>⑤ System switching cause</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD5</td> <td>System switching cause (0: automatic system switching/ 1: manual system switching)</td> </tr> <tr> <td>SD6</td> <td>System switching direction (0:standby system to control system/ 1: control system to standby system)</td> </tr> <tr> <td>SD7</td> <td rowspan="8">Tracking flag*3</td> </tr> <tr> <td>SD8</td> </tr> <tr> <td>SD9</td> </tr> <tr> <td>SD10</td> </tr> <tr> <td>SD11</td> </tr> <tr> <td>SD12</td> </tr> <tr> <td>SD13</td> </tr> <tr> <td>SD14</td> </tr> <tr> <td>SD15</td> </tr> </tbody> </table> <p>* 3: Tracking flag contents</p> <p>Shows whether or not the tracking data is valid.</p> <table border="1"> <tr> <td>15</td><td>14</td><td>to</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td>←(Bit number)</td> </tr> <tr> <td>0</td><td>0</td><td>to</td><td>0</td><td>0</td><td>*</td><td>*</td><td>*</td><td></td> </tr> </table> <p>(Not used)</p> <ul style="list-style-type: none"> <li>└ Invalid work data invalid (0)/valid (1)</li> <li>└ System data (SFC active step information) invalid (0)/ valid (1)</li> <li>└ System switching cause invalid (0)/ valid (1)</li> </ul>	Number	Meaning	SD5	System switching cause (0: automatic system switching/ 1: manual system switching)	SD6	System switching direction (0:standby system to control system/ 1: control system to standby system)	SD7	Tracking flag*3	SD8	SD9	SD10	SD11	SD12	SD13	SD14	SD15	15	14	to	4	3	2	1	0	←(Bit number)	0	0	to	0	0	*	*	*		S (Error)	New	Q4AR
Number	Meaning																																							
SD5	System switching cause (0: automatic system switching/ 1: manual system switching)																																							
SD6	System switching direction (0:standby system to control system/ 1: control system to standby system)																																							
SD7	Tracking flag*3																																							
SD8																																								
SD9																																								
SD10																																								
SD11																																								
SD12																																								
SD13																																								
SD14																																								
SD15																																								
15	14	to	4	3	2	1	0	←(Bit number)																																
0	0	to	0	0	*	*	*																																	

\*1: For extensions, refer to \*6.

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU																																																																																																																
SD16	Error individual information	Error individual information	<ul style="list-style-type: none"> <li>Individual information corresponding to error codes (SD0) is stored here.</li> <li>There are the following six different types of information are stored.</li> <li>The error individual information type can be judged by the "individual information category code" in SD4. (The values of the "individual information category code" stored in SD4 correspond to following 1) to 7).)</li> </ul> <p>① (Empty)</p> <p>② File name/Drive name</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> <th>(Example)</th> </tr> </thead> <tbody> <tr> <td>SD16</td> <td>Drive</td> <td>File name= ABCDEFGH. IJK B15 to B8 B7 to B0</td> </tr> <tr> <td>SD17</td> <td rowspan="6">File name (ASCII code: 8 characters)</td> <td>42H(B) 41H(A)</td> </tr> <tr> <td>SD18</td> <td>44H(D) 43H(C)</td> </tr> <tr> <td>SD19</td> <td>46H(F) 45H(E)</td> </tr> <tr> <td>SD20</td> <td>48H(H) 47H(G)</td> </tr> <tr> <td>SD21</td> <td>49H(I) 2EH(.)</td> </tr> <tr> <td>SD22</td> <td>4BH(K) 4AH(J)</td> </tr> <tr> <td>SD23</td> <td rowspan="4">(Empty)</td> <td></td> </tr> <tr> <td>SD24</td> <td></td> </tr> <tr> <td>SD25</td> <td></td> </tr> <tr> <td>SD26</td> <td></td> </tr> </tbody> </table> <p>③ Time (value actually measured)</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD16</td> <td>Time : 1 μs units (0 to 999 μs)</td> </tr> <tr> <td>SD17</td> <td>Time : 1 ms units (0 to 65535 ms)</td> </tr> <tr> <td>SD18</td> <td rowspan="6">(Empty)</td> </tr> <tr> <td>SD19</td> </tr> <tr> <td>SD20</td> </tr> <tr> <td>SD21</td> </tr> <tr> <td>SD22</td> </tr> <tr> <td>SD23</td> </tr> <tr> <td>SD24</td> <td rowspan="3">(Empty)</td> </tr> <tr> <td>SD25</td> </tr> <tr> <td>SD26</td> </tr> </tbody> </table> <p>④ Program error location</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD16</td> <td rowspan="4">File name (ASCII code: 8 characters)</td> </tr> <tr> <td>SD17</td> </tr> <tr> <td>SD18</td> </tr> <tr> <td>SD19</td> </tr> <tr> <td>SD20</td> <td>Extension *1 2EH(.)</td> </tr> <tr> <td>SD21</td> <td>(ASCII code: 3 characters)</td> </tr> <tr> <td>SD22</td> <td>Pattern*2</td> </tr> <tr> <td>SD23</td> <td>Block No.</td> </tr> <tr> <td>SD24</td> <td>Step No./transition No.</td> </tr> <tr> <td>SD25</td> <td>Sequence step No. (L)</td> </tr> <tr> <td>SD26</td> <td>Sequence step No. (H)</td> </tr> </tbody> </table> <p>* 2: Contents of pattern data</p> <table border="1"> <tr> <td>15</td><td>14</td><td>to</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td>0</td><td>0</td><td>to</td><td>0</td><td>*</td><td>*</td><td>*</td><td>*</td> </tr> </table> <p>(Not used) ← (Bit number)</p> <ul style="list-style-type: none"> <li>SFC block designation present (1)/absent (0)</li> <li>SFC step designation present (1)/absent (0)</li> <li>SFC transition designation present (1)/absent (0)</li> </ul> <p>⑤ Parameter number</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD16</td> <td>Parameter No.*3</td> </tr> <tr> <td>SD17</td> <td rowspan="10">(Empty)</td> </tr> <tr> <td>SD18</td> </tr> <tr> <td>SD19</td> </tr> <tr> <td>SD20</td> </tr> <tr> <td>SD21</td> </tr> <tr> <td>SD22</td> </tr> <tr> <td>SD23</td> </tr> <tr> <td>SD24</td> </tr> <tr> <td>SD25</td> </tr> <tr> <td>SD26</td> </tr> </tbody> </table> <p>⑥ Annunciator number</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>SD16</td> <td>No.</td> </tr> <tr> <td>SD17</td> <td rowspan="10">(Empty)</td> </tr> <tr> <td>SD18</td> </tr> <tr> <td>SD19</td> </tr> <tr> <td>SD20</td> </tr> <tr> <td>SD21</td> </tr> <tr> <td>SD22</td> </tr> <tr> <td>SD23</td> </tr> <tr> <td>SD24</td> </tr> <tr> <td>SD25</td> </tr> <tr> <td>SD26</td> </tr> </tbody> </table> <p>⑦ CHK instruction malfunction number</p> <p>* 3: For details of the parameter numbers, refer to QCPU User's Manual (Function Explanation, Program Fundamentals) or the user's manual of the CPU used.</p>	Number	Meaning	(Example)	SD16	Drive	File name= ABCDEFGH. IJK B15 to B8 B7 to B0	SD17	File name (ASCII code: 8 characters)	42H(B) 41H(A)	SD18	44H(D) 43H(C)	SD19	46H(F) 45H(E)	SD20	48H(H) 47H(G)	SD21	49H(I) 2EH(.)	SD22	4BH(K) 4AH(J)	SD23	(Empty)		SD24		SD25		SD26		Number	Meaning	SD16	Time : 1 μs units (0 to 999 μs)	SD17	Time : 1 ms units (0 to 65535 ms)	SD18	(Empty)	SD19	SD20	SD21	SD22	SD23	SD24	(Empty)	SD25	SD26	Number	Meaning	SD16	File name (ASCII code: 8 characters)	SD17	SD18	SD19	SD20	Extension *1 2EH(.)	SD21	(ASCII code: 3 characters)	SD22	Pattern*2	SD23	Block No.	SD24	Step No./transition No.	SD25	Sequence step No. (L)	SD26	Sequence step No. (H)	15	14	to	4	3	2	1	0	0	0	to	0	*	*	*	*	Number	Meaning	SD16	Parameter No.*3	SD17	(Empty)	SD18	SD19	SD20	SD21	SD22	SD23	SD24	SD25	SD26	Number	Meaning	SD16	No.	SD17	(Empty)	SD18	SD19	SD20	SD21	SD22	SD23	SD24	SD25	SD26	S (Error)	New	○ Rem
Number				Meaning	(Example)																																																																																																																	
SD16				Drive	File name= ABCDEFGH. IJK B15 to B8 B7 to B0																																																																																																																	
SD17				File name (ASCII code: 8 characters)	42H(B) 41H(A)																																																																																																																	
SD18					44H(D) 43H(C)																																																																																																																	
SD19					46H(F) 45H(E)																																																																																																																	
SD20					48H(H) 47H(G)																																																																																																																	
SD21					49H(I) 2EH(.)																																																																																																																	
SD22					4BH(K) 4AH(J)																																																																																																																	
SD23				(Empty)																																																																																																																		
SD24																																																																																																																						
SD25																																																																																																																						
SD26																																																																																																																						
Number	Meaning																																																																																																																					
SD16	Time : 1 μs units (0 to 999 μs)																																																																																																																					
SD17	Time : 1 ms units (0 to 65535 ms)																																																																																																																					
SD18	(Empty)																																																																																																																					
SD19																																																																																																																						
SD20																																																																																																																						
SD21																																																																																																																						
SD22																																																																																																																						
SD23																																																																																																																						
SD24	(Empty)																																																																																																																					
SD25																																																																																																																						
SD26																																																																																																																						
Number	Meaning																																																																																																																					
SD16	File name (ASCII code: 8 characters)																																																																																																																					
SD17																																																																																																																						
SD18																																																																																																																						
SD19																																																																																																																						
SD20	Extension *1 2EH(.)																																																																																																																					
SD21	(ASCII code: 3 characters)																																																																																																																					
SD22	Pattern*2																																																																																																																					
SD23	Block No.																																																																																																																					
SD24	Step No./transition No.																																																																																																																					
SD25	Sequence step No. (L)																																																																																																																					
SD26	Sequence step No. (H)																																																																																																																					
15	14	to	4	3	2	1	0																																																																																																															
0	0	to	0	*	*	*	*																																																																																																															
Number	Meaning																																																																																																																					
SD16	Parameter No.*3																																																																																																																					
SD17	(Empty)																																																																																																																					
SD18																																																																																																																						
SD19																																																																																																																						
SD20																																																																																																																						
SD21																																																																																																																						
SD22																																																																																																																						
SD23																																																																																																																						
SD24																																																																																																																						
SD25																																																																																																																						
SD26																																																																																																																						
Number	Meaning																																																																																																																					
SD16	No.																																																																																																																					
SD17	(Empty)																																																																																																																					
SD18																																																																																																																						
SD19																																																																																																																						
SD20																																																																																																																						
SD21																																																																																																																						
SD22																																																																																																																						
SD23																																																																																																																						
SD24																																																																																																																						
SD25																																																																																																																						
SD26																																																																																																																						
SD17																																																																																																																						
SD18																																																																																																																						
SD19																																																																																																																						
SD20																																																																																																																						
SD21																																																																																																																						
SD22																																																																																																																						
SD23																																																																																																																						
SD24																																																																																																																						
SD25																																																																																																																						
SD26																																																																																																																						

\*1: For extensions, refer to \*6.

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU
SD50	Error reset	Error code that performs error reset	• Stores error code that performs error reset	U	New	○ Rem
SD53	AC/DC DOWN detection	Number of times for AC/DC DOWN detection	• Each time the voltage falls below 85% of normal (AC power) /65% (DC power) while the CPU module is calculating, it will be saved as a BIN code with 1 added to the value. • Count is repeated within 0→ 32767→ -32768→ 0.	S (Error)	D9005	○ Rem
SD60	Number of module with blown fuse	Number of module with blown fuse	• Value stored here is the lowest station I/O No. of the module with the blown fuse.	S (Error)	D9000	○ Rem
SD61	I/O module verification error number	I/O module verification error module number	• The lowest I/O No. of the module where the I/O module verification number took place.	S (Error)	D9002	
SD105	CH1 transmission speed setting (RS-232)	Stores the preset transmission speed when GX Developer is used.	96 : 9600bps, 192 : 19.2kbps, 384 : 38.4kbps 576 : 57.6kbps, 1152 : 115.2kbps Other than RS-232 connection holds the data at RS-232 connection. (When disconnected, the default value is 1152.)	S	New	Qn(H) QnPH QnPRH QnU * 1 Rem

\*1: Applicable for Universal model QCPU except built-in Ethernet port QCPU.






(2) System information  
Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9	Applicable CPU						
SD200	State of switch	State of CPU switch	<p>• The switch status of the remote I/O module is stored in the following format.</p> <p>① Remote I/O module switch status Always 1: STOP</p>	S (Always)	New	Remote						
			<p>• The switch status of the CPU module is stored in the following format:</p> <table border="1"> <tr> <td>①: CPU switch status</td> <td>0: RUN 1: STOP 2: L.CLR</td> </tr> <tr> <td>②: Memory card switch</td> <td>Always OFF</td> </tr> <tr> <td>③: DIP switch</td> <td>B8 through B12 correspond to SW1 through SW5 of system setting switch 1. 0: OFF, 1: ON BD through BF are empty.</td> </tr> </table>	①: CPU switch status	0: RUN 1: STOP 2: L.CLR	②: Memory card switch	Always OFF	③: DIP switch	B8 through B12 correspond to SW1 through SW5 of system setting switch 1. 0: OFF, 1: ON BD through BF are empty.	S (Every END processing)	New	Qn(H) QnPH QnPRH
			①: CPU switch status	0: RUN 1: STOP 2: L.CLR								
			②: Memory card switch	Always OFF								
			③: DIP switch	B8 through B12 correspond to SW1 through SW5 of system setting switch 1. 0: OFF, 1: ON BD through BF are empty.								
<p>• The switch status of the CPU module is stored in the following format:</p> <table border="1"> <tr> <td>①: CPU switch status</td> <td>0: RUN 1: STOP</td> </tr> <tr> <td>②: Memory card switch</td> <td>Always OFF</td> </tr> </table>	①: CPU switch status	0: RUN 1: STOP	②: Memory card switch	Always OFF	S (Every END processing)	New	Q00J/Q00/Q01					
①: CPU switch status	0: RUN 1: STOP											
②: Memory card switch	Always OFF											
<p>• The switch status of the CPU module is stored in the following format:</p> <table border="1"> <tr> <td>①: CPU switch status</td> <td>0: RUN 1: STOP</td> </tr> <tr> <td>②: Memory card switch</td> <td>Always OFF</td> </tr> </table>	①: CPU switch status	0: RUN 1: STOP	②: Memory card switch	Always OFF	S (when RUN/ STOP/ RESET switch changed)	New	QnU					
①: CPU switch status	0: RUN 1: STOP											
②: Memory card switch	Always OFF											
<p>• The switch status of the CPU module is stored in the following format:</p> <table border="1"> <tr> <td>①: CPU key State of switch</td> <td>0: RUN 1: STOP 2: L.CLR</td> </tr> <tr> <td>②: Memory cards switch</td> <td>B4 corresponds to card A, and B5 corresponds to card B OFF at 0; ON at 1</td> </tr> <tr> <td>③: DIP switch</td> <td>B8 through B12 correspond to SW1 through SW5 of system setting switch 1. B14 and B15 correspond to SW1 and SW2 of system setting switch 2, respectively. OFF at 0; ON at 1</td> </tr> </table>	①: CPU key State of switch	0: RUN 1: STOP 2: L.CLR	②: Memory cards switch	B4 corresponds to card A, and B5 corresponds to card B OFF at 0; ON at 1	③: DIP switch	B8 through B12 correspond to SW1 through SW5 of system setting switch 1. B14 and B15 correspond to SW1 and SW2 of system setting switch 2, respectively. OFF at 0; ON at 1	S (Every END processing)	New	QnA			
①: CPU key State of switch	0: RUN 1: STOP 2: L.CLR											
②: Memory cards switch	B4 corresponds to card A, and B5 corresponds to card B OFF at 0; ON at 1											
③: DIP switch	B8 through B12 correspond to SW1 through SW5 of system setting switch 1. B14 and B15 correspond to SW1 and SW2 of system setting switch 2, respectively. OFF at 0; ON at 1											

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU																
SD203	Operating state of CPU	Operating state of CPU	<p>The operating status of the remote I/O module is stored in the following format.</p> <p>① Remote I/O module operating status Always 2: STOP</p>	S (Always)	New	Remote																
			<p>The CPU operating state is stored as indicated in the following figure:</p> <p>①: Operating state of CPU                      0 : RUN                      1 : STEP-RUN (For the QnACPU only)                      2 : STOP                      3 : PAUSE</p> <p>②: STOP/PAUSE cause                      Note: Priority is earliest first (For Universal model QCPU, however, the latest cause for operation status change is stored.)                      0 : RUN/STOP switch ("RUN/STOP/RESET switch" for Basic model QCPU and Universal model QCPU)                      1 : Remote contact                      2 : Remote operation from GX Developer/serial communication, etc.                      3 : Internal program instruction                      4 : Errors</p>				S (Every END processing)	D9015 format change	○													
SD206	Device test execution type	0: Test not yet executed 1: During X device test 2: During Y device test 3: During X/Y device test	<p>The information is stored when the device test mode is activated by GX Developer.</p>	S (Request)	New	Remote																
SD210	Clock data	Clock data (year, month)	<p>The year (last two digits) and month are stored as BCD code as shown below:</p>	S (Request)/ U	D9025	○ Rem																
SD211	Clock data	Clock data (day, hour)	<p>The day and hour are stored as BCD code as shown below:</p>		D9026																	
SD212	Clock data	Clock data (minute, second)	<p>The minutes and seconds (after the hour) are stored as BCD code as shown below:</p>		D9027																	
SD213	Clock data	Clock data (Higher digits of year, day of week)	<p>The year (first two digits) and the day of the week are stored as BCD code as shown below:</p> <p>First two digits of year (19 or 20)</p> <table border="1"> <thead> <tr> <th>Day of week</th> <th></th> </tr> </thead> <tbody> <tr><td>0</td><td>Sunday</td></tr> <tr><td>1</td><td>Monday</td></tr> <tr><td>2</td><td>Tuesday</td></tr> <tr><td>3</td><td>Wednesday</td></tr> <tr><td>4</td><td>Thursday</td></tr> <tr><td>5</td><td>Friday</td></tr> <tr><td>6</td><td>Saturday</td></tr> </tbody> </table>	Day of week		0	Sunday	1	Monday	2	Tuesday	3	Wednesday	4	Thursday	5	Friday	6	Saturday	S (Request)/ U	D9028	QCPU Remote
Day of week																						
0	Sunday																					
1	Monday																					
2	Tuesday																					
3	Wednesday																					
4	Thursday																					
5	Friday																					
6	Saturday																					

Special Register List (Continued)

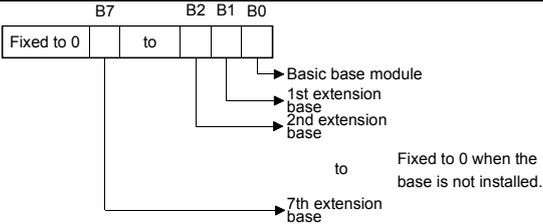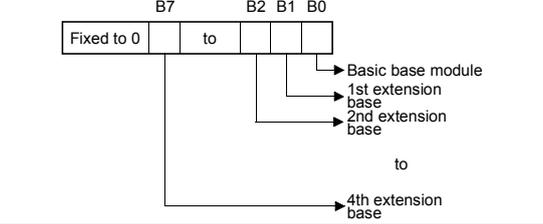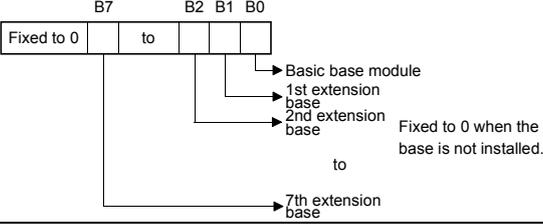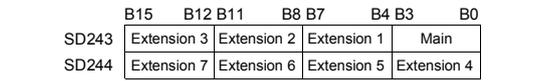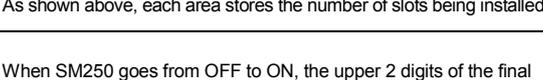Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU Dg <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SD240	Base mode	0: Automatic mode 1: Detail mode	• Stores the base mode.	S (Initial)	New	
SD241	No. of extension bases	0 : Main only 1 to 7: No. of extension bases	• Stores the maximum number of the extension bases being installed.	S (Initial)	New	
SD242	A/Q base differentiation	Base type differentiation 0: QA * * B is installed (A mode) 1: Q * * B is installed (Q mode)		S (Initial)	New	Qn(H) QnPH QnPRH Rem
	Installed Q base presence/absence	Base type differentiation 0: Base not installed 1: Q**B is installed		S (Initial)	New	Q00J/Q00/Q01
	Installed Q Base presence/absence	Base type differentiation 0: Base not installed 1: Q**B is installed		S (Initial)	New	QnU
SD243	No. of base slots	No. of base slots		S (Initial)	New	Qn(H) QnPH QnPRH QnU Rem
SD244						
SD250	Loaded maximum I/O	Loaded maximum I/O No.	• When SM250 goes from OFF to ON, the upper 2 digits of the final I/O No. plus 1 of the modules loaded are stored as BIN values.	S (Request END)	New	Qn(H) QnPH QnPRH Rem
			• The upper 2 digits of the final I/O No. plus 1 of the modules loaded are stored as BIN values.	S (Initial)	New	Q00J/ Q00/Q01 QnU Rem

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU Dg <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Applicable CPU
SD280	CC-Link error	Error detection status	<p>① When Xn0 of the mounted CC-Link module turns ON, the bit of the corresponding station turns to 1 (ON).</p> <p>② When either Xn1 or XnF of the mounted CC-Link module turns OFF, the bit of the corresponding station turns to 1 (ON).</p> <p>③ Turns to 1 (ON) when communication between the mounted CC-Link module and CPU module cannot be made.</p> <p>The above module Nos. n are in order of the head I/O numbers. (However, the one where parameter setting has not been made is not counted.)</p>	S (Error)	New	Qn(H) QnPH QnPRH Rem
			<p>① When Xn0 of the mounted CC-Link module turns ON, the bit of the corresponding station turns to 1 (ON).</p> <p>② When either Xn1 or XnF of the mounted CC-Link module turns OFF, the bit of the corresponding station turns to 1 (ON).</p> <p>③ Turns to 1 (ON) when communication between the mounted CC-Link module and CPU module cannot be made.</p>			QnA
SD290	Device allocation (Same as parameter contents)	Number of points allocated for X	• Stores the number of points currently set for X devices	S (Initial)	New	○ Rem
SD291		Number of points allocated for Y	• Stores the number of points currently set for Y devices			
SD292		Number of points allocated for M	• Stores the number of points currently set for M devices			
SD294		Number of points allocated for B	• Stores the number of points currently set for B devices			
SD296		Number of points allocated for SB	• Stores the number of points currently set for SB devices			
SD302		Number of points allocated for D	• Stores the number of points currently set for D devices			
SD303		Number of points allocated for W	• Stores the number of points currently set for W devices			
SD304		Number of points allocated for SW	• Stores the number of points currently set for SW devices			
SD315	Time reserved for communication processing	Time reserved for communication processing	<ul style="list-style-type: none"> <li>Reserves the designated time for communication processing with GX Developer or other units</li> <li>The greater the value is designated, the shorter the response time for communication with other devices (GX Developer, serial communication units) becomes.</li> <li>If the designated value is out of the range above, it is processed that no setting is made.</li> <li>Setting range: 1 to 100 ms</li> <li>Note that the scan time becomes longer by the designated time.</li> </ul>	U	New	Q00J/ Q00/Q01 Qn(H) QnPH QnPRH Rem

Special Register List (Continued)

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU
SD340	Ethernet information	No. of modules installed	• Indicates the number of mounted Ethernet module.	S (Initial)	New	QCPU Rem
SD341		I/O No.	• Indicates I/O No. of mounted Ethernet module.			
SD342		Network No.	• Indicates network No. of mounted Ethernet module.			
SD343		Group No.	• Indicates group No. of mounted Ethernet module.			
SD344		Station No.	• Indicates station No. of mounted Ethernet module.			
SD345 to SD346		Empty	• Empty (With QCPU, the Ethernet module IP address of the 1st module is stored in buffer memory.)			
SD347		Empty	• Empty (With QCPU, the Ethernet module error code of the 1st module is read with the ERRRD instruction.)			
SD348 to SD354	Ethernet information	Information from 2nd module	• Configuration is identical to that for the first module.	S (Initial)	New	Qn(H) QnPH QnPRH QnU Rem
SD355 to SD361		Information from 3rd module	• Configuration is identical to that for the first module.			
SD362 to SD368		Information from 4th module	• Configuration is identical to that for the first module.			

\*1: The Universal model QCPU except the Q02UCPU.

(3) Scan Information

Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU
SD550	Service interval measureme nt module	Unit/module No.	• Sets I/O No. for module that measures service interval	U	New	QnA Qn(H) QnPH QnPRH Rem
SD551	Service interval time	Module service interval (ms units)	• Stores the service interval for the module specified in SD550 into SD551 and SD552 when SM551 is turned ON. (Measurement is made in 100 s units.)	S (Request)	New	
SD552		Module service interval (μs units)	SD551: Stores the ms place. (Storage range: 0 to 65535) SD552: Stores the s place. (Storage range: 0 to 900)			

(4) Fuse blown module  
Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU
SD1300 SD1301 SD1302 SD1303 SD1304 SD1305 SD1306 SD1307 SD1308 SD1309 to SD1330 SD1331	Fuse blown module	Bit pattern in units of 16 points, indicating the modules whose fuses have blown 0: No blown fuse 1: Blown fuse present	<ul style="list-style-type: none"> <li>The numbers of output modules whose fuses have blown are input as a bit pattern (in units of 16 points). (If the module numbers are set by parameter, the parameter-set numbers are stored.)</li> <li>Also detects blown fuse condition at remote station output modules</li> </ul> <ul style="list-style-type: none"> <li>Not cleared even if the blown fuse is replaced with a new one. This flag is cleared by error resetting operation.</li> </ul>	S (Error)	D9100 D9101 D9102 D9103 D9104 D9105 D9106 D9107 New New New	QnA Qn(H) QnPH QnPRH QnU Rem

(5) I/O module verification  
Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9□□□	Applicable CPU
SD1400 SD1401 SD1402 SD1403 SD1404 SD1405 SD1406 SD1407 SD1408 SD1409 to SD1430 SD1431	I/O module verification error	Bit pattern, in units of 16 points, indicating the modules with verification errors. 0: No I/O module verification errors 1: I/O module verification error present	<ul style="list-style-type: none"> <li>When the power is turned on, the module numbers of the I/O modules whose information differs from the registered I/O module information are set in this register (in units of 16 points). (If the I/O numbers are set by parameter, the parameter-set numbers are stored.)</li> <li>Also detects I/O module information</li> </ul> <ul style="list-style-type: none"> <li>Not cleared even if the blown fuse is replaced with a new one. This flag is cleared by error resetting operation.</li> </ul>	S (Error)	D9116 D9117 D9118 D9119 D9120 D9121 D9122 D9123 New New	QnA Qn(H) QnPH QnPRH QnU Rem

(6) Redundant power supply module information  
 SD1780 to SD1789 are valid only for a redundant power supply system.  
 The bits are all 0 for a singular power supply system.


Special Register List

Number	Name	Meaning	Explanation	Set by (When set)	Corresponding ACPU D9	Applicable CPU
SD1780	Power supply off detection status	Power supply off detection status	<ul style="list-style-type: none"> <li>Stores the status of the redundant power supply module (Q6□RP) with input power OFF in the following bit pattern.</li> <li>Stores 0 when the main base unit is not the redundant main base unit (Q3□RB).</li> </ul> <ul style="list-style-type: none"> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> </ul>	S(Every END)	New	
SD1781	Power supply failure detection status	Power supply failure detection status	<ul style="list-style-type: none"> <li>Stores the failure detection status of the redundant power supply module (Q6□RP) in the following bit pattern. (The corresponding bit is cleared to 0 when the input power to the faulty redundant power supply module is switched OFF after detection of the redundant power supply module failure.)</li> <li>Stores 0 when the main base unit is not the redundant main base unit (Q3□RB).</li> </ul> <ul style="list-style-type: none"> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> </ul>	S(Every END)	New	Qn(H) <sup>2</sup> QnPH <sup>2</sup> QnPRH Rem QnU <sup>3</sup>
SD1782	Momentary power failure detection counter for power supply 1*1	Momentary power failure detection count for power supply 1	<ul style="list-style-type: none"> <li>Counts the number of times of momentary power failure of the power supply 1/2.</li> <li>Watches the status of the power supply 1/ 2 mounted on the redundant main base unit (Q3□RB) and counts the number of times of momentary power failure.</li> <li>Status of power supply 1/power supply 2 mounted on the extension base unit for redundant power supply system and redundant type extension base unit are not monitored.</li> <li>When the CPU module starts, the counter of the power supply 1/ 2 is cleared to 0.</li> <li>If the input power to one of the redundant power supply modules is turned OFF, the corresponding counter is cleared to 0.</li> <li>The counter is incremented by 1 every time the momentary power failure of the power supply 1/ 2 is detected.</li> <li>Stores 0 when the main base unit is not the main base unit for redundant power supply system (Q3□RB).</li> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> <li>Count is repeated within 0 → 32767 → -32768 → 0. (Indicates within the range from 0 to 65535 in GX Developer system)</li> </ul>	S(Every END)	New	
SD1783	Momentary power failure detection counter for power supply 2*1	Momentary power failure detection count for power supply 2	<ul style="list-style-type: none"> <li>Counts the number of times of momentary power failure of the power supply 1/2.</li> <li>Watches the status of the power supply 1/ 2 mounted on the redundant main base unit (Q3□RB) and counts the number of times of momentary power failure.</li> <li>Status of power supply 1/power supply 2 mounted on the extension base unit for redundant power supply system and redundant type extension base unit are not monitored.</li> <li>When the CPU module starts, the counter of the power supply 1/ 2 is cleared to 0.</li> <li>If the input power to one of the redundant power supply modules is turned OFF, the corresponding counter is cleared to 0.</li> <li>The counter is incremented by 1 every time the momentary power failure of the power supply 1/ 2 is detected.</li> <li>Stores 0 when the main base unit is not the main base unit for redundant power supply system (Q3□RB).</li> <li>When configuring multiple CPU, the flag is stored to 1st CPU module.</li> <li>Count is repeated within 0 → 32767 → -32768 → 0. (Indicates within the range from 0 to 65535 in GX Developer system)</li> </ul>	S(Every END)	New	

\*1: The "power supply 1" indicates the redundant power supply module mounted on the POWER 1 slot of the redundant base unit (Q3□RB/Q6□RB/Q6□WRB). The "power supply 2" indicates the redundant power supply module mounted on the POWER 2 slot of the redundant base unit (Q3□RB/Q6□RB/Q6□WRB).  
 \*2: The module whose serial No. (first five digits) is "07032" or later.  
 However, for the multiple CPU system configuration, this applies to all CPU modules whose serial No. (first five digits) is "07032" or later.  
 \*3: The module whose serial No. (first five digits) is "10042" or later.

Appendix 6 External Dimensions


(1) QJ71LP21-25, QJ71LP21G, QJ71LP25GE

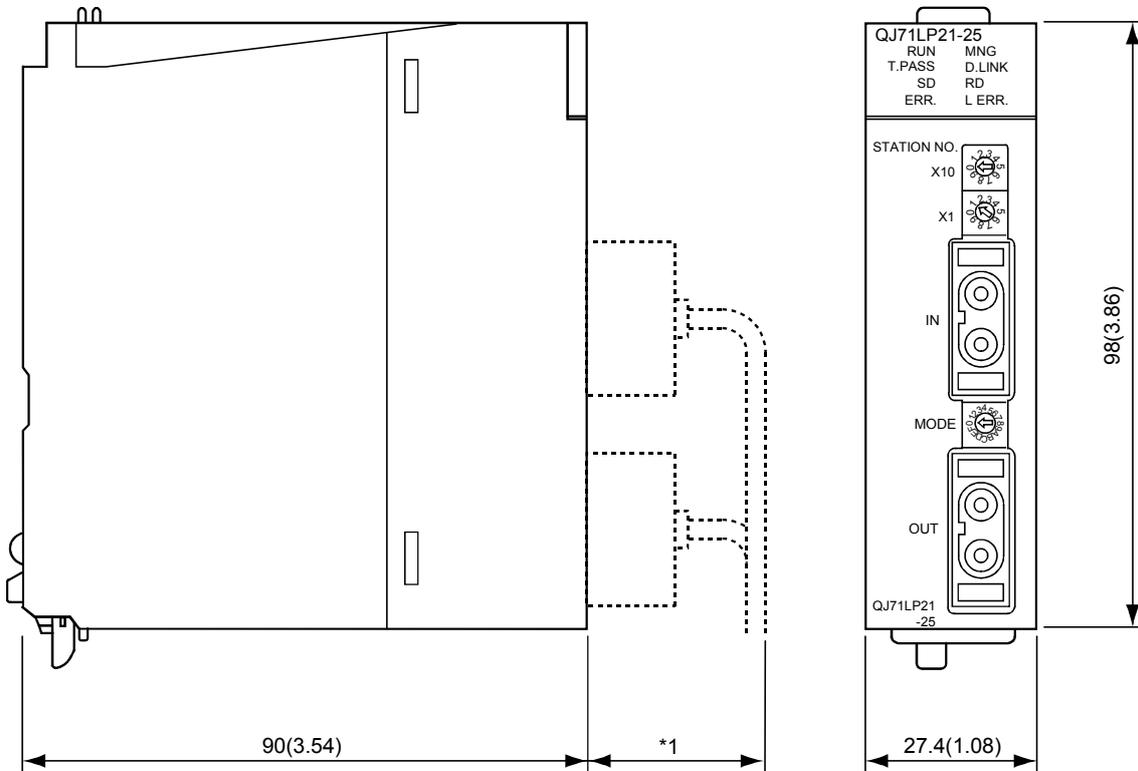

Unit: mm (in.)


\*1: Please contact your nearest Mitsubishi Electric System Service Corporation for detail.

(2) QJ71LP21S-25

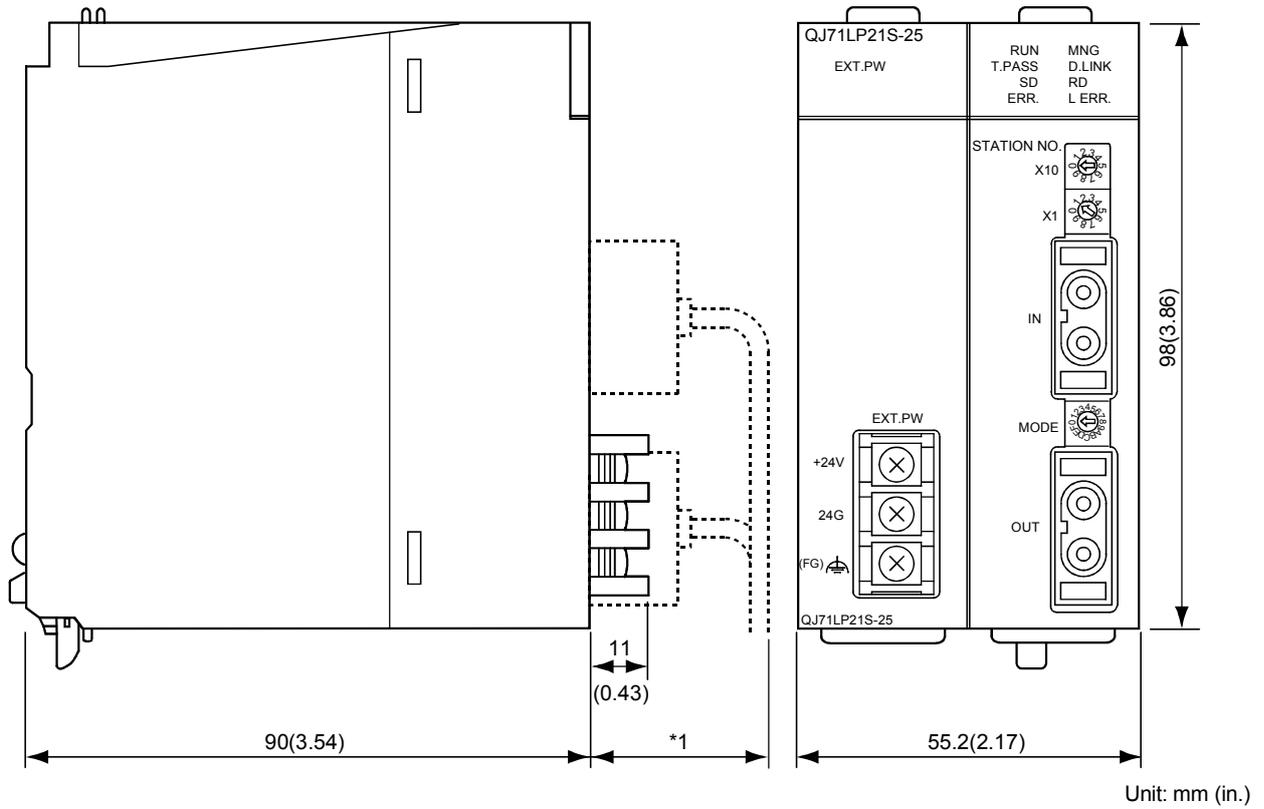


\*1: Please contact your nearest Mitsubishi Electric System Service Corporation for detail.

(3) QJ71BR11

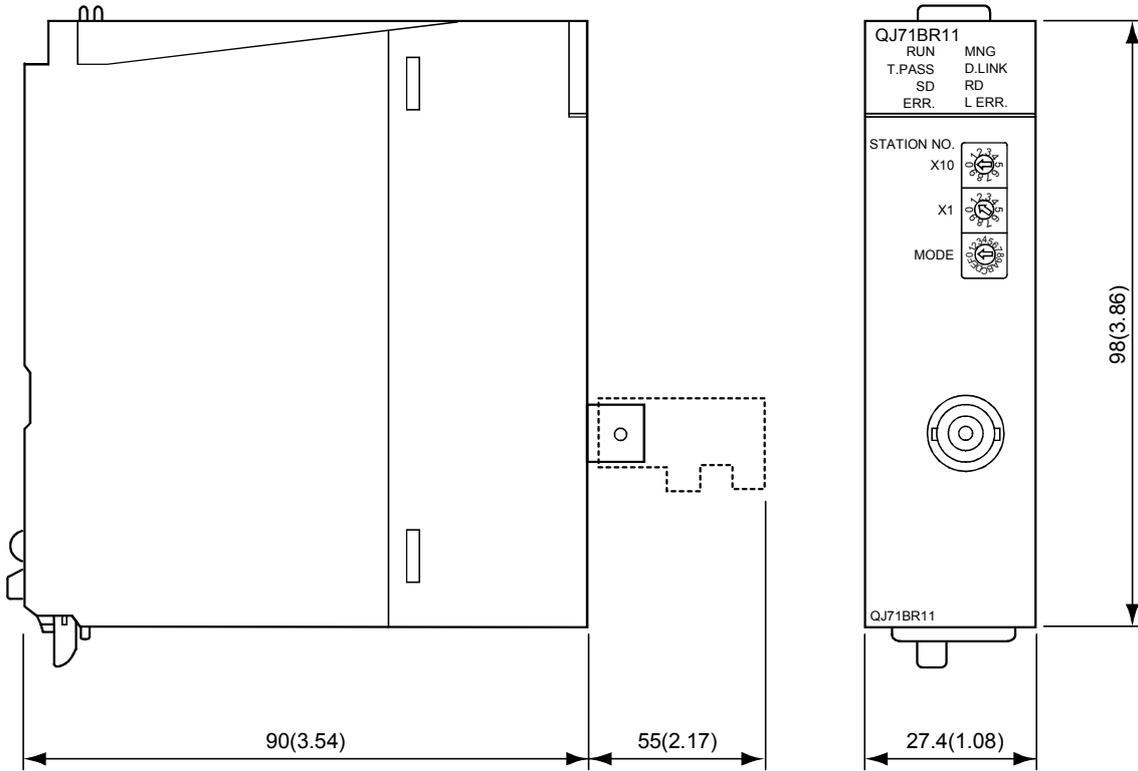

Unit: mm (in.)


(4) QJ72LP25-25, QJ72LP25G, QJ72LP25GE

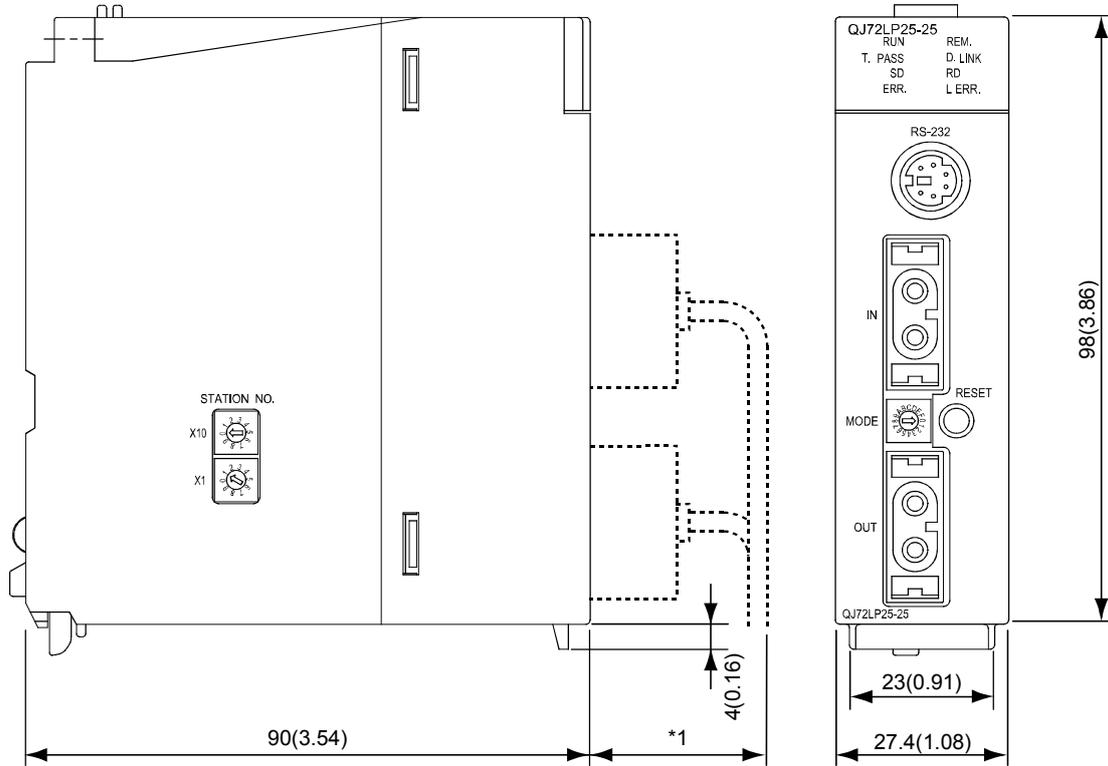

Unit: mm (in.)

\*1: Please contact your nearest Mitsubishi Electric System Service Corporation for detail.

(5) QJ72BR15

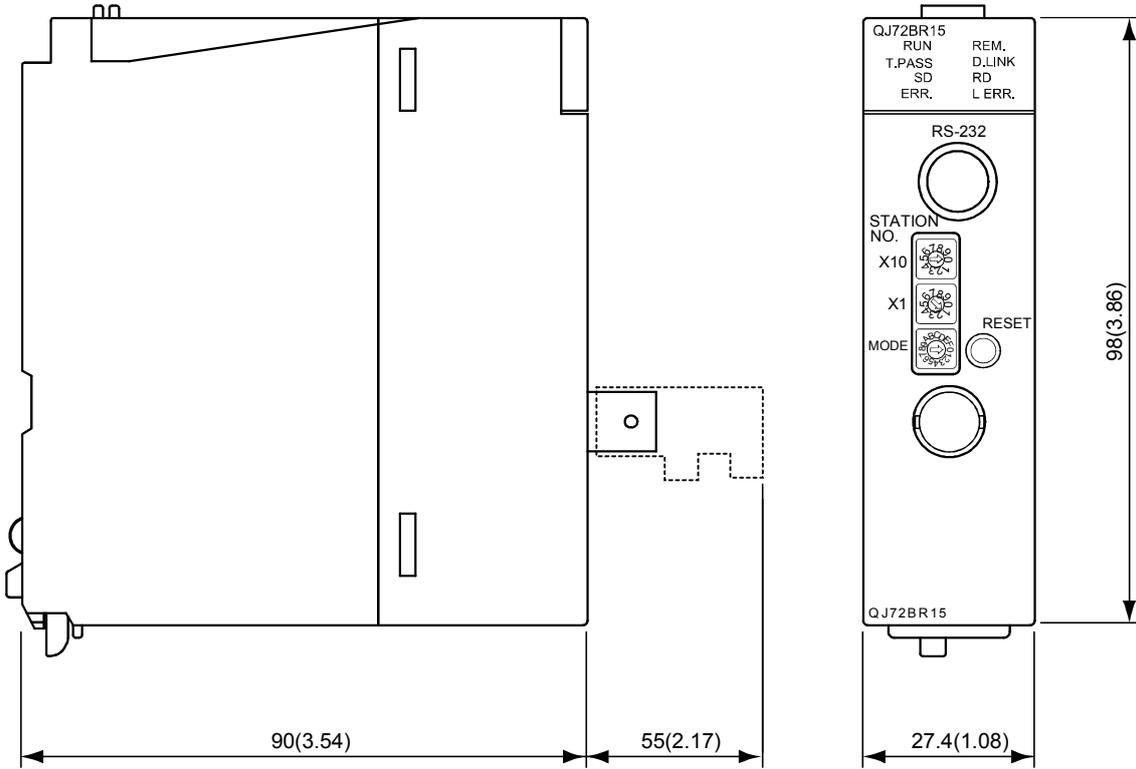

Unit: mm (in.)

## INDEX

- [A]  
Applicable systems ..... 2-13
- [B]  
Block guarantee per station ..... 6-7
- [C]  
Coaxial cable ..... 3-5  
Common parameter  
  LX/LY setting ..... 5-9  
  LB/LW setting ..... 5-12  
  Specify reserved station ..... 5-13  
Cyclic transmission..... 3-9,6-6
- [E]  
END asynchronization ..... 3-34,5-16  
END synchronization..... 3-34  
Error code  
  Error code list..... 8-30  
  Storage of the error codes of the link  
  dedicated instruction ..... 8-30  
  Checking error codes with  
  GX Developer ..... 8-27
- [F]  
Function ..... 3-8
- [G]  
Group No. ....A-16,5-7
- [H]  
H/W information..... 8-58
- [I]  
Intelligent function module parameter  
.....3-10,5-2,6-9
- [L]  
Link dedicated instruction ..... 6-17,7-3  
Link refresh..... 3-32  
Link refresh assignment image..... 5-19  
Link scan..... 3-32  
Link special register (SW)..... 6-22,App-13  
Link special relay (SB) ..... 6-22,App-3
- [M]  
Master module ..... A-14  
Multiple CPU system .....2-18  
Multiplex transmission .....7-12
- [N]  
Network diagnosis  
  Error history monitor.....8-12  
  Error history monitor details.....8-14  
  Network monitor details .....8-9  
  Station order check test .....4-32  
  Communication test .....4-33  
  Host information .....8-5  
  Setup confirmation test .....4-31  
  Other station information .....8-7  
  Loop test.....4-30  
Network setting  
  Starting I/O No.....5-6  
  Network No.....5-6  
  Total stations .....5-6  
Network test  
  Stopping/restarting the cyclic  
  transmission .....7-16  
  Stopping link refreshing .....7-16
- [O]  
Operation mode  
  Online .....5-7  
  Offline .....5-7  
  Forward loop test .....5-7  
  Reverse loop test .....5-7  
Optical fiber cable .....3-4
- [P]  
Performance specifications  
  Coaxial cable system .....3-3  
  Optical loop system.....3-1
- [R]  
RAS function  
  Station detach function .....3-19  
  Automatic return function.....3-16  
  Diagnostic function.....3-22  
  Loopback function.....3-17  
READ instruction..... 6-17,6-18

RECV instruction .....	6-18
RECVS instruction .....	6-18
Redundant power supply .....	3-23
Refresh parameter .....	5-19
REMFR instruction .....	6-17,7-3
Remote I/O module .....	A-14
REMTO instruction .....	6-17,7-4
REQ instruction .....	6-18
Routing function .....	7-2
RRUN instruction.....	6-19
RSTOP instruction .....	6-19
RTMRD instruction .....	6-19
RTMWR instruction .....	6-20
[S]	
SEND instruction .....	6-18
Special register (SD) for remote I/O station .....	App-35
Special relay (SM) for remote I/O station .....	App-32
SREAD instruction .....	6-18
Supplementary settings .....	5-15
Switch setting	
Intelligent function module switch .....	7-15
Station number setting switch .....	4-2,4-5
Mode setting switch .....	4-2,4-5
SWRITE instruction.....	6-18
[T]	
Test	
Self-loopback test .....	4-12
Forward loop/reverse loop test .....	4-25
Internal self-loopback test .....	4-14
Hardware test .....	4-16
Transient transmission .....	7-2
[W]	
WRITE instruction .....	6-17,6-18
[Z]	
ZNRD instruction .....	6-19,App-2
ZNWR instruction .....	6-19,App-2
[Number]	
32-bit data guarantee .....	6-6

# WARRANTY

Please confirm the following product warranty details before using this product.

## 1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

### [Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

### [Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

## 2. Onerous repair term after discontinuation of production

(1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.

Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.

(2) Product supply (including repair parts) is not available after production is discontinued.

## 3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## 4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## 5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

## 6. Product application

- (1) In using the Mitsubishi MELSEC programmable controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the programmable controller applications.

In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable controller range of applications.

However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Microsoft, Windows, Windows NT, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Pentium is a trademark of Intel Corporation in the United States and other countries.

Ethernet is a trademark of Xerox Corporation.

All other company names and product names used in this manual are trademarks or registered trademarks of their respective companies.



# Q Corresponding MELSECNET/H Network System

## Reference Manual (Remote I/O network)

MODEL	Q-NET/H-R-I/O-E
MODEL CODE	13JF96
SH(NA)-080124-N(0809)MEE	



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.