

# MITSUBISHI


## CC-Link System Repeater (T-junction) Module

# User's Manual

AJ65SBT-RPT

Thank you for buying the Mitsubishi general-purpose programmable logic controller MELSEC series.

Prior to use, please read this manual thoroughly and familiarize yourself with the product

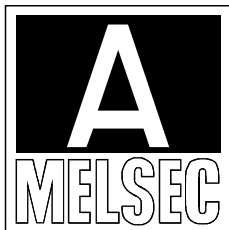

MODEL	AJ65SBT-RPT-U
MODEL CODE	13JQ81
IB(NA)-0800078-H(0708)MEE	

© 1999 MITSUBISHI ELECTRIC CORPORATION

## ● SAFETY PRECAUTIONS ●

(Read these precautions before using.)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment.

For the safety precautions of the programmable controller system, please read the user's manual of the CPU module to use.


These "SAFETY PRECAUTIONS" classify the safety precautions into two categories: "DANGER" and "CAUTION".

 DANGER

Procedures which may lead to a dangerous condition and cause death or serious injury, if not carried out properly.

 CAUTION

Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by  CAUTION may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

## [DESIGN PRECAUTIONS]

### DANGER

- Input/output could be switched on or off when a problem occurs in the repeater module.  
So build an external monitoring circuit that will monitor any input/output signals that could cause a serious accident.

### CAUTION

- Use the PLC in the environment that meets the general specifications contained in this Manual.  
Using the PLC outside the range of the general specifications may result in electric shock, fire or malfunction, or may damage or degrade the module.
- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. It may cause malfunction due to noise interference. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables.

## [INSTALLATION PRECAUTIONS]

### CAUTION

- Do not directly touch the module's conductive parts or electronic components.  
Doing so may cause malfunctions or failure of the module.
- Tighten the module securely using DIN rail or installation screws within the specified torque range.  
Loose terminal screws may cause falling, short circuit or erroneous operation.  
If the terminal screws are too tight, it may cause falling or short circuit due to damage of the screws.

## [WIRING PRECAUTIONS]

### DANGER

- Be sure to shut off all phases of the external power supply used by the system before installation or wiring. If the power is not disconnected at all phases an electric shock or product damage may result.

### CAUTION

- Always ground the FG terminal to the protective ground conductor.  
Otherwise there will be an electric shock or misoperation.
- Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50N·cm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from the rating or mis-wiring may cause fire and/or trouble.

## [WIRING PRECAUTIONS]

### CAUTION

- Fix terminal screws securely with the specified torque.  
Loose terminal screws may cause short circuit or malfunction.  
If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws or module.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips.  
It may cause fire, trouble or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module.  
Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other.  
Failure to do so may cause malfunctions due to noise.
- When disconnecting a cable from the module, do not pull on the cable itself.  
Before disconnecting the cable from the terminal block, loosen off the screws of the terminal block.  
If you pull the cable connected to the module, the module or cable can be damaged or misoperation can occur due to cable connection fault.

## [STARTUP AND MAINTENANCE PRECAUTIONS]

### DANGER

- Do not touch terminals when the power is on.  
It may cause an electric shock or malfunction.

### CAUTION

- Never try to disassemble or modify module.  
It may cause trouble, malfunction, injury or fire.
- Do not drop or apply any strong impact to the module.  
Doing so may damage the module.
- Be sure to shut off all phases of the external power supply used by the system before cleaning or retightening the terminal screws. If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Be sure to shut off all phases of the external power supply used by the system before mounting or dismounting the module to or from the panel.  
If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Do not install/remove the terminal block more than 50 times after the first use of the product. (IEC 61131-2 compliant)
- Before handling the module, always touch grounded metal, etc. to discharge static electricity from the human body.  
Failure to do so can cause the module to fail or malfunction.

[DISPOSAL PRECAUTIONS]



CAUTION

- When disposing of this product, treat it as industrial waste.

## REVISIONS

\* The manual number is given on the bottom right of the top cover.

Print Date	* Manual Number	Revision
Oct., 1999	IB (NA)-0800078-A	First edition (Japanese only)
Nov., 1999	IB (NA)-0800078-B	English is added.
Feb., 2000	IB (NA)-0800078-C	<u>Correction</u> Section 3.2, Chapter 5
Feb., 2005	IB (NA)-0800078-D	<u>Addition</u> Conformation to the EMC Directive and Low Voltage Instruction, Section 2.2 <u>Correction</u> SAFETY PRECAUTIONS, About the Manuals, Abbreviated names, generic names and terms, Product structure, Chapter 1, Section 1.1, 2.1, 2.3, 3.1, 3.2, 3.3, 3.4, 4.1, 4.2.1, 4.2.2, 4.3, 4.4, 4.6, 4.7, 4.8, Chapter 5, Chapter 6
Mar., 2006	IB (NA)-0800078-E	<u>Correction</u> REVISIONS, Conformation to the EMC Directive and Low Voltage Instruction, Section 2.2, 2.3
Sep., 2006	IB (NA)-0800078-F	<u>Correction</u> SAFETY PRECAUTIONS
Dec., 2006	IB (NA)-0800078-G	<u>Correction</u> About the Manuals, Abbreviated names, generic names and terms, Section 2.3, 3.2, 3.3, 4.2.1
Aug., 2007	IB (NA)-0800078-H	<u>Correction</u> Section 4.3, Chapter 6

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

1. OVERVIEW.....	1
1.1 Features.....	1
2. SYSTEM CONFIGURATION.....	3
2.1 Total configuration.....	3
2.2 Checking hardware versions.....	4
2.3 Cautions on system configuration.....	4
3. SPECIFICATIONS.....	11
3.1 General specifications.....	11
3.2 Performance specifications.....	12
3.3 Specifications of connection cables.....	12
3.4 Max. transmission distance.....	13
4. PROCEDURE UP TO START OF DATA LINK.....	14
4.1 Procedure up to start of data link.....	14
4.2 Mounting and installation.....	14
4.2.1 Cautions on handling.....	14
4.2.2 Installation environment.....	17
4.3 Names and settings of parts.....	18
4.4 Check of module state (Hardware test).....	20
4.5 Setting of switches.....	21
4.6 Installation and removal of protective cover.....	22
4.7 Connection of module through CC-Link dedicated cable.....	23
4.8 Check for state of connection (Line test).....	24
5. TROUBLESHOOTING.....	26
6. EXTERNAL DIMENSIONS.....	30

## About the Manuals

The following manuals are related to this product.  
Referring to this list, please request the necessary manuals.

### Related manuals

Manual Name	Manual Number (Model Code)
CC-Link System Master/Local Module Type AJ61BT11, A1SJ61BT11 User's Manual	IB(NA)-66721 (13J872)
CC-Link System Master/Local Module Type AJ61QBT11, A1SJ61QBT11 User's Manual	IB(NA)-66722 (13J873)
CC-Link System Master Local Module User's Manual QJ61BT11N	SH(NA)-080394E (13JR64)
CC-Link System Optical Repeater Module User's Manual AJ65SBT-RPS/RPG	IB(NA)-0800089 (13JQ85)
CC-Link System Space Optical Repeater Module User's Manual AJ65BT-RPI-10A/AJ65BT-RPI-10B	IB(NA)-0800090 (13JQ86)
CC-Link System Low Profile Waterproof Type Repeater Hub Module User's Manual AJ65FBTA-RPH	IB(NA)-0800288 (13JP55)
CC-Link System Spring Clamp Terminal Block Type Repeater Hub Module User's Manual AJ65BTS-RPH	IB(NA)-0800346 (13JP97)

### Conformation to the EMC Directive and Low Voltage Instruction

When incorporating a Mitsubishi PLC that is compliant with the EMC and low voltage directives into any other product and ensuring compliance with these directives, refer to Chapter 3 "EMC and Low Voltage Directives" of the User's Manual (Hardware) for the PLC CPU included with the CPU module or base unit.

A module compliant with the EMC and low voltage directives bears a CE mark logo printed on the rating plate.

To make this product compliant with the EMC and low voltage directives, refer to "CC-Link module" in Chapter 3 "EMC and Low Voltage Directives" of the User's Manual (Hardware) for the CPU module.

## Abbreviated names, generic names and terms

### Abbreviated names, generic names and terms Description

Abbreviated names, generic names and terms	Description
AJ65SBT-RPT	Abbreviation of AJ65SBT-RPT type CC-Link system repeater (T-junction) module.
AJ65FBTA-RPH	Abbreviation of AJ65FBTA-RPH type CC-Link system low profile waterproof type repeater module.
AJ65BTS-RPH	Abbreviation of AJ65BTS-RPH type CC-Link system spring clamp terminal block type repeater hub module.
AJ65SBT-RPS/RPG	Abbreviation of AJ65SBT-RPS/AJ65SBT-RPG type CC-Link system optical repeater module.
AJ65BT-RPI-10A/10B	Abbreviation of AJ65BT-RPI-10A/AJ65BT-RPI-10B type CC-Link system space optical repeater module.
Master station	Station to control the data link system. One station is required for each system.
Local station	Station which has a sequencer CPU and can communicate with the master station and the other local stations.
Remote I/O station	Remote station processing only information in unit of bit. (AJ65BTB1-16D, AJ65SBTB1-16D, AJ65SBTB1-8□, etc.)
Remote device station	Remote station processing only information in unit of bit and in unit of word. (AJ65BT-64AD, AJ65BT-64DAV, AJ65BT-64DAI, etc.)
Remote station	Generic name of remote I/O station and remote device station. Controlled by the master station.
Intelligent device station	Station allowing transient transmission such as AJ65BT-R2. (Including local stations)
Standby master station	Backup station for data link control when the link to the master station is disconnected due to a PLC CPU or power supply problem.
Master local module	Generic name of QJ61BT11N, QJ61BT11, AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11.
Master module	Generic name of QJ61BT11N, QJ61BT11, AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11 when these are used as the master station.
Local module	Generic name of QJ61BT11N, QJ61BT11, AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11 when these are used as the local station.
Remote module	Generic name of AJ65BTB1-16D, AJ65SBTB1-16D, AJ65BT-64AD, AJ65BT-64DAV, AJ65BT-64DAI and A852GOT.
Intelligent device module	Module allowing transient transmission such as AJ65BT-R2.
Segment	System between terminating resistors connected to each other through cross-over cables. The conventional CC-Link system can be said to be configured with one segment (See Section 2.1.).
Repeater	Module for expanding the CC-Link system by connecting the segments to each other.

## Product structure

The product structure of AJ65SBT-RPT is given in the table below.

Part name	Quantity
AJ65SBT-RPT module	1
Terminating resistor 110Ω 1/2W (Brown, Brown, Brown)	2
Terminating resistor 130Ω 1/2W (Brown, Orange, Brown)	2



# 1. OVERVIEW

This User's Manual describes the specifications, names of parts, and settings of the AJ65SBT-RPT type CC-Link system repeater (T-junction) module (hereafter abbreviated as AJ65SBT-RPT) used in the CC-Link system.

## 1.1 Features


The AJ65SBT-RPT module is used to increase the flexibility of laying down the cables of the CC-Link system.

Use of this module enables the transmission distance of the CC-Link system to be extended and the wiring to be laid down in the form of T-junction.

### (1) Extended transmission distance in CC-Link system

Use of this module enables the transmission distance of the CC-Link system to be extended.

In addition, use of multiple modules enables the transmission distance of the CC-Link system to be extended up to 10 stages.

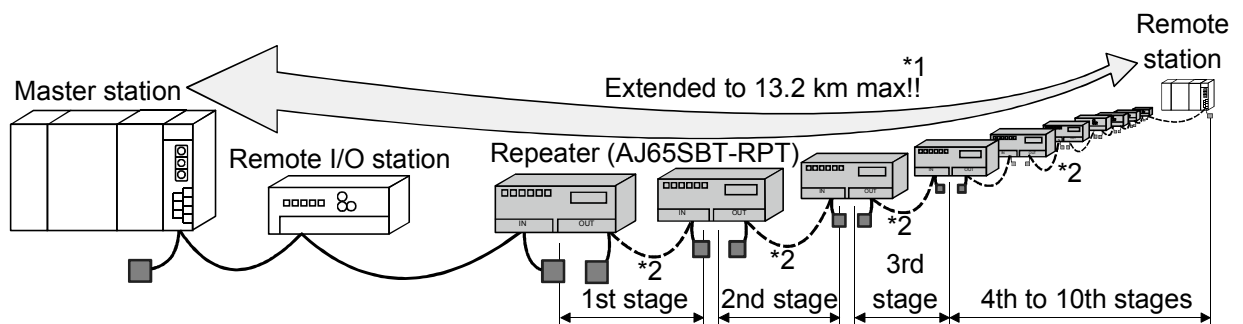


\*1 Max. transmission distance at a transmission speed of 156 kbps.

\*2 Though it is not shown here, the other remote stations can be connected between the repeaters.

### (2) Enabled T-junction wiring in CC-Link system

Arrangement of this module between the modules of the CC-Link system enables the CC-Link system to be wired in the form of T-junction. This is applicable to all CC-Link systems operating at transmission speeds of 10 Mbps, 5 Mbps, 2.5 Mbps, 625 kbps and 156 kbps.

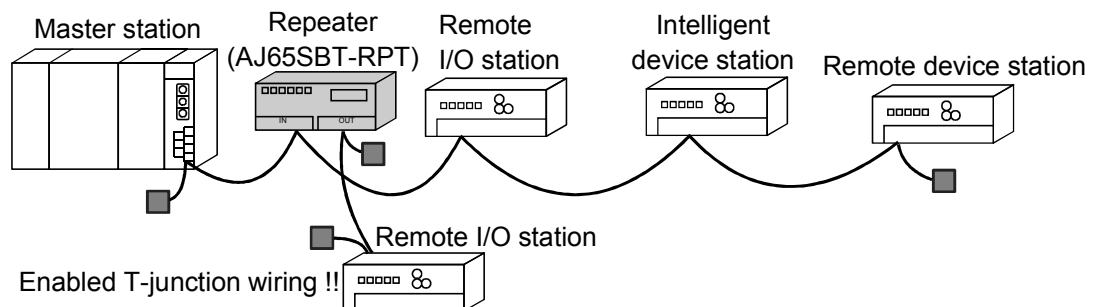


### (3) Mountable to control panel with either screws or DIN rail

This module can be mounted onto the control panel with either screws or DIN rail.

(4) Compact module size

The module size has been reduced to the same one as that of AJ65SBTB1-8 □ type small remote I/O module.

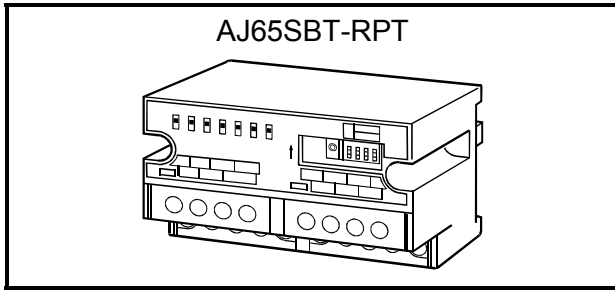


Item	Size
Height	50.0 mm (1.97 inch)
Width	87.3 mm (3.44 inch)
Depth	40.0 mm (1.58 inch)

## 2. SYSTEM CONFIGURATION


### 2.1 Total configuration

The total configuration employed when the AJ65SBT-RPT module is used is as shown below.

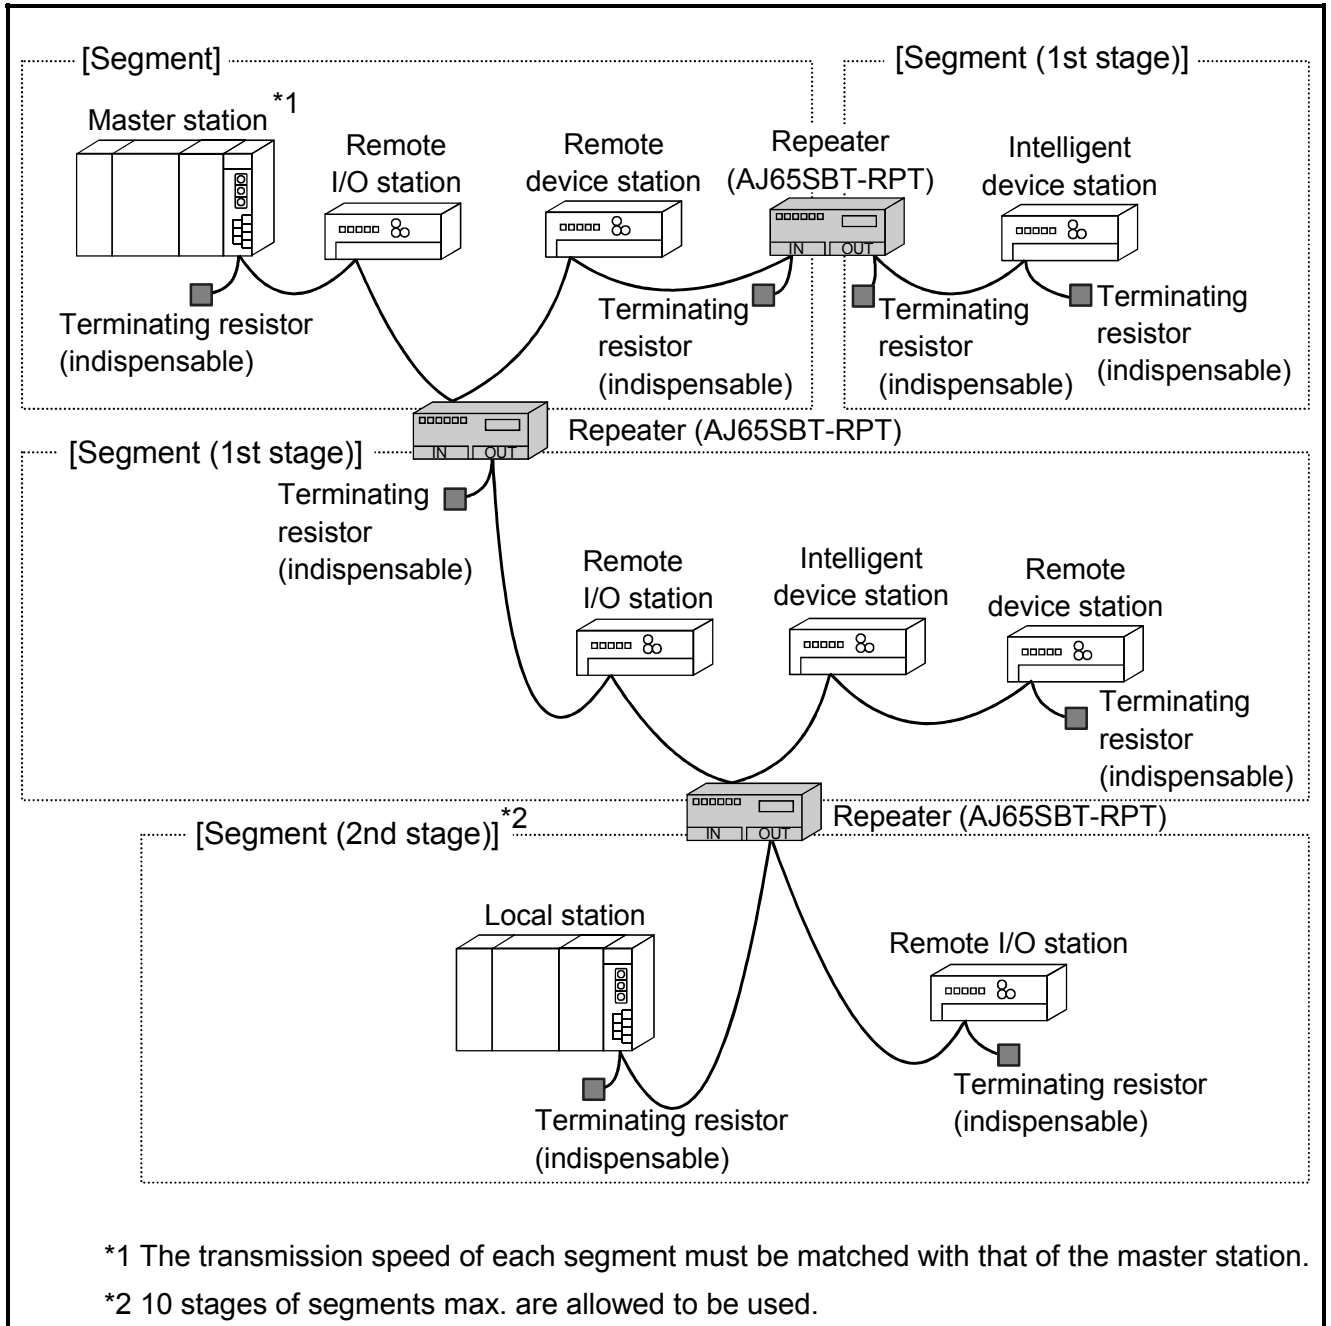

## 2.2 Checking hardware versions

The hardware versions of the AJ65SBT-RPT can be checked on the DATE section on the rating plate, which is situated on the side on the module.

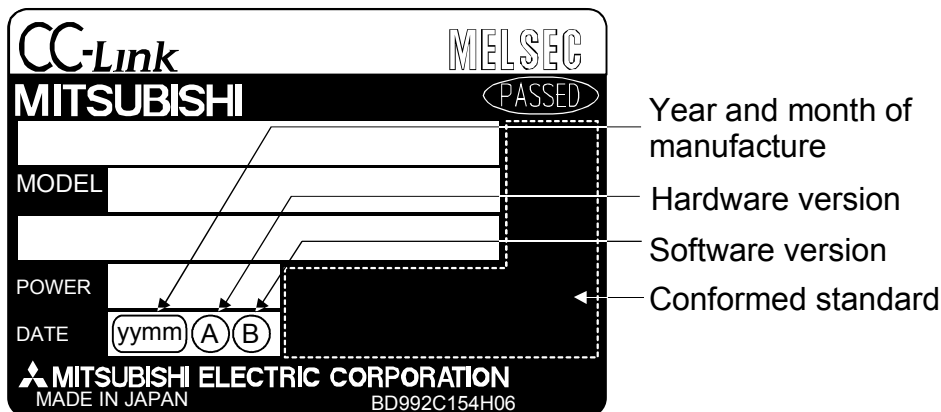


## 2.3 Cautions on system configuration

### (1) Conditions of usable master module


When the AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11 modules are used, those of the functional version B or later must be employed. Use the master module bearing the version 9707 B or later in the DATE column of the name plate as shown in the figure below.

When the QJ61BT11N, QJ61BT11 module is used, any module can be used irrespective of the version.


#### (a) Rating plate of AJ61BT11 or AJ61QBT11

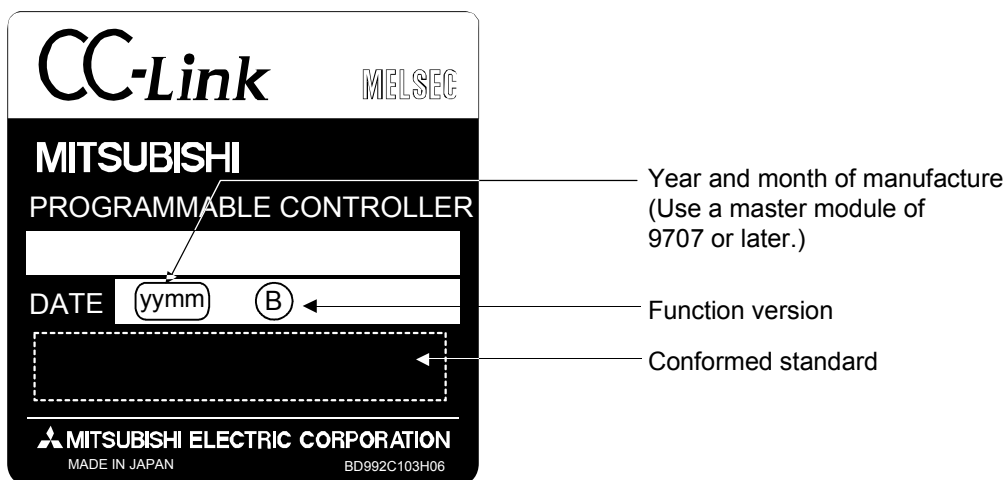

(b) Rating plate of A1SJ61BT11 or A1SJ61QBT11

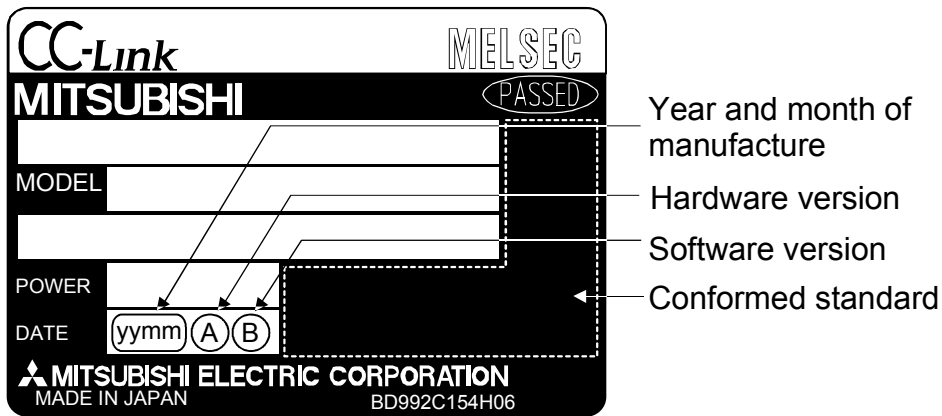

- (2) Max. number of modules connected to configure CC-Link system  
 Up to 64 modules of repeaters can be connected in one segment.  
 In the CC-Link system where repeaters are used, also the number of remote stations capable of being controlled by one master station is the same as in the other systems.  
 For details, refer to the User's Manual of the applicable master module.
- (3) Max. number of stages connected to configure segment  
 Use of this module enables communication between the master station located in a segment and a remote station located in a segment apart by 10 stages max. from the segment where the master station exists.

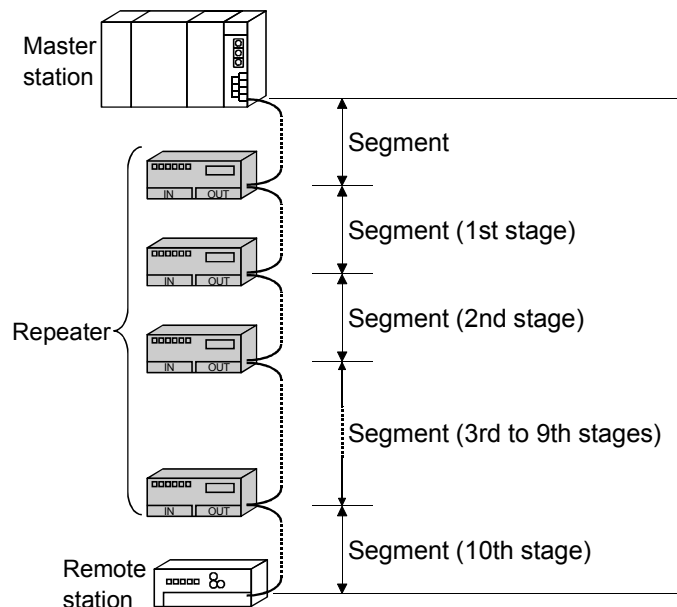

(4) Instructions for using different models of repeaters in combination


Note that when combining the repeaters of different models, there are the following restrictions on the number of connectable repeaters and the number of connected stages.

Combination pattern	Max. number of repeaters						Max. number of stages
	AJ65BTS -RPH	AJ65FBT A-RPH	AJ65SBT -RPH	AJ65SBT -RPS	AJ65SBT -RPG	AJ65BT -RPI -10A/10B	
1)	1	—	2	—	—	—	3
	—	1	2	—	—	—	
2)	1	—	—	2(1set)	—	—	2
	1	—	—	—	2(1 set)	—	
	—	1	—	2(1 set)	—	—	
	—	1	—	—	2(1 set)	—	
3)	1	—	—	—	—	2(1 set)	2
	—	1	—	—	—	2(1 set)	
4)	—	—	2	4(2 set)	—	—	4
5)	—	—	2	—	2(1 set)	—	3
6)	—	—	2	—	—	2(1 set)	
7)	—	—	—	2(1 set)	2(1 set)	—	2
8)	—	—	—	2(1 set)	—	2(1 set)	
	—	—	—	—	2(1 set)	2(1 set)	
9)	1	1	—	—	—	—	


POINT

- For the CC-Link system, up to 2 repeater types can be used in combination. Using 3 models or more is not allowed.
  - When repeaters are connected in the same segment by link wiring, up to 64 modules can be connected.
- For details, refer to the user's manual of the master module used.


Ex.) A CC-Link system with combination pattern 6) is built

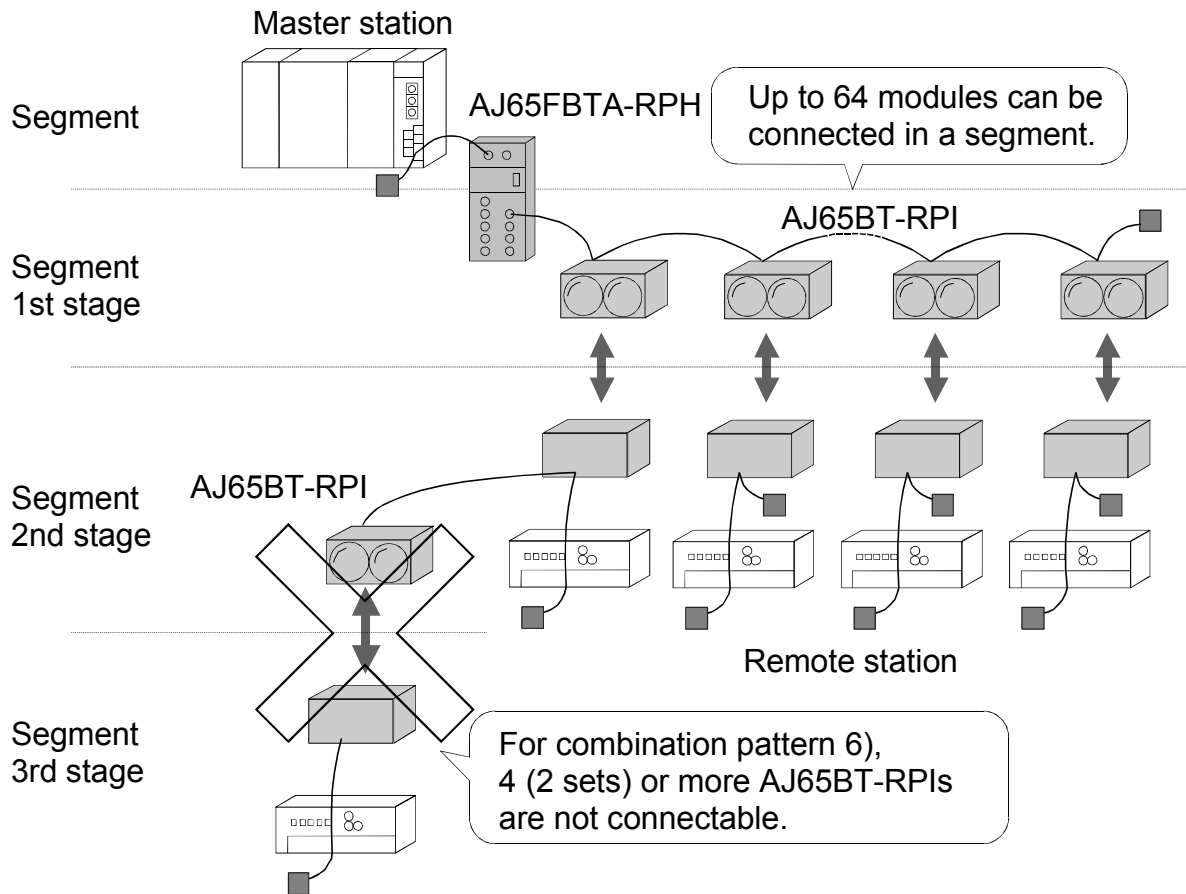


(a) Combination pattern 1)

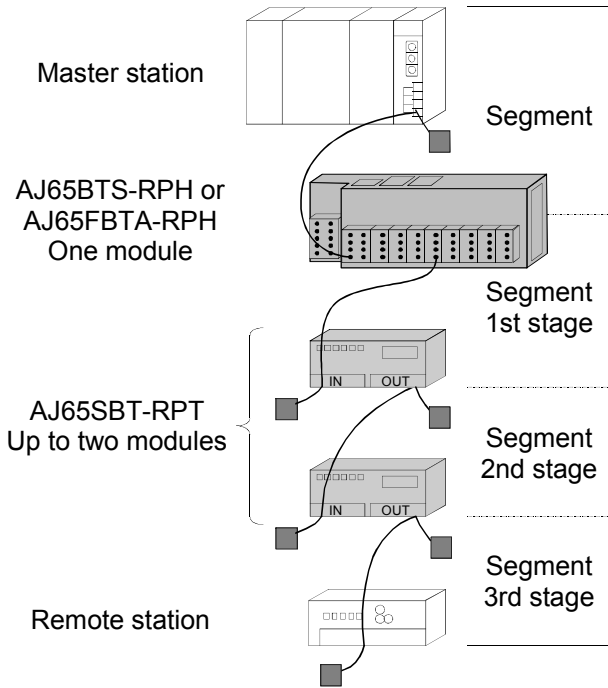


(c) Combination pattern 3)

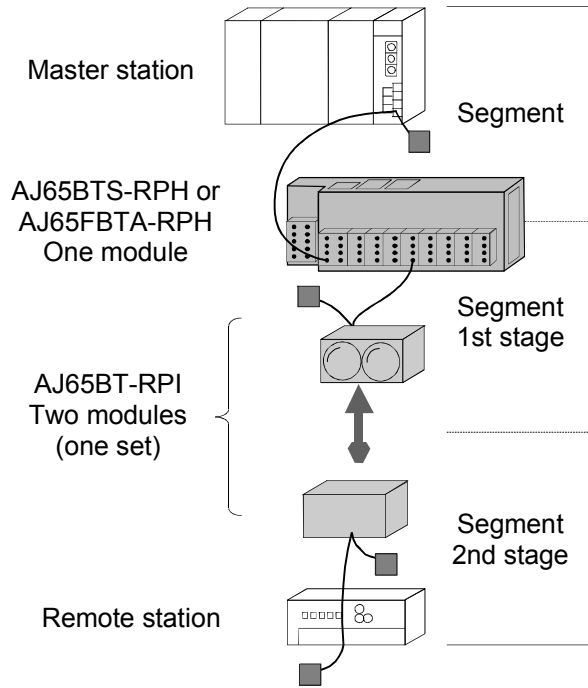

(b) Combination pattern 2)

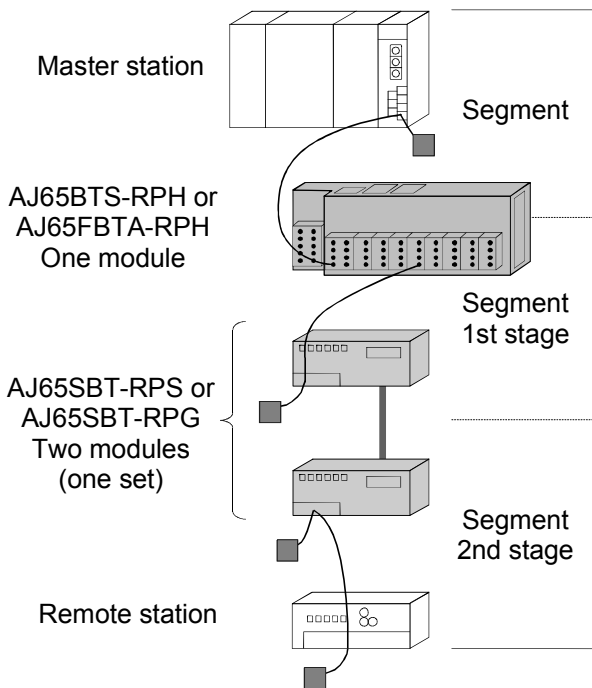


(d) Combination pattern 4)

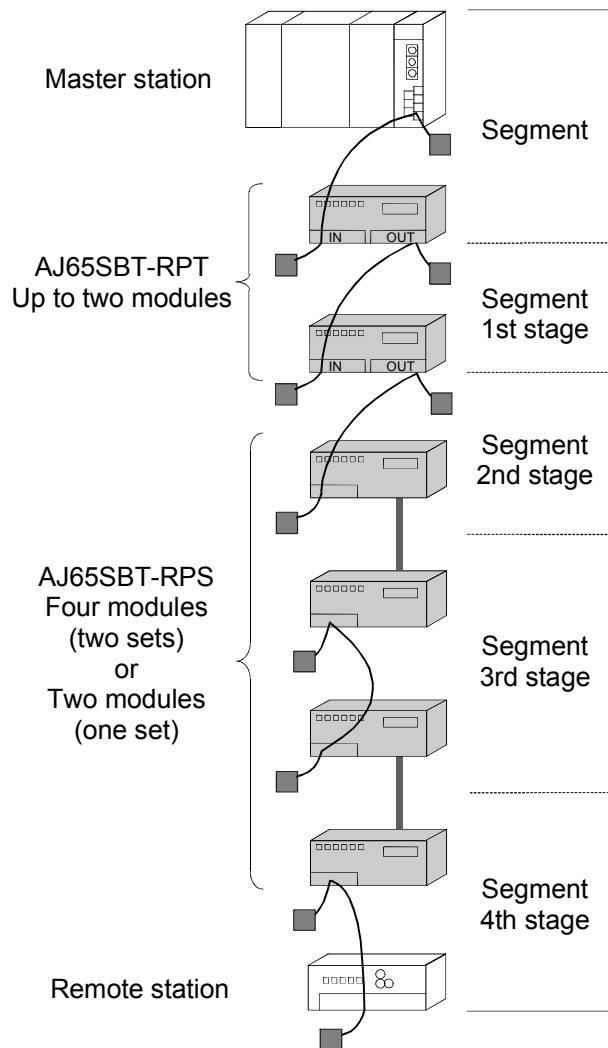





(e) Combination pattern 5)

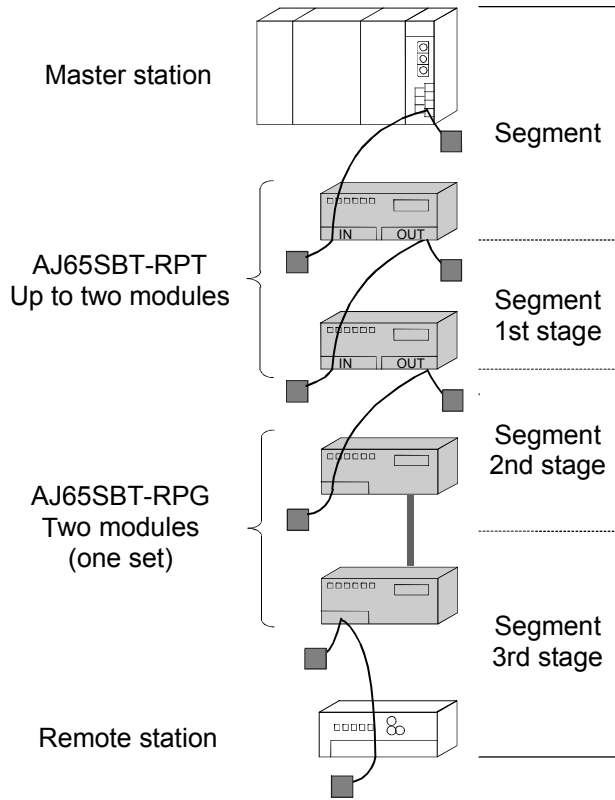


(g) Combination pattern 7)

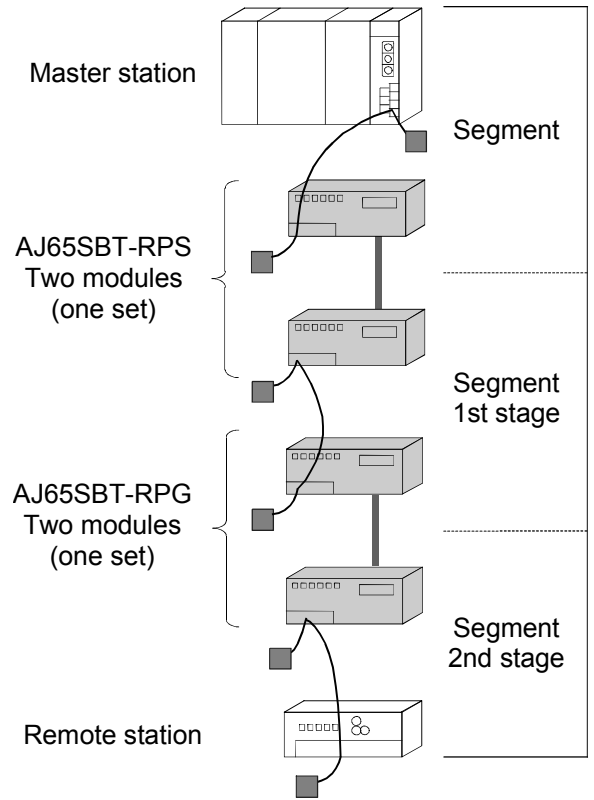


(f) Combination pattern 6)

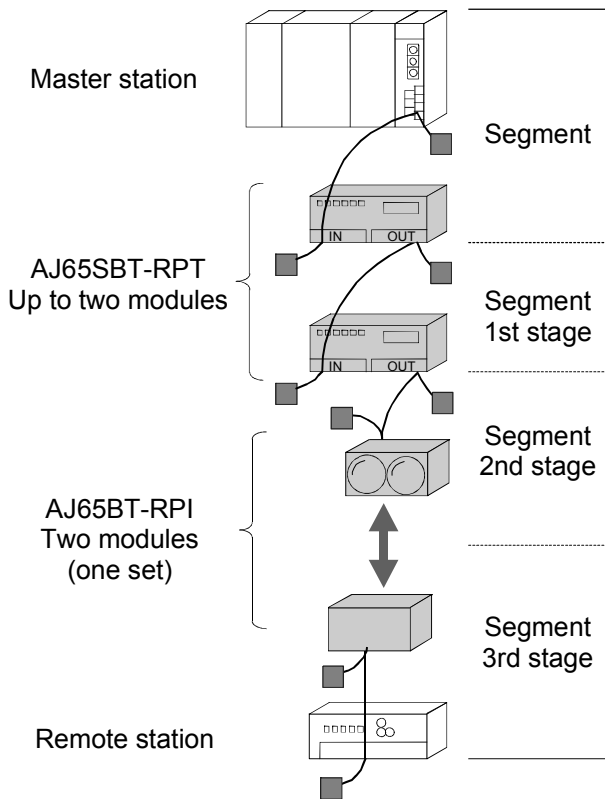

(h) Combination pattern 8)

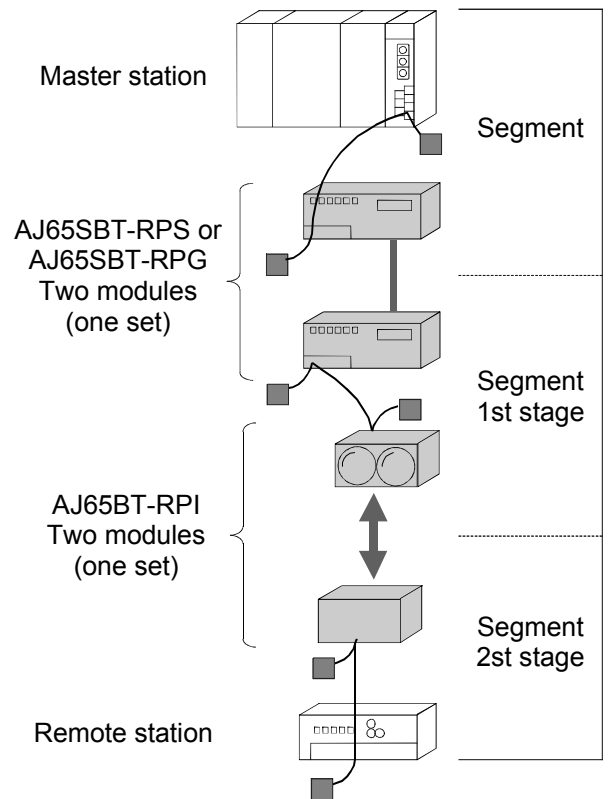

(i) Combination pattern 9)

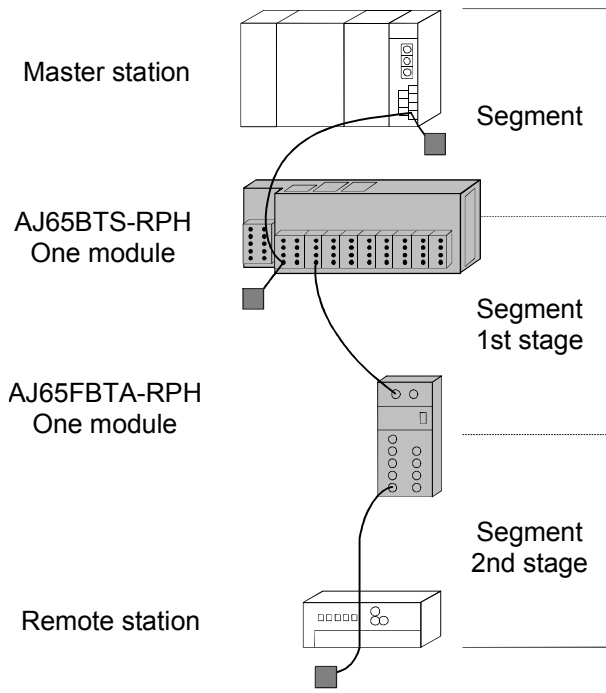

### 3. SPECIFICATIONS

#### 3.1 General specifications

The general specifications of the AJ65SBT-RPT are shown below.

Item	Specifications					
Operating ambient temperature	0 to 55 °C					
Storage ambient temperature	-20 to 75 °C					
Operating ambient humidity	10 to 90 % RH, No condensation					
Storage ambient humidity	10 to 90 % RH, No condensation					
Vibration resistance	Conforming to JIS B 3502, IEC 61132-2		Frequency	Acceleration	Amplitude	Sweep Count
		When there is intermittent vibration	10 to 57 Hz	—	0.075 mm	10 times each in X, Y and Z axis (80 minutes)
			57 to 150 Hz	9.8 m/s <sup>2</sup>	—	
		When there is continuous vibration	10 to 57 Hz	—	0.035 mm	
57 to 150 Hz	4.9 m/s <sup>2</sup>		—			
Shock resistance	Conforming to JIS B 3502, IEC 61131-2 (147 m/s <sup>2</sup> , 3 times each in 3 directions X, Y, Z)					
Operating environment	No corrosive gas present					
Operating height *3	2000 m(6562 ft) or less					
Installation area	On the control board *4					
Over-voltage category *1	II or less					
Pollution rate *2	2 or less					

- \*1 Indicates the location where the device is connected from the public cable network to the device structure wiring area.  
Category II applies to the devices to which the power is supplied from a fixed equipment.  
Surge withstand voltage for devices with up to 300 V of rated voltage is 2500 V.
- \*2 This is an index which indicates the degree of conductive object generation in the environment Pollution level 2 is when only non-conductive pollution occurs.  
A temporary conductivity caused by condensation must be expected occasionally.
- \*3 Do not use or store the PLC in the environment where the pressure is higher than the atmospheric pressure at sea level. Otherwise, malfunction may result. To use the PLC in high-pressure environment, contact your nearest Mitsubishi representative.
- \*4 It can also be used in an environment other than on the control panel if the conditions such as usage ambient temperature and humidity are satisfied.

### 3.2 Performance specifications

The performance specifications of the AJ65SBT-RPT module are shown below.

Item		Specifications	
Transmission speed		Selectable from among 156kbps, 625kbps, 2.5Mbps, 5Mbps and 10Mbps	
Max. number of stages connected to configure segment		AJ65SBT-RPT only (Refer to Section 2.3(3))	10 stage
		Combination of AJ65SBT-RPT and AJ65SBT-RPS (Refer to Section 2.3.(4))	4 stage
		Combination of AJ65SBT-RPT and one of AJ65FBTA-RPH, AJ65BTS-RPH, AJ65SBT-RPG, or AJ65BT-RPI (Refer to Section 2.3(4))	3 stage
Max. transmission distance of each segment		Varies according to transmission speed (Refer to Section 3.4.).	
Max. number of modules connected		64 (Refer to Section 2.3 regarding the conditions for the number of modules connected).	
Number of stations occupied		0 (none)	
Settable station number		None	
Repeater power supply	Voltage	20.4 to 26.4 V DC	
	Current	60.0 mA (TYP. 24 V DC)	
Noise durability		Simulator noise of 500 Vp-p, obtained by a noise simulator using noise width of 1 $\mu$ s and noise frequency of 25 to 60 Hz	
Maximum voltage		500V AC for 1 minute between all DC external terminals and ground	
Insulation resistance		10M $\Omega$ or higher, measured with a 500V DC insulation resistance tester	
Weight		0.2 kg	
External connection	Communication area, module power supply	7-point 2-piece terminal block [transmission circuit, module power supply, FG] M3 $\times$ 5.2 Tightening torque: 59 to 88N·cm Applicable solderless terminals: 2 max.	
Applicable solderless terminals		<ul style="list-style-type: none"> <li>• RAV1.25-3 (conforming to JIS C 2805) [Applicable wire size: 0.3 to 1.25mm<sup>2</sup>]</li> <li>• V2-MS3, RAP2-3SL, TGV2-3N [Applicable wire size: 1.25 to 2.0mm<sup>2</sup>]</li> </ul>	

### 3.3 Specifications of connection cables

Use the CC-Link dedicated cables for the CC-Link system. If cable other than the CC-Link dedicated cable is used, the performance of the CC-Link system cannot be guaranteed.


For the specifications of the CC-Link dedicated cables or any other inquiries, visit the following site:

CC-Link Partner Association website: <http://www.cc-link.org/>

#### **REMARK**

For details, refer to the CC-Link cable wiring manual issued by the CC-Link Partner Association.

### 3.4 Max. transmission distance

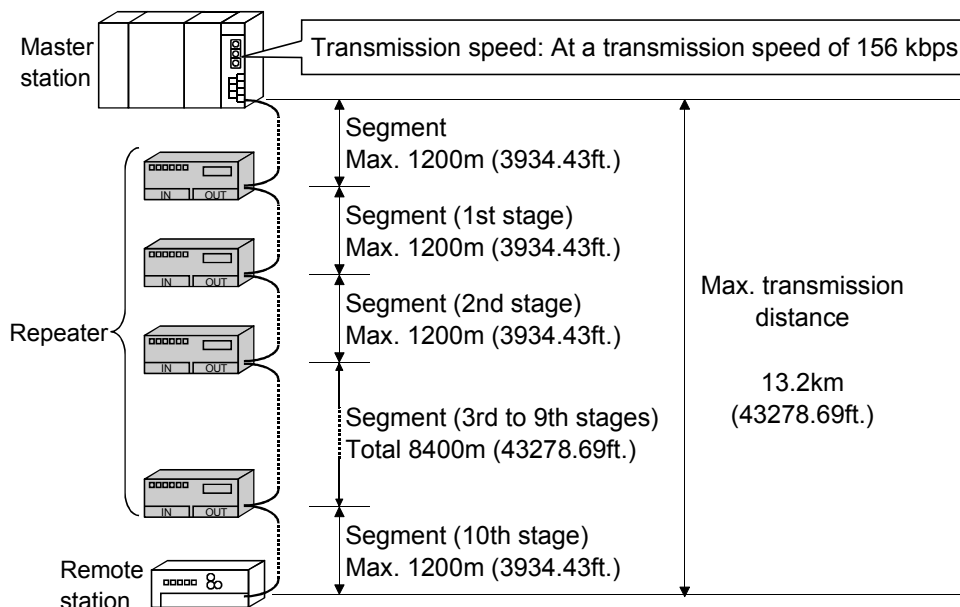


Conditions	Description
Transmission speed	<p>The maximum transmission distance in each segment is the same as that in normal CC-Link system (system configured with one segment only).</p> <p>The maximum transmission distance in each segment varies according to the transmission speed.</p> <p>For details, refer to the User's Manual of the applicable master module. (The length of the cables between repeater stations is treated in the same manner as in the remote I/O station.)</p>
Max. number of stages connected to configure segment	<p>When one connection stage is added, the maximum transmission distance is added by an amount equivalent to one segment.</p>

## 4. PROCEDURE UP TO START OF DATA LINK

### 4.1 Procedure up to start of data link

The procedure ranging from the installation of the AJ65SBT-RPT module to the start of data link is described below.

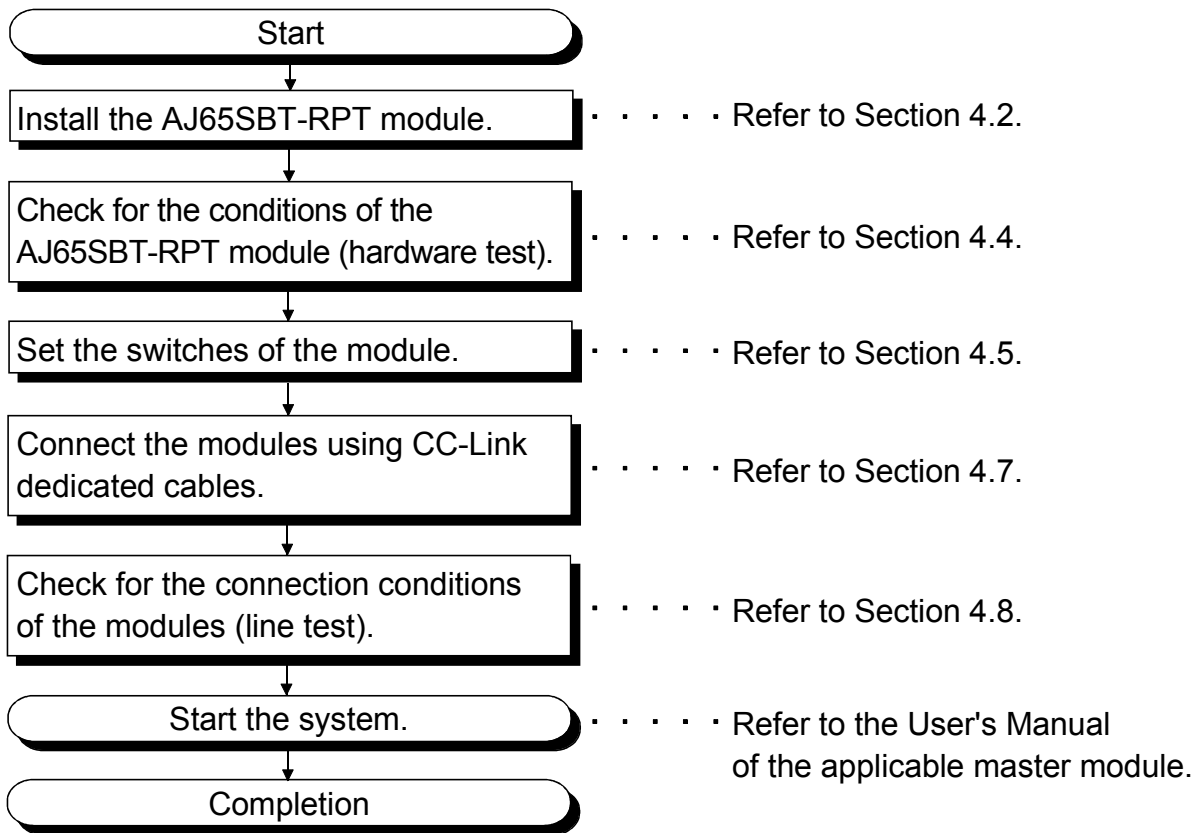

#### POINT

The procedure described here is for the AJ65SBT-RPT module only. In order for you to understand the procedure of the entire CC-Link system, refer to the User's Manual of the applicable master module.

### 4.2 Mounting and installation

#### 4.2.1 Cautions on handling

Cautions on handling the AJ65SBT-RPT module are described below.

#### ⚠ DANGER

- Be sure to shut off all phases of the external power supply used by the system before installation or wiring. If the power is not disconnected at all phases an electric shock or product damage may result.
- Do not touch terminals when the power is on. It may cause an electric shock or malfunction.

 CAUTION

- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. It may cause malfunction due to noise interference. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables.
- Do not directly touch the module's conductive parts or electronic components.  
Doing so may cause malfunctions or failure of the module.
- Tighten the module securely using DIN rail or installation screws within the specified torque range.  
Loose terminal screws may cause falling, short circuit or erroneous operation.  
If the terminal screws are too tight, it may cause falling or short circuit due to damage of the screws.
- Fix terminal screws securely with the specified torque.  
Loose terminal screws may cause short circuit or erroneous operation.  
If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws or module.
- Always ground the FG terminal to the protective ground conductor.  
Otherwise there will be an electric shock or misoperation.
- Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50N·cm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from the rating or mis-wiring may cause fire and/or trouble.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips.  
It may cause fire, trouble or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module.  
Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other.  
Failure to do so may cause malfunctions due to noise.
- When disconnecting a cable from the module, do not pull on the cable itself.  
Before disconnecting the cable from the terminal block, loosen off the screws of the terminal block.  
If you pull the cable connected to the module, the module or cable can be damaged or misoperation can occur due to cable connection fault.
- Never try to disassemble or modify the module.  
It may cause trouble, malfunction, injury or fire.
- Do not drop or apply any strong impact to the module.  
Doing so may damage the module.


 **CAUTION**

- Be sure to shut off all phases of the external power supply used by the system before mounting or dismounting the module to or from the panel. If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Be sure to shut off all phases of the external power supply used by the system before cleaning or retightening the terminal screws. If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Do not install/remove the terminal block more than 50 times after the first use of the product. (IEC 61131-2 compliant)
- Before handling the module, always touch grounded metal, etc. to discharge static electricity from the human body. Failure to do so can cause the module to fail or malfunction.
- When disposing of this product, treat it as industrial waste.

- (1) Tighten the module fixing screws and terminal block screws to those torques specified below.  
Do not over-tighten these screws. The screws and module case may be damaged.


Screw location	Specified torque range
Module fixing screw (M4 thread with finished circular flat washer)	78 to 108 N · cm
Terminal block screw (M3 thread)	59 to 88 N · cm
Terminal block mounting screw (M3.5 thread)	68 to 98 N · cm

- (2) A protective film is attached on the module's surface for the purpose of scratch prevention during transportation. Prior to use, be sure to remove it.
- (3) When a DIN rail is used, install it taking care with the following.
- (a) Applicable DIN rail type (conforming to IEC 60715)  
TH35-7.5Fe  
TH35-7.5A1
  - (b) Intervals of DIN rail mounting screws  
Mount the DIN rail by fixing it with mounting screws at intervals of 200 mm (7.87inch) or shorter.
- (4) To install the AJ65SBT-RPT module on the DIN rail, press, by the finger, the DIN rail hook located on the underside of the module at the centerline until you hear it click.

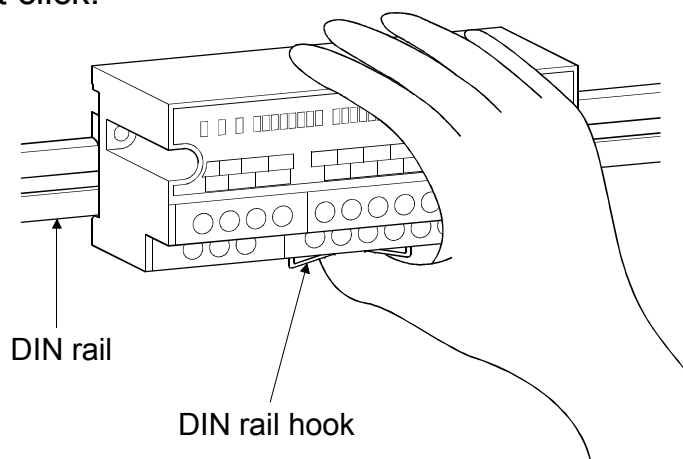



- (5) When installing the AJ65SBT-RPT module on the control panel, to improve the ventilation and facilitate the replacement of the module, provide a distance of 60 mm (2.36inch) or longer between the upper and lower surfaces of the module and the structural members or parts.
- (6) Install the AJ65SBT-RPT module on a flat smooth surface.  
If there are irregularities on the installation surface, undue force may be applied to the printed circuit boards, and the boards may be damaged.
- (7) Depending on the grounding condition of the system, a high-frequency noise may occur between the systems. When these systems are connected through CC-Link dedicated cables, a communication error may occur by the mixing of noise into the repeaters.  
If the high-frequency noise occurs between the systems connected through the cables of 10 m (32.79ft.) or shorter, take either of the measures specified below.
- Connect the systems through cables of 2 mm<sup>2</sup> or larger (across FG terminals of the remote station in each system, or across grounds of the control panel to which the remote station is grounded).
  - Use CC-Link cables of 10 m (32.79ft.) or longer between the systems.

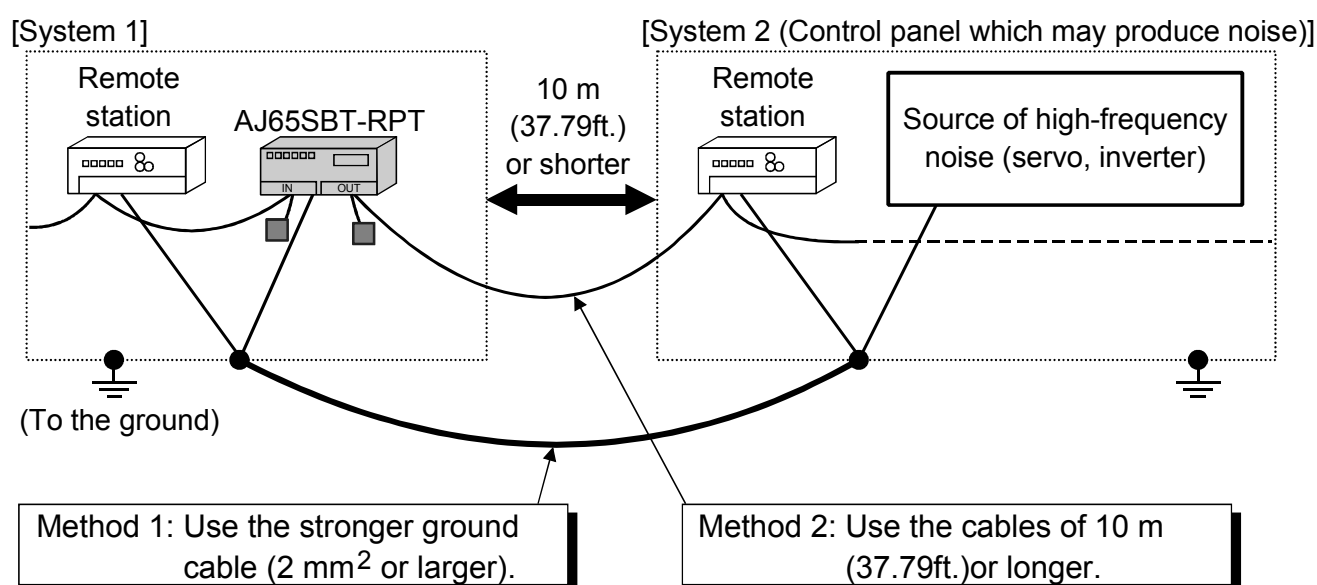


#### 4.2.2 Installation environment

For the installation environment, refer to section 3.1.

### 4.3 Names and settings of parts

The names of parts of the AJ65SBT-RPT module, indication statuses of LEDs, and settings of switches are described below.

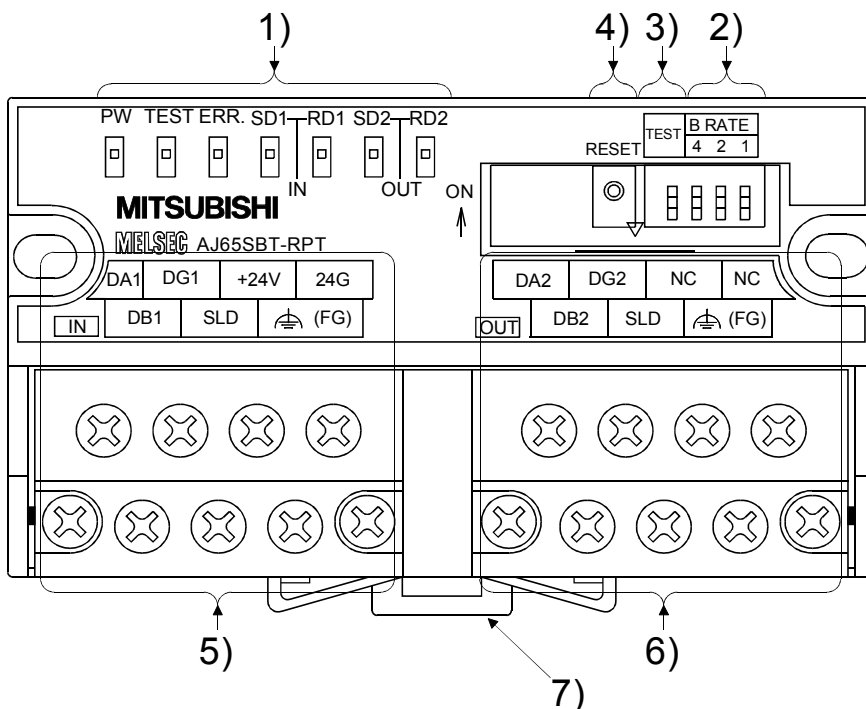

No.	Name	Application		
1)	Operation status display LED	Check for the module condition by observing the state of lighting of the LED.		
		LED Name	Application	
			For hardware test	For normal operation
		PW	Goes on: Power supply is turned ON. Goes off: Power supply is turned OFF or reset switch is pressed.	
		TEST	Goes on: Hardware test is under operation. Goes off: Communication is under operation.	
		ERR.	Goes on: Hardware is faulty. Switch set value is faulty. Flashes: Switch set value was changed during operation. Goes off: Normal	Goes on: Communication is faulty. Switch set value is faulty. Flashes: Switch set value was changed during operation. Goes off: Communication is normal.
		SD1	Flashes: Circuit is normal. Goes off: Circuit is faulty.	Goes on: Data is being transmitted to IN side. Goes off: Data is not transmitted to IN side.
		RD1	Flashes: Circuit on IN side is normal. Goes off: Circuit on IN side is faulty.	Goes on: Data is being received from IN side. Goes off: Data is not received from IN side.
		SD2	Flashes: Circuit is normal. Goes off: Circuit is faulty.	Goes on: Data is being transmitted to OUT side. Goes off: Data is not transmitted to OUT side.
RD2	Flashes: Circuit on OUT side is normal. Goes off: Circuit on OUT side is faulty.	Goes on: Data is being received from OUT side. Goes off: Data is not received from OUT side.		


No.	Name	Application				
2)	Transmission speed setting switch	Set the transmission speed of the module (set to 0 at the time of delivery).				
		Setting value	Setting switch status			Transmission speed
			4	2	1	
		0	OFF	OFF	OFF	156kbps
		1	OFF	OFF	ON	625kbps
		2	OFF	ON	OFF	2.5Mbps
		3	OFF	ON	ON	5Mbps
4	ON	OFF	OFF	10Mbps		
5 to 7	Cannot be set. If set to 5 to 7, the ERR. LED is turned on and data are not transferred.					
3)	Test switch	Set the operating condition of the module (set to OFF at the time of delivery).				
		State of switch		Operating state		
		ON		Hardware test		
OFF		Normal operation				
4)	Reset switch	Reset the module on the hardware side (set to OFF at the time of delivery).				
		State of switch		Operating state		
		ON		Hardware reset		
OFF		Normal operation				
5)	IN side terminal block	Terminal block for connecting the CC-Link dedicated cable on the side where the power supply and master station are located.				
6)	OUT side terminal block	Terminal block for connecting the CC-Link dedicated cable on the side where the master station is not located.				
7)	Hook for DIN rail	Hook for installing the module on the DIN rail. To install the module, press the DIN rail hook at the centerline until you hear it click.				

<b>POINT</b>	<p>The states of setting of the test switch and transmission speed set switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective.</p> <p>When the states of setting are changed with the module power supply turned ON, perform the above operations again.</p>
--------------	---

#### 4.4 Check of module state (Hardware test)

Check that the module operates normally using the module proper. Ensure to perform this check before configuring the system.

Perform the test in accordance with the steps shown below.

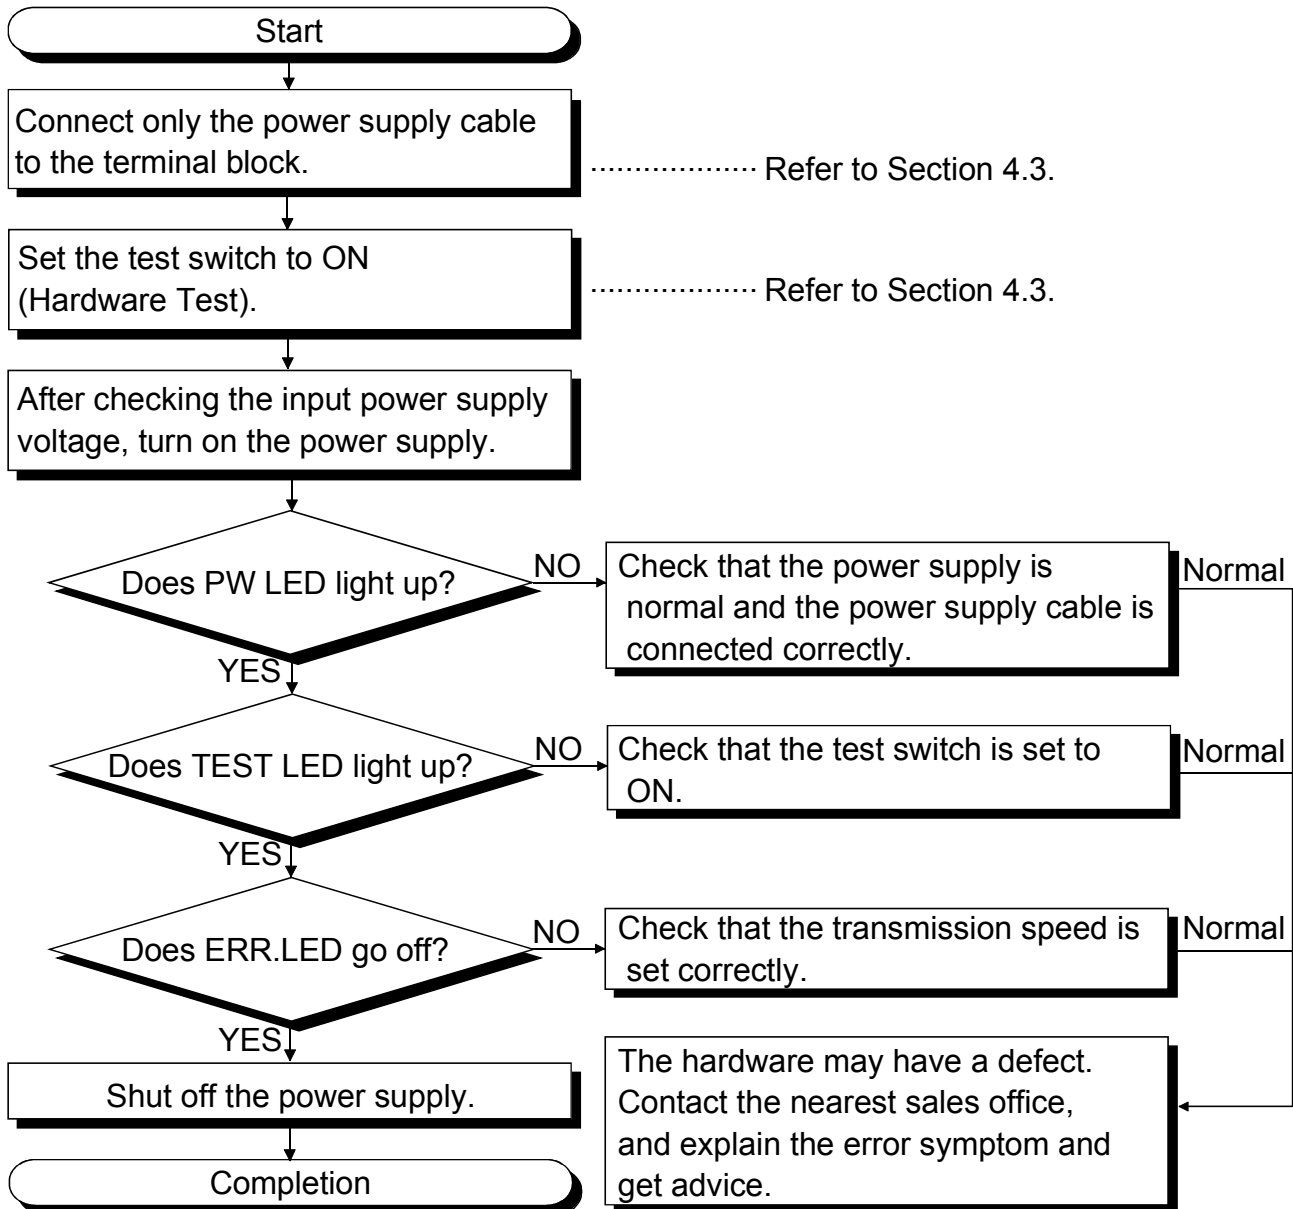

## 4.5 Setting of switches

The setting of the switches on the AJ65SBT-RPT module is described below.

### (1) Test switch

This switch is used to set the operating condition of the AJ65SBT-RPT module.

In normal operation, set it to OFF.

For detail of the setting, refer to Section 4.3.

POINT	
<p>The states of setting of the test switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective.</p>	
<p>When the states of setting are changed with the module power supply turned ON, perform the above operations again.</p>	

### (2) Transmission speed setting switch

This switch is used to set the transmission speed of the AJ65SBT-RPT module.

For detail of the setting, refer to Section 4.3.

POINT	
<ul style="list-style-type: none"><li>• Set to the same state of setting as set in the master station.</li><li>• The states of setting of the transmission speed setting switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective.</li></ul> <p>When the states of setting are changed with the module power supply turned ON, perform the above operations again.</p>	

## 4.6 Installation and removal of protective cover

A protective cover can be installed on the front surface of the AJ65SBT-RPT module to prevent foreign matter from entering the terminal blocks.


The protective cover applicable to the AJ65SBT-RPT module is specified below. Procure it as necessary.

Item	Type	Description	Remarks
Protective cover	A6CVR-8	Cover for prevention of entry of foreign matter into terminal blocks (sold in batches of 10).	Optional

To dismount and mount the protective cover on and from the AJ65SBT-RPT module, follow the steps below.


### (1) Mounting

With the upper section of the protective cover hooked to the upper end section of the module, press the lower section of the cover until you hear it click.

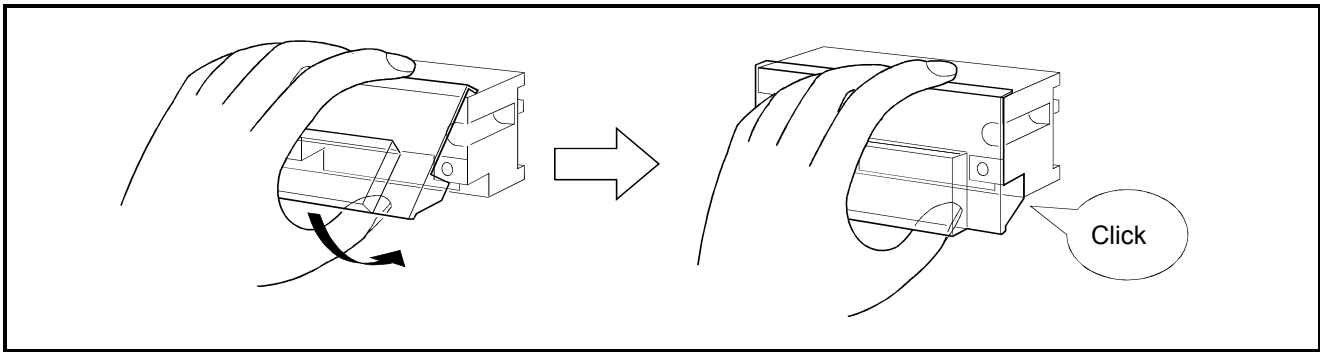


### (2) Dismounting

With the finger applied to the lower section of the protective cover, raise the cover upward.

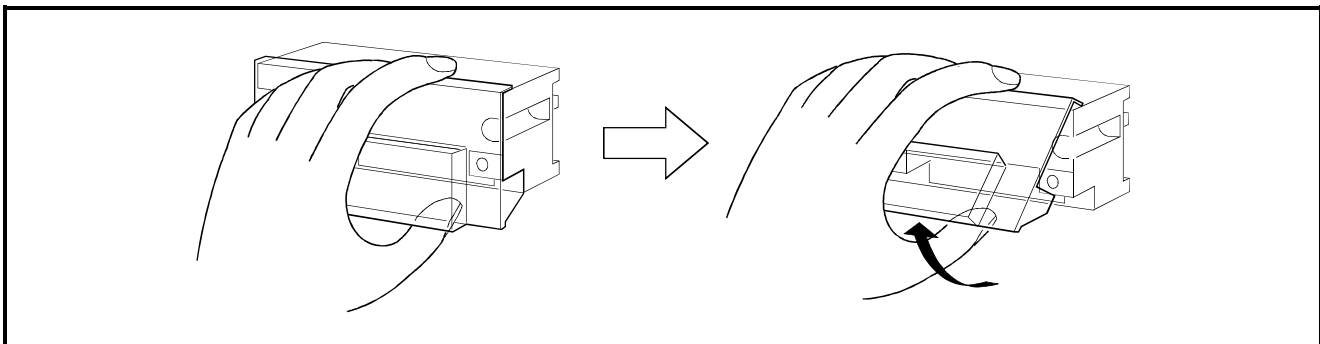

## 4.7 Connection of module through CC-Link dedicated cable

The method of connecting the AJ65SBT-RPT module to the CC-Link system through the CC-Link dedicated cable is shown below.

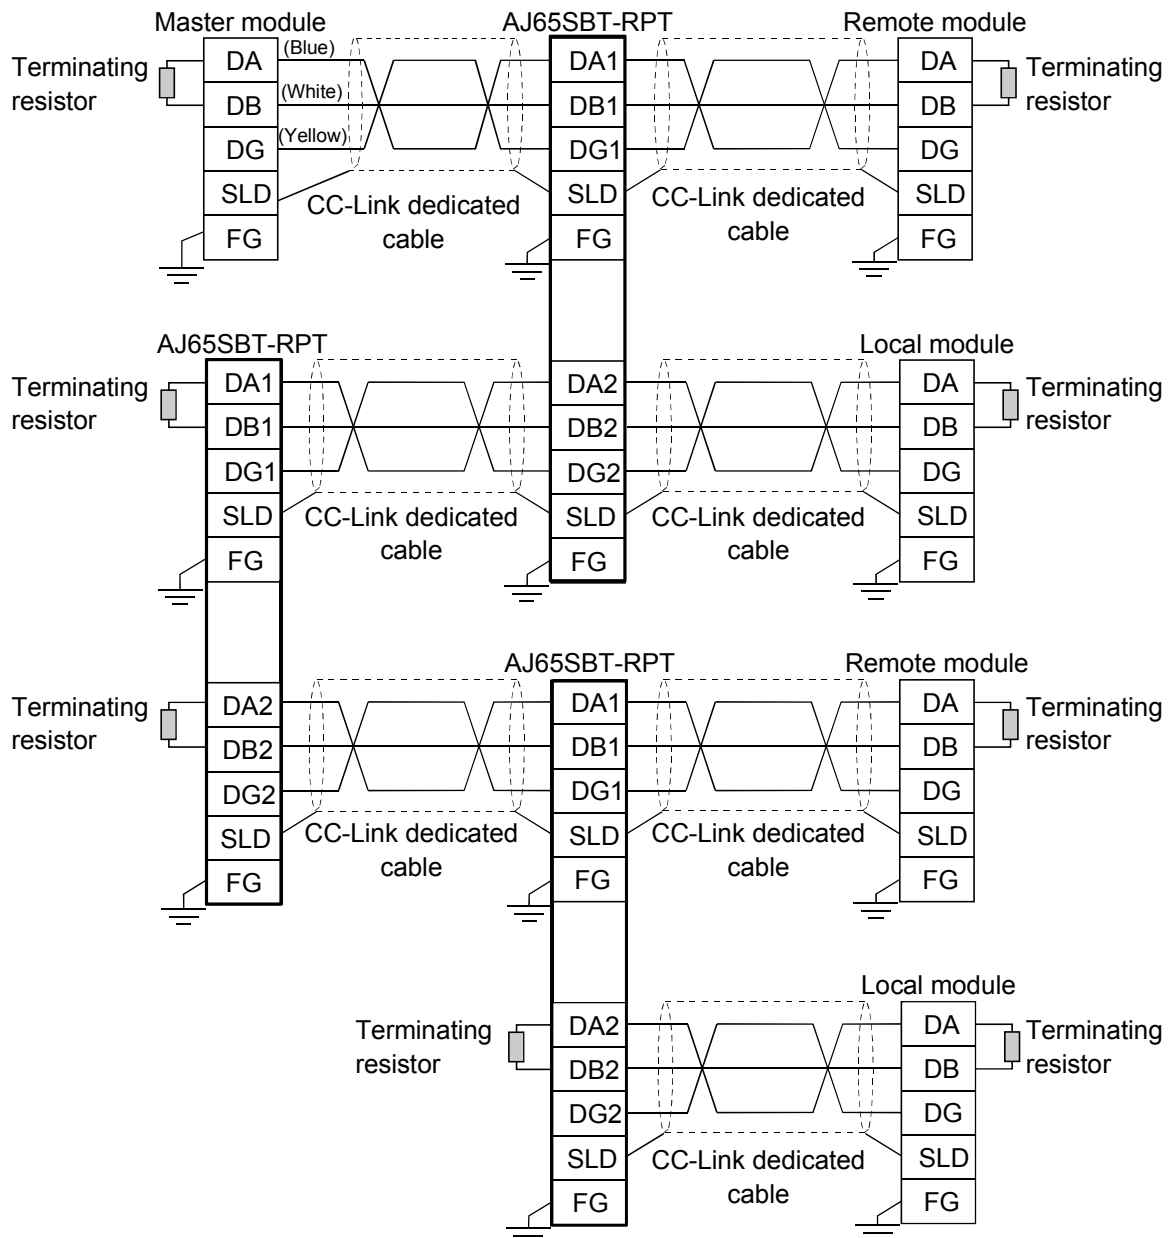

### Important

In each segment, ensure to use the same type of CC-Link dedicated cables. If different types of cables are used, normal data transmission will not be assured.

### POINT

- Ensure to connect the terminating resistor to both end modules of each segment. In addition, connect them between DA and DB (DA1-DB1 and DA2-DB2 for AJ65SBT-RPT).  
(The terminating resistor are furnished with the module.)
- The terminating resistor vary according to the type of cables in use. For detail, refer to the User's Manual of the applicable master module.
- Connect the shield wire of the CC-Link dedicated cable to "SLD" of each module, and ground both ends of the shielded wire via "FG".  
The SLD and FG are connected within the module.

#### 4.8 Check for state of connection (Line test)

Connect all modules including the AJ65SBT-RPT module through the CC-Link dedicated cable. Then, check that the CC-Link system is in the state capable of performing a data link normally.

Because whether or not a master station can establish a data link with a particular slave station can be checked by the connection status check (circuit test), an error module can be identified.


For the connection status check (circuit test), perform the circuit test 1 of the master module. If an error is detected, perform the circuit test 2 of the master module.

For the details of circuit tests 1 and 2, refer to the user's manual of the master module used.

Perform the test following the steps on the next page.

POINT
<p>Perform the circuit test 2 of the master module by selecting the target stations as described in (1) to (3) below.</p> <p>(1) In the segment including the master module, select slave stations in order from the nearest to the master module to the farthest.</p> <p>(2) In the segment (1st stage), select slave stations in order from the nearest to the AJ65SBT-RPT to the farthest.</p> <p>(3) In the segment (2nd stage), select slave stations in order from the nearest to the AJ65SBT-RPT to the farthest.</p>



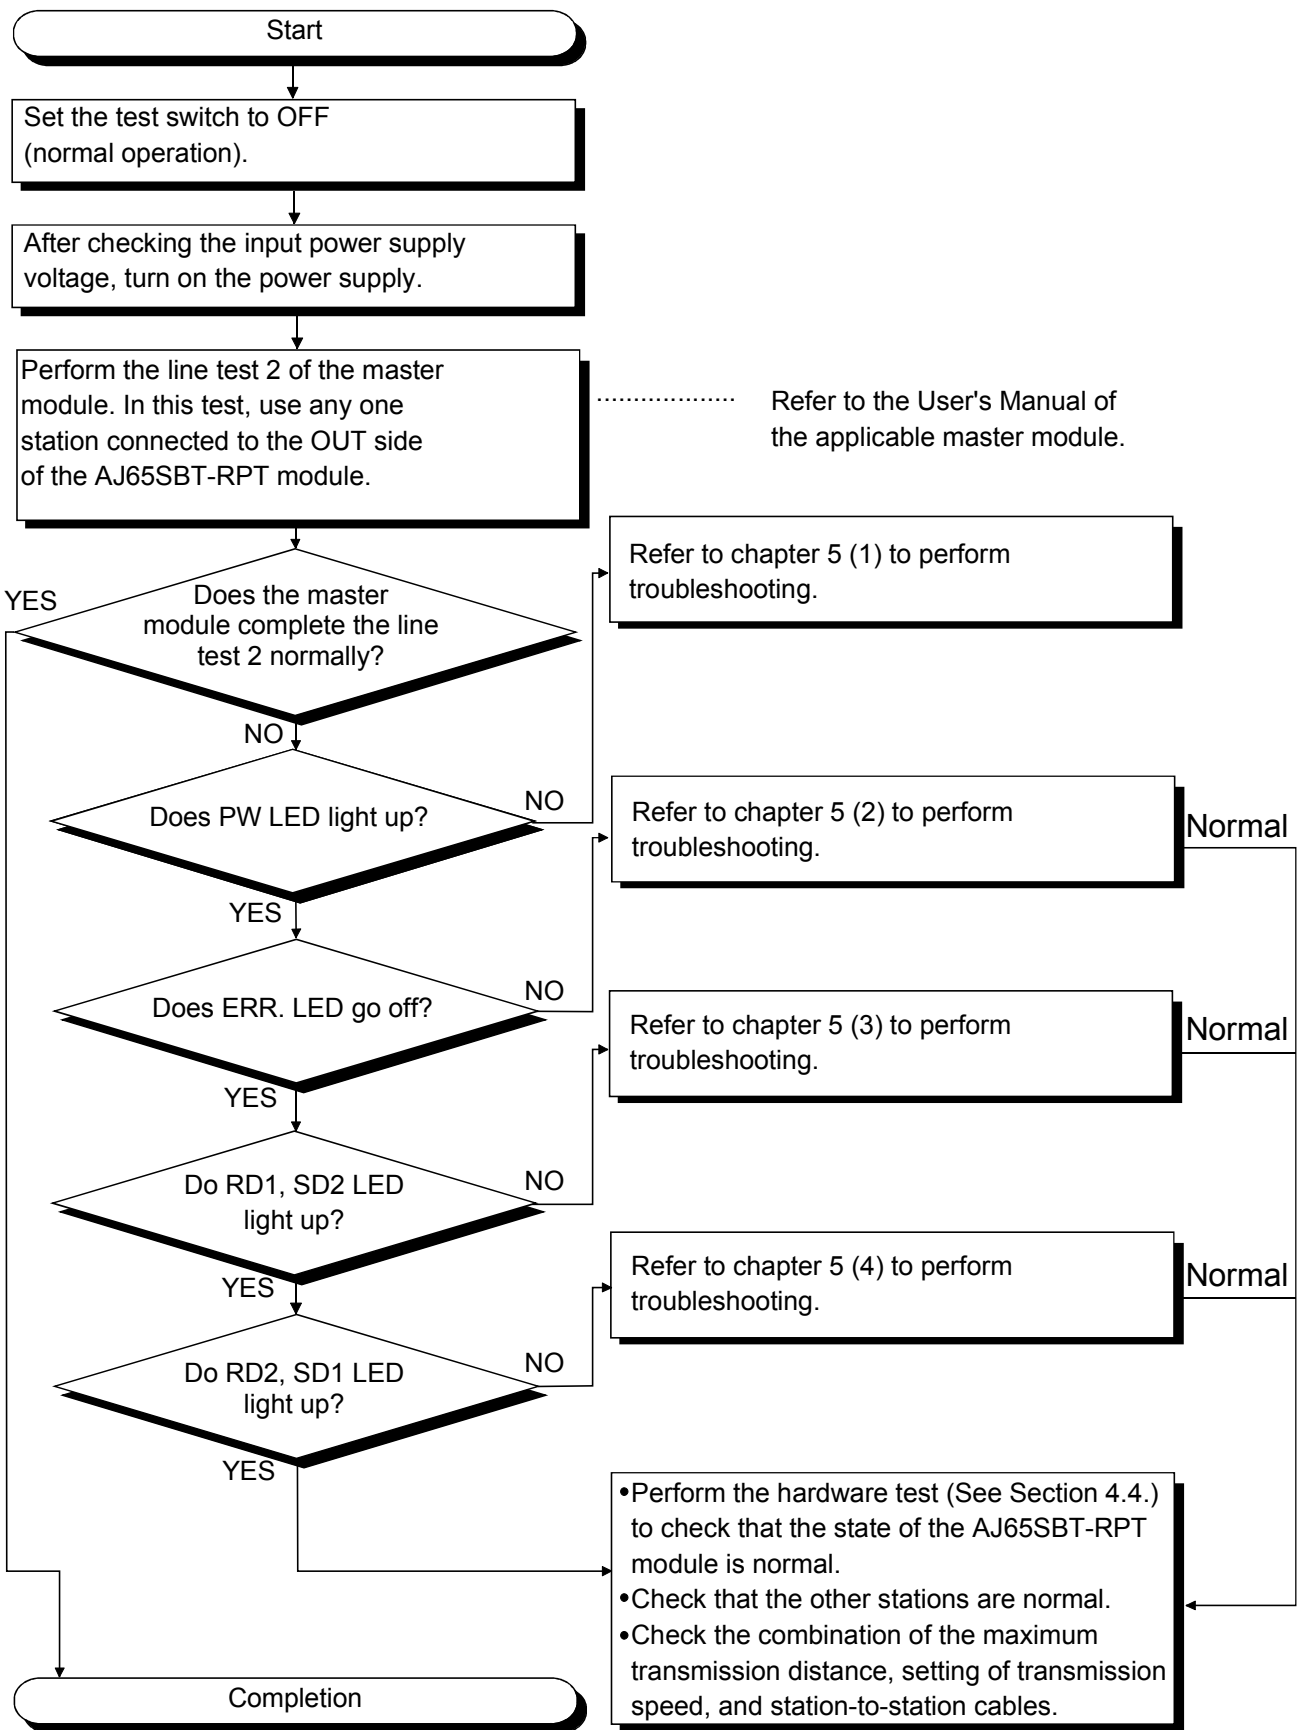

## 5. TROUBLESHOOTING

This section describes the measures when a trouble occurred in the AJ65SBT-RPT.


Perform the troubleshooting indicated in the reference section.

No. *1	Problem	Reference section
1	The PW LED is not lit while the module power is ON.	(1) in this chapter
2	The ERR. LED lights up or blinked.	(2) in this chapter
3	The RD1 or SD2 LED is not lit during data link.	(3) in this chapter
4	The RD2 or SD1 LED is not lit during data link.	(4) in this chapter

\*1 If more than one problem occurred simultaneously, perform the troubleshooting in order of the item numbers.


### (1) The PW LED is not lit while the module power is ON

Troubleshooting is shown below for the case that the PW LED is not lit while the module power is ON.

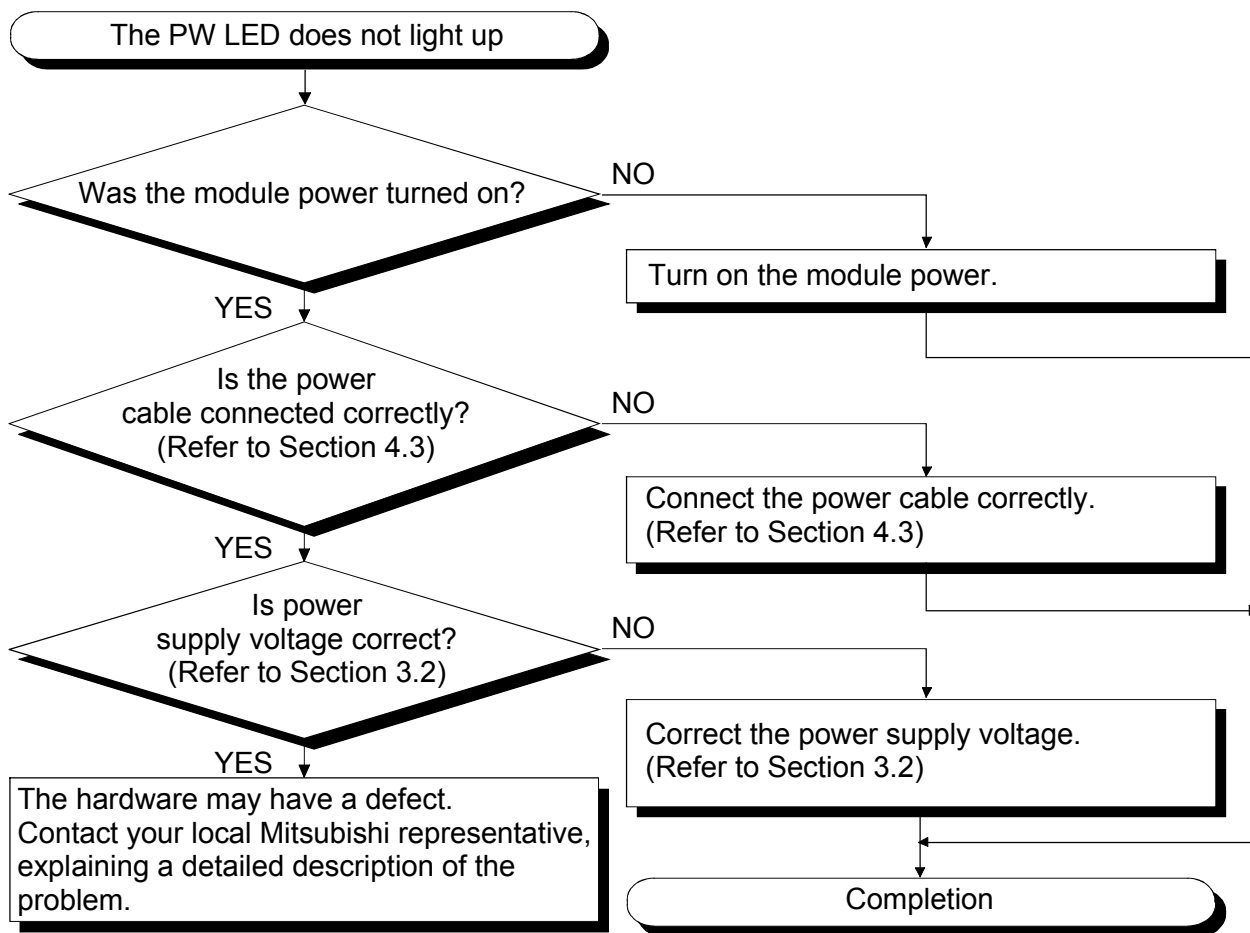


(2) The ERR. LED lights up or blinks

Troubleshooting is shown below for the case that the ERR. LED lights up or blinks.

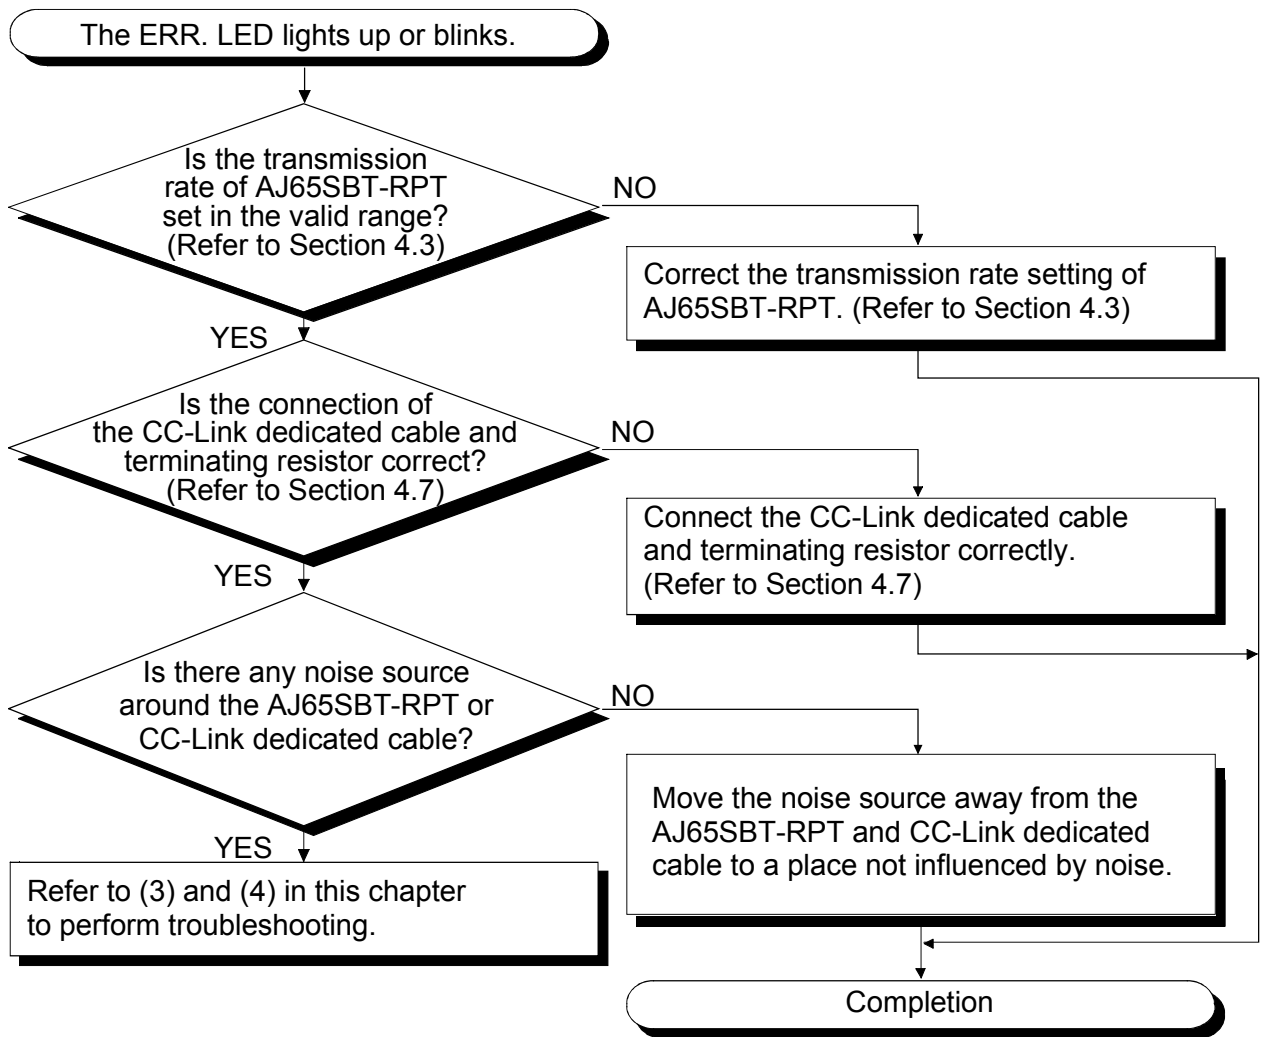


(3) The RD1 or SD2 LED is not lit during data link

This section describes troubleshooting for the case that the RD1 or SD2 LED is not lit.

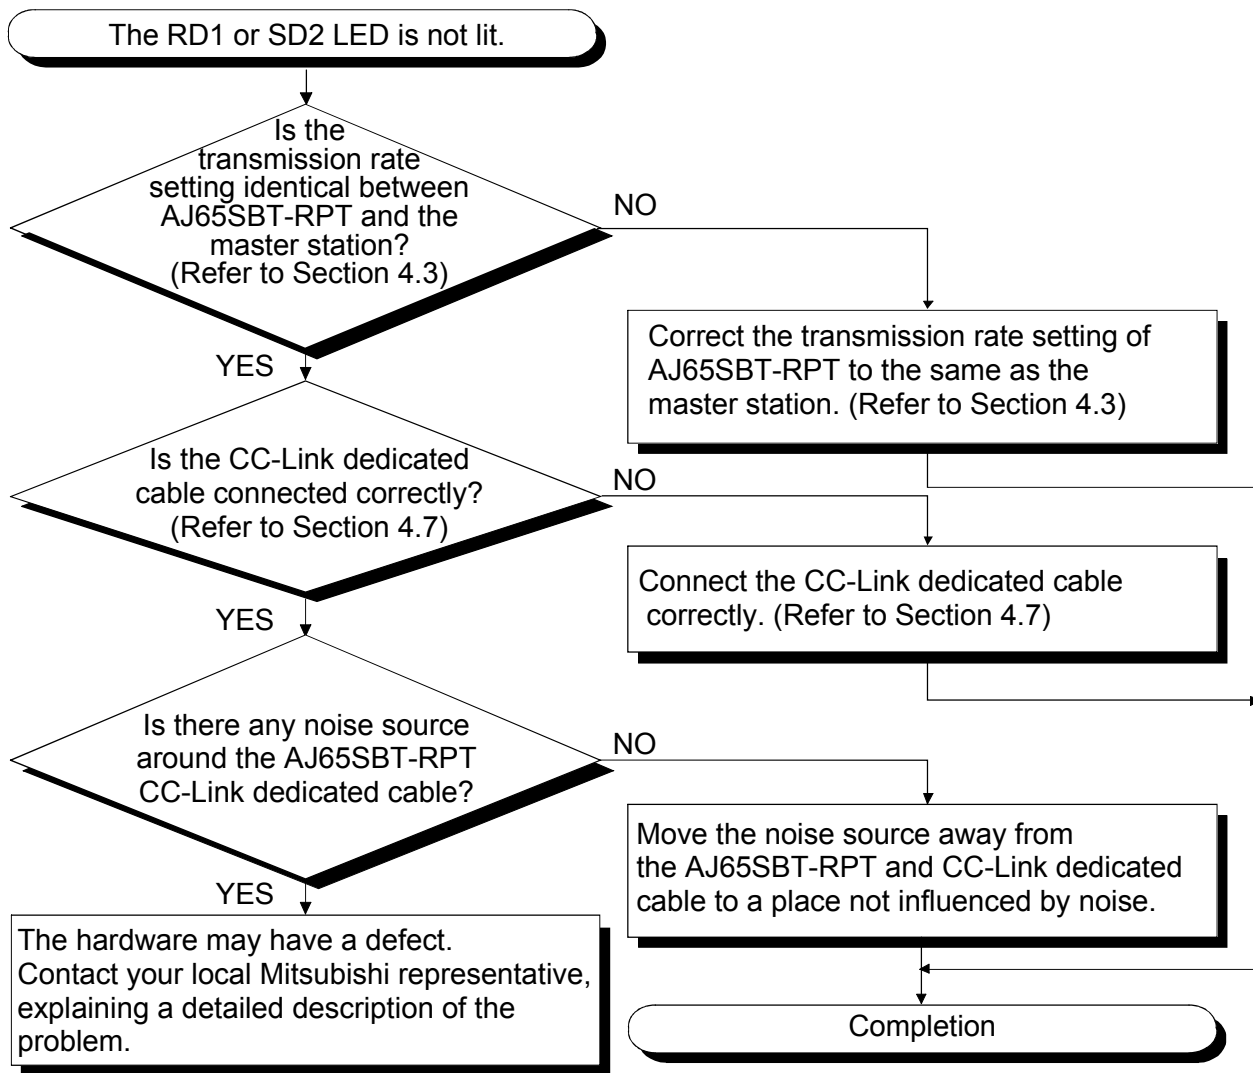

(4) The RD2 or SD1 LED is not lit during data link

This section describes troubleshooting for the case that the RD2 or SD1 LED is not lit.

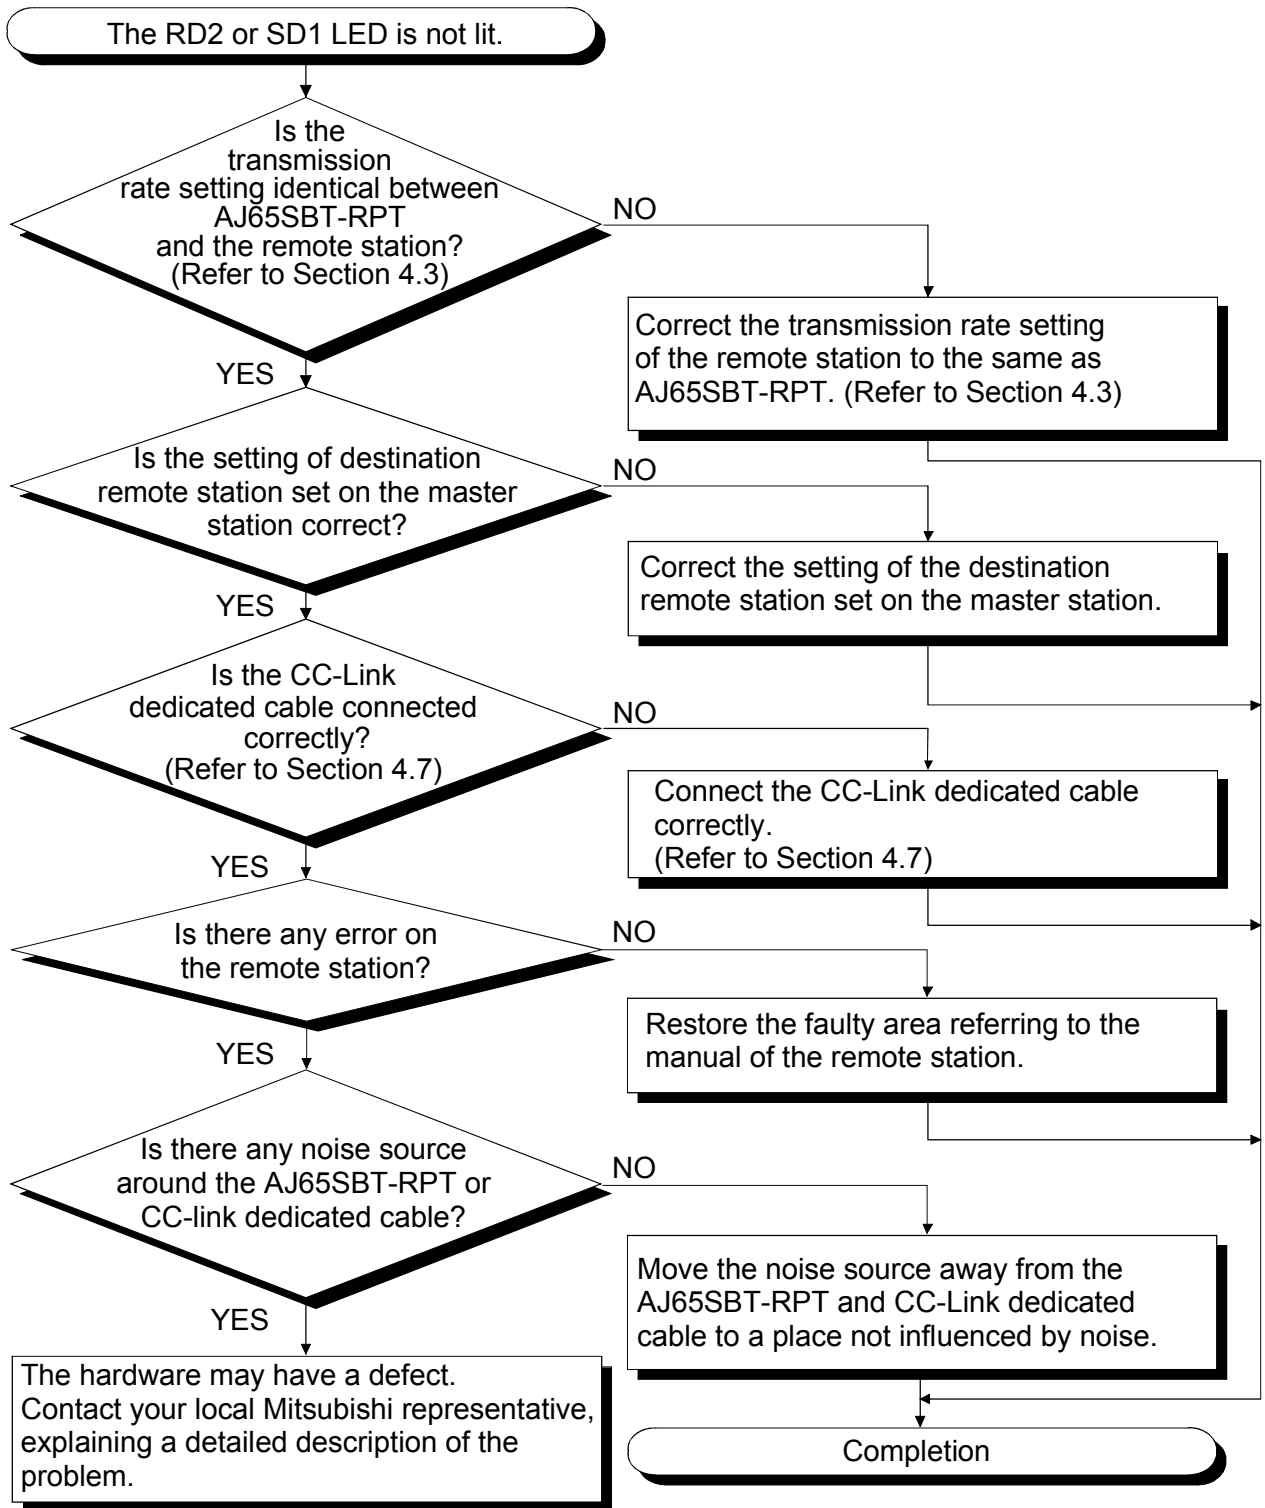


## 6. EXTERNAL DIMENSIONS

The appearance of the AJ65SBT-RPT varies depending on the hardware version.


For checking method of the hardware version, refer to Section 2.2.

### (1) Hardware version E or later

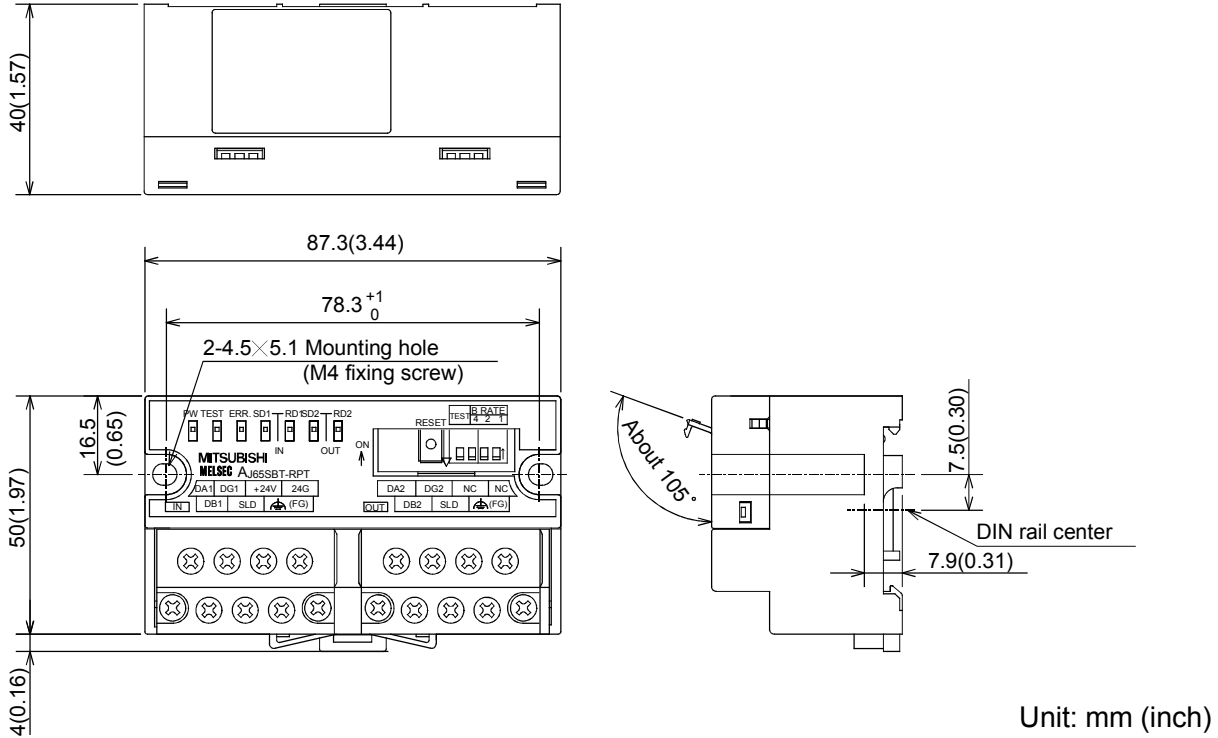

Unit: mm (inch)

### (2) Hardware version D or earlier

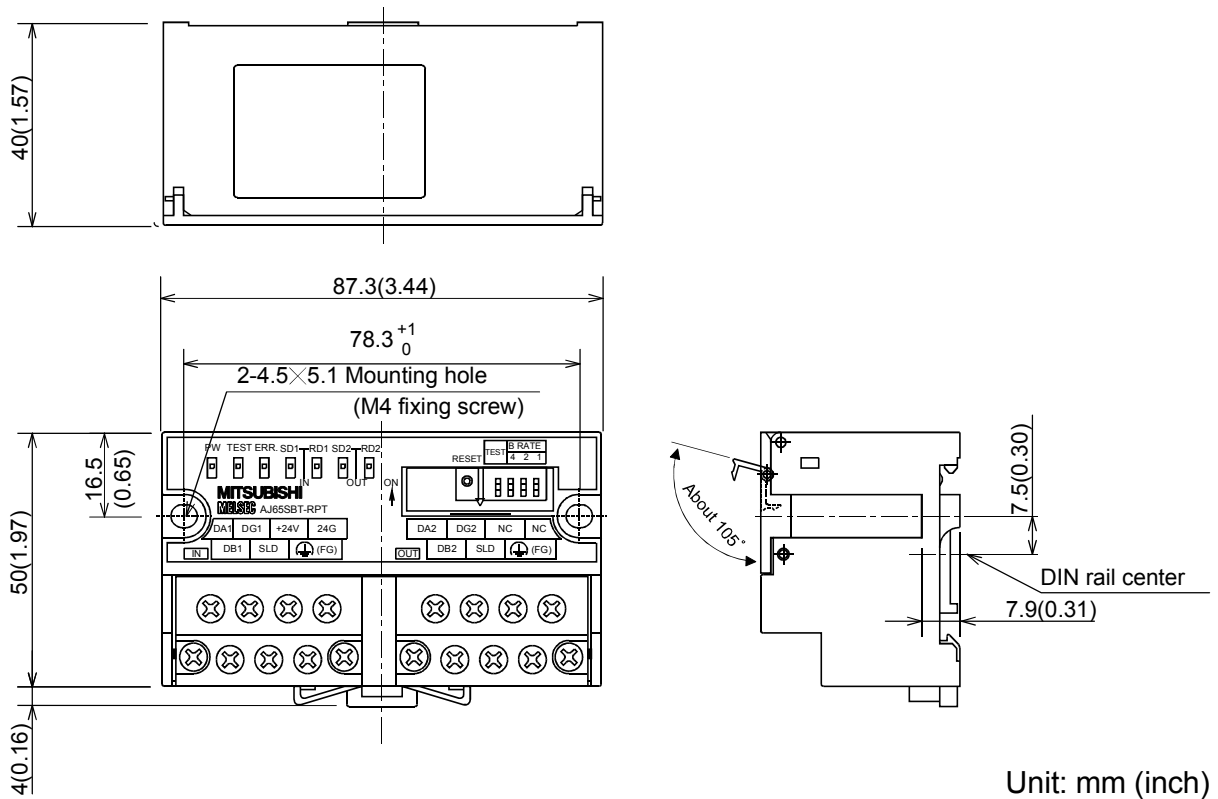

Unit: mm (inch)



## Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

### ⚠ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100	Hong Kong	Mitsubishi Electric Automation (Hong Kong) Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, Hong Kong Tel : +852-2887-8870
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil Tel : +55-11-5908-8331	China	Mitsubishi Electric Automation (Shanghai) Ltd. 4/F Zhi Fu Plazz, No.80 Xin Chang Road, Shanghai 200003, China Tel : +86-21-6120-0808
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Taiwan	Setsuyo Enterprise Co., Ltd. 6F No.105 Wu-Kung 3rd.Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire., AL10 8XB, U.K. Tel : +44-1707-276100	Korea	Mitsubishi Electric Automation Korea Co., Ltd. 1480-6, Gayang-dong, Gangseo-ku Seoul 157-200, Korea Tel : +82-2-3660-9552
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, I-20041 Agrate Brianza., Milano, Italy Tel : +39-039-60531	Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6470-2460
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80, E-08190 Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131	Thailand	Mitsubishi Electric Automation (Thailand) Co., Ltd. Bang-Chan Industrial Estate No.111 Moo 4, Serithai Rd, T.Kannayao, A.Kannayao, Bangkok 10230 Thailand Tel : +66-2-517-1326
France	Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France TEL: +33-1-5568-5568	Indonesia	P.T. Autoteknindo Sumber Makmur Muara Karang Selatan, Block A/Utara No.1 Kav. No.11 Kawasan Industri Pergudangan Jakarta - Utara 14440, P.O.Box 5045 Jakarta, 11050 Indonesia Tel : +62-21-6630833
South Africa	Circuit Breaker Industries Ltd. Private Bag 2016, ZA-1600 Isando, South Africa Tel : +27-11-928-2000	India	Messung Systems Pvt, Ltd. Electronic Sadan NO:III Unit No15, M.I.D.C Bhosari, Pune-411026, India Tel : +91-20-2712-3130
		Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.  
Printed in Japan on recycled paper.