


2. 各部の名称と設定

2. Part Names and Settings

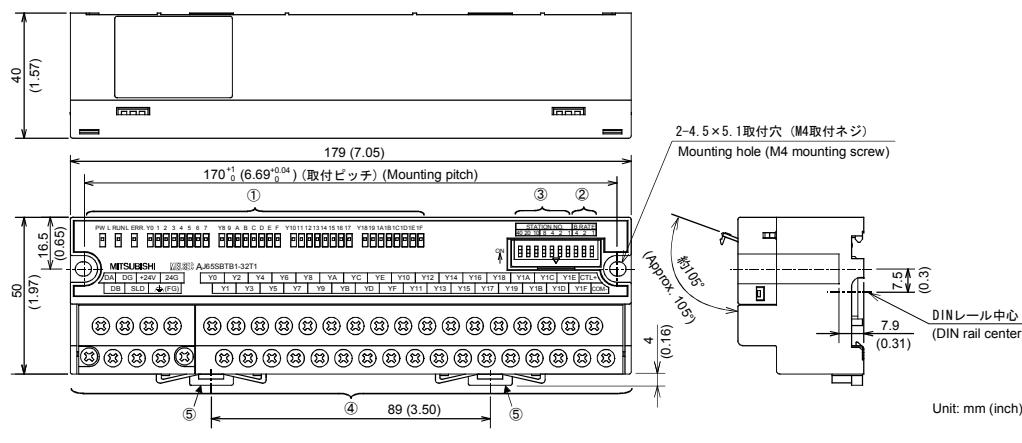

No.	名称	内 容																		
確認内容																				
PW	点灯：電源ON 消灯：電源OFF																			
L RUN	点灯：交信正常時 消灯：交信断時 (タイムオーバエラー)																			
① 動作表示LED																				
L ERR.	点灯：交信エラー時 一定間隔で点滅： 通電中に局番設定／伝送速度設定スイッチの設定を変更したとき 不定間隔で点滅： 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯：交信正常時																			
Y0~Y1	点灯：出力ON 消灯：出力OFF																			
② 伝送速度設定																				
設定値 設定スイッチ状態		伝送速度																		
0	OFF OFF OFF	156 kbps																		
1	OFF OFF ON	625 kbps																		
2	OFF ON OFF	2.5 Mbps																		
3	OFF ON ON	5.0 Mbps																		
4	ON OFF OFF	10 Mbps																		
伝送速度は必ず上記の範囲で設定してください。																				
③ 局番設定スイッチ																				
STATION NO. の “10”, “20”, “40” で局番の10の位を設定します。 STATION NO. の “1”, “2”, “4”, “8” で局番の1の位を設定します。 局番は必ず1~64の範囲で設定してください。(*1) (例) 局番を “32” に設定するときは、下記のようにスイッチ設定を行います。																				
<table border="1"> <thead> <tr> <th>局番</th> <th>十の位</th> <th>一の位</th> </tr> </thead> <tbody> <tr> <td>40</td> <td>20</td> <td>10</td> </tr> <tr> <td>32</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>32</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>32</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>32</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>			局番	十の位	一の位	40	20	10	32	OFF	ON	32	ON	ON	32	OFF	OFF	32	ON	OFF
局番	十の位	一の位																		
40	20	10																		
32	OFF	ON																		
32	ON	ON																		
32	OFF	OFF																		
32	ON	OFF																		
④ 端子台	出力ユニット電源、伝送、出力信号の接続用端子台です。																			
⑤ DINレール用フック	ユニットをDINレールに取り付けるときにDINレール用フックの中心線上を指でカチッと音がするまで押さえます。																			

*1 局番は重複して設定できません。

本マニュアルは再生紙を使用しています。


AJ65SBTB1-32T1 形 CC-Link システム小形タイプリモート I/O ユニットユーザーズマニュアル AJ65SBTB1-32T1 CC-Link System Compact Type Remote I/O Module User's Manual

● 安全上のご注意 ● (ご使用前に必ずお読みください)

本製品のご使用に際しては、本マニュアルをよくお読みいただくと共に、安全に対して十分に注意を払って、正しい取扱いをしていただこうよお願いいたします。

なお、この注意事項は本製品に関するもののみについて記載したものです。シーケンサシステムとしての安全上のご注意に関しては、CPUユニットのユーザーズマニュアルを参照してください。

この●安全上のご注意●では、安全注意事項のランクを「危険」、「注意」として区分しております。

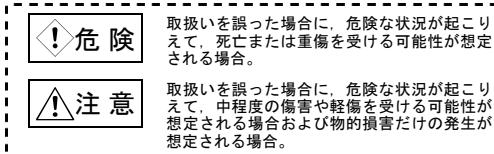

なお、△ 注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。

いずれも重要な内容を記載しているので必ず守ってください。
本マニュアルは必要なときに読めるよう大切に保管すると共に、必ず最終ユーザまでお届けいただくようお願いいたします。

【設計上の注意事項】

No.	Item	Description																		
①	Operating status indicator LEDs	<p>LED name Confirmation details</p> <p>PW ON: Power supply ON OFF: Power supply OFF</p> <p>L RUN ON: Normal communication OFF: Communication shut off (time expiration error)</p> <p>L ERR. ON: Communication data error Flash at regular intervals: Indicates that the station number setting or transmission speed setting switch position was changed while power is ON Flash at irregular intervals: When the setting of the terminal resistor is wrong; when the cable for the module or CC-Link is affected by noise</p> <p>Y0 to 1F ON: Normal communication OFF: Output ON OFF: Output OFF</p>																		
②	Transmission speed setting	<p>Setting value Setting switch status Transmission speed</p> <table border="1"> <thead> <tr> <th>Setting value</th> <th>Setting switch status</th> <th>Transmission speed</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OFF OFF OFF</td> <td>156 kbps</td> </tr> <tr> <td>1</td> <td>OFF OFF ON</td> <td>625 kbps</td> </tr> <tr> <td>2</td> <td>OFF ON OFF</td> <td>2.5 Mbps</td> </tr> <tr> <td>3</td> <td>OFF ON ON</td> <td>5.0 Mbps</td> </tr> <tr> <td>4</td> <td>ON OFF OFF</td> <td>10 Mbps</td> </tr> </tbody> </table> <p>Be sure to set the transmission speed within the above range.</p>	Setting value	Setting switch status	Transmission speed	0	OFF OFF OFF	156 kbps	1	OFF OFF ON	625 kbps	2	OFF ON OFF	2.5 Mbps	3	OFF ON ON	5.0 Mbps	4	ON OFF OFF	10 Mbps
Setting value	Setting switch status	Transmission speed																		
0	OFF OFF OFF	156 kbps																		
1	OFF OFF ON	625 kbps																		
2	OFF ON OFF	2.5 Mbps																		
3	OFF ON ON	5.0 Mbps																		
4	ON OFF OFF	10 Mbps																		
③	Station number setting switches	<p>Select “10”, “20” or “40” to set the tens place of the station number. Select “1”, “2”, “4” or “8” to set the ones place of the station number. Always set the station number within the range of 1 to 64. (*1) (Example) Set the switches as below when setting the station number to 32:</p> <table border="1"> <thead> <tr> <th>Station number</th> <th>Tens place</th> <th>Ones place</th> </tr> </thead> <tbody> <tr> <td>40</td> <td>20</td> <td>10</td> </tr> <tr> <td>32</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>32</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>32</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>32</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>	Station number	Tens place	Ones place	40	20	10	32	OFF	ON	32	ON	ON	32	OFF	OFF	32	ON	OFF
Station number	Tens place	Ones place																		
40	20	10																		
32	OFF	ON																		
32	ON	ON																		
32	OFF	OFF																		
32	ON	OFF																		
④	Terminal block	A terminal block for connection to the power supply, transmission and output signals.																		
⑤	Hook for DIN rail	When the module is installed to the DIN rail, push on the center line of the hook for DIN rail with a finger tip until a clicking sound is heard.																		

*1 Duplicate station number cannot be set.

Printed in Japan on recycled paper.

● SAFETY PRECAUTIONS ● (Read these precautions before using.)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment. Refer to the CPU module user's manual for a description of the PLC system safety precautions.

These ● SAFETY PRECAUTIONS ● classify the safety precautions into two categories: "DANGER" and "CAUTION".

	Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.
	Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by △ CAUTION may also result in to serious results.

In any case, it is important to follow the directions for usage. Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

(0705) MEE

【DESIGN PRECAUTIONS】

	● When a communication error occurs in the data link, the communication error station will be in the following condition. Configure an interlocking circuit in a sequence program using the communication status information so that the safety of the overall system is always maintained. Accident may occur due to output error or malfunctioning. Output points from remote I/O station will be all switched off.
	● Output could be switched on or off when a problem occurs in the remote I/O modules. So build an external monitoring circuit that will monitor any output signals that could cause a serious accident.

	● Use each module in an environment as specified in the "general specification" in the CPU module user's manual. Usage of the module outside the general specification range may cause electric shock, fire, malfunction, product damage or deterioration.
	● Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

【INSTALLATION PRECAUTIONS】

	● Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module.
	● Tighten the module securely using DIN rail or installation screws within the specified torque range. Loose terminal screws may cause a short circuit or erroneous operation. If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws.

【WIRING PRECAUTIONS】

	● Completely turn off the externally supplied power used in the system when installing or placing wiring. Not completely turning off all power could result in electric shock or damage to the product.
--	---

△注意

- FG端子はシーケンサ専用のD種接地（第三種接地）以上で必ず接地を行ってください。
- 感電、誤動作の恐れがあります。
- 空き端子ネジは必ず締付けてトルク範囲（42~50N·cm）で締付けてください。端子と短絡する原因になります。
- 端子ネジは適合端子端子を使用し、規定のトルクで締付けてください。先開形端子端子を使用すると、端子ネジがゆるんだ場合に脱落し、故障の原因になります。
- ユニットの配線は、製品の定格電圧および端子配列を確認した上で正しく行ってください。定格と異なる電源を接続したり、誤配線すると、火災、故障の原因になります。
- 端子ネジの締付けは、規定トルク範囲内で行ってください。
- 端子ネジは締付けがゆるると、火災や誤動作の原因になります。
- 端子ネジを締め過ぎると、ネジの破損による短絡、誤動作の原因になります。
- ユニット内に、切粉や配線クズなどの異物が入らないように注意してください。火災、故障、誤動作の原因になります。
- ユニットに接続する電線やケーブルは、必ずダクトに納める、またはクランプによる固定処理を行ってください。
- ケーブルをダクトに納めなかったり、クランプによる固定処理を行っていないと、ケーブルのラバキや移動、不注意の引っ張りなどによるユニットやケーブルの破損、ケーブルの接触不良による誤動作の原因となります。
- 制御線と通信ケーブルは束縛したり、近接したりしないでください。
- ノイズにより、誤動作の原因になります。
- ユニットに接続されたケーブルを取り外すときは、ケーブル部分を手に持つて引っ張らないでください。コネクタ付きのケーブルは、ユニットに接続している部分のコネクタを手で持つて取り外してください。コネクタなしのケーブルは、ユニットに接続している部分のケーブルを緩めてから取り外してください。ユニットに接続された状態でケーブルを引っ張ると、ユニットやケーブルの破損、ケーブルの接続不良による誤動作の原因となります。

【立上げ・保守時の注意事項】

△危険

- 通電中に端子に触れないでください。感電の原因になります。
- 清掃、端子ネジ、ユニット取付けネジの増し締めは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。

△注意

- ユニットの分解、改造はしないでください。故障、誤動作、ケガ、火災の原因になります。
- ユニットは落させたり、強い衝撃を与えないでください。ユニットの破損の原因になります。
- ユニットの蓋への取付け・取外しは必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。
- 端子台の脱着は、製品ご使用後、50回以内としてください。(JIS B 3502準拠)
- ユニットに触れる前には、必ず接地された金属などに触れて、人体などに帶電している静電気を放電してください。静電気を放電しないと、ユニットの故障や誤動作の原因になります。

【廃棄時の注意事項】

△注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

1. 仕様

項目	内容
出力点数	32点
絶縁方式	フォトカプラ絶縁
定格負荷電圧	DC12/24V
使用電圧範囲	DC10.2~26.4V (リップル率5%以内)
最大負荷電流	0.5A/1点、4.8A/1コモン
最大突入電流	1.0A 10ms以下
OFF時漏泄電流	0.1mA以下
ON時最大電圧降下	0.3V以下 (TYP.) 0.5A, 0.6V以下 (MAX.) 0.5A
出力形式	シンクタイプ
保護機能	なし
応答時間	OFF→ON 0.5ms以下 ON→OFF 1.5ms以下 (抵抗負荷)
電圧	DC10.2~26.4V (リップル率5%以内)
出力部外部供給電源	50mA以下 (TYP. DC24V, 1コモン当たり) 外部負荷電流は含まず
サージキラー	ゼンナーダイオード
コモン方式	32点1コモン (端子台形1線式)
占有局数	1局 32点割付け (32点使用)

△CAUTION

- Always ground the FG terminal.
There is a risk of electric shock or malfunction.
- Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50 N·cm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
- Fix terminal screws securely within the regulated torque. Loose terminal screws may cause fire and/or malfunction.
- If the terminal screws are too tight, it may cause short circuit or erroneous operation due to damage of the screws.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- When disconnecting a cable from the module, do not pull on the cable itself. Disconnect cables not fitted with a connectors by holding and pulling the cable connector. Disconnect cables not fitted with a connector by removing the screws from the part connected to the module can cause damage to the module or cable, or malfunction due to cable connection faults.

STARTING AND MAINTENANCE PRECAUTIONS

△DANGER

- Do not touch terminals when the power is on. Doing so could cause an electric shock.
- Switch off all phases of the externally supplied power used in the system when cleaning the module or retightening the terminal or module mounting screws. Not doing so could result in electric shock.

△CAUTION

- Never try to disassemble or modify module. It may cause product failure, malfunction, fire or cause injury.
- Do not drop or apply any strong impact to the module. Doing so may damage the module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel. Not doing so could result in damage to the product.
- Mounting/removing the terminal block is limited to 50 times after using a product. (IEC61131-2-compliant)
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module.
- Failure to do so may cause a failure or malfunctions of the module.

DISPOSAL PRECAUTIONS

△CAUTION

- When disposing of this product, treat it as industrial waste.

項目

I/Oユニット電源	電圧 DC20.4~26.4V (リップル率5%以内)
	電流 65mA以下 (DC24V, 全点ON時)
ノイズ耐量	DCタイプのノイズ電圧500Vp-p, ノイズ幅1μs, ノイズ周波数25~60Hzのノイズシミュレータによる
耐電圧	DC外部端子一括ーアース間AC500V 1分間
絶縁抵抗	DC外部端子一括ーアース間DC500V絶縁抵抗計にて10MΩ以上
保護等級	IP2X
質量	0.25kg
外部接続方式	通信部, I/Oユニット電源部 M3×5.2 締付けトルク範囲: 59~88N·cm 適合端子端子の挿入枚数は2枚以内
外部接続方式	入出力電源部, 入出力部 M3×5.2 締付けトルク範囲: 59~88N·cm 適合端子端子の挿入枚数は2枚以内
ユニット取付けネジ	34点直付け端子台 [入出力電源, I/O信号] M3×5.2 締付けトルク範囲: 59~88N·cm 適合端子端子の挿入枚数は2枚以内
適用DINレール	M4×5.2 締付けトルク範囲: 79~108N·cm DINレールでの取付け可, 6方向取付け可 TH35-7.5Fe, TH35-7.5Ai (JIS C 2812に準拠)
適合端子	• RAV1.25-3 (JIS 2805に準拠) [適合電線サイズ: 0.3~1.25mm ²] • V2-MS3 (日本住友端子製作(株)), RAP2-3SL (日本端子(株)), TGV2-3N (株ニチフ) [適合電線サイズ: 1.25~2.0mm ²]

項目

I/O module power supply	Voltage 20.4 to 26.4 V DC (ripple ratio: within 5 %)
	Current 65 mA or lower (when 24 V DC, all points ON)
Noise durability	DC type noise voltage 500 Vp-p, noise width 1 μs, noise frequency 25 to 60 Hz (noise simulator condition)
Withstand voltage	500 V AC for 1 minute between all DC external terminals and ground
Insulation resistance	10 MΩ or higher, measured with a 500 V DC insulation resistance tester between all DC external terminals and ground
Protection of degree	IP2X
Weight	0.25 kg
External wiring system	7-point terminal block (two-piece) [Transmission circuit, I/O module power supply, FG] M3×5.2 Tightening torque range: 59 to 88 N·cm Applicable solderless terminals: 2 max.
I/O power supply, part I/O part	34-point direct-mount terminal block [I/O power supply, I/O signal] M3×5.2 Tightening torque range: 59 to 88 N·cm Applicable solderless terminals: 2 max.
Module installation screw	M4 screw with plain washer finished round [Module installation screw] I/O power supply, I/O signal M3×5.2 Tightening torque range: 79 to 108 N·cm Module can be mounted using DIN rail and can be mounted in 6 directions
Applicable DIN rail	TH35-7.5Fe, TH35-7.5Ai (conforming to IEC 60715)
Applicable solderless terminal	RAV1.25-3 (conforming to JIS C 2805) [Applicable wire size: 0.3 to 1.25 mm ²] V2-MS3, RAP2-3SL, TGV2-3N [Applicable wire size: 1.25 to 2.0 mm ²]

外部接続 (External connection)

