

AJ65FBTA4-16D CC-Link System Low Profile Waterproof Type Remote I/O Module User's Manual



● SAFETY PRECAUTIONS ●


(Read these precautions before using.)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment. Refer to the CPU module user's manual for a description of the PC system safety precautions.

These ●SAFETY PRECAUTIONS● classify the safety precautions into two categories: "DANGER" and "CAUTION".


	Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.
	Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.


Depending on circumstances, procedures indicated by  CAUTION may also result in to serious results.

In any case, it is important to follow the directions for usage.


Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]


 DANGER
<ul style="list-style-type: none"> When a communication error occurs in the data link, the communication error station will be in the following condition. Configure an interlocking circuit in a sequence program using the communication status information so that the safety of the overall system is always maintained. Accident may occur due to output error or malfunction. (1) Input points from remote I/O station will be all switched off. (2) Output points from remote I/O station will be all switched off. Input could be switched on or off when a problem occurs in the remote I/O modules. So build an external monitoring circuit that will monitor any input signals that could cause a serious accident.


 CAUTION
<ul style="list-style-type: none"> Use each module in an environment as specified in the "general specification" in the CPU module user's manual. Usage of the module outside the general specification range may cause electric shock, fire, malfunction, product damage or deterioration. Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm (3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

[INSTALLATION PRECAUTIONS]


 CAUTION
<ul style="list-style-type: none"> Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module. Tighten the module securely using DIN rail or installation screws within the specified torque range. Loose terminal screws may cause a short circuit or erroneous operation. If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws. Correctly connect the cable connectors to the loading positions. A poor connection could result in erroneous operation.

[WIRING PRECAUTIONS]


 DANGER
<ul style="list-style-type: none"> Completely turn off the externally supplied power used in the system when installing or placing wiring. Not completely turning off all power could result in electric shock or damage to the product.


 CAUTION
<ul style="list-style-type: none"> Be sure to ground the FG terminals to the protective ground conductor. Not doing so could result in electric shock or erroneous operation. When wiring in the PLC, be sure that it is done correctly by checking the product's rated voltage and the terminal layout. Fix the attachment screws of waterproof cap and communication adapter securely within the specified torque range. Loose attachment screws may cause a fire or erroneous operation. If the attachment screws are too tight, it may cause a short circuit or erroneous operation due to damage of the screws. Make sure that foreign objects do not get in side the module, such as dirt and wire chips. It may cause fire product failure or malfunction. IP67 is only satisfied when the waterproof plug, waterproof cap, and communication adapter are all connected. Do not attach the communication cable to the I/O connector, as the I/O connector, the communication connector and the power supply connector are the same in shape. Failure to do so may cause frailer or malfunction of the PLC.

[WIRING PRECAUTIONS]


 CAUTION
<ul style="list-style-type: none"> Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable. Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise. When disconnecting a cable from the module, do not pull on the cable itself. Disconnect cables fitted with connectors by holding and pulling the cable connector. Disconnect cables not fitted with a connector by removing the screws from the part connected to the module. Pulling on a cable that is connected to the module can cause damage to the module or cable, or malfunction due to cable connection faults.

[STARTING AND MAINTENANCE PRECAUTIONS]

 DANGER
<ul style="list-style-type: none"> Do not touch terminals or connectors when the power is on. Doing so could cause an electric shock. Switch off all phases of the externally supplied power used in the system when cleaning the module or retightening the terminal or module mounting screws. Not doing so could result in electric shock.

 CAUTION
<ul style="list-style-type: none"> Never try to disassemble or modify module. It may cause product failure, malfunction, fire or cause injury. Do not drop or apply any strong impact to the module. Doing so may damage the module. Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel. Not doing so could result in damage to the product. Always make sure to touch the grounded metal to discharge the electricity charged in the electricity charged in the body, etc., before touching the module. Failure to do so may cause a failure or malfunctions of the module.

[DISPOSAL PRECAUTIONS]


 CAUTION
<ul style="list-style-type: none"> When disposing of this product, treat it as industrial waste.

(0706)MEE


1. Specification

Item	Description
Number of input points	16 points
Isolation method	Photocoupler
Rated input voltage	24 V DC
Rated input current	Approx. 7 mA
Operating voltage range	20.4 to 26.4 V DC (ripple ratio: within 5 %)
Max. simultaneous ON input points	100 %
ON voltage/ON current	14 V or higher/3.5 mA or higher
OFF voltage/OFF current	6 V or lower/1.7 mA or lower
Input resistance	Approx. 3.3 k Ω
Response time	<div style="display: flex; justify-content: space-between;"> <div>OFF \rightarrow ON</div> <div>1.5 ms or lower (when 24 V DC)</div> </div> <div style="display: flex; justify-content: space-between;"> <div>ON \rightarrow OFF</div> <div>1.5 ms or lower (when 24 V DC)</div> </div>
Wiring method for common	16 points/common (waterproof connector 2 to 4-wire type)
Input form	Positive Common (sink type)
Number of stations occupied	1 station 32 points assignment (use 16 points)
I/O module power supply	<div style="display: flex; justify-content: space-between;"> <div>Voltage</div> <div>20.4 to 26.4 V DC (ripple ratio: within 5 %)</div> </div> <div style="display: flex; justify-content: space-between;"> <div>Current</div> <div>40 mA or lower (when 24 V DC, all points ON)</div> </div>
Noise durability	DC type noise voltage 500 Vp-p, noise width 1 μ s, noise frequency 25 to 60 Hz (noise simulator condition)
Withstand voltage	500 V AC for 1 minute between all DC external terminals and ground
Insulation resistance	10 M Ω or higher, measured with a 500 V DC insulation resistance tester between all DC external terminals and ground
Protection of degree	IP67
Weight	0.40 kg
Option	Waterproof cap: A6CAP-WP2


For information about the connection devices necessary to use the main module, see the CC-Link System Small-Type Remote I/O Module User's Manual.

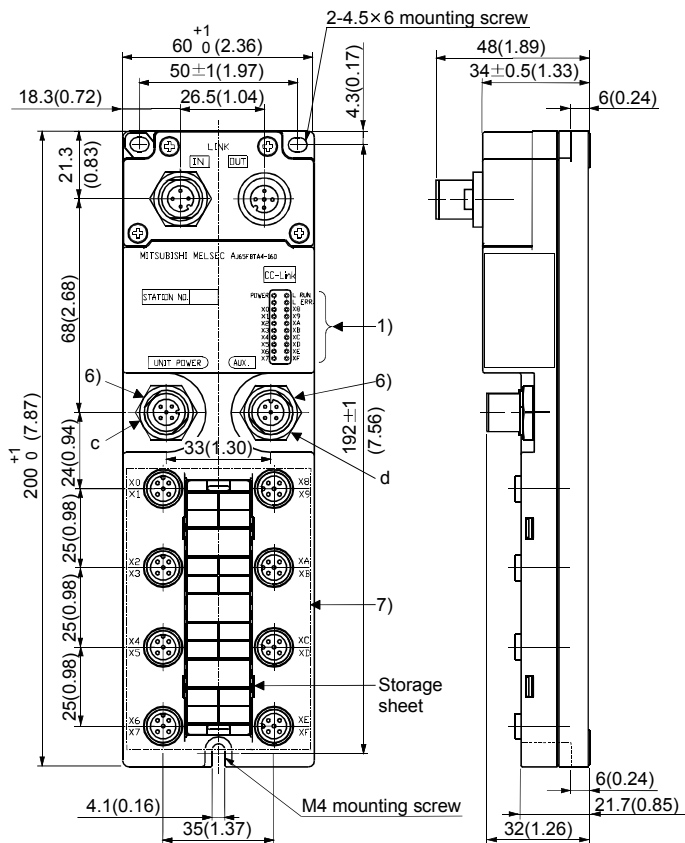

Unit: mm(inch)

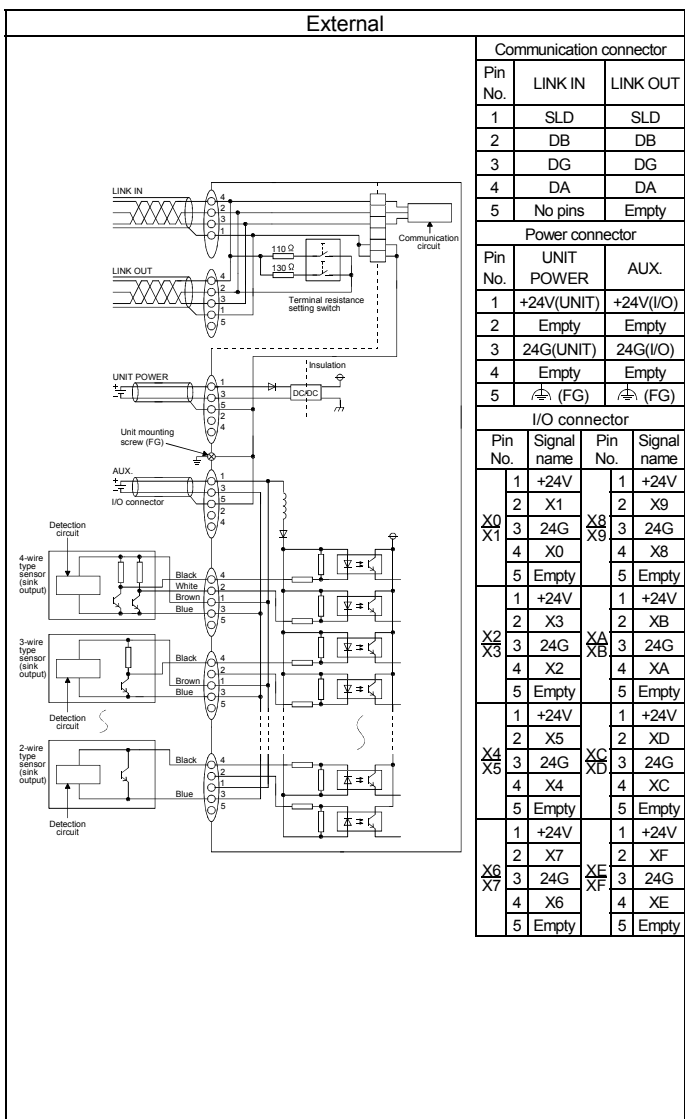

Connector for connection to main module

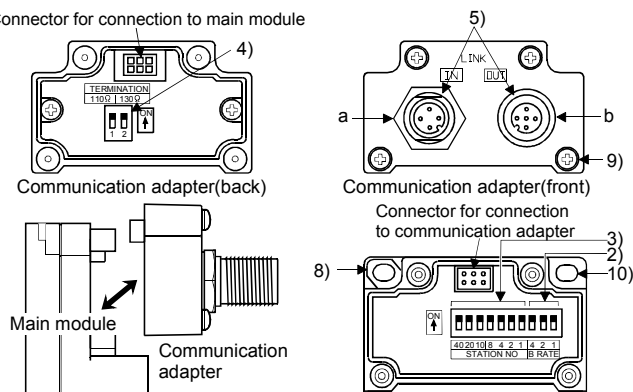

2. Name and Setting of Each Area

No.	Item	Description								
1)	Operating status indicator LEDs	LED name	Confirmation details							
		POWER	ON: Power supply ON OFF: Power supply OFF							
		L RUN	ON: Normal communication OFF: Communication shut off (time expiration error)							
		L ERR.	ON: Communication data error Flash at regular intervals: Indicates that the station number setting or transmission speed setting switch position was changed while power is ON Flash at irregular intervals: When the setting of the terminal resistor is wrong; when the cable for the module or CC-Link is affected by noise OFF: Normal communication							
			X0 to F	ON: Input ON OFF: Input OFF						
2)	Transmission speed setting switch	Setting value		Setting switch status		Transmission speed				
			4	2	1					
		0	OFF	OFF	OFF	156 kbps				
		1	OFF	OFF	ON	625 kbps				
		2	OFF	ON	OFF	2.5 Mbps				
		3	OFF	ON	ON	5.0 Mbps				
		4	ON	OFF	OFF	10 Mbps				
		Be sure to set the transmission speed within the above range. Remove the communication adapter on the top part of the module to set the transmission speed. (When shipped from the factory, all settings are set to OFF.)								
3)	Station number setting switch	Select "10", "20" or "40" to set the tens place of the station number. Select "1", "2", "4" or "8" to set the ones place of the station number. Always set the station number within the range of 1 to 64. (*1) (Example) Set the switches as below when setting the station number to 32:								
		Station number		Tens place		Ones place				
		40	20	10	8	4	2	1		
32		OFF	ON	ON	OFF	OFF	ON	OFF		
Remove the communication adapter on the top part of the module to set the station number. (When shipped from the factory, all settings are set to OFF.)										
4)	Terminal resistance setting switch	The terminal resistor can be turned to the ON setting by using the select switch.								
		DIP switch1		DIP switch 2		Contents				
		OFF		OFF		No terminal resistance				
		ON		OFF		110Ω resistor ON				
		OFF		ON		130Ω resistor ON				
ON		ON		Setting prohibited						
(When shipped from the factory, all settings are set to OFF.)										
5)	Waterproof connector for transmission line *2			Silk					Contents	
		a	LINK	IN		Connector for connecting the transmission line from the IN side (master station side). (Male 4 pins)				
		b	LINK	OUT		Connector for connecting the transmission line from the OUT side. Be sure to attach the waterproof cap when not in use. (Female 5 pins) (Tightening torque range: 29 to 34 N.cm)				
6)	Waterproof connector for power line *2			Silk					Contents	
		c	UNIT POWER		Connector for supplying power to the module. (Male 5 pins)					
		d	AUX.		Connector for supplying power to a load, etc. (Male 5 pins)					
7)	Waterproof connector for input connection *2	Waterproof connector for connection Input signal. (Female 5 pins) Be sure to attach waterproof cap A6CAP-WP2 (sold separately) when not in use. (Tightening torque range: 29 to 34 N.cm)								
8)	FG metal fitting	For module FG terminal (tightening torque range: 78 to 118 N.cm)								
9)	Communication adapter fixing screw	When replacing the main body online or changing switch setting, attach/remove the communication adapter with this screw. (Tightening torque range: 42 to 58 N.cm)								
10)	Module attachment hole	Screw hole for module attachment. 2-4.5 X 6 length hole (M4 attachment screw) (Tightening torque range: 78 to 118 N.cm)								

*1: Duplicate station number cannot be set.

*2: Waterproof connector (based on IEC947-5-2, M12 type)