
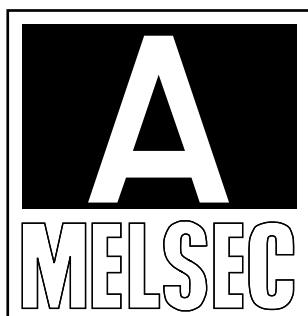


MITSUBISHI

Digital-Analog Converter Module Type AJ65VBTCU-68DAVN

User's Manual

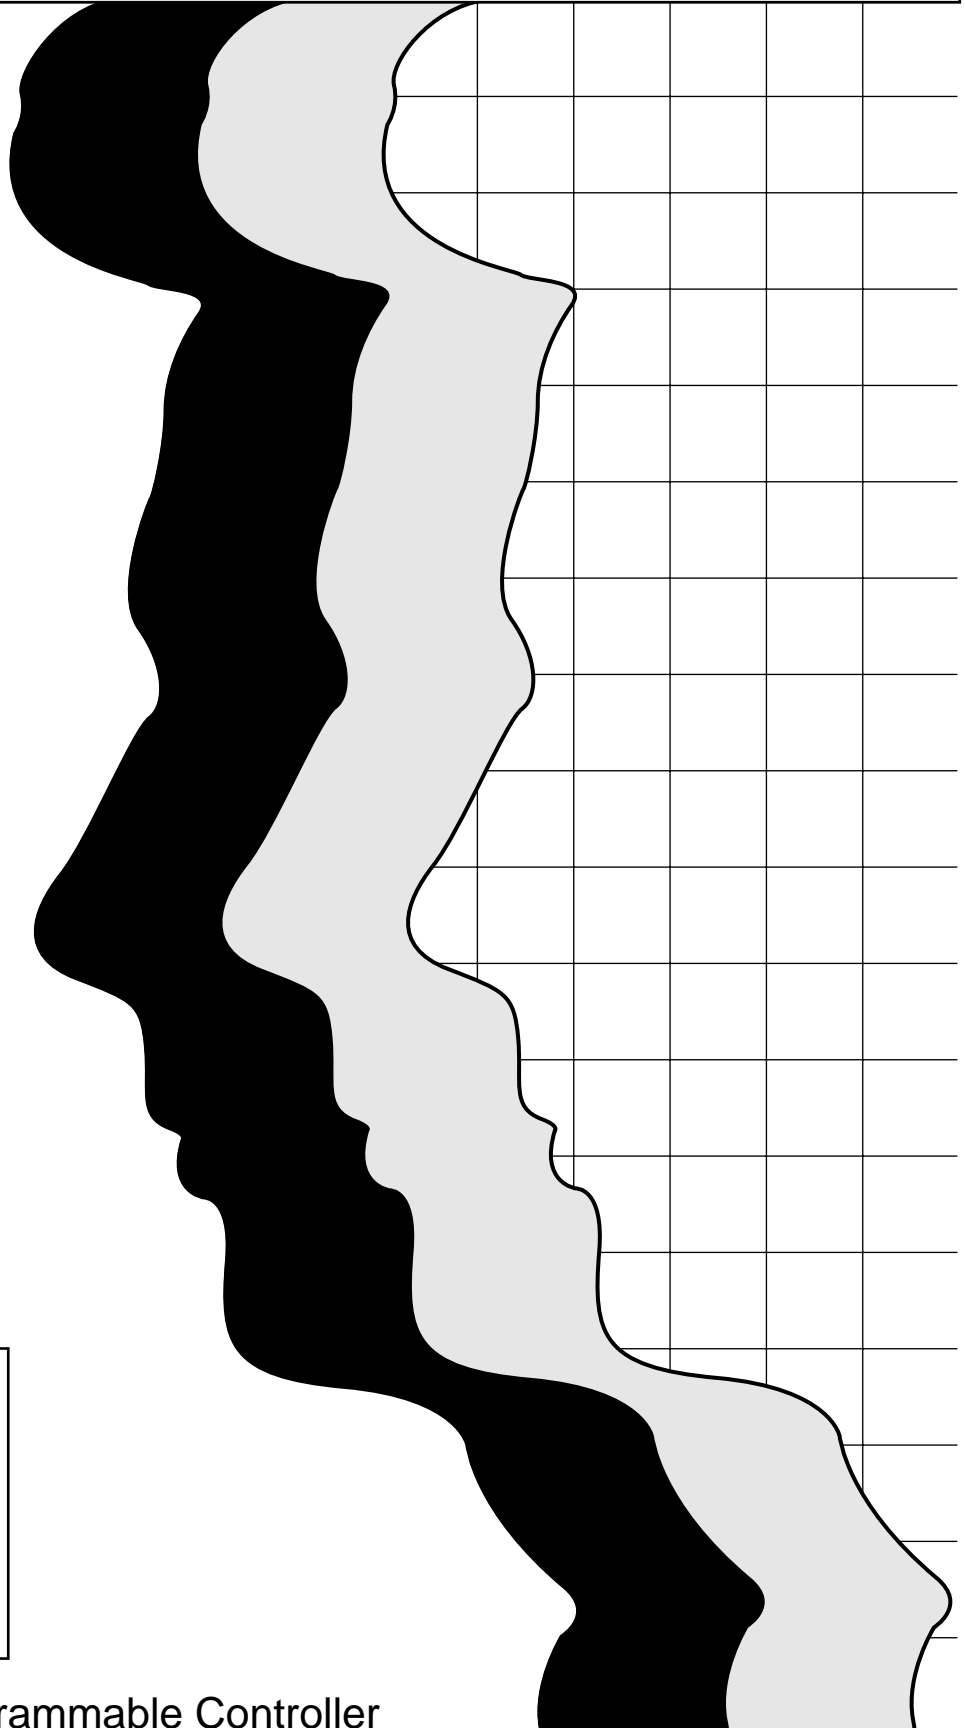

Mitsubishi Programmable Controller

• SAFETY PRECAUTIONS •

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".




DANGER

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious consequence according to the circumstances. Always follow the precautions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[Design Precautions]

DANGER

- Configure a safety circuit so that the safety of the overall system is maintained even when an external power error or PLC error occurs.

Accident may occur due to output error or malfunctioning.

- (1) The status of analog output changes depending on the setting of various functions that control the analog output. Take sufficient caution when setting for those functions.

For details of analog output status, refer to Section 3.4.1 "Combinations of functions in each part"

- (2) Normal output may not be obtained due to malfunctions of output elements or the internal circuits.

Configure a circuit to monitor signals which may lead to a serious accident.

CAUTION

- Do not bunch the control wires or communication cables with the main circuit or power wires, or install them close to each other.

They should be installed 100mm (3.9inch) or more from each other.

Not doing so could result in noise that would cause erroneous operation.

- At power ON/OFF, voltage or current may instantaneously be output from the output terminal of this module.

In such case, wait until the analog output becomes stable to start controlling the external device.

[Installation Precautions]

CAUTION

- Use the PLC in the environment that meets the general specifications contained in this Manual. Using the PLC outside the range of the general specifications may result in electric shock, fire or malfunction, or may damage or degrade the module.
- Securely fix the module to a DIN rail or securely fix it with the CC-Link connector type metal installation fitting.
Not doing so can cause a drop or malfunction.
- Do not touch the conducted area of the module.
Doing so may cause module malfunction or breakdowns.

[Wiring Precautions]

CAUTION

- Be sure to shut off all phases of the external power supply used by the system before installation or wiring.
Not doing so can cause the product to be damaged or malfunction.
- Always ground the FG pin to the protective ground conductor.
Not doing so can cause a malfunction.
- Wire the module correctly after confirming the rated voltage and pin layout of the product.
Not doing so can cause a fire or failure.
- Ensure that no foreign matter such as chips and wire-offcuts enter the module.
Foreign matter can cause a fire, failure or malfunction.
- Do not insert the one-touch connector plug for I/O of the one-touch connector type/connector type compact remote I/O unit into the one-touch connector for analog I/O accidentally.
Doing so can cause the module to be damaged.
- Always fit a non-wired, one-touch connector plug to the open one-touch connector for power supply/FG.
Not doing so can cause a failure or malfunction.
- When connecting the wires or cables to the module, always run them in conduits or clamp them.
Not doing so can damage the module and cables due to loose, moved or accidentally pulled cables or can cause a malfunction due to a cable connection fault.
- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- When disconnecting the communication and power supply cables from the module, do not hold and pull the cable part.
Disconnect the cables after loosening the screws in the portions connected to the module.
Pulling the cables connected to the module can damage the module and cables or can cause a malfunction due to a cable connection fault.

[Starting and Maintenance Precautions]

CAUTION

- Do not touch the pin while the power is on. Doing so may cause malfunction.
- Be sure to shut off all phases of the external power supply used by the system before cleaning. Not doing so can cause the module to fail or malfunction.
- Never disassemble or modify the module. This may cause breakdowns, malfunctioning, injury and/or fire.
- Do not drop the module or give it hard impact since its case is made of resin. Doing so can damage the module.
- Be sure to shut off all phases of the external power supply used by the system before mounting or dismounting the module to or from the panel. Not doing so can cause the module to fail or malfunction.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module. Failure to do so may cause a failure or malfunctions of the module.

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Apr., 2003	SH (NA)-080402E-A	First Printing
Sep., 2004	SH (NA)-080402E-B	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Addition</div> Section 4.8.3, 4.10.1 to 4.10.3 <div style="border: 1px solid black; padding: 2px; display: inline-block;">Correction</div> SAFETY PRECAUTIONS, About Manuals, Section 1.2, 2.4, 3.2, 3.6.6, 4.8.2
Jul., 2005	SH (NA)-080402E-C	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Correction</div> SAFETY PRECAUTIONS
Dec., 2006	SH (NA)-080402E-D	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Correction</div> Section 4.3, Appendix 2

Japanese Manual Version SH-080397-D

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2003 MITSUBISHI ELECTRIC CORPORATION

INTRODUCTION

Thank you for choosing a Mitsubishi MELSEC-A Series General Purpose Programmable Controller.
Before using your new PLC, please read this manual thoroughly to gain an understanding of its functions so you can use it properly.

CONTENTS

SAFETY PRECAUTIONS	A- 1
REVISIONS	A- 4
INTRODUCTION	A- 5
About Manuals	A- 7
Conformation to the EMC Directive and Low Voltage Instruction	A- 7
About the Generic Terms and Abbreviations	A- 8
Product components	A- 9
1. OVERVIEW	1- 1 to 1- 3
1.1 CC-Link Compatible Functions	1- 1
1.2 Features	1- 2
2. SYSTEM CONFIGURATION	2- 1 to 2- 6
2.1 Overall Configuration	2- 1
2.2 Applicable System	2- 3
2.3 Precautions for System Configuration	2- 4
2.4 Parts Sold Separately	2- 5
3. SPECIFICATION	3- 1 to 3- 19
3.1 General Specification	3- 1
3.2 Performance Specification	3- 2
3.3 I/O Conversion Characteristics	3- 3
3.3.1 Voltage output characteristics	3- 4
3.3.2 Relationship between offset/gain setting and analog output value	3- 5
3.3.3 Accuracy	3- 5
3.3.4 Conversion speed	3- 6
3.4 Function	3- 7
3.4.1 Combinations of various functions	3- 8
3.5 Remote I/O Signals	3- 9
3.5.1 Remote I/O signal list	3- 9
3.5.2 Functions of the remote I/O signals	3-12
3.6 Remote Register	3-14
3.6.1 Allocation of the remote register	3-14
3.6.2 CH. <input type="checkbox"/> digital value setting (Addresses RWwm+0H to RWwm+7H)	3-16
3.6.3 Analog output enable/disable setting (Address RWwm+8H)	3-16
3.6.4 CH. <input type="checkbox"/> output range setting (Address RWwm+9H, RWwm+AH)	3-17
3.6.5 HOLD/CLEAR setting (Address RWwm+BH)	3-17
3.6.6 CH. <input type="checkbox"/> check code (Addresses RWrn+0H to RWrn+7H)	3-18
3.6.7 Error code (Address RWrn+8H)	3-18

4. SETUP AND PREPARATION BEFORE OPERATION	4- 1 to 4- 23
--	----------------------

4.1 Pre-Operation Procedure.....	4- 1
4.2 Precautions When Handling	4- 1
4.3 Name of Each Part.....	4- 3
4.4 Concept of Mode Select Switch Setting (Selection of Remote Device Station Compatible Version)...	4- 6
4.5 Offset/Gain Setting.....	4- 8
4.6 Section Number Setting.....	4-10
4.7 Facing Direction of the Module Installation	4-10
4.8 Data Link Cable Wiring	4-11
4.8.1 Instructions for handling the CC-Link dedicated cables.....	4-11
4.8.2 Connection of the CC-Link dedicated cables	4-12
4.8.3 How to connect connectors	4-13
4.9 Wiring.....	4-14
4.9.1 Wiring precautions.....	4-14
4.9.2 Wiring of module with external equipment	4-15
4.10 How to Wire the One-Touch Connector Plug	4-16
4.10.1 Wiring procedures for the one-touch connector.....	4-16
4.10.2 Wiring procedures for the one-touch connector for communication	4-19
4.10.3 Wiring procedures for the one-touch connector for power supply and FG	4-21
4.11 Maintenance and Inspection.....	4-23

5. PROGRAMMING	5- 1 to 5- 29
-----------------------	----------------------

5.1 Programming Procedure.....	5- 1
5.2 When Remote Net Ver. 1 Mode Is Used.....	5- 2
5.2.1 Conditions of Program Example.....	5- 2
5.2.2 Program Example for Use of the QCPU (Q mode).....	5- 4
5.2.3 Program Example for Use of the QnACPU.....	5- 7
5.2.4 Program Example for Use of the ACPU/QCPU (A mode) (dedicated instructions).....	5- 9
5.2.5 Program Example for Use of the ACPU/QCPU (A mode) (FROM/TO instructions)	5-12
5.3 When Remote Net Ver. 2 Mode Is Used.....	5-14
5.3.1 Conditions of program examples	5-14
5.3.2 Setting of parameters and initialization procedure registration.....	5-17
5.3.3 Program example	5-20
5.4 When Remote Net Additional Mode Is Used	5-22
5.4.1 Conditions of program examples	5-22
5.4.2 Setting of parameters and initialization procedure registration.....	5-25
5.4.3 Program example.....	5-28

6. TROUBLESHOOTING	6- 1 to 6- 5
---------------------------	---------------------

6.1 Error Code List	6- 1
6.2 Using the LED Indications to Check Errors.....	6- 2
6.3 Troubleshooting for the Case where the "ERR." LED of the Master Station Flickers	6- 4

APPENDIX	Appendix- 1 to Appendix- 3
-----------------	-----------------------------------

Appendix 1 Comparison, Differences and Compatibility between New and Conventional Models.....	Appendix- 1
Appendix 2 External dimension diagram.....	Appendix- 3

INDEX	Index- 1 to Index- 2
--------------	-----------------------------

About Manuals

The following manuals are also related to this product.

In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
CC-Link System Master/Local Module User's Manual type AJ61BT11/A1SJ61BT11 Describes the system configuration, performance specifications, functions, handling, wiring and troubleshooting of the AJ61BT11 and A1SJ61BT11. (Optionally available)	IB-66721 (13J872)
CC-Link System Master/Local Module User's Manual type AJ61QBT11/A1SJ61QBT11 Describes the system configuration, performance specifications, functions, handling, wiring and troubleshooting of the AJ61QBT11 and A1SJ61QBT11. (Optionally available)	IB-66722 (13J873)
CC-Link System Master/Local Module User's Manual type QJ61BT11N Describes the system configuration, performance specifications, functions, handling, wiring and troubleshooting of the QJ61BT11N. (Optionally available)	SH-080394 (13JR64)
Programming Manual type AnSHCPU/AnACPU/AnUCPU/QCPU-A (A Mode) (Dedicated Instructions) Explains the instructions extended for the AnSHCPU/AnACPU/AnUCPU/QCPU-A (A Mode). (Optionally available)	IB-66251 (13J742)

Conformation to the EMC Directive and Low Voltage Instruction

When complying with EMC Directives and Low-Voltage Directives by assembling a Mitsubishi PLC compatible with EMC Directive and Low-Voltage Directives into the user product, refer to Chapter 3 "EMC Directives and Low-Voltage Directives" in the User's Manual (Hardware) for the CPU module being used.

The CE logo is printed on the rating plate on the main body of the PLC that conforms to the EMC directive and low voltage instruction.

To conform this product to the EMC Directive and Low Voltage Directive, refer to the Section of "CC-Link Modules" in Chapter 3 "EMC Directive and Low Voltage Directive" of the User's Manual (Hardware) of the CPU module used.

About the Generic Terms and Abbreviations

Unless otherwise specified, the following generic terms and abbreviations are used in this manual to describe Type AJ65VBTCU-68DAVN analog-digital converter module.

Generic Term/Abbreviation	Description
GX Developer	Generic product name of the product types SWnD5C-GPPW-E, SWnD5C-GPPW-EA, SWnD5C-GPPW-EV and SWnD5C-GPPW-EVA (n in the type indicates 4 or more.)
ACPU	Generic term for A0J2HCPU, A1SCPU, A1SCPUC24-R2, A1SHCPU, A1SJCPU, A1SJCPU-S3, A1SJHCPU, A1NCP, A2NCP, A2NCP-S1, A3NCP, A2SCPU, A2SHCPU, A2ACPU, A2ACPU-S1, A3ACPU, A2UCPU, A2UCPU-S1, A2USCPU, A2USCHPU-S1, A2USHCPU-S1, A3UCPU and A4UCPU
QnACPU	Generic term for Q2ACPU, Q2ACPU-S1, Q2ASCPU, Q2ASCPU-S1, Q2ASHCPU, Q2ASHCPU-S1, Q3ACPU, Q4ACPU, Q4ARCPU
QCPU (A mode)	Generic term for Q02CPU-A, Q02HCPU-A, Q06HCPU-A
QCPU (Q mode)	Generic term for Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q12PHCPU and Q25PHCPU
Master station	Station that controls the data link system. One master station is required for each system.
Local station	Station having a PLC CPU and the ability to communicate with the master and other local stations.
Remote I/O station	Remote station that handles bit unit data only. (Performs input and output with external devices.) (AJ65BTB1-16D, AJ65SBTB1-16D)
Remote device station	Remote station that handles bit unit and word unit data only. (Performs input and output with external devices, and analog data exchange.)
Remote station	Generic term for remote I/O station and remote device station. (Controlled by the master station)
Intelligent device station	Station that can perform transient transmission, such as the AJ65BT-R2 (including local stations).
Master module	Generic term for QJ61BT11N, QJ61BT11, AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11 when they are used as master stations.
SB	Link special relay (for CC-Link) Bit unit information that indicates the module operating status and data link status of the master station/local station. (Expressed as SB for convenience)
SW	Link special register (for CC-Link) 16 bit unit information that indicates the module operating status and data link status of the master station/local station. (Expressed as SW for convenience)
RX	Remote input (for CC-Link) Information entered in bit units from the remote station to the master station. (Expressed as RX for convenience)
RY	Remote output (for CC-Link) Information output in bit units from the master station to the remote station. (Expressed as RY for convenience)
RWw	Remote register (Write area for CC-Link) Information output in 16-bit units from the master station to the remote device station. (Expressed as RWw for convenience)
RWr	Remote register (Read area for CC-Link) Information entered in 16-bit units from the remote device station to the master station. (Expressed as RWr for convenience)

Product components

This product consists of the following.

Product Name	Quantity
Type AJ65VBTCU-68DAVN digital-analog converter module	1
Type AJ65VBTCU-68DAVN digital-analog converter module user's manual (hardware)	1

1 OVERVIEW

1

This user's manual explains the specifications, handling, programming methods and others of Type AJ65VBTCU-68DAVN digital-analog converter module (hereafter abbreviated to the "AJ65VBTCU-68DAVN") which is used as a remote device station of a CC-Link system.

The AJ65VBTCU-68DAVN is a module designed to convert digital values (16-bit signed BIN data) from outside the PLC into analog values (voltages or currents). This module is a voltage output-dedicated model.

For the explanation of this product, the conventional AJ65VBTCU-68DAV digital-analog converter module (hereafter abbreviated to the "AJ65VBTCU-68DAV") is also described in some parts of this manual.

1.1 CC-Link Compatible Functions

This product supports the following CC-Link functions.

- Cyclic transmission
- Expanded cyclic transmission
- Interstation cable length lessening

1.2 Features

This section gives the features of the AJ65VBTCU-68DAVN.

(1) High accuracy

This module performs D/A conversion at the accuracy of $\pm 0.3\%$ relative to the maximum value of the analog output value at the operating ambient temperature of 0 to 55°C, or at $\pm 0.2\%$ relative to the maximum value of the analog output value at the operating ambient temperature of 25 \pm 5°C.

(2) Output range selectable per channel

You can choose the analog output range per channel to change the I/O conversion characteristics.

(3) High resolution of 1/ \pm 4000


By changing the output range, you can choose and set the resolution to either 1/4000 or 1/ \pm 4000 (when the -10 to +10V range or user range setting 1 is selected) to provide high-resolution analog values.

(4) Setting of analog output hold or clear at STOP of PLC CPU

You can specify whether to hold or clear the analog value which is being output from each channel of the unit when the PLC CPU has entered the STOP mode or the AJ65VBTCU-68DAV has stopped D/A conversion due to error occurrence.

(5) Sharply reducible wiring man-hours

Wiring man-hours can be reduced sharply by adopting individual wire insulation displacement termination type one-touch connectors (no need for soldering, shield peeling and screwing) to connect the communication and power supply cables.

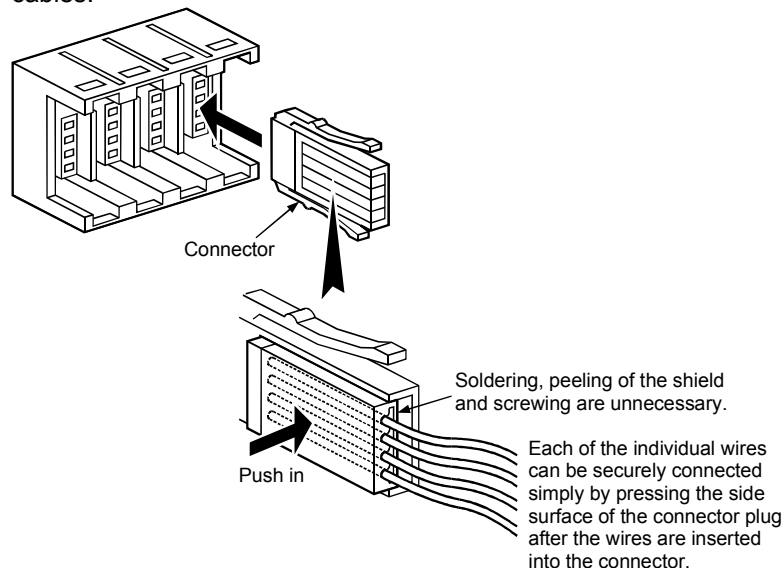


(6) Significant improvement of wiring performance

The above one-touch connectors for IN and OUT sides are plugged individually, greatly improving the performance of jumper wiring especially in an enclosure. (Mixed jumper wiring of the power supply cables with the I/O modules is not allowed.)

(7) Replacement of module without stopping CC-Link system

The use of the online connectors (for communication, for power supply) allows the module to be changed without the CC-Link system being stopped.

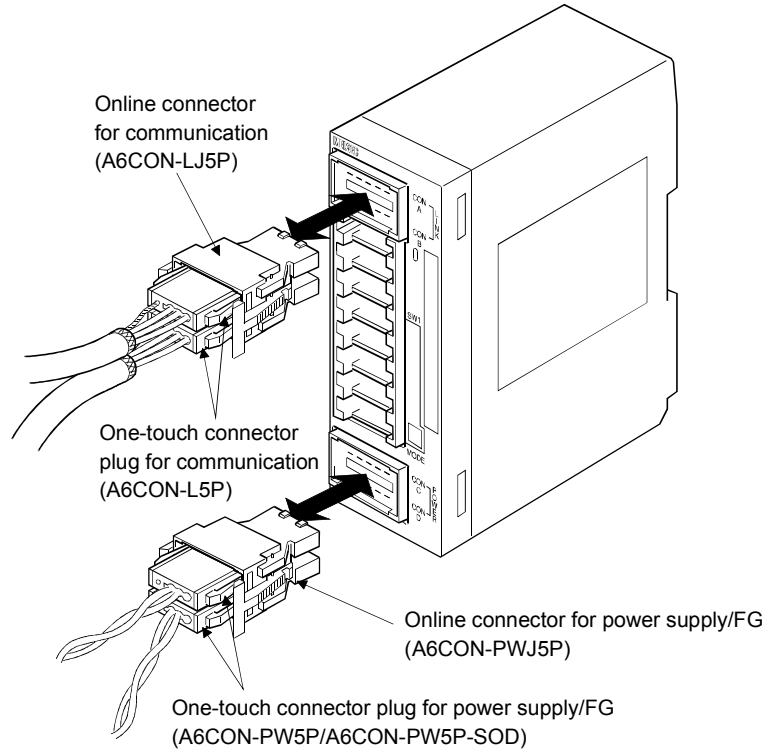

(8) Improved wiring workability

The connectors and setting switches are all front-mounted. This enables connections to be made only by front wiring, improving wiring workability. It also allows setting to be made after installation to an enclosure.

(9) Compatibility with conventional modules

Complete compatibility with the conventional AJ65VBTCU-68DAV module has been achieved in the ver. 1 remote device station setting. (Refer to Section 4.4.)

(10) Selection of optimum mode for system

The optimum mode can be selected according to the system. (Refer to Section 4.4.)

Mode	Outline
Remote net ver. 2 mode	Select this mode when configuring a new system. The number of connected remote device stations can be increased to up to 42 in combination with the applicable master module.
Remote net additional mode	This module can be newly added to the existing system in combination with the applicable master module.
Remote net ver. 1 mode	Complete compatibility mode of the conventional remote net mode. Select this mode when system expansion is not necessary or when this module replaces the conventional one as a maintenance product.

2 SYSTEM CONFIGURATION

This chapter describes the system configuration for use of the AJ65VBTCU-68DAVN.


2.1 Overall Configuration

The overall configuration for use of the AJ65VBTCU-68DAVN is shown below.


(1) Remote net ver. 1 mode

CC-Link master/local module (master station)
(QJ61BT11(N), A(1S)J61BT11, A(1S)J61QBT11)

CC-Link master/local module (local station)
(QJ61BT11(N), A(1S)J61BT11, A(1S)J61QBT11)

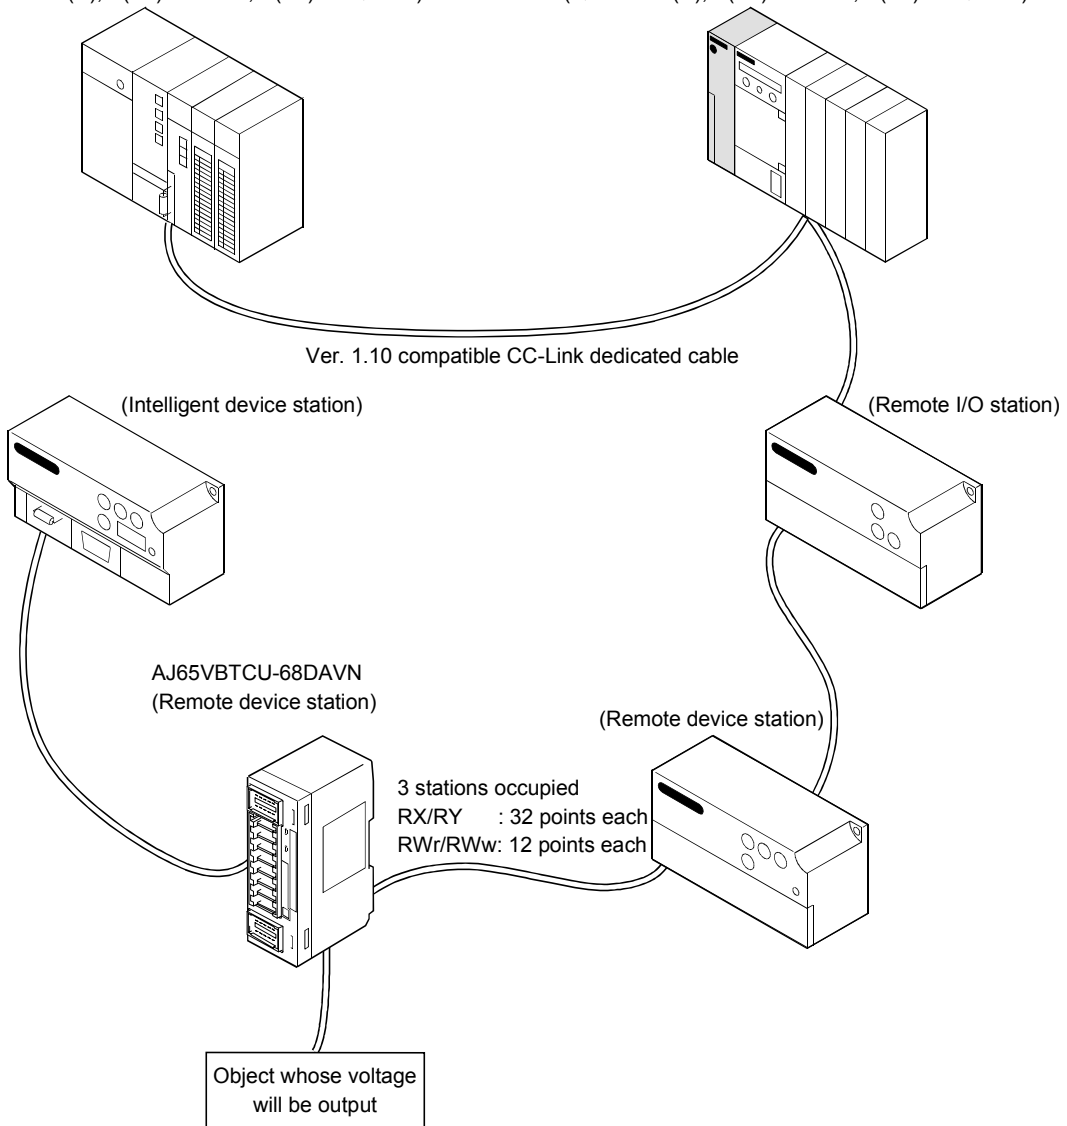

(2) Remote net ver. 2 mode, remote net additional mode

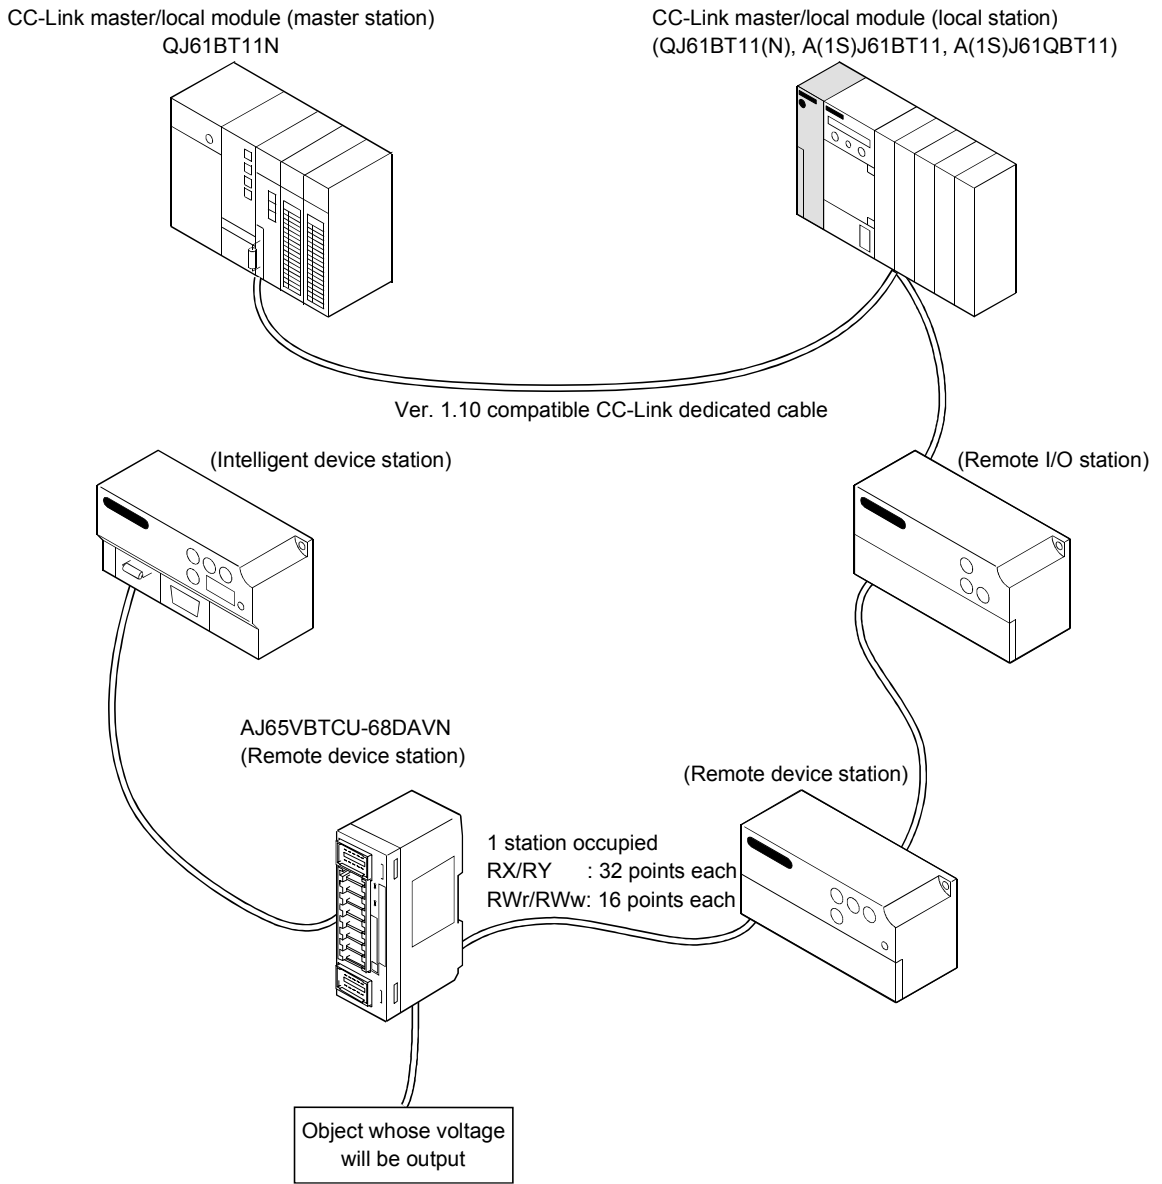

2.2 Applicable System

This section explains the applicable system.

(1) Applicable master modules

The following master modules can be used with the AJ65VBTCU-68DAVN.

(a) For use in the remote net ver. 1 mode

- QJ61BT11N
- QJ61BT11
- AJ61BT11
- A1SJ61BT11
- AJ61QBT11
- A1SJ61QBT11

(b) For use in the remote net ver. 2 mode or remote net additional mode

- QJ61BT11N

(2) Applicable combinations

The following table indicates usability according to the combinations of the master modules, the mode setting and station information (station type) of the GX Developer network parameters, and the mode select switch setting of the module.

○: Usable, ×: Unusable

Master Module	GX Developer Network Parameter Setting		Model Select Switch Setting *1 of AJ65VBTCU-68DAN	
	Mode setting	Station information (station type)	Ver. 1 remote device station (Ver. 1 compatible slave station)	Ver. 2 remote device station (Ver. 2 compatible slave station)
QJ61BT11 AJ61BT11 A1SJ61BT11 AJ61QBT11 A1SJ61QBT11	Remote net ver. 1 mode	Remote device station	○	×
	Remote net ver. 2 mode	Ver. 1 remote device station	×	×
		Ver. 2 remote device station		
	Remote net additional mode	Ver. 1 remote device station	×	×
Ver. 2 remote device station				
QJ61BT11N	Remote net ver. 1 mode	Remote device station	○	×
	Remote net ver. 2 mode	Ver. 1 remote device station	○	×
		Ver. 2 remote device station	×	○
	Remote net additional mode	Ver. 1 remote device station	○ *2	×
Ver. 2 remote device station		×	○ *3	

*1 For details, refer to Section 4.3 and Section 4.4.

*2 When there is a station number used as the ver. 2 remote device station in the existing system, set the station number of the ver. 1 remote device station to be added before that station.

*3 Set the station number of the ver. 2 remote device station to be added after the station numbers used in the existing system.

POINT
For use in the remote net ver. 2 mode or remote net additional mode, the master module of QJ61BT11N and the peripheral software package of GX Developer Version 8.03D or later are required. For more information on the applicable modules (CPU modules, network modules) and applicable software packages, refer to the CC-Link System Master/Local Module User's Manual (Details) QJ61BT11N.

(3) Restrictions on use of CC-Link dedicated instructions (RLPA, RRPA)

The CC-Link dedicated instructions may not be used depending on the PLC CPU and master module used.

For details of the restrictions, refer to the A series master module user's manual, and the Programming Manual type AnSHCPU/AnACPU/AnUCPU/QCPU-A (A mode) (Dedicated Instructions).

This module does not allow the use of the dedicated instructions other than RLPA and RRPA.

Refer to Section 5.5 for a program example using the dedicated instructions (RLPA, RRPA).

2.3 Precautions for System Configuration

Before powering off or changing this module, stop the control of the mating equipment.

2.4 Parts Sold Separately

The plugs for AJ65VBTCU-68DAVN are sold separately.
Please purchase them as necessary.

	Mitsubishi model name	Part model name (manufacturer)	Specifications			Color of the cover
			Applicable cable core size (mm ²)	Applicable cable outer diameter (mm)	Maximum rated current (A)	
Plug for one-touch connector * 1, * 4	A6CON-P214	33104-6000FL * 5	0.14 to 0.2 (AWG#26 to 24)	φ 1.0 to 1.4	2	Transparent
	A6CON-P220	33104-6100FL * 5		φ 1.4 to 2.0		Yellow
	A6CON-P514	33104-6200FL * 5	0.3 to 0.5 (AWG#22 to 20)	φ 1.0 to 1.4	3	Red
	A6CON-P520	33104-6300FL * 5		φ 1.4 to 2.0		Blue
One-touch connector plug for communication * 2, * 4	A6CON-L5P	35505-6000-BOM GF * 5	communication line 0.5 (AWG#20)	φ 2.2 to 3.0		Red
			shielded cable (drain wire) 0.5 (AWG#20)			
One-touch connector for power supply/FG * 2, * 4, * 6	A6CON-PW5P	35505-6080-A00 GF * 5	0.75 (0.66 to 0.98) (AWG#18) wire diameter 0.16 mm or more Outer insulation layer material PVC (Heat-resistant vinyl)	φ 2.2 to 3.0	7	Gray
	A6CON-PW5P-SOD	35505-6180-A00 GF * 5		φ 2.0 to 2.3		Blue
Online connector for communication * 3	A6CON-LJ5P	35720-L200-B00 AK * 5	—	—	—	—
Online connector for power supply/FG * 3	A6CON-PWJ5P	35720-L200-A00 AK * 5	—	—	—	—
One-touch connector plug with terminating resistor (including 1)	A6CON-TR11	—	One-touch connector plug with terminating resistor attached for communication (110Ω)	—	—	—

*1 Mitsubishi's A6CON-P□□□ includes 20 plugs.

*2 Mitsubishi's A6CON-□5P includes 10 plugs.

*3 Mitsubishi's A6CON-□J5P includes 5 plugs.

*4 Once insulation-displaced, the one-touch connector plugs cannot be reused.

*5 Sumitomo 3M Co., Ltd.

*6 Confirm the outer sheath diameter of the applicable cable and select the connector.

REMARK

The following table indicates the connectors of this module with which the above plugs/connectors are compatible.

Connector of This Module	Compatible Optional Parts
One-touch connector for communication	<ul style="list-style-type: none">• One-touch connector plug for communication• Online connector for communication• One-touch connector plug with terminating resistor
One-touch connector for power supply/FG	<ul style="list-style-type: none">• One-touch connector plug for power supply/FG• Online connector for power supply/FG
One-touch connector for analog I/O	<ul style="list-style-type: none">• Plug for one-touch connector

3 SPECIFICATION

This chapter provides the specifications of the AJ65VBTCU-68DAVN.

3.1 General Specification

Table 3.1 indicates the general specifications of the AJ65VBTCU-68DAVN.

Table 3.1 General specification

Item	Specification				
Usage ambient temperature	0 to 55°C				
Storage ambient temperature	-20 to 75°C				
Usage ambient humidity	10 to 90%RH, no condensation				
Storage ambient humidity	10 to 90%RH, no condensation				
Vibration durability	Conforming to JIS B 3502, IEC 61131-2	When there is intermittent vibration			
		Frequency	Acceleration	Amplitude	Sweep count
		10 to 57Hz	—	0.075mm (0.0030inch)	
		57 to 150Hz	9.8m/s ²	—	
		When there is continuous vibration			
		Frequency	Acceleration	Amplitude	10 times in each direction X, Y, Z (80 minutes)
		10 to 57Hz	—	0.035mm (0.0014inch)	
		57 to 150Hz	4.9m/s ²	—	
Shock durability	Conforming to JIS B 3502, IEC61131-2 (147m/s ² , 3 times each in 3 directions)				
Usage environment	No corrosive gas				
Usage height	Less than 2000 m (less than 6562 ft.)				
Installation area	Within the control board				
Over-voltage category *1	Less than II				
Pollution level *2	Less than 2				

*1 Indicates the location where the device is connected from the public cable network to the device structure wiring area.

Category II applies to the devices to which the power is supplied from a fixed equipment.
Surge withstand voltage for devices with up to 300V of rated voltage is 2500V.

*2 This is an index which indicates the degree of conductive object generation in the environment Pollution level 2 is when only non-conductive pollution occurs.

A temporary conductivity caused by condensation must be expected occasionally.

*3 Do not operate or store the PLC in the environment where the pressure applied is equal to greater than the atmospheric pressure at the altitude of 0m. Doing so may cause a malfunction.

Please consult our branch office when the PLC is to be operated under pressure.

3.2 Performance Specification

Table 3.2 indicates the performance specifications of the AJ65VBTCU-68DAVN.

Table 3.2 Performance Specifications

Item		AJ65VBTCU-68DAVN				
Protection class		IP1XB				
Digital input		16-bit signed binary (-4096 to +4095)				
Analog output		-10 to +10VDC (external load resistance: 2kΩ to 1MΩ)				
I/O characteristics, maximum resolution, accuracy (accuracy relative to maximum value of analog output value)		Digital Input Value	Analog Output Range	Accuracy		Max. Resolution
				Ambient temperature 0 to 55°C	Ambient temperature 25±5°C	
		-4000 to +4000	-10 to +10V	±0.3% (±30mV)	±0.2% (±20mV)	2.5mV
			User range setting 1 (-10 to +10V)			
			0 to 4000	0 to 5V	±0.3% (±15mV)	
1 to 5V	1.0mV					
User range setting 2 (0 to 5V)						
Maximum conversion speed		1ms/channel				
Output short-circuit protection		Provided				
Absolute maximum output		±12V				
Number of analog output points		8 channels/module				
CC-Link station type		Remote device station (Ver.1 remote device station, Ver.2 remote device station)				
Number of occupied stations		When Ver.1 remote device station (Ver.1-compatible slave station) is set: 3 stations When Ver.2 remote device station (Ver.2-compatible slave station) is set: 1 station (Expanded cyclic setting: Quadruple)				
Communication cable		Ver. 1.10 compatible CC-Link dedicated cable FANC-110SBH, FA-CBL200PSBH, CS-110				
Isolation specifications		Specific isolated area	Isolation method	Dielectric withstand voltage	Insulation resistance	
		Across communication system terminals and all analog output terminals	Photocoupler isolation	500V AC for 1 minute	5MΩ or higher, measured with 500V DC insulation resistance tester	
		Across power supply system terminals and all analog output terminals	Transformer isolation			
		Between channels	Not isolated	-	-	
Noise durability		By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency				
External wiring system		One-touch connector for communication [Transmission circuit] (5 pins pressure welding type, the plug for the connector is sold separately) One-touch connector for power supply and FG [Unit power supply and FG] (5 pins pressure welding type, the plug for the connector is sold separately) One-touch connector for analog I/O (4 pins pressure welding type, the plug for the connector is sold separately) <Sold separately> Online connector for communication : A6CON-LJ5P Online connector for power supply : A6CON-PWJ5P				
Applicable wire size	One-touch connector for communication	Communication line : Ver. 1.10 compatible CC-Link dedicated cable 0.5mm ² (AWG#20) [φ2.2 to 3.0], shielded wire 0.5mm ² (AWG#20)				
	One-touch connector for power supply/FG	0.66 to 0.98 mm ² (AWG#18) [φ2.2 to 3.0] Wire diameter 0.16 mm or more				
	One-touch connector for analog I/O	φ1.0 to 1.4 (A6CON-P214), φ1.4 to 2.0 (A6CON-P220) [Applicable cable : 0.14 to 0.2 mm ²] φ1.0 to 1.4 (A6CON-P514), φ1.4 to 2.0 (A6CON-P520) [Applicable cable : 0.3 to 0.5 mm ²]				
Applicable DIN rail		TH35-7.5Fe, TH35-7.5Al (conforming to JIS C 2812) CC-Link connector type metal installation fitting : A6PLT-J65V1				
External supply power		24V DC (20.4V DC to 26.4V DC, ripple factor within 5%)				
		Inrush current : 4.3A, within 1.2ms				
		Current consumption 0.15A				
Weight		0.16kg				

3.3 I/O Conversion Characteristics

An I/O conversion characteristic indicates an inclination of a straight line which connects an offset value and a gain value at the time when a digital value set from the PLC CPU is converted into an analog value (voltage or current output).

The offset value is an analog value (voltage) output when the digital value set from the PLC CPU is 0.

The gain value is an analog value (voltage) output when the digital value set from the PLC CPU is 4000.

3.3.1 Voltage output characteristics

The voltage output characteristic graph is shown below.

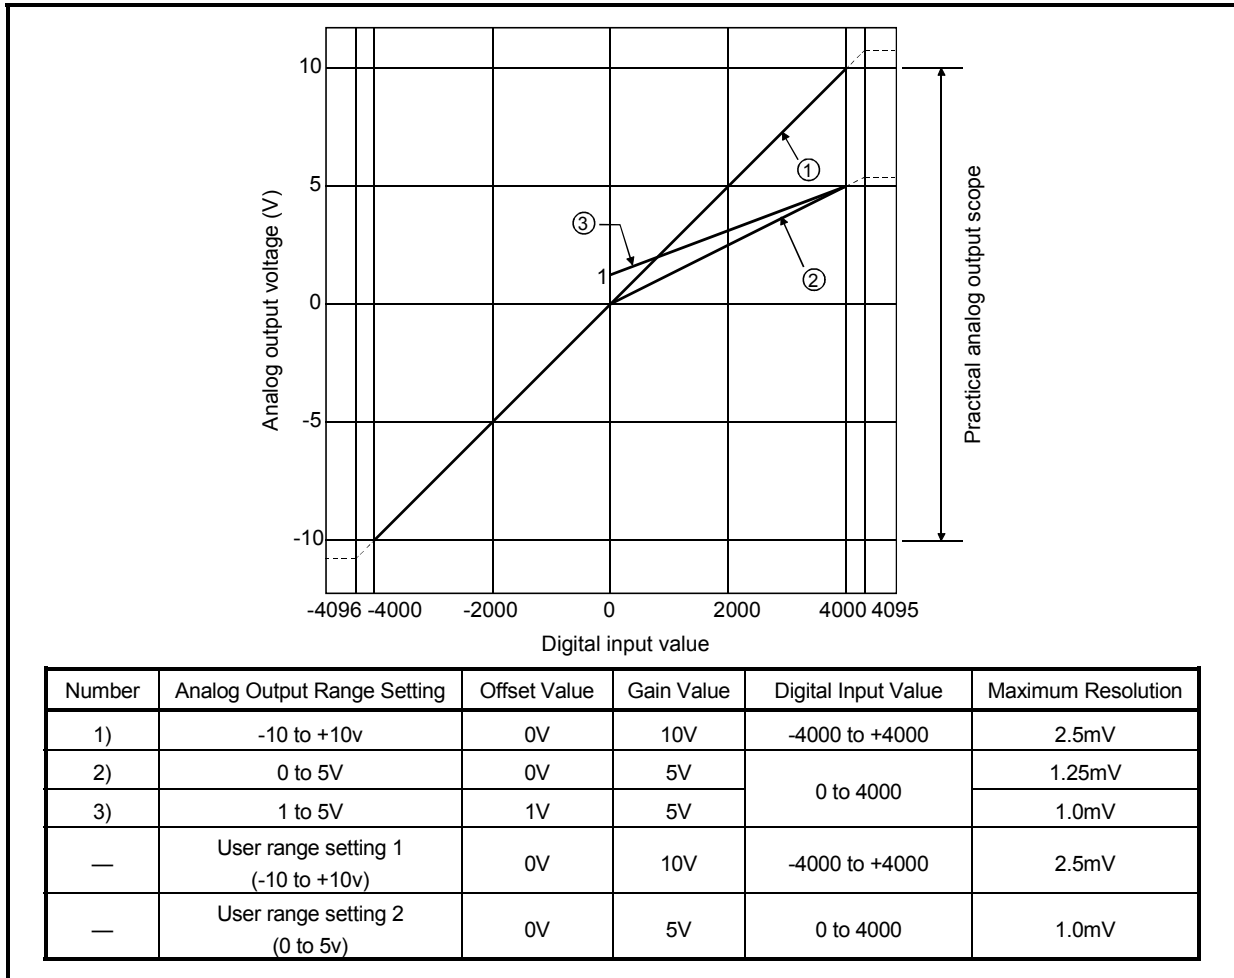


Fig. 3.1 Voltage Output Characteristic

POINT
<p>(1) Within the digital input and analog output scopes of each output range, the maximum resolution and accuracy are within the performance specification range. Outside those scopes, however, they may not fall within the performance specification range. (Avoid using the dotted line part in Fig. 3.1.)</p> <p>(2) Set the offset and gain values of the user range setting within the range satisfying the following conditions.</p> <p>(a) Setting range when user range setting 1 is selected: -10 to +10V</p> <p>(b) Setting range when user range setting 2 is selected: 0 to 5V</p> <p>(c) (Gain value) > (Offset value)</p> <p>If you attempt to make setting outside the setting range of (a) or (b), the "RUN" LED flickers at 0.5s intervals. Set the values within the setting range.</p> <p>If you attempt to make setting outside the setting range of (c), the "RUN" LED flickers at 0.5s intervals. Make setting again.</p>

3.3.2 Relationship between offset/gain setting and analog output value

How to calculate the analog output value:

The resolution of AJ65VBTCU-68DAVN can be set arbitrarily by modifying the setting of the offset value and gain value.

How to calculate the analog value resolution and the analog output value for a given digital input value when the settings of the offset value and gain value are changed is shown next.

(1) Resolution

Find the resolution with the following expression.

$$(\text{Analog resolution}) = \frac{(\text{Gain value}) - (\text{Offset value})}{4000}$$

(2) Analog output value

Find the analog output value with the following expression.

$$(\text{Analog output}) = (\text{Analog resolution}) \times (\text{Digital input value}) + (\text{Offset value})$$

3.3.3 Accuracy

Accuracy is relative to the maximum value of the analog output value.

If you change the offset/gain setting or output range to change the output characteristic, accuracy does not change and is held within the range indicated in the performance specifications.

(1) Accuracy of voltage output

For voltage output, the maximum value of the analog output value changes with the range.

For example, accuracy is relative to 5V when the 0 to 5V range is selected.

Analog output is provided at the accuracy of within $\pm 0.2\%$ ($\pm 10\text{mV}$) when the operating ambient temperature is $25\pm 5^\circ\text{C}$, or within $\pm 0.3\%$ ($\pm 15\text{mV}$) when the operating ambient temperature is 0 to 55°C .

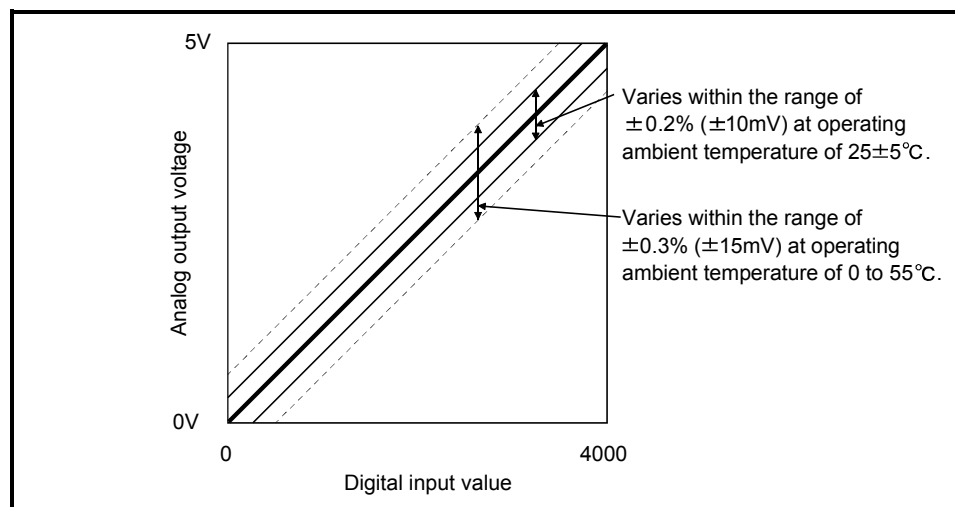


Fig. 3.2 Voltage Output Accuracy (When 0 to 5V Range Is Selected)

3.3.4 Conversion speed

Conversion speed indicates time required to read the digital output value written to the buffer memory, perform D/A conversion, and then output the specified analog value.

Conversion speed per channel of the AJ65VBTCU-68DAVN is 1ms.

Due to the data link processing time of the CC-Link system, there is a transmission delay until the D/A conversion value is read actually.

For the data link processing time, refer to the user's manual of the master module used.

Example1) Ver. 1 remote device station (ver. 1 compatible slave station) setting
Data link processing time taken in the asynchronous mode when the
master module is the QJ61BT11 (normal value)

[Calculation expression]

$SM + LS \times 1 + \text{remote device station processing time}$

SM: Scan time of master station sequence program

LS : Link scan time

Remote device station processing time: (Number of channels used + 1 *)

× 1ms

*: Internal processing time of AJ65VBTCU-68DAVN

Example 2) Ver. 2 remote device station (ver. 2 compatible slave station) setting
Data link processing time taken in the asynchronous mode when the
master module is the QJ61BT11N (normal value)

[Calculation expression]

(a) In the case of the remote input (RX), remote register (RW_r)

$SM + LS \times 1 \times m + \text{remote device station processing time}$

(b) In the case of the remote output (RY), remote register (RW_w)

$SM + LS \times 1 \times (m + 1) + \text{remote device station processing time}$

SM: Scan time of master station sequence program

LS : Link scan time

M : Constant *¹

Remote device station processing time: (Number of channels used + 1 *²)

× 1ms

*1: Expanded cyclic setting is quadruple in this module, m = 7.

*2: Internal processing time of AJ65VBTCU-68DAVN

3.4 Function

Table 3.3 lists the functions of the AJ65VBTCU-68DAVN.

Table 3.3 AJ65VBTCU-68DAVN Function List

Item	Description	Refer to												
D/A output enable/disable function	Specify whether the D/A conversion value is output or the offset value is output per channel. Note that the conversion speed is constant independently of the output enable/disable setting.	Section 3.5.2												
D/A conversion enable/disable function	Specify whether D/A conversion is enabled or disabled per channel. The sampling cycle can be shortened by setting the unused channel to D/A conversion disable.	Section 3.6.3												
Output range changing function	<p>You can set the analog output range per channel to change the I/O conversion characteristics.</p> <p>Select the output range setting from among the following 5 types.</p> <table border="1" data-bbox="453 822 1197 1032"> <thead> <tr> <th data-bbox="453 822 826 853">Output Range</th> <th data-bbox="826 822 1197 853">Set Value</th> </tr> </thead> <tbody> <tr> <td data-bbox="453 853 826 884">-10 to +10V</td> <td data-bbox="826 853 1197 884">0H</td> </tr> <tr> <td data-bbox="453 884 826 916">0 to 5V</td> <td data-bbox="826 884 1197 916">1H</td> </tr> <tr> <td data-bbox="453 916 826 947">1 to 5V</td> <td data-bbox="826 916 1197 947">2H</td> </tr> <tr> <td data-bbox="453 947 826 978">User range setting 1 (-10 to +10V)</td> <td data-bbox="826 947 1197 978">3H</td> </tr> <tr> <td data-bbox="453 978 826 1010">User range setting 2 (0 to 5V)</td> <td data-bbox="826 978 1197 1010">4H</td> </tr> </tbody> </table>	Output Range	Set Value	-10 to +10V	0H	0 to 5V	1H	1 to 5V	2H	User range setting 1 (-10 to +10V)	3H	User range setting 2 (0 to 5V)	4H	Section 3.6.4
Output Range	Set Value													
-10 to +10V	0H													
0 to 5V	1H													
1 to 5V	2H													
User range setting 1 (-10 to +10V)	3H													
User range setting 2 (0 to 5V)	4H													
Function to specify hold or clear of the analog output when the PLC CPU is in the STOP status (HOLD/CLEAR setting)	Specify per channel whether to hold or clear (output the offset value) the analog value which is being output from each channel when the PLC CPU has entered the STOP status or the AJ65VBTCU-68DAVN has stopped D/A conversion due to error occurrence.	Section 3.6.5												
Offset/gain setting	You can make offset/gain setting per channel without potentiometers to change the I/O conversion characteristics freely.	Section 4.4												

3.4.1 Combinations of various functions

You can set the analog output as indicated in Table 3.4 by combining the Analog output enable/disable setting (RWwm+8), CH. analog output enable/disable flag (RYn0 to RYn7) and HOLD/CLEAR setting (RWwm+B).

Make setting according to your system application.

Table 3.4 Analog output status combination list

Setting combination Execution status	Analog output enable/disable setting (RWwm+8)	Enable			Prohibit
	CH. <input type="checkbox"/> analog output enable/disable flag (RYn0 to RYn7)	Enable (ON)		Prohibit (OFF)	Enable or disable
	HOLD/CLEAR setting (RWwm+B)	HOLD	CLEAR	HOLD or CLEAR	HOLD or CLEAR
Analog output status when the PLC CPU is in the RUN status		Output of the analog value after D/A conversion from the digital value specified by the PLC CPU		Offset value	0V
Analog output status when the PLC CPU is in the STOP status		Analog value before the PLC CPU stop is retained	Offset value	Offset value	0V
Analog output status at PLC CPU stop error		Analog value before the PLC CPU stop is retained	Offset value	Offset value	0V
Analog output status at occurrence of AJ65VBTCU-68DAV digital value setting error		Output of the maximum or minimum analog value		Offset value	0V
Analog output status when the "L RUN" LED turns off/"L.ERR" LED turns on		The analog value before the "L RUN" LED turns off is retained.	Offset value	Offset value	0V
Analog output status when the "L ERR." LED flickers		Output of the analog value after D/A conversion from the digital value specified by the PLC CPU		Offset value	0V
Analog output status in initial processing completion status after power-reset		Output of the analog value after D/A conversion from the digital value specified by the PLC CPU		Offset value	0V
Analog output status at occurrence of AJ65VBTCU-68DAVN output range setting error		0V	0V	0V	0V
Analog output status at occurrence of AJ65VBTCU-68DAVN watchdog timer error		0V	0V	0V	0V

POINT

When the QnACPU is used, using "Y" as the remote output (RY) refresh device of the automatic refresh parameter may not hold the analog value even for the HOLD setting.

For the HOLD setting, use "M" or "B" as the remote output (RY) refresh device.

3.5 Remote I/O Signals

This section describes the assignment and functions of the remote I/O signals.

3.5.1 Remote I/O signal list

Remote inputs (RX) mean the input signals from the AJ65VBTCU-68DAVN to the master module, and remote outputs (RY) mean the output signals from the master module to the AJ65VBTCU-68DAVN.

In communications with the master station, the AJ65VBTCU-68DAVN uses 32 points of the remote inputs (RX) and 32 points of the remote outputs (RY).

The number of stations occupied by this module differs between ver. 1 remote device station (ver. 1 compatible slave station) setting and ver. 2 remote device station (ver. 2 compatible slave station) setting.

3 stations are occupied in the case of ver. 1 remote device station (ver. 1 compatible slave station) setting. The latter 64 points are not used.

1 station is occupied in the case of ver. 2 remote device station (ver. 2 compatible slave station) setting. Expanded cyclic setting is fixed to quadruple and the latter 32 points are not used.

(1) Remote I/O signal list for ver. 1 remote device station (ver. 1 compatible slave station) setting

Table 3.5 indicates the assignment and names of the remote I/O signals for ver. 1 remote device station (ver. 1 compatible slave station) setting.

Table 3.5 Remote I/O Signal List for Ver. 1 Remote Device Station
(Ver. 1 Compatible Slave Station) Setting

Signal Direction: AJ65VBTCU-68DAVN → Master Module		Signal Direction: Master Module → AJ65VBTCU-68DAVN	
Remote input (RX)	Name	Remote output (RY)	Name
RXn0 to RXnB	Reserved	RYn0	CH.1 analog output enable/disable flag
		RYn1	CH.2 analog output enable/disable flag
		RYn2	CH.3 analog output enable/disable flag
		RYn3	CH.4 analog output enable/disable flag
		RYn4	CH.5 analog output enable/disable flag
		RYn5	CH.6 analog output enable/disable flag
		RYn6	CH.7 analog output enable/disable flag
		RYn7	CH.8 analog output enable/disable flag
RXnC	E ² PROM write error flag	RYn8 to RY (n+1) 7	Reserved
RXnD to RX (n+1) 7	Reserved		
RX (n+1) 8	Initial data processing request flag	RY (n+1) 8	Initial data processing complete flag
RX (n+1) 9	Initial data setting complete flag	RY (n+1) 9	Initial data setting request flag
RX (n+1) A	Error status flag	RY (n+1) A	Error reset request flag
RX (n+1) B	Remote READY	RY (n+1) B to RY (n+5) F	Reserved
RX (n+1) C to RX (n+5) F	Reserved		

POINT

The reserved devices given in Table 3.5 are used by the system and cannot be used by the user.

If the user has used (turned on/off) any of them, we cannot guarantee the functions of the AJ65VBTCU-68DAVN.

(2) Remote I/O signal list for ver. 2 remote device station (ver. 2 compatible slave station) setting

Table 3.6 indicates the assignment and names of the remote I/O signals for ver. 2 remote device station (ver. 2 compatible slave station) setting.

Table 3.6 Remote I/O Signal List for Ver. 2 Remote Device Station (Ver. 2 Compatible Slave Station) Setting

Signal Direction: AJ65VBTCU-68DAVN → Master Module		Signal Direction: Master Module → AJ65VBTCU-68DAVN	
Remote input (RX)	Name	Remote output (RY)	Name
RXn0 to RXnB	Reserved	RYn0	CH.1 analog output enable/disable flag
		RYn1	CH.2 analog output enable/disable flag
		RYn2	CH.3 analog output enable/disable flag
		RYn3	CH.4 analog output enable/disable flag
		RYn4	CH.5 analog output enable/disable flag
		RYn5	CH.6 analog output enable/disable flag
		RYn6	CH.7 analog output enable/disable flag
		RYn7	CH.8 analog output enable/disable flag
RXnC	E ² PROM write error flag	RYn8 to RY (n+1) 7	Reserved
RXnD to RX (n+1) 7	Reserved		
RX (n+1) 8	Initial data processing request flag	RY (n+1) 8	Initial data processing complete flag
RX (n+1) 9	Initial data setting complete flag	RY (n+1) 9	Initial data setting request flag
RX (n+1) A	Error status flag	RY (n+1) A	Error reset request flag
RX (n+1) B	Remote READY	RY (n+1) B to RY (n+3) F	Reserved
RX (n+1) C to RX (n+3) F	Reserved		

POINT

The reserved devices given in Table 3.6 are used by the system and cannot be used by the user.

If the user has used (turned on/off) any of them, we cannot guarantee the functions of the AJ65VBTCU-68DAVN.

3.5.2 Functions of the remote I/O signals

Table 3.6 explains the functions of the remote I/O signals of the AJ65VBTCU-68DAVN.

Table 3.7 Remote I/O Signal Details (1/2)

Device No.	Signal Name	Description
RXnC	E ² PROM write error flag	Turns on the number of E ² PROM write times exceeds its limit (1000,000 times per channel). If this flag has turned on, this module itself has failed (hardware fault) and therefore this flag cannot be reset (turned off) by the error reset request flag. At occurrence of this error, power on the AJ65VBTCU-68DAVN again. If this flag turns on after the power is switched on again, it is a hardware fault. Contact your nearest Mitsubishi representative.
RX (n+1) 8	Initial data processing request flag	<p>After power-on, the initial data processing request flag is turned on by the AJ65VBTCU-68DAVN to request the initial data to be set.</p> <p>Also, after the initial data processing is complete (initial data processing complete flag RY (n+1) 8 ON), the flag is turned off.</p> <p> RX(n+1)8 Initial data processing request flag RY(n+1)8 Initial data processing complete flag RX(n+1)9 Initial data setting complete flag RY(n+1)9 Initial data setting request flag RX(n+1)B Remote ready </p> <p> ← : Performed by sequence ladder ↔ : Performed by AJ65VBTCU-68DAVN </p>
RX (n+1) 9	Initial data setting complete flag	When the initial data setting request (RY (n+1) 9 ON) is made, the flag turns on after the initial data setting completion is done. Also, after the initial data setting is complete, the initial setting complete flag turns off when the initial data setting request flag turns off.
RX (n+1) A	Error status flag	<p>Turns on at occurrence of the output range setting error, digital value setting error or E²PROM write error (RXnC).</p> <p>Does not turn on at occurrence of the watchdog timer error. (The "RUN" LED goes off.)</p> <p> RX(n+1)A Error status flag RY(n+1)A Error reset request flag RWn+8 Error code RWn to RWn+7 CH. □ check code </p> <p> ← : Performed by sequence ladder ↔ : Performed by AJ65VBTCU-68DAVN </p>
RX (n+1) B	Remote READY	Turns on when initial data setting is completed after power-on or at termination of the test mode. (Used for interlocking read/write from/to the master module.)

n: Address allocated to the master module by station number setting.

Table 3.7 Remote I/O Signal Details (2/2)

Device No.	Signal Name	Description
RYn0 to RYn7	CH. <input type="checkbox"/> analog output enable/disable flag	D/A conversion value output enable flag for channel 1 to 8. Turn on this flag to enable the D/A conversion value of the corresponding channel to be output. Turn off when you want to disable the output of the D/A conversion value. Processed on the leading edge of ON/OFF.
RY (n+1) 8	Initial data processing complete flag	Turns on after initial data processing completion when initial data processing is requested after power-on or test mode operation.
RY (n+1) 9	Initial data setting request flag	Turns on at the time of initial data setting or changing.
RY (n+1) A	Error reset request flag	Turning on this flag resets (turns off) the error status flag (RX(n+1)A) and also clears (to 0000H) the error code (RWm+8) and CH. <input type="checkbox"/> check code (RWm to RWm+7) in the remote register. However, since the E ² PROM write error flag (RXnC) cannot be reset, the error status flag remains on, too.

n: Address allocated to the master module by station number setting.

3.6 Remote Register

The AJ65VBTCU-68DAVN has a remote register for data communication with the master module. The remote register allocation and data structures are described below.

3.6.1 Allocation of the remote register

The number of data of the AJ65VBTCU-68DAVN differs between ver. 1 remote device station (ver. 1 compatible slave station) setting and ver. 2 remote device station (ver. 2 compatible slave station) setting.

(1) Remote register assignment for ver. 1 remote device station (ver. 1 compatible slave station) setting

Table 3.8 indicates the remote register assignment for ver. 1 remote device station (ver. 1 compatible slave station) setting.

Table 3.8 Remote Register Assignment for Ver. 1 Remote Device Station
(Ver. 1 Compatible Slave Station) Setting

Transfer Direction	Address	Description	Default Value	Refer to
Master → Remote	RWwm+0H	CH. 1 digital value setting	0	Section 3.6.2
	RWwm+1H	CH. 2 digital value setting	0	
	RWwm+2H	CH. 3 digital value setting	0	
	RWwm+3H	CH. 4 digital value setting	0	
	RWwm+4H	CH. 5 digital value setting	0	
	RWwm+5H	CH. 6 digital value setting	0	
	RWwm+6H	CH. 7 digital value setting	0	
	RWwm+7H	CH. 8 digital value setting	0	
	RWwm+8H	Analog output enable/disable setting	0	Section 3.6.3
	RWwm+9H	CH. 1 to 4 output range setting	0	Section 3.6.4
	RWwm+AH	CH. 5 to 8 output range setting	0	
	RWwm+BH	HOLD/CLEAR setting	0	Section 3.6.5
Remote → Master	RWrm+0H	CH. 1 check code	0	Section 3.6.5
	RWrm+1H	CH. 2 check code	0	
	RWrm+2H	CH. 3 check code	0	
	RWrm+3H	CH. 4 check code	0	
	RWrm+4H	CH. 5 check code	0	
	RWrm+5H	CH. 6 check code	0	
	RWrm+6H	CH. 7 check code	0	
	RWrm+7H	CH. 8 check code	0	
	RWrm+8H	Error code	0	Section 3.6.7
		RWrm+9H to RWrm+BH	Reserved	0

m, n: The address set for the master station in the station number setting.

POINT

Do not execute read or write to the remote register that is not allowed to use. When a read or write is executed, the functions of the AJ65VBTCU-68DAVN is not guaranteed.

(2) Remote register assignment for ver. 2 remote device station (ver. 2 compatible slave station) setting

Table 3.9 indicates the remote register assignment for ver. 2 remote device station (ver. 2 compatible slave station) setting.

Table 3.9 Remote Register Assignment for Ver. 2 Remote Device Station (Ver. 2 Compatible Slave Station) Setting

Transfer Direction	Address	Description	Default Value	Refer to
Master → Remote	RWwm+0H	CH. 1 digital value setting	0	Section 3.6.2
	RWwm+1H	CH. 2 digital value setting	0	
	RWwm+2H	CH. 3 digital value setting	0	
	RWwm+3H	CH. 4 digital value setting	0	
	RWwm+4H	CH. 5 digital value setting	0	
	RWwm+5H	CH. 6 digital value setting	0	
	RWwm+6H	CH. 7 digital value setting	0	
	RWwm+7H	CH. 8 digital value setting	0	
	RWwm+8H	Analog output enable/disable setting	0	Section 3.6.3
	RWwm+9H	CH. 1 to 4 output range setting	0	Section 3.6.4
	RWwm+AH	CH. 5 to 8 output range setting	0	
	RWwm+BH	HOLD/CLEAR setting	0	Section 3.6.5
		RWwm+CH to RWwm+FH	Reserved	0
Remote → Master	RWrn+0H	CH. 1 check code	0	Section 3.6.5
	RWrn+1H	CH. 2 check code	0	
	RWrn+2H	CH. 3 check code	0	
	RWrn+3H	CH. 4 check code	0	
	RWrn+4H	CH. 5 check code	0	
	RWrn+5H	CH. 6 check code	0	
	RWrn+6H	CH. 7 check code	0	
	RWrn+7H	CH. 8 check code	0	
	RWrn+8H	Error code	0	Section 3.6.7
		RWrn+9H to RWrn+BH	Reserved	0

m, n: The address set for the master station in the station number setting.

POINT
Do not execute read or write to the remote register that is not allowed to use. When a read or write is executed, the functions of the AJ65VBTCU-68DAVN is not guaranteed.

3.6.2 CH. □ digital value setting (Addresses RWwm+0H to RWwm+7H)


- (1) This area is used to write the digital value for the D/A conversion from the PLC CPU.
- (2) The digital value at all channels become “0” in the following conditions:
 - (a) After the power is turned on, when the remote READY (RX(n+1)B) is turned on.
- (3) The digital value that may be set is a 16-bit signed binary within the setting range which matches the output range setting.
 If a value beyond the range of the digital value resolution is set, the data in Table 3.8 is applied for the D/A conversion.
 In addition, the checking code is stored in the check code storage area (addresses RWrn+0H to RWrn+7H).

Table 3.8 Available setting range of the digital value

Output Range	Available setting range	Digital value for the D/A conversion when the value beyond the range is set
-10 to +10V User range setting 1	-4096 to +4095 (Practical scope: -4000 to +4000)	4096 or more: 4095 -4097 or less: -4096
0 to 5V 1 to 5V User range setting 2	-96 to 4095 (Practical scope: 0 to 4000)	4096 or more: 4095 -97 or less: -96


3.6.3 Analog output enable/disable setting (Address RWwm+8H)

- (1) Set whether D/A conversion is enabled or disabled per channel.
- (2) Operation is performed according to the setting made for the leading edges of initial data setting request flag (RY(n+9)).
- (3) The default setting is conversion enable for all channels.

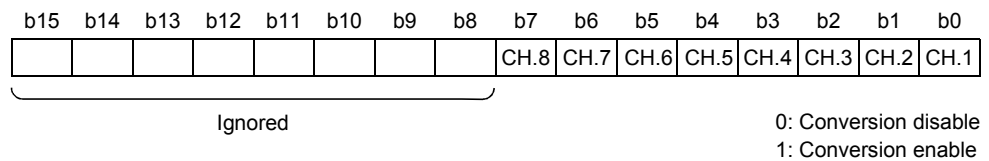

3.6.4 CH. \square output range setting (Address RWwm+9H, RWwm+AH)

- (1) Set the analog output range per channel.
- (2) Operation is performed according to the setting made for the leading edges of initial data setting request flag (RY(n+9)).
- (3) The default settings are -10 to +10V for all channels.

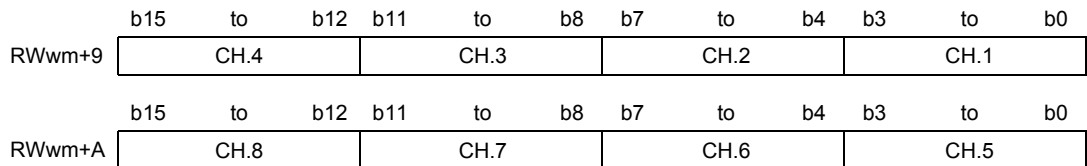

Output range	Setting value
-10 to +10V	0H
0 to 5V	1H
1 to 5V	2H
User range setting 1 (-10 to +10V)	3H
User range setting 2 (0 to 5V)	4H


POINT

If the set value is outside the setting range, error "20 \square *" occurs, the "RUN" LED flickers at intervals of 0.1s, and all channels do not make D/A conversion.

* \square indicates the channel No. where the error occurred.

3.6.5 HOLD/CLEAR setting (Address RWwm+BH)

- (1) Set HOLD/CLEAR to each channel.
- (2) Operation is performed according to the setting made for the leading edges of initial data setting request flag (RY(n+9)).
- (3) The default settings are CLERA for all channels.

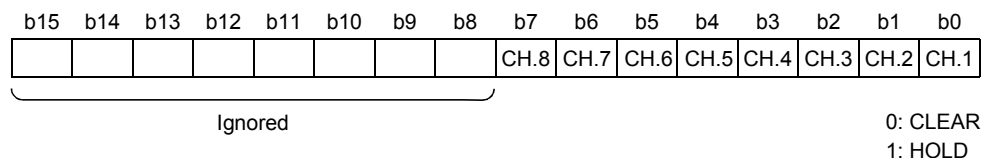

3.6.6 CH. check code (Addresses RWrn+0H to RWrn+7H)

- (1) This area is used to check if the digital value is within or out of the setting range. One of the following checking codes is stored when the digital value lower or higher than the setting range is set.

Check code	Description
000FH	A digital value which exceeds the setting range was set.
00F0H	A digital value which is below the setting range was set.
00FFH	The digital value less than the setting range and the digital value more than the setting range were set before the error reset request. For example, the 00FFH check code is stored if a digital value exceeding the valid range is written, and then, without the check code being reset, a digital value that falls short of the valid range is written.

- (2) The check code once stored is not reset even if the set value is set to within the valid setting allowed range.
- (3) The storage area or the check code is reset by turning on the error reset request flag (RY (n+1)A).

3.6.7 Error code (Address RWrn+8H)


If an error occurs (the RUN LED flickers) when data is written to the AJ65VBTCU-68DAVN, the corresponding error code is stored into the remote register (address RWrn+8H) of the AJ65VBTCU-68DAVN.

Refer to Section 6.1 for details of the error codes.

4 SETUP AND PREPARATION BEFORE OPERATION

4.1 Pre-Operation Procedure

This section explains the preparatory procedure for operating the AJ65VBTCU-68DAVN.

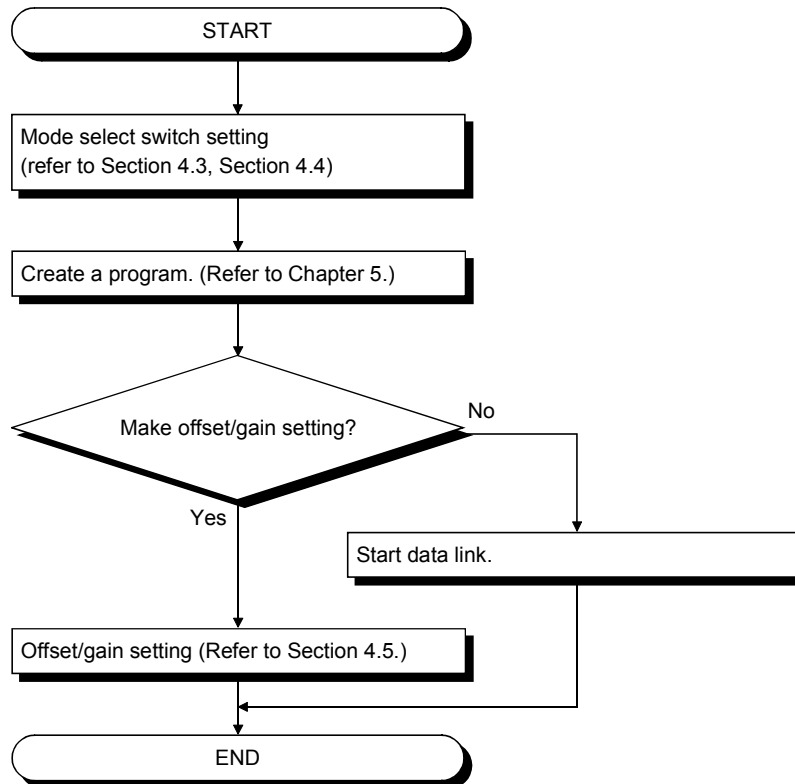

4.2 Precautions When Handling

The precautions when handling the AJ65VBTCU-68DAVN are described below:

**CAUTION**

- Do not touch the pins while power is on. Doing so can cause a malfunction.
- Ensure that no foreign matter such as chips and wire-offcuts enter the module. Foreign matter can cause a fire, failure or malfunction.
- Do not disassemble or modify the module. Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the module directly. Doing so can cause the module to malfunction or fail.
- Do not drop the module or give it hard impact since its case is made of resin. Doing so can damage the module.


**CAUTION**

- Dispose of the product as industrial waste.
- Use the module in the environment indicated in the general specifications given in this manual.
Not doing so can cause an electric shock, fire, malfunction, product damage or deterioration.
- Securely fix the module to a DIN rail or securely fix it with the CC-Link connector type fitting.
Not doing so can cause a drop or malfunction.
- Mount or dismount the module to or from an enclosure after switching power off externally in all phases. Not doing so can cause the module to fail or malfunction.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module.
Failure to do so may cause a failure or malfunctions of the module.

- (1) When using the DIN rail adapter, install the DIN rail by making sure of the following:
 - (a) Applicable DIN rail models (conforming to the JIS C 2812)
 - TH35-7.5Fe
 - TH35-7.5Al
 - (b) DIN rail installation screw interval
When installing the DIN rail, tighten the screws with less than 200mm (7.87 inch) pitches.
- (2) As the CC-Link connector type metal installation fitting, use the narrow-width type (width 41)-dedicated fitting.
 - (a) CC-Link connector type metal installation fitting model
A6PLT-J65V1
- (3) Refer to the Master Module user's manual for the name, specification, and manufacturers of supported cables for the use with AJ65VBTCU-68DAVN.

4.3 Name of Each Part


The name of each part in the AJ65VBTCU-68DAVN is shown.

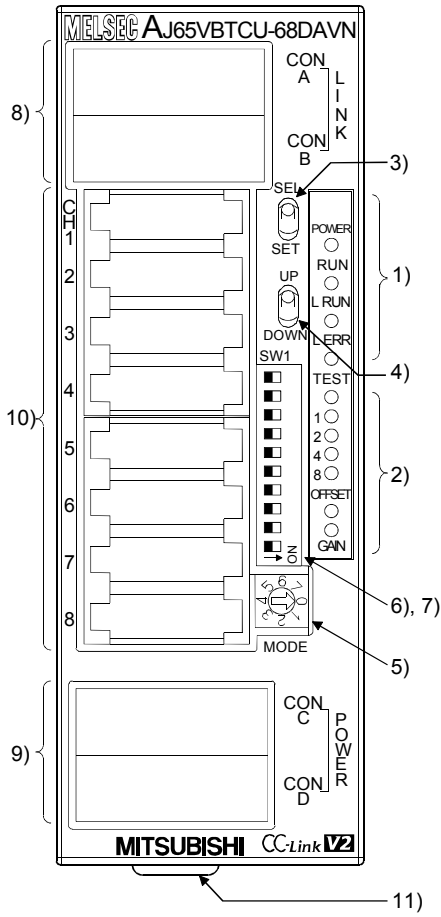


[Pin layout and signals name]

Pin arrangement	Pin No.	Signal name
	1	DA
	2	DB
	3	DG
	4	NC
	5	SLD
	1	CH1 V+
	2	NC
	3	CH1 COM
	4	NC
	1	CH2 V+
	2	NC
	3	CH2 COM
	4	NC
	1	CH3 V+
	2	NC
	3	CH3 COM
	4	NC
	1	CH4 V+
	2	NC
	3	CH4 COM
	4	NC
	1	CH5 V+
	2	NC
	3	CH5 COM
	4	NC
	1	CH6 V+
	2	NC
	3	CH6 COM
	4	NC
	1	CH7 V+
	2	NC
	3	CH7 COM
	4	NC
	1	CH8 V+
	2	NC
	3	CH8 COM
	4	NC
	1	FG
	2	+24V(UNIT)
	3	24G(UNIT)
	4	NC
	5	NC

A module view from the top

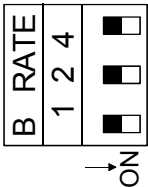Number	Name and appearance	Description																																		
1)	Operation status display LED	POWER	ON : Power supply on OFF : Power supply off																																	
		RUN	Normal mode On : Normal operation Flashing : 0.1s intervals : Output range setting error, mode select switch setting error. This module is used as the Ver.2 remote device station (Ver.2 compatible slave station) when the network parameter mode is set to remote network Ver.1 mode. 0.5s intervals : Average value setting (count) time error. Mode select switch setting is changed after power-on. Off : 24VDC power supply shutoff or watchdog timer error occurred.																																	
			Test mode On : Indicate that the SELECT/SET switch is in the SET position. Flashing : 0.1s intervals : Mode select switch setting error. 0.5s intervals : An attempt was made to make setting outside the setting range at the time of offset/gain setting. Off : Indicates that the SELECT/SET switch is in the SELECT or center position.																																	
		L RUN	On : Normal communication Off : Communication cutoff (time expiration error)																																	
		L ERR.	On : Indicates that transmission speed setting or station number setting is outside the range. Flicker at fixed intervals : Indicates that transmission speed setting or station number setting was changed from that at power-on. Flicker at unfixed intervals : Indicates that you forgot fitting the terminating resistor or the module or CC-Link dedicated cable is affected by noise. Off : Indicates normal communications.																																	
2)	Offset/gain adjusting LEDs	TEST CH <input type="checkbox"/>	Normal mode : Normally OFF.																																	
		OFFSET GAIN	Test mode : TEST : ON The OFFSET/GAIN/ CH <input type="checkbox"/> LEDs lit change every time the SELECT/SET switch is moved to SELECT. (Refer to section 4.5)																																	
3)	SELECT/SET switch	Used to make offset/gain setting in the test mode.																																		
4)	UP/DOWN switch	Used to adjust the offset value and gain value of the channel specified by the SELECT/SET switch.																																		
5)	Mode select switch (Factory-set to "0")	<p>The switch to be used for selecting the mode among Ver. <input type="checkbox"/> remote device station (Ver. <input type="checkbox"/> -compatible slave station)/Normal mode/Test mode</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">AJ65VBTCU-68DAVN</th> </tr> </thead> <tbody> <tr> <td>Ver.1 remote device station (Ver.1-compatible slave station)</td> <td>0: Normal mode 1: Test mode (User range setting 1) 2: Test mode (User range setting 2)</td> </tr> <tr> <td>Ver.2 remote device station (Ver.2-compatible slave station)</td> <td>3: Normal mode 4: Test mode (User range setting 1) 5: Test mode (User range setting 2)</td> </tr> <tr> <td style="text-align: center;">-</td> <td>6 to 7: Use prohibited</td> </tr> </tbody> </table>		AJ65VBTCU-68DAVN		Ver.1 remote device station (Ver.1-compatible slave station)	0: Normal mode 1: Test mode (User range setting 1) 2: Test mode (User range setting 2)	Ver.2 remote device station (Ver.2-compatible slave station)	3: Normal mode 4: Test mode (User range setting 1) 5: Test mode (User range setting 2)	-	6 to 7: Use prohibited																									
AJ65VBTCU-68DAVN																																				
Ver.1 remote device station (Ver.1-compatible slave station)	0: Normal mode 1: Test mode (User range setting 1) 2: Test mode (User range setting 2)																																			
Ver.2 remote device station (Ver.2-compatible slave station)	3: Normal mode 4: Test mode (User range setting 1) 5: Test mode (User range setting 2)																																			
-	6 to 7: Use prohibited																																			
6)	Transmission speed setting switches 	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">Set Value</th> <th colspan="3">Setting Switches</th> <th rowspan="2">Transmission Speed</th> </tr> <tr> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>156kbps</td> </tr> <tr> <td>1</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>625kbps</td> </tr> <tr> <td>2</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>2.5Mbps</td> </tr> <tr> <td>3</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>5.0Mbps</td> </tr> <tr> <td>4</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>10Mbps</td> </tr> </tbody> </table> <p>Always set the transmission speed within the above range. The switches are all factory-set to OFF. Making any other setting than the above will result in an error flickering the "L ERR." LED. Confirm the transmission speed setting switch numbers on the seal located on the side face of the connector for analog I/O.</p>		Set Value	Setting Switches			Transmission Speed	4	2	1	0	OFF	OFF	OFF	156kbps	1	OFF	OFF	ON	625kbps	2	OFF	ON	OFF	2.5Mbps	3	OFF	ON	ON	5.0Mbps	4	ON	OFF	OFF	10Mbps
		Set Value	Setting Switches			Transmission Speed																														
4	2		1																																	
0	OFF	OFF	OFF	156kbps																																
1	OFF	OFF	ON	625kbps																																
2	OFF	ON	OFF	2.5Mbps																																
3	OFF	ON	ON	5.0Mbps																																
4	ON	OFF	OFF	10Mbps																																

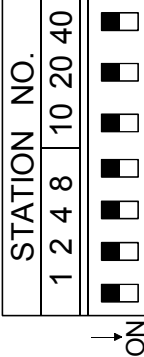Number	Name and appearance	Description																																																																																																														
7)	<p>Station number setting switches</p> 	<p>Use the switches in STATION NO. "10", "20" and "40" to set the tens of the station number. Use the switches in STATION NO. "1", "2", "4" and "8" to set the units of the station number. The switches are all factory-set to OFF. Always set the station number within the range 1 to 64. You cannot set the same station number to two or more stations. Setting any other number than 1 to 64 will result in an error, flickering the "L ERR." LED.</p> <table border="1" data-bbox="437 562 1425 958"> <thead> <tr> <th rowspan="2">Station Number</th> <th colspan="3">Tens</th> <th colspan="4">Units</th> </tr> <tr> <th>40</th> <th>20</th> <th>10</th> <th>8</th> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>2</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>4</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> </tr> <tr> <td>10</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>11</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> <td>:</td> </tr> <tr> <td>64</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>OFF</td> </tr> </tbody> </table> <p>(Example) To set the station number to "32", set the switches as indicated below.</p> <table border="1" data-bbox="515 1032 1425 1144"> <thead> <tr> <th rowspan="2">Station Number</th> <th colspan="3">Tens</th> <th colspan="4">Units</th> </tr> <tr> <th>40</th> <th>20</th> <th>10</th> <th>8</th> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>32</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table> <p>Confirm the station number setting switch numbers on the seal located on the side face of the connector for analog I/O.</p>	Station Number	Tens			Units				40	20	10	8	4	2	1	1	OFF	OFF	OFF	OFF	OFF	OFF	ON	2	OFF	OFF	OFF	OFF	OFF	ON	OFF	3	OFF	OFF	OFF	OFF	OFF	ON	ON	4	OFF	OFF	OFF	OFF	ON	OFF	OFF	:	:	:	:	:	:	:	:	10	OFF	OFF	ON	OFF	OFF	OFF	OFF	11	OFF	OFF	ON	OFF	OFF	OFF	ON	:	:	:	:	:	:	:	:	64	ON	ON	OFF	OFF	ON	OFF	OFF	Station Number	Tens			Units				40	20	10	8	4	2	1	32	OFF	ON	ON	OFF	OFF	ON	OFF
Station Number	Tens			Units																																																																																																												
	40	20	10	8	4	2	1																																																																																																									
1	OFF	OFF	OFF	OFF	OFF	OFF	ON																																																																																																									
2	OFF	OFF	OFF	OFF	OFF	ON	OFF																																																																																																									
3	OFF	OFF	OFF	OFF	OFF	ON	ON																																																																																																									
4	OFF	OFF	OFF	OFF	ON	OFF	OFF																																																																																																									
:	:	:	:	:	:	:	:																																																																																																									
10	OFF	OFF	ON	OFF	OFF	OFF	OFF																																																																																																									
11	OFF	OFF	ON	OFF	OFF	OFF	ON																																																																																																									
:	:	:	:	:	:	:	:																																																																																																									
64	ON	ON	OFF	OFF	ON	OFF	OFF																																																																																																									
Station Number	Tens			Units																																																																																																												
	40	20	10	8	4	2	1																																																																																																									
32	OFF	ON	ON	OFF	OFF	ON	OFF																																																																																																									
8)	One-touch connector for communication	A one-touch connector for connection of the communication line When carrying out wiring, connect two optional one-touch connector plugs for communication at top and bottom.																																																																																																														
9)	One-touch connector for power supply and FG	A one-touch connector for connection of the module power supply line and FG When carrying out jumper wiring, connect two optional one-touch connector plugs for power supply/FG at top and bottom.																																																																																																														
10)	One-touch connector for analog I/O	One-touch connector for analog I/O Connect a one-touch connector plug when wiring.																																																																																																														
11)	DIN rail hook	Used to mount the module to the DIN rail.																																																																																																														

POINT
After power-on, do not change the mode select switch setting. If you change it midway during operation, the setting at power-on is valid.

4.4 Concept of Mode Select Switch Setting (Selection of Remote Device Station Compatible Version)

The AJ65VBTCU-68DAVN must be handled after setting of the remote device station version according to the configuration of the used CC-Link system.

There are the following remote device stations.

- Ver. 1 remote device station (Ver. 1 compatible slave station)
- Ver. 2 remote device station (Ver. 2 compatible slave station)

Set the remote device station version with the "mode select switch" of the AJ65VBTCU-68DAVN. Refer to Section 4.3 for details of the mode select switch. In addition, "mode setting" and "station information (station type)" in the network parameters of GX Developer must be set simultaneously. For details, refer to (2) in this section and Chapter 5 Programming.

(1) Basic concept

Use the following as a guideline in setting the remote device station version and mode select switch.

Mode Select Switch Setting	Guideline for Selection
Ver. 1 remote device station (Ver. 1 compatible slave station) Number of occupied stations: 3 stations	In the case of the system where the maximum number of connected stations of the master station, including the AJ65VBTCU-68DAVN that occupies 3 stations, does not exceed 64 stations.
Ver. 2 remote device station (Ver. 2 compatible slave station) Number of occupied stations: 1 station	In the case of the system where the maximum number of connected stations of the master station, including the AJ65VBTCU-68DAVN that occupies 3 stations, exceeds 64 stations. (However, configure a system where the maximum number of connected stations of the master station, including the AJ65VBTCU-68DAVN that occupies 1 station, will not exceed 64 stations.)

POINT
In the case of the system where the maximum number of connected stations of the master station, including the AJ65VBTCU-68DAVN that occupies 3 stations, does not exceed 64 stations, set and use the ver. 1 remote device station (ver. 1 compatible slave station). It is not particularly necessary to set and use the ver. 2 remote device station (ver. 2 compatible slave station).

(2) Applicable combinations and setting concepts

The following table indicates usability according to the combinations of the master modules, the mode setting and station information (station type) of the GX Developer network parameters, and the mode select switch setting of the module. Refer to the following table and make selection.

○: Usable, ×: Unusable


Master Module	GX Developer Network Parameter Setting		Model Select Switch Setting of AJ65VBTCU-68DAVN	
	Mode setting	Station information (station type)	Ver. 1 remote device station (Ver. 1 compatible slave station)	Ver. 2 remote device station (Ver. 2 compatible slave station)
QJ61BT11 AJ61BT11 A1SJ61BT11 AJ61QBT11 A1SJ61QBT11	Remote net ver. 1 mode	Remote device station	○ Concept A	×
	Remote net ver. 2 mode	Ver. 1 remote device station	×	×
		Ver. 2 remote device station		
Remote net additional mode	Ver. 1 remote device station Ver. 2 remote device station			
QJ61BT11N	Remote net ver. 1 mode	Remote device station	○ Concept B	×
	Remote net ver. 2 mode	Ver. 1 remote device station	○ Concept C	×
		Ver. 2 remote device station	×	○ Concept D
	Remote net additional mode	Ver. 1 remote device station	○ Concept E	×
Ver. 2 remote device station		×	○ Concept F	

Setting Concept	Outline
Concept A	Select this concept when system expansion is not necessary. Select this concept when the module replaces the conventional one as a maintenance product.
Concept B	Select this concept when system expansion is not necessary. Select this concept when the module replaces the conventional one as a maintenance product.
Concept C	Select this concept when configuring a new system. The ver. 1 compatible slave station and ver. 2 compatible slave station can be mixed. The ver. 1 remote device station occupies 3 stations.
Concept D	Select this concept when configuring a new system. The ver. 1 compatible slave station and ver. 2 compatible slave station can be mixed. The ver. 2 remote device station occupies 1 station, and can connect more devices. Refer to Chapter 5 Programming.
Concept E	This concept allows this module to be newly added to the existing system. When there is a station number used as the ver. 2 remote device station in the existing system, set the station number of the ver. 1 remote device station to be added before that station. The ver. 1 remote device station occupies 3 stations.
Concept F	This concept allows this module to be newly added to the existing system. Set the station number of the ver. 2 remote device station to be added after the station numbers used in the existing system. The ver. 2 remote device station occupies 1 station, and can connect more devices. Refer to Chapter 5 Programming.

POINT
For use in the remote net ver. 2 mode or remote net additional mode, the master module of QJ61BT11N and the peripheral software package of GX Developer Version 8.03D or later are required. For more information on the applicable modules (CPU modules, network modules) and applicable software packages, refer to the CC-Link System Master/Local Module User's Manual (Details) QJ61BT11N.

4.5 Offset/Gain Setting

When changing the I/O conversion characteristics, follow the procedure below.

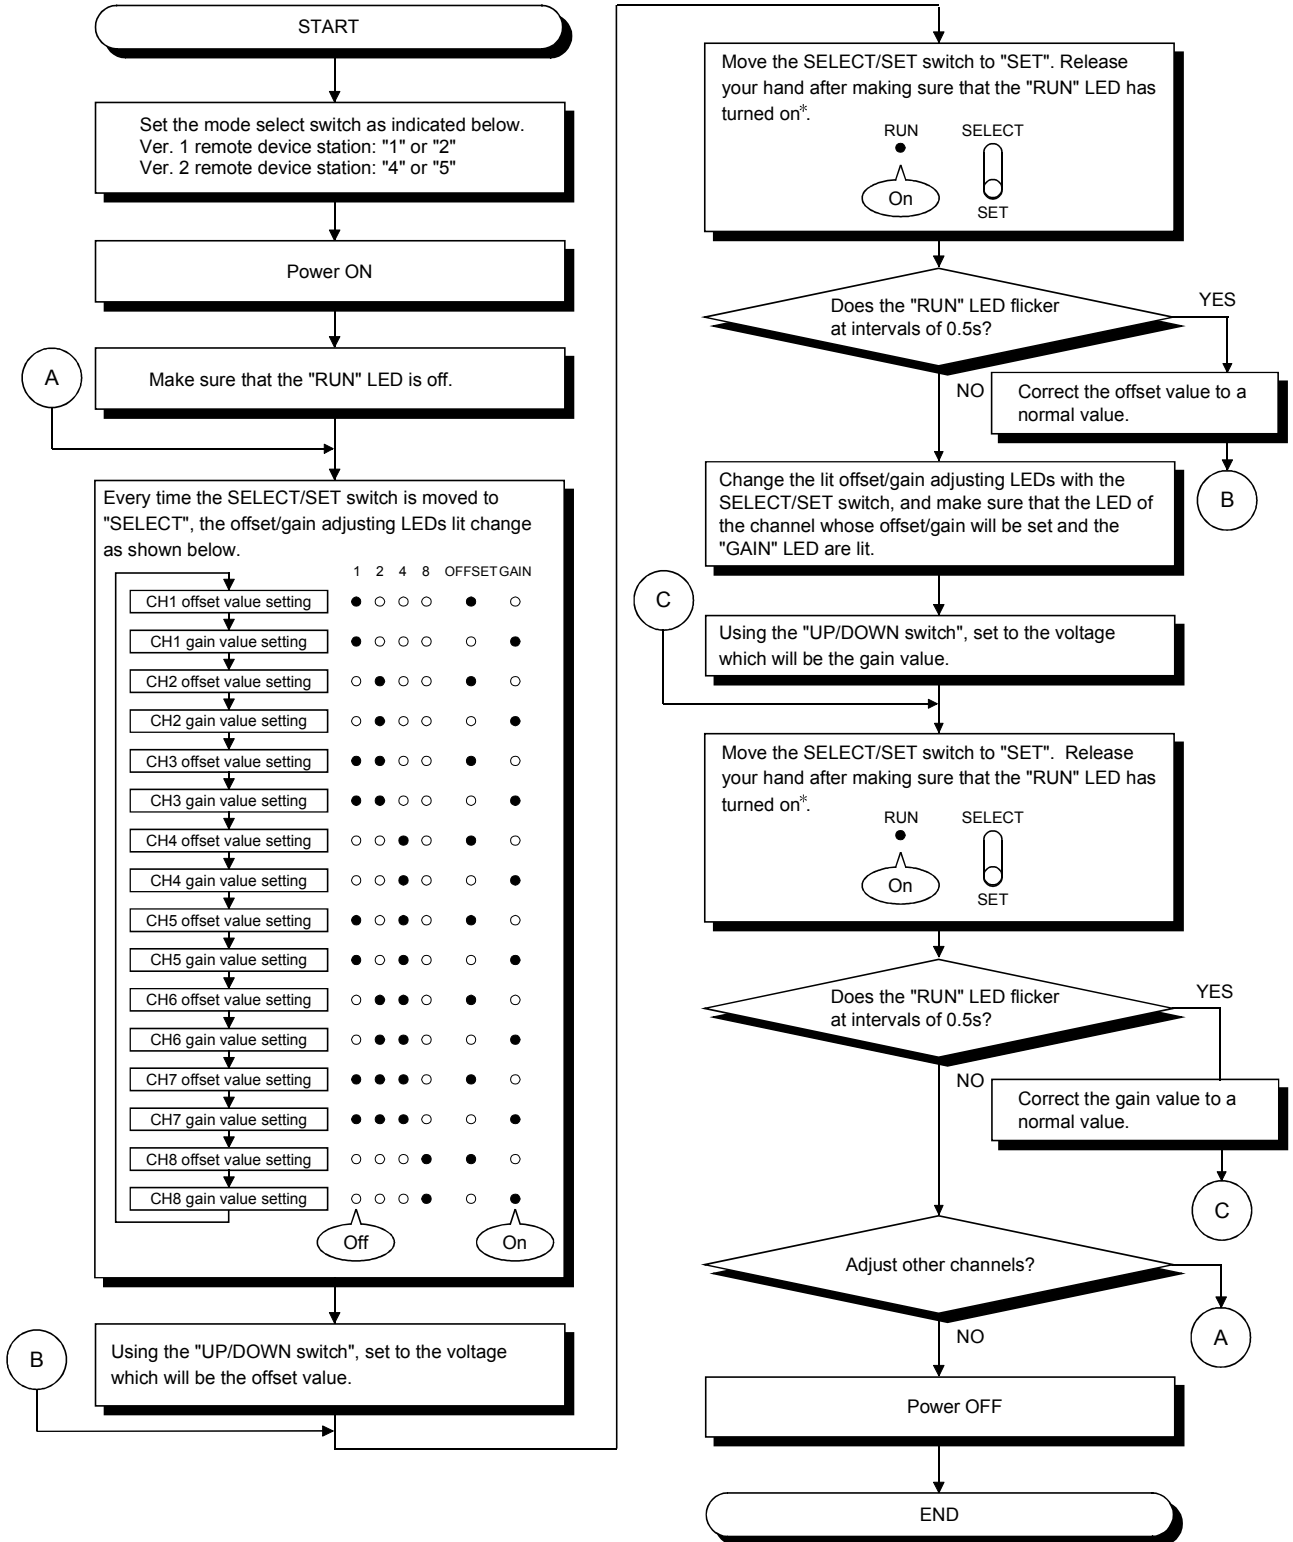

* If the "RUN" LED is not lit, E²PRON may have failed. For details, refer to Section 3.5.2.

POINT
<p>(1) Set the offset and gain values in the actual usage state.</p> <p>(2) The offset and gain values are stored on E²PROM in the AJ65VBTCU-68DAVN and are not cleared at power-off.</p> <p>(3) Make offset/gain setting within the range indicated in POINT of Section 3.3.1 and Section 3.3.2. If setting is made outside this range, the maximum resolution/accuracy may not fall within the performance specifications range.</p> <p>(4) When making offset/gain setting (in the test mode), set any of the following test modes with the mode select switch.</p> <p style="padding-left: 40px;">AJ65VBTCU-68DAVN (Ver. 1 remote device station): 1, 2</p> <p style="padding-left: 40px;">AJ65VBTCU-68DAVN (Ver. 2 remote device station): 4, 5</p> <p>The user range settings 1 selected with the mode select switch set to 1 and 4 are the same. The setting of the user range setting 1 can be changed by setting the mode select switch to either 1 or 4. This also applies to the user range settings 2 selected with the mode select switch set to 2 and 5.</p> <p>If the switch has been set to any unusable number, an error occurs and the "RUN" LED flickers at intervals of 0.1s.</p>


4.6 Section Number Setting

The station number setting of the AJ65VBTCU-68DAVN determines the buffer memory addresses of the master module where the remote I/O signals and read/write data are stored.

For details, refer to the user's manual of the master module used.

4.7 Facing Direction of the Module Installation

The AJ65VBTCU-68DAVN module may be installed in any of six orientations using a DIN rail or CC-Link connector type fitting.
(There are no restrictions on the facing directions.)

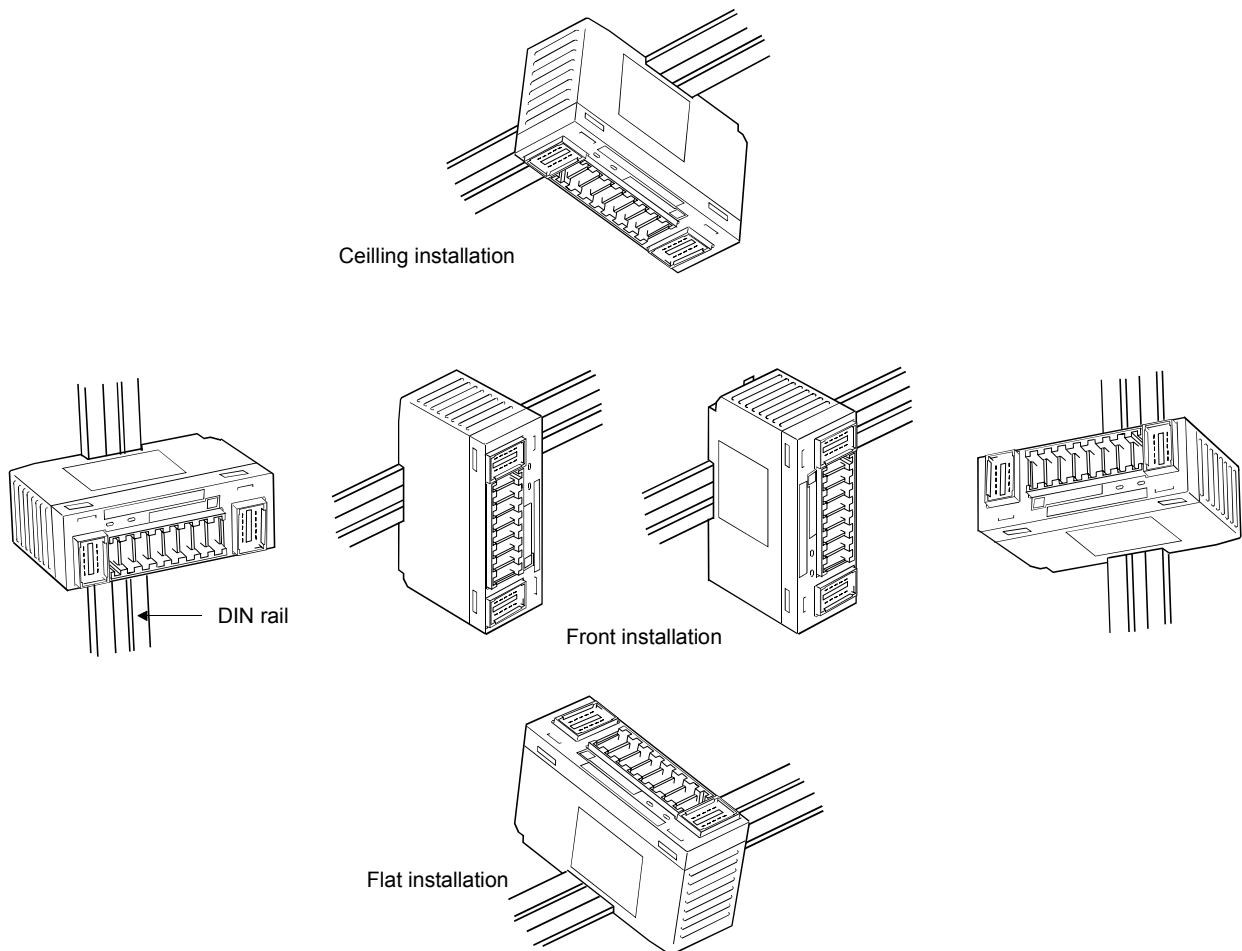

4.8 Data Link Cable Wiring

This section explains the wiring of the CC-Link dedicated cable used for connection of the AJ65VBTCU-68DAVN and master module.




4.8.1 Instructions for handling the CC-Link dedicated cables

Do not handle the CC-Link dedicated cables roughly as described below. Doing so can damage the cables.

- Compact with a sharp object.
- Twist the cable excessively.
- Pull the cable hard. (more than the permitted elasticity.)
- Step on the cable.
- Place an object on the top.
- Scratch the cable's protective layer.

4.8.2 Connection of the CC-Link dedicated cables


Connect the CC-Link dedicated cable between the AJ65VBTCU-68DAVN and master module as shown below.

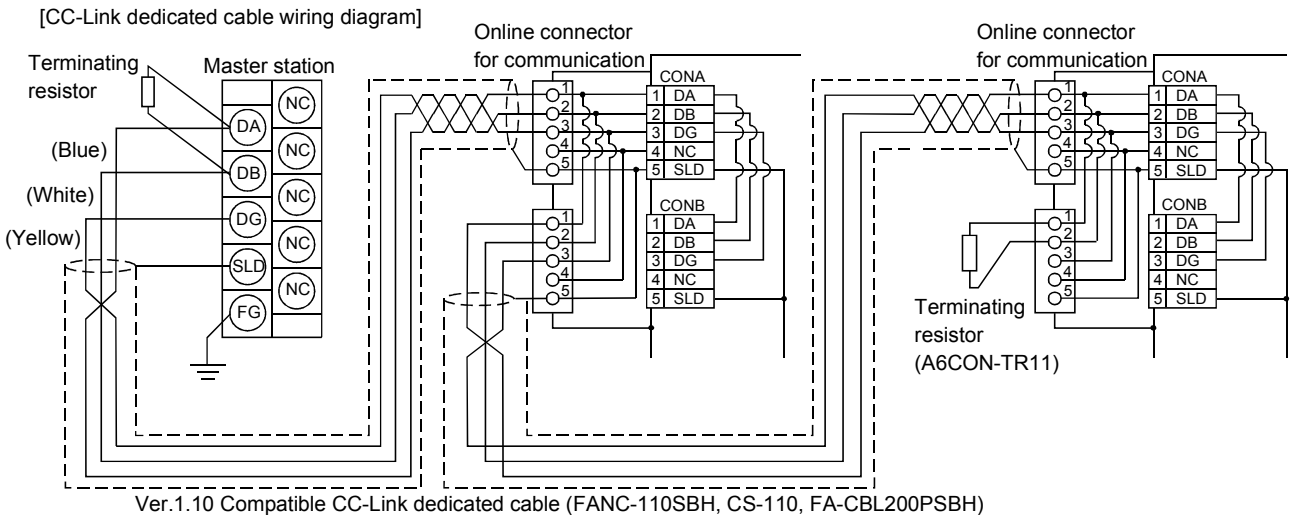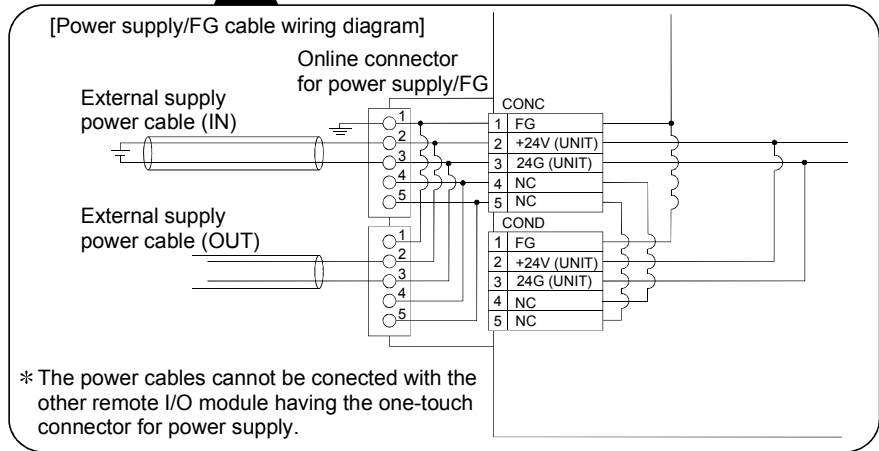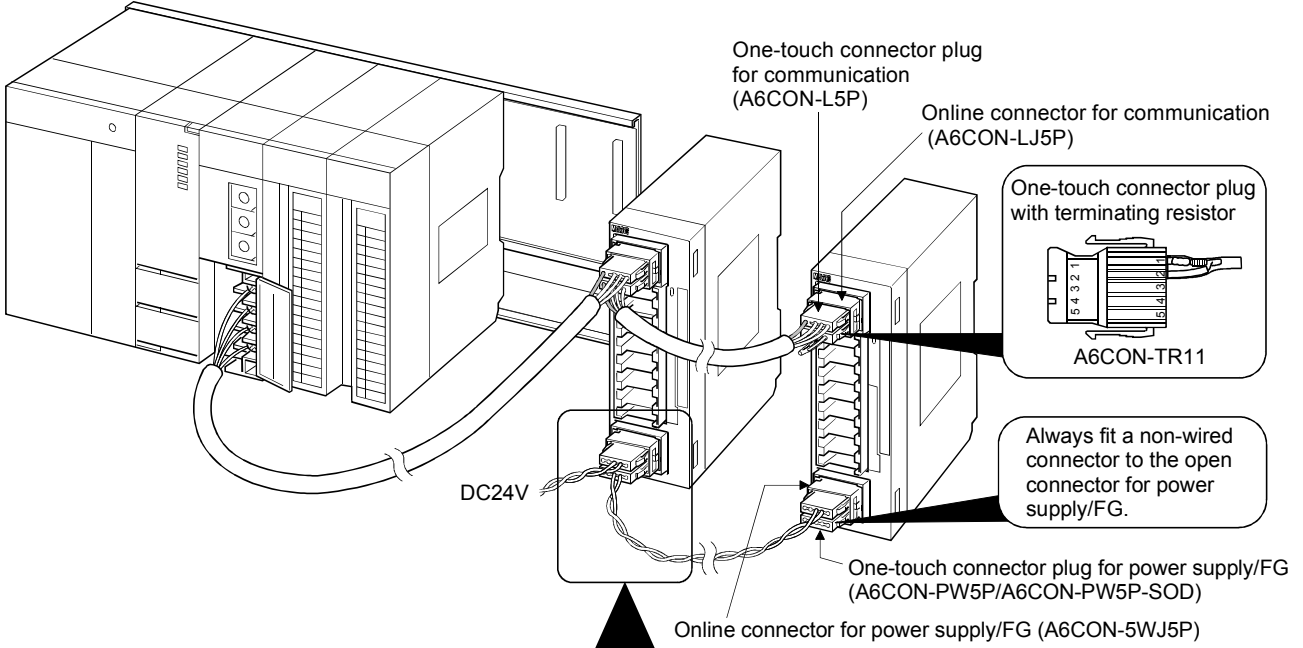

POINT
<ul style="list-style-type: none"> On this unit, use the Ver. 1.10-compatible CC-Link dedicated cable (FANC-110SBH, CS-110, FA-CBL200PSBH). You cannot use the Ver. 1.10-compatible CC-Link dedicated cables of other than the above types, CC-Link dedicated cables and CC-Link dedicated, high-performance cables. The shield cable of the CC-Link dedicated cable should be connected to "SLD" in each module, and both ends should be grounded through "FG". SLD and FG are connected inside the module.

4.8.3 How to connect connectors

The following shows how to connect the one-touch connectors and online connectors.

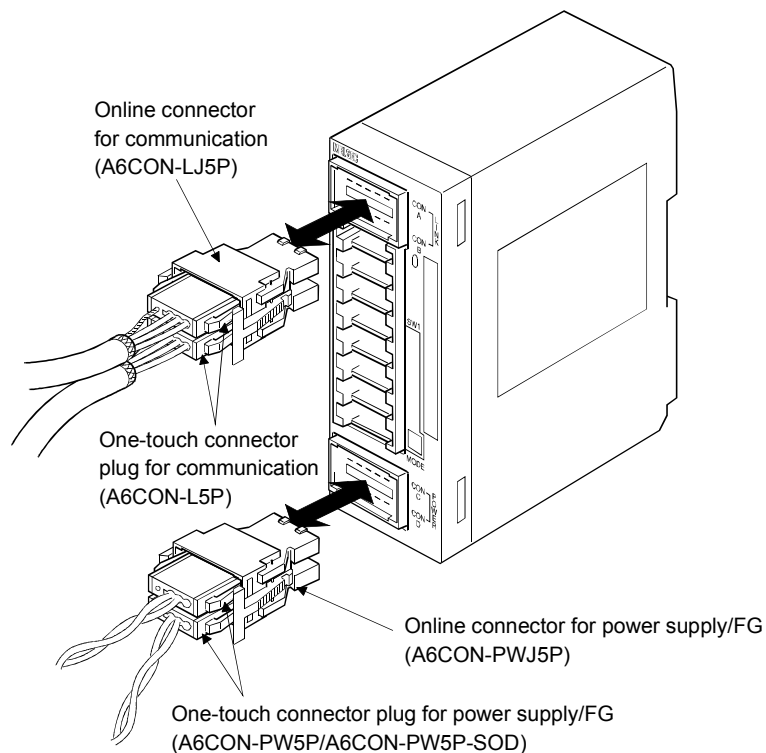

4.9 Wiring

This section provides the instructions for wiring the AJ65VBTCU-68DAVN and its wiring with external equipment.


4.9.1 Wiring precautions

To obtain maximum performance from the functions of AJ65VBTCU-68DAVN and improve the system reliability, an external wiring with high durability against noise is required.

The precautions when performing external wiring are as follows:

- (1) Use separate cables for the AC and AJ65VBTCU-68DAVN external output signals, in order not to be affected by the AC side surge or conductivity.
- (2) Do not bundle or place with load carrying wires other than the main circuit line, high voltage line or PLC. Noises, surges, or conductivity may affect the system.
- (3) Place a one-point grounding on the PLC side for the shielded line or shielded cable.

4.9.2 Wiring of module with external equipment

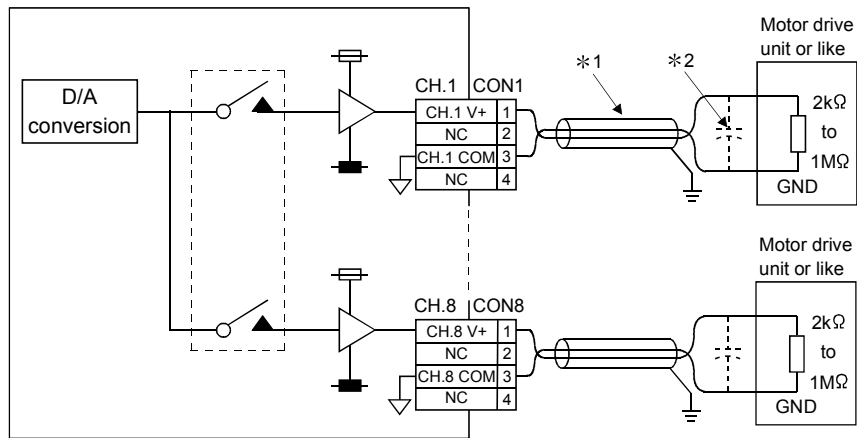

*1 Use a two-core twist shielded line for the wiring.

*2 If noise or ripples occur in the external wiring, connect a 0.1 to 0.47μF capacitor (25V or higher voltage-resistant product) to the input terminals of the external device.

POINT


- D/A conversion values are fluctuated by self-heating within approx. 30 minutes after power is turned ON.
- Do not insert the one-touch connector plug for I/O of the one-touch connector type/connector type compact remote I/O unit into the one-touch connector for analog I/O accidentally.
Doing so can cause the module to be damaged.

4.10 How to Wire the One-Touch Connector Plug

This section describes the way to wire the one-touch connector plug.
 Refer to section 2.4 for more information on the types and specifications of the one-touch connector plugs which conform to the AJ65VBTCU-68DAVN.


4.10.1 Wiring procedures for the one-touch connector

The following are the wiring procedures for the one-touch connector.

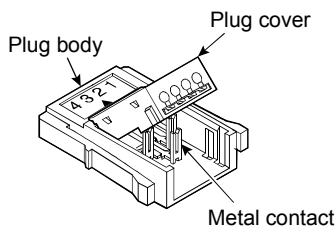


- 1) Check the connector.
 Check that the plug cover is attached to the plug body.

Note: Do not push the plug cover into the plug body.
 Once pressed, the plug cannot be used any more.

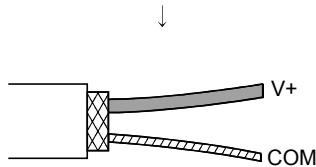


- 2) Processing for analog output cable
 Strip the cable 3cm or more, cut the outer sheath and then the shielded wires to the proper length.
 If the electric wire lengths are not even, trim their ends with a nipper to the same length so as to insert them neatly into a connector.

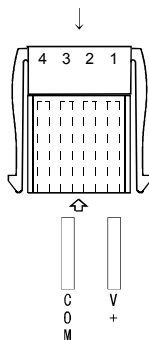




- 3) Insert the cable.
 Lift the end of the plug cover and insert the cable until it almost reaches the plug body (within 1mm from the other end of the plug cover).
 Insufficient cable insertion may cause improper press fitting.

Note: When inserting the cable, prevent the cable from sticking out from the plug cover end.

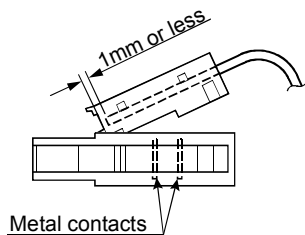


(To the next page)


(From the previous page)

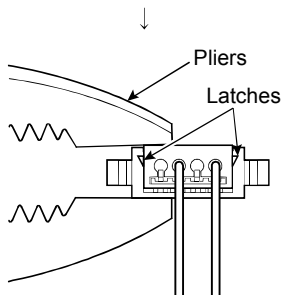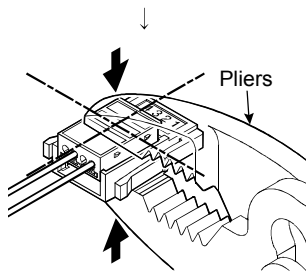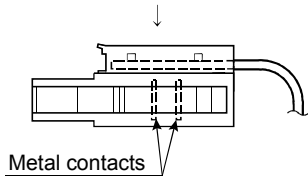

[Correct example]

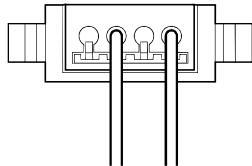

[Wrong example]

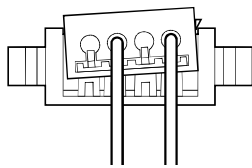

(To the next page)

- 4) Set the plug cover.

After inserting the cable, put down the plug cover so that its face is horizontal to the plug surface, allowing the metal contacts to be fitted into the plug cover.

- 5) Press the center part of the plug cover.

Using pliers, press the center part of the plug cover vertically and strongly.

For the one-touch connectors, use adjustable pliers so that their jaws can be widely opened.

- 6) Press both ends of the plug cover

After pressing the center part of the plug cover, press both ends of the plug cover where latches are located.

Verify that the latches engage with the plug body.

- 7) Check the press-fit condition (viewing from the wiring side).

Viewing from the wiring side, check that the plug surface is flush with the plug cover.

Do not allow the plug cover to protrude from the plug surface.


Note: The condition where the plug cover is tilted or protrudes from the plug surface as shown in [Wrong example] is an improper press-fit condition.

Press the plug cover firmly with pliers until it looks like [Correct example] condition illustrated on the left.


(From the previous page)



[Correct example]

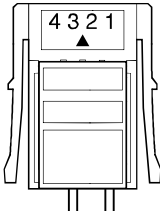

[Wrong example]

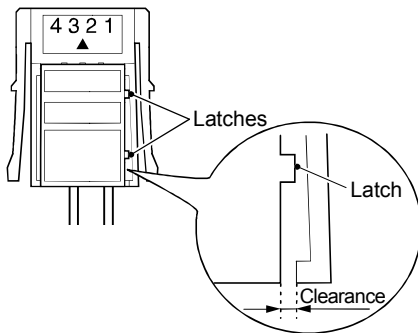

(Wiring completed)


- 8) Check the press-fit condition (viewing from the top).
Viewing from the top, check that there is no clearance between the plug body and plug cover.

Note: Clearance may occur between the plug body and plug cover when the latches do not engage securely as shown in [Wrong example].

Press the plug cover firmly with pliers until it looks like [Correct example] condition illustrated on the left.

4.10.2 Wiring procedures for the one-touch connector for communication

This section provides the wiring procedures of the one-touch connector for communication.

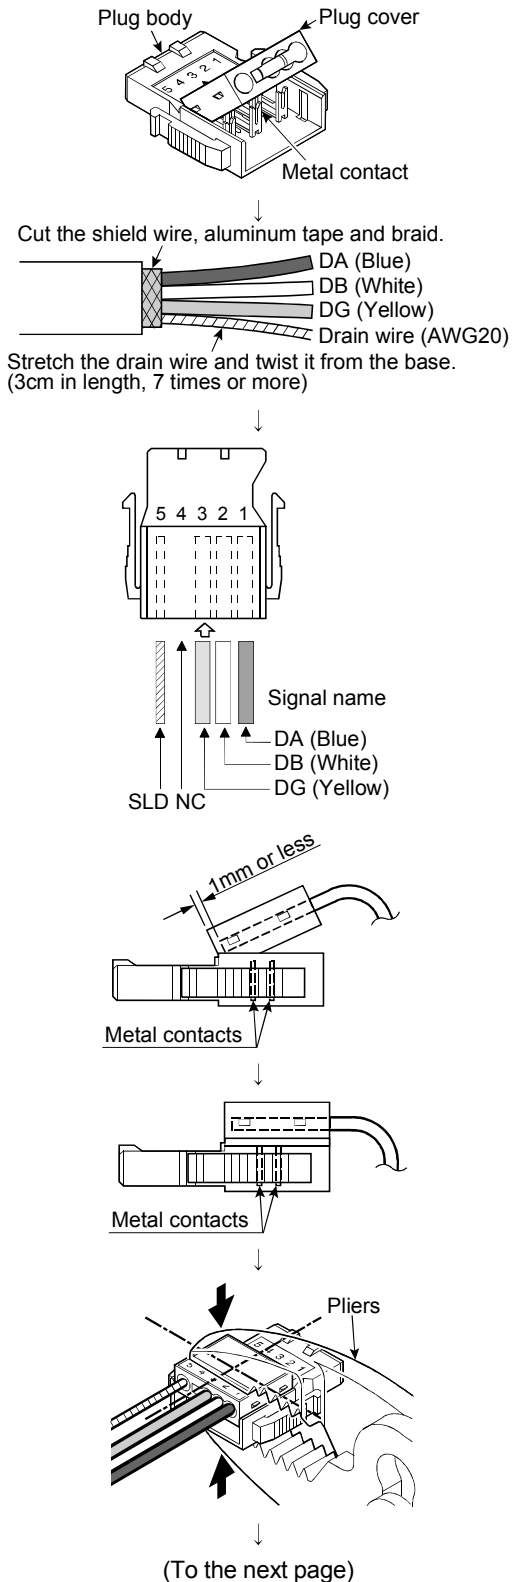

- 1) Check the connector.
Check that the plug cover is attached to the plug body.

Note: Do not push the plug cover into the plug body.
Once pressed, the plug cannot be used any more.

- 2) Processing for communication cable
Strip the cable 3cm or more and perform the processing indicated at left.
If the electric wire lengths are not even, trim their ends with a nipper to the same length so as to insert them neatly into a connector.

- 3) Insert the cable.
Lift the end of the plug cover and insert the cable until it almost reaches the plug body (within 1mm from the other end of the plug cover).
Insufficient cable insertion may cause improper press fitting.


Note: When inserting the cable, prevent the cable from sticking out from the plug cover end.

- 4) Set the plug cover.
After inserting the cable, put down the plug cover so that its face is horizontal to the plug surface, allowing the metal contacts to be fitted into the plug cover.

- 5) Press the center part of the plug cover.
Using pliers, press the center part of the plug cover vertically and strongly.


For the one-touch connectors, use adjustable pliers so that their jaws can be widely opened.

(From the previous page)

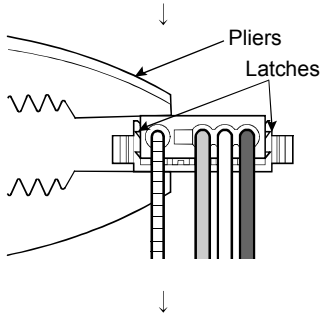

- 6) Press both ends of the plug cover
After pressing the center part of the plug cover, press both ends of the plug cover where latches are located. Verify that the latches engage with the plug body.


[Correct example]

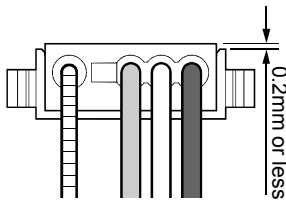


- 7) Check the press-fit condition (viewing from the wiring side). Viewing from the wiring side, check that the plug surface is flush with the plug cover. The difference between the plug cover and the plug surface must be 0.2mm or less.

Note: The condition where the plug cover is tilted as shown in [Wrong example] or protrudes from the plug surface 0.2mm or more is an improper press-fit condition. Press the plug cover securely with pliers until it looks like [Correct example] condition illustrated on the left.

[Wrong example]

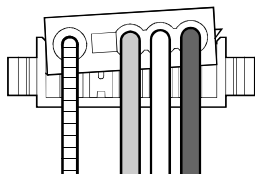


[Correct example]

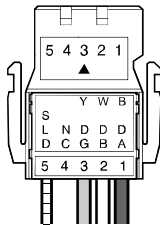

- 8) Check the press-fit condition (viewing from the top). Viewing from the top, check that there is no clearance between the plug body and plug cover.

Note: Clearance may occur between the plug body and plug cover when the latches do not engage securely as shown in [Wrong example]. Press the plug cover firmly with pliers until it looks like [Correct example] condition illustrated on the left.







[Wrong example]

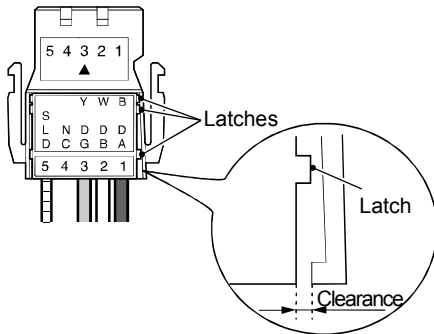

(Wiring completed)

4.10.3 Wiring procedures for the one-touch connector for power supply and FG

The following are the wiring procedures for the one-touch connector used for power supply and FG.

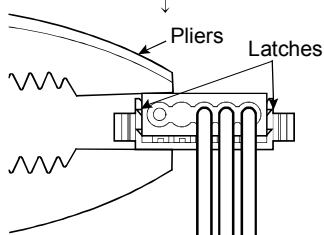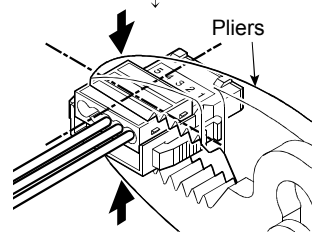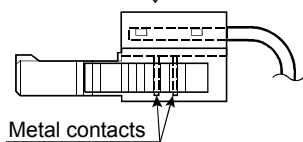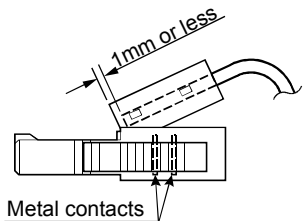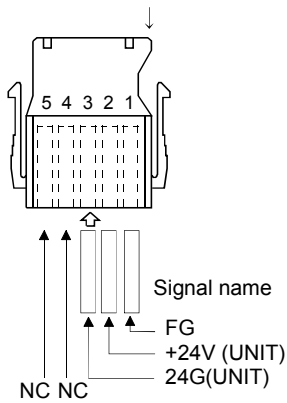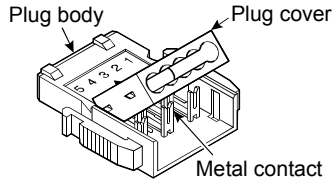

(To the next page)

- 1) Check the connector.
Check that the plug cover is attached to the plug body.

Note: Do not push the plug cover into the plug body.
Once pressed, the plug cannot be used any more.

- 2) Insert the cable. (*1)
Lift the end of the plug cover and insert the cable until it almost reaches the plug body (within 1mm from the other end of the plug cover).
Insufficient cable insertion may cause improper press fitting.

Note: When inserting the cable, prevent the cable from sticking out from the plug cover end.

- 3) Set the plug cover.
After inserting the cable, put down the plug cover so that its face is horizontal to the plug surface, allowing the metal contacts to be fitted into the plug cover.


- 4) Press the center part of the plug cover.
Using pliers, press the center part of the plug cover vertically and strongly.

For the one-touch connector for power supply and FG, use adjustable pliers so that their jaws can be widely opened.


- 5) Press both ends of the plug cover
After pressing the center part of the plug cover, press both ends of the plug cover where latches are located.
Verify that the latches engage with the plug body.

(From the previous page)

[Correct example]

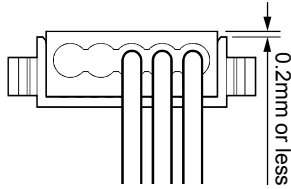


[Wrong example]

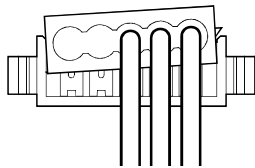

- 6) Check the press-fit condition (viewing from the wiring side).
Viewing from the wiring side, check that the plug surface is flush with the plug cover.
Set the plug cover so that it protrudes 0.2mm or less from the plug surface.

Note: The condition where the plug cover is tilted or protrudes 0.2mm or more from the plug surface as shown in [Wrong example] is an improper press-fit condition.
Press the plug cover firmly with pliers until it looks like [Correct example] condition illustrated on the left.


[Correct example]

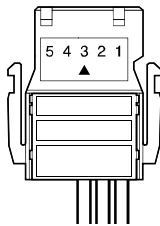

- 7) Check the press-fit condition (viewing from the top).
Viewing from the top, check that there is no clearance between the plug body and plug cover.

Note: Clearance may occur between the plug body and plug cover when the latches do not engage securely as shown in [Wrong example].
Press the plug cover firmly with pliers until it looks like [Correct example] condition illustrated on the left.

[Wrong example]

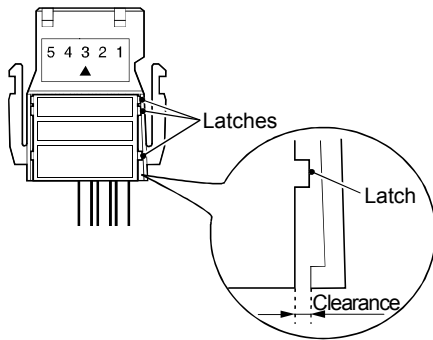


(Wiring completed)

*1 When using a cabtyre cable:

Strip the cable 2cm or more.

If the electric wire lengths are not even, trim their ends with a nipper to the same length so as to insert them neatly into a connector.

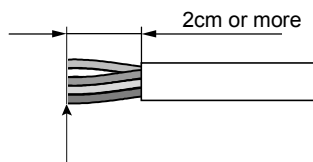

Trim the wire ends to the same length

4.11 Maintenance and Inspection

There are no special inspection items for the AJ65VBTCU-68DAVN module, but follow the inspections items describes in the PLC CPU User's Manual so that the system can always be used in the best condition.

5 PROGRAMMING


The programming procedure, basic read/write programs, and program examples for the AJ65VBTCU-68DAVN are described.

When utilizing the program example introduced in this chapter for an actual system, fully verify that there are no problems in controllability in the target system.

Refer to the user's manual of the master module used for the master module, to Section 3.6 for the remote registers, and to the AnSHCPU/AnACPU/AnUCPU/QCPU (A mode) Programming Manual (Dedicated Instructions) for details of the dedicated instructions.

5.1 Programming Procedure

Create programs for executing the digital-analog conversion of the AJ65VBTCU-68DAVN in the following procedure.

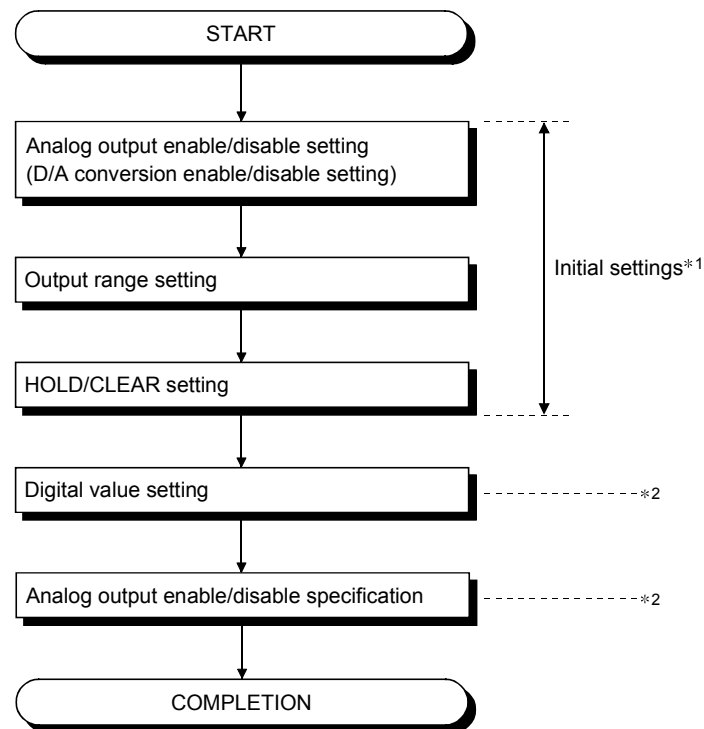

*1 When using the QCPU (Q mode), you can use the remote device station initialization procedure registration function to make settings. When using the ACPU, QCPU (A mode) or QnACPU, use the sequence program to make settings.


*2 The remote device station initialization procedure registration function cannot be used to make settings. Use the sequence program to make settings.

5.2 When Remote Net Ver. 1 Mode Is Used


5.2.1 Conditions of Program Example

The program examples in this section are created under the following conditions.

(1) System configuration

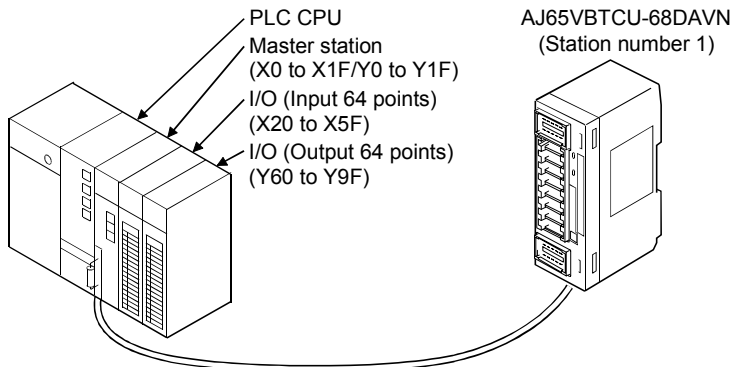

(2) Relationships between PLC CPU, master module and AJ65VBTCU-68DAVN

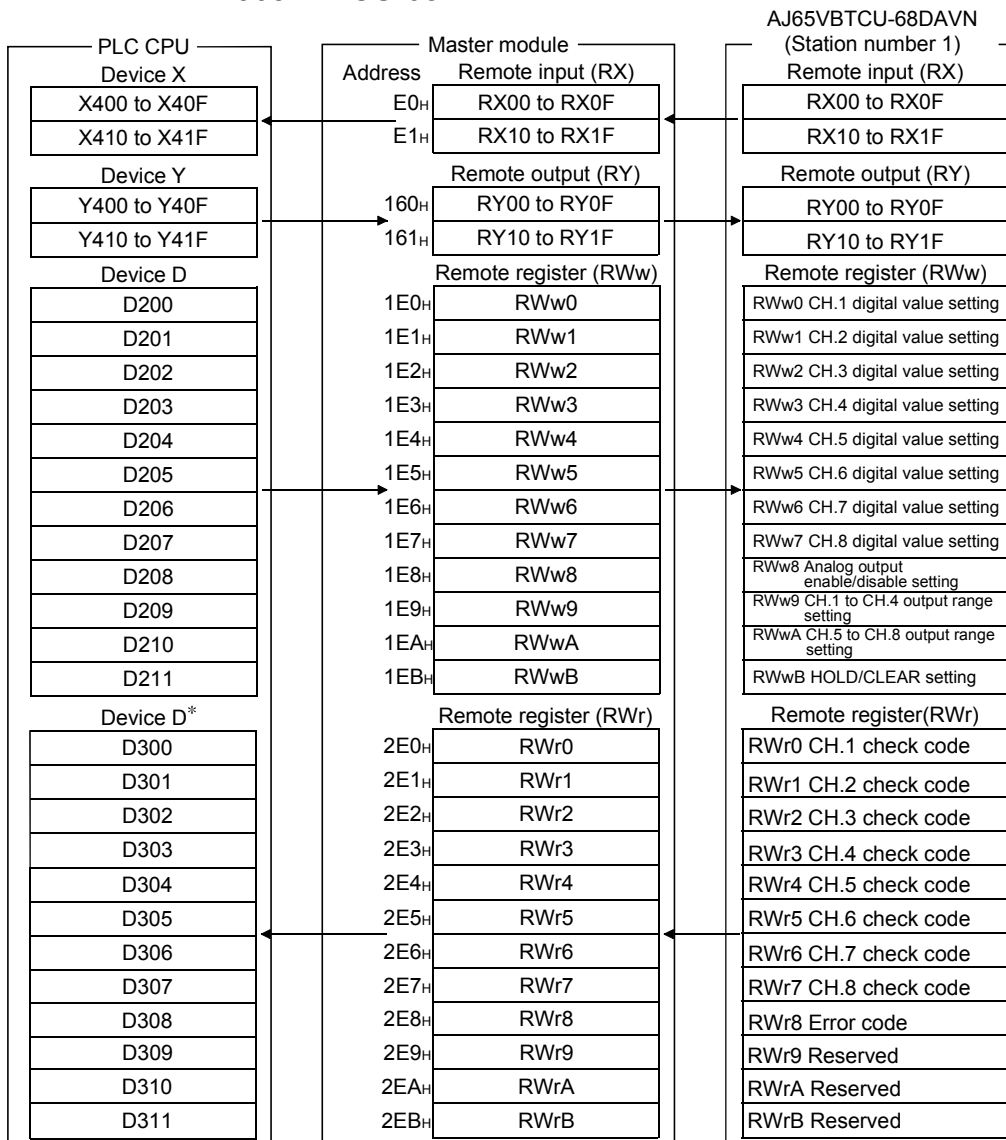

* In the program example (refer to Section 5.2.4) that uses the RRPA instruction (automatic refresh parameter setting) with the ACPU/QCPU (A mode), RWr0 to RWr8 are assigned to D456 to D464.

POINT

Some CPU modules may not accept the devices used in the program example in this chapter. For the setting ranges of the devices, refer to the user's manual of the CPU module used. □For the A1SCPU, for example, devices X100, Y100 and later are unusable. Use such devices as B and M.

(3) Initial settings

Setting Item	Settings
Analog output enable/disable setting (RWw2)	Channels 1, 2: enable
CH. 1 to CH. 4 output range setting (RWw9)	Channel 1: 0 to 5V Channel 2: user range setting 1
HOLD/CLEAR setting (RWwB)	Channels 1, 2: CLEAR

(4) Other settings

Setting Item	Settings
CH.1 digital value (RWw0)	500
CH.2 digital value (RWw1)	1000
CH.1 analog output enable/disable frag (RY00)	Enable
CH.2 analog output enable/disable frag (RY01)	Enable

5.2.2 Program Example for Use of the QCPU (Q mode)

The program examples in this section are created under the following conditions. GX Developer is used to set the network and automatic refresh parameters. Using the remote device station initialization procedure registration function facilitates initial settings.

- (1) Parameter setting
 - (a) Network parameter setting

1	
Start I/O No	0000
Operational setting	
Operational settings	
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Ver.1 mode)
All connect count	1
Remote input(RX)	
Remote output(RY)	
Remote register(RW/r)	
Remote register(RW/w)	
Ver.2 Remote input(RX)	
Ver.2 Remote output(RY)	
Ver.2 Remote register(RW/r)	
Ver.2 Remote register(RW/w)	
Special relay(SB)	
Special register(SW)	
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	
Station information	
Remote device station initial setting	
Initial settings	
Interrupt setting	
Interrupt settings	

Station No.	Station type	Expanded cyclic setting	Exclusive station count	Remote station points	Reserve/invalid station select	Intelligent buffer select(word)		
						Send	Receive	Automatic
1/1	Remote device station	single	Exclusive station 3	96 points	No setting			

- (b) Automatic refresh parameter setting

1	
Start I/O No	0000
Operational setting	
Operational settings	
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Ver.1 mode)
All connect count	1
Remote input(RX)	X400
Remote output(RY)	Y400
Remote register(RW/r)	D300
Remote register(RW/w)	D200
Ver.2 Remote input(RX)	
Ver.2 Remote output(RY)	
Ver.2 Remote register(RW/r)	
Ver.2 Remote register(RW/w)	
Special relay(SB)	SB0
Special register(SW)	SW0
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	
Station information	
Remote device station initial setting	
Initial settings	
Interrupt setting	
Interrupt settings	

(2) Initial setting by remote device station initialization procedure registration

(a) Setting the target station number

Set the station number to which initial setting will be made.
Set the target station number to "1".

Remote device station initial setting: Target station number setting: Module 1							
	Target station No.	No. of registered procedures			Target station No.	No. of registered procedures	
	1	1	Regist procedure	9			Regist procedure
	2		Regist procedure	10			Regist procedure

(b) Setting the procedure registration

When the initial data processing request flag (RX18) turns on and the remote device station initialization procedure registration (SB0D) is set, the following data are registered to the AJ65VBTCU-68DAVN.

Procedure Execution Condition	Execution
Initial data processing request flag (RX18) turns on	Analog output enable/disable setting: channels 1, 2: enable (RWw8 :00FC _H)
	CH.1 to CH.4 output range setting : channel 1: 0 to 5V : channel 2: user range setting 1 (RWw9: 0031 _H)
	HOLD/CLEAR setting: channels 1, 2: CLEAR (RWwB: 0 _H)
	Initial data processing completion flag (RY18) is turned on.
	Initial data setting request flag (RY19) is turned on.
Initial data processing request flag (RX18) turns off	Initial data processing completion flag (RY18) is turned off.
Initial data setting completion flag (RX19) turns on	Initial data setting request flag (RY19) is turned off.

(c) Setting results


The setting results are shown below.

Remote device station initial setting: Procedure registration module 1: Target station 1									
Input format: <input type="text" value="HEX"/>									
Execute Flag	Operational condition	Executorial condition				Details of execution			
		Condition Device	Device Number	Execute Condition	Write Device	Device Number	Write Data		
Execute	Set new	RX	18	ON	RWw	08	00FC		
Execute	Same as prev.set	RX	18	ON	RWw	09	0031		
Execute	Same as prev.set	RX	18	ON	RWw	0B	0000		
Execute	Same as prev.set	RX	18	ON	RY	18	ON		
Execute	Same as prev.set	RX	18	ON	RY	19	ON		
Execute	Set new	RX	18	OFF	RY	18	OFF		
Execute	Set new	RX	19	ON	RY	19	OFF		


POINT

- (1) If the remote device station initialization procedure registration directive (SB000D) is turned off after the initial processing, all RY signals that were turned on within the initial procedure registration turn off. Hence, turn on the "CH. □ analog output enable/disable flag (RYn0 to RYn7)" in the sequence program.
- (2) When the initial setting (analog output enable/disable setting (RWwm+8), CH. □ output range setting (RWwm+9, RWwm+A) or HOLD/CLEAR setting (RWwm+B) has been changed, the remote device station initialization procedure registration function cannot be used.
Change the initial setting in the sequence program.
- (3) For the case where the remote device station initialization procedure registration function is not used but a sequence program is used to make setting, refer to the user's manual of the used master module.

(3) Program example

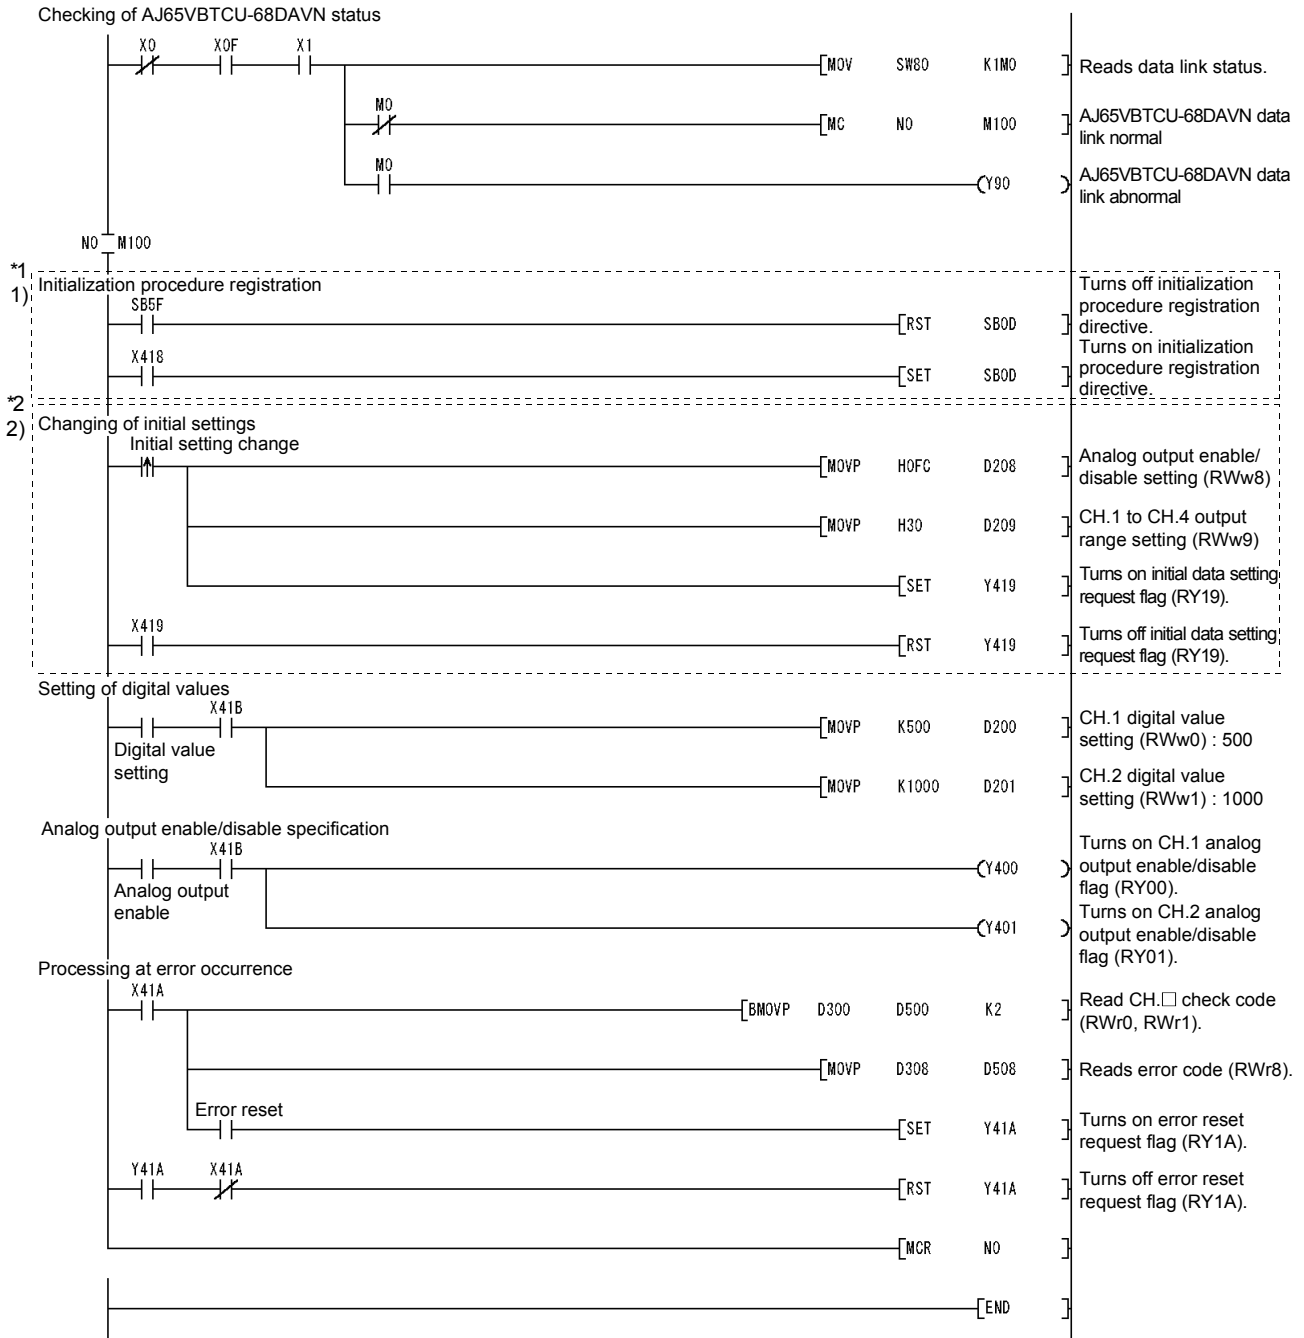

*1 When remote device station initialization procedure registration is to be made to multiple modules, correct the program part enclosed by the dotted line 1) as shown below.
 RX(m+1)B/RX(n+1)B indicates remote REDY, and RX(m+1)8/RX(n+1)8 indicates an initial data processing request flag. The device number changes depending on the station number. Insert the remote REDY and initial data processing request flags for all stations where remote device station initialization procedure registration has been set.

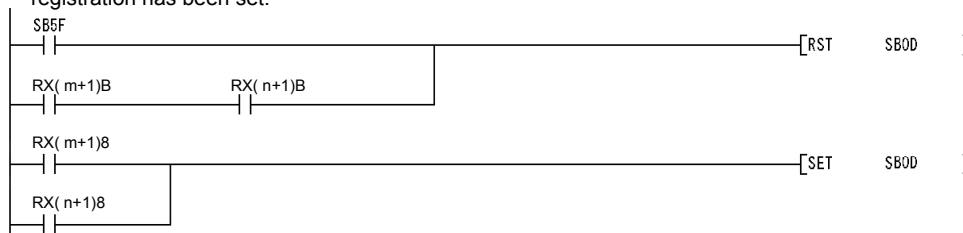

*2 The program part enclosed by the dotted line 2) is required only when the initial setting is changed.

5.2.3 Program Example for Use of the QnACPU

GX Developer is used to set the network and automatic refresh parameters.

- (1) Parameter setting
 - (a) Network parameter setting

Start I/O No.	1
Type	Master station
All connect count	1
Remote input(RX)	
Remote output(RY)	
Remote register(RW/r)	
Remote register(RW/w)	
Special relay(SB)	
Special register(SW)	
Retry count	3
Automatic reconnection station count	1
Wait master station No.	0
PLC down select	Stop
Scan mode setting	Asynchronously
Delay information setting	0
Station information setting	Station information

StationNo.	Station type	Exclusive station count	Reserve/invalid station select	Intelligent buffer select(word)		
				Send	Receive	Automatic
1/1	Remote device station	Exclusive station 3	No setting			

- (b) Automatic refresh parameter setting


Start I/O No.	1
Type	Master station
All connect count	1
Remote input(RX)	X400
Remote output(RY)	Y400
Remote register(RW/r)	D300
Remote register(RW/w)	D200
Special relay(SB)	B0
Special register(SW)	w0
Retry count	3
Automatic reconnection station count	1
Wait master station No.	0
PLC down select	Stop
Scan mode setting	Asynchronously
Delay information setting	0
Station information setting	Station information

POINT

When the QnACPU is used, using "Y" as the remote output (RY) refresh device of the automatic refresh parameter may not hold the analog value even for the HOLD setting.

For the HOLD setting, use "M" or "B" as the remote output (RY) refresh device.

(2) Program example

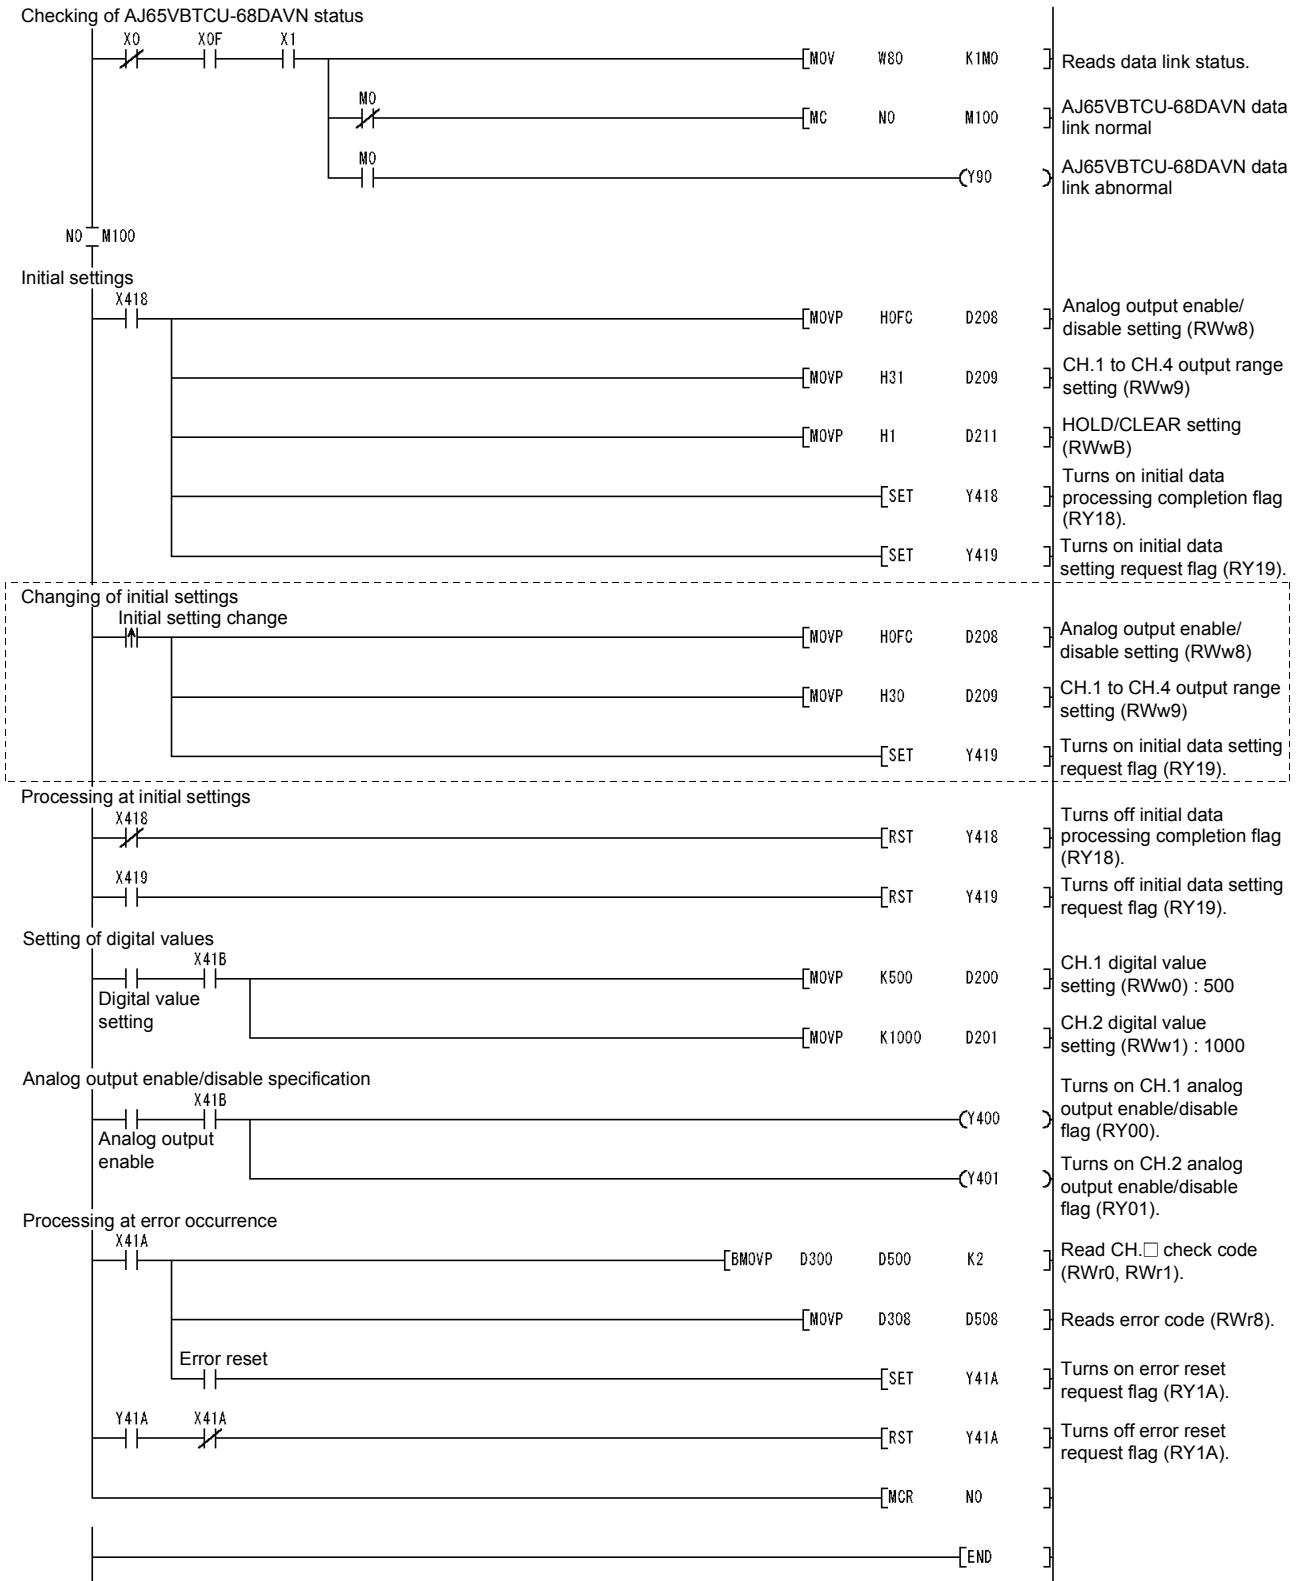


* The program enclosed by the dotted line is necessary only when the initial settings are changed.

5.2.4 Program Example for Use of the ACPU/QCPU (A mode) (dedicated instructions)


A sequence program is used to set the network and automatic refresh parameters.


(1) Program example

Setting of network parameters using RLPA dedicated instruction

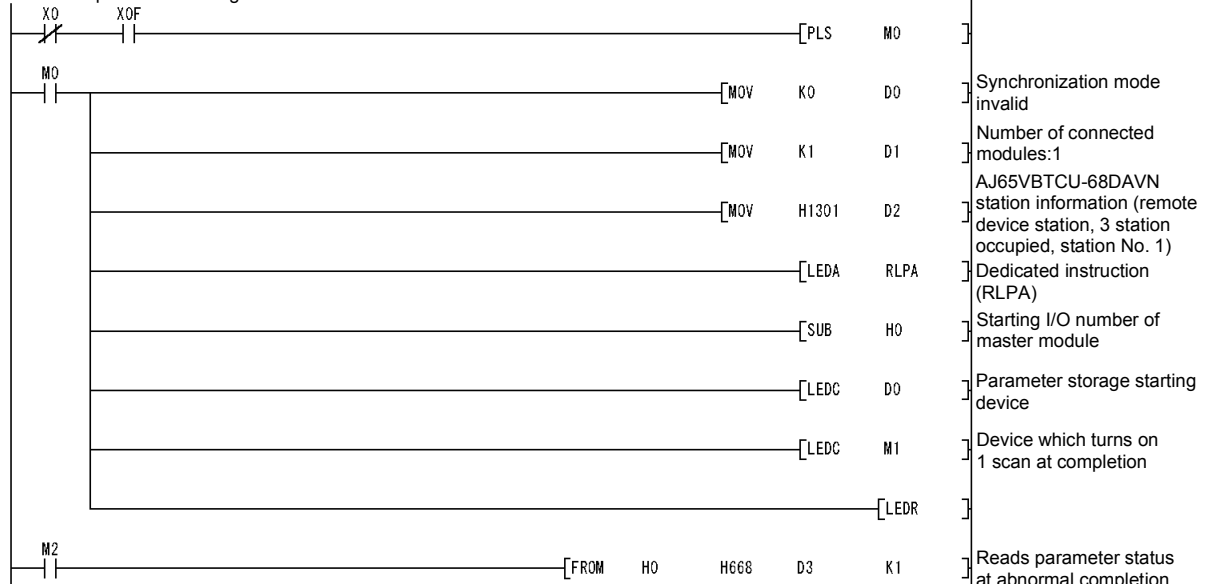


Setting of automatic refresh parameters using RRPA dedicated instruction

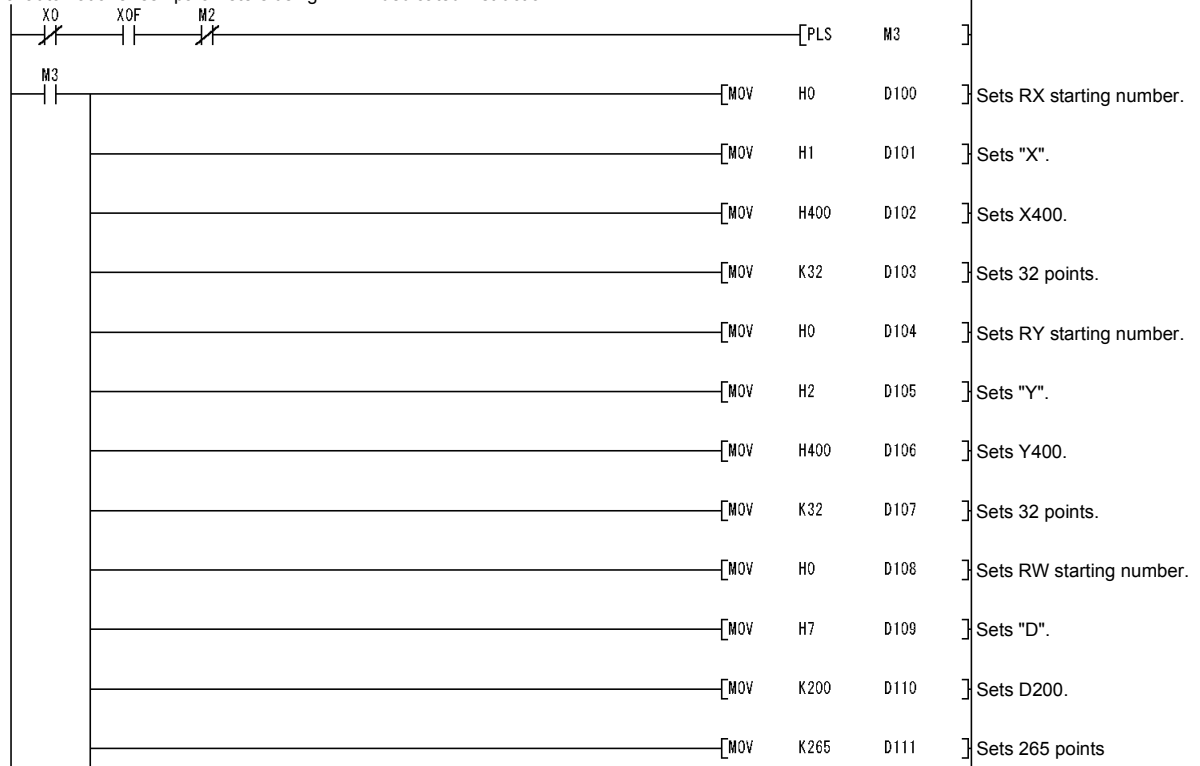

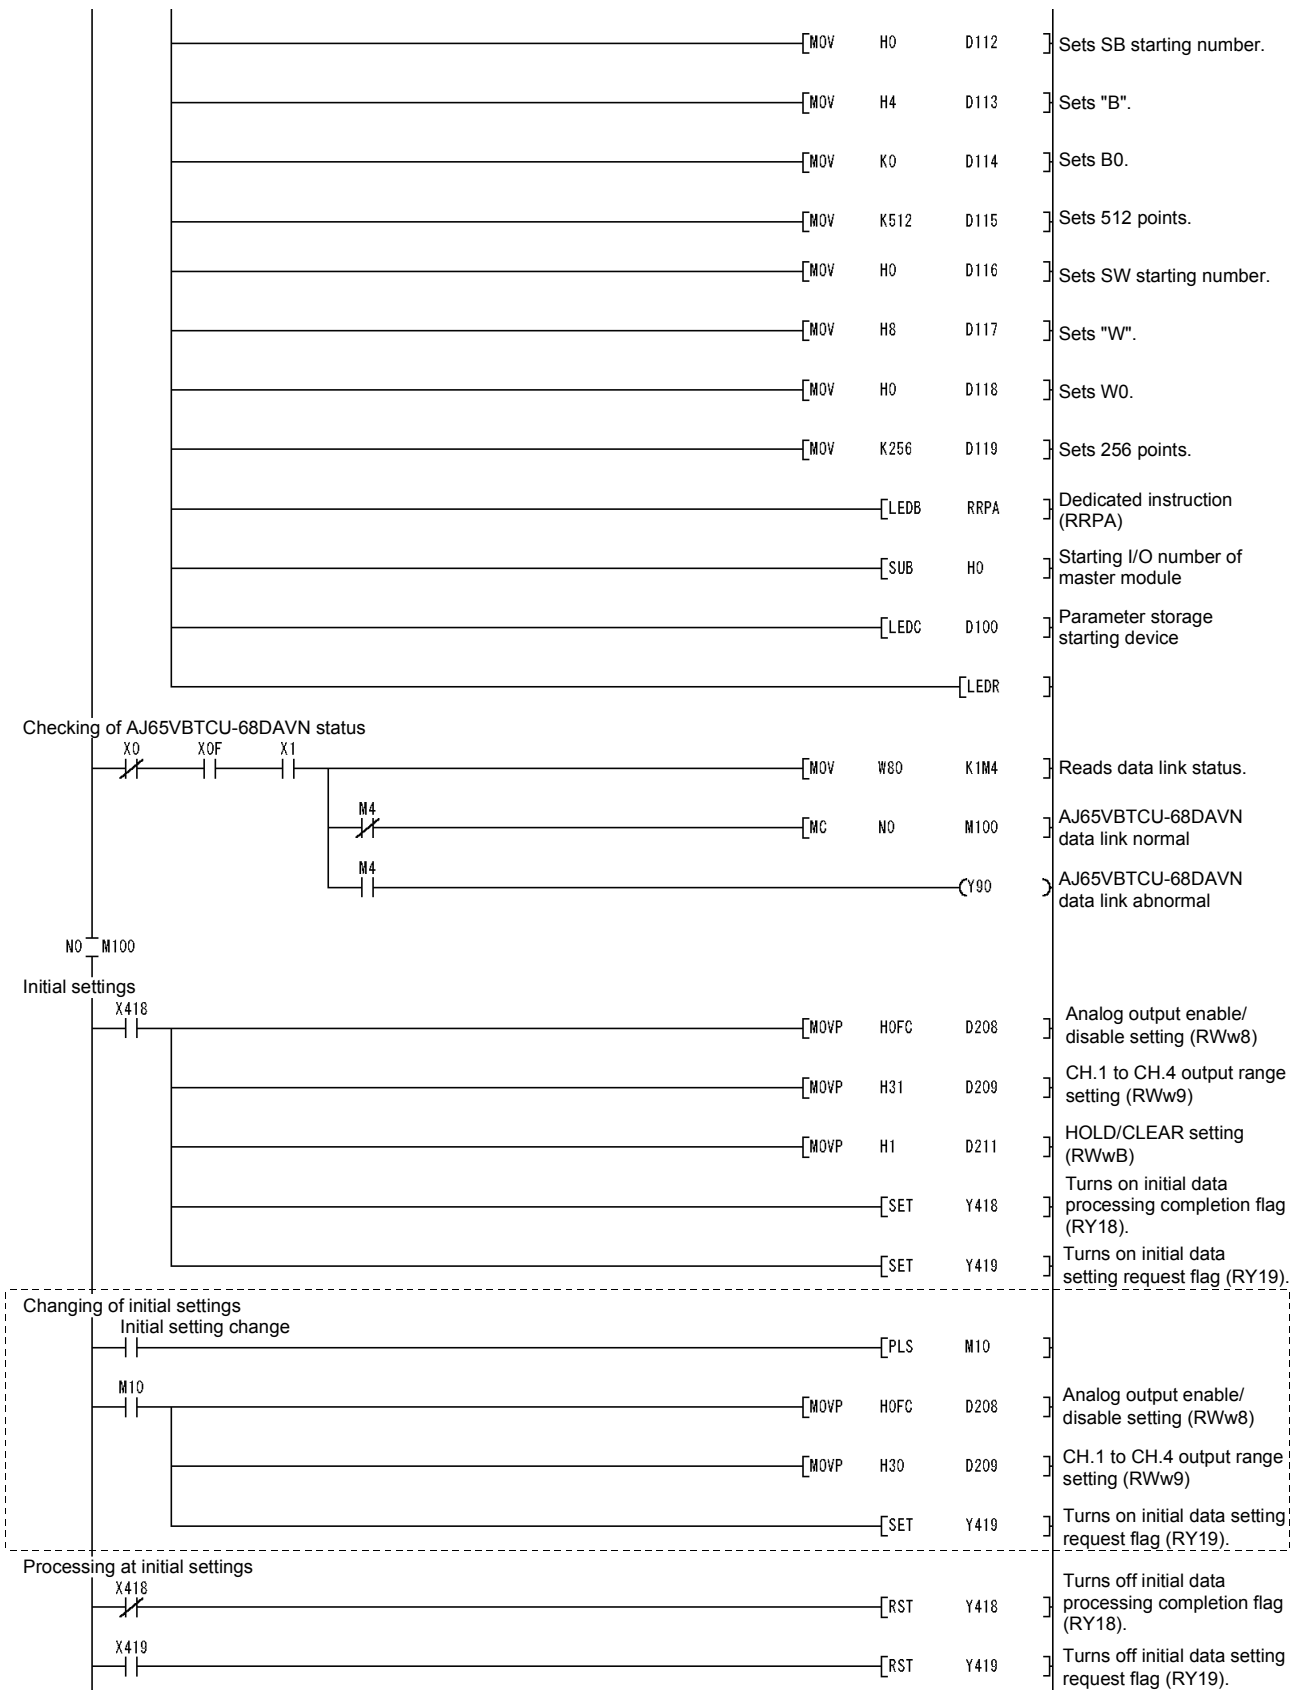


* The program enclosed by the dotted line is necessary only when the initial settings are changed.

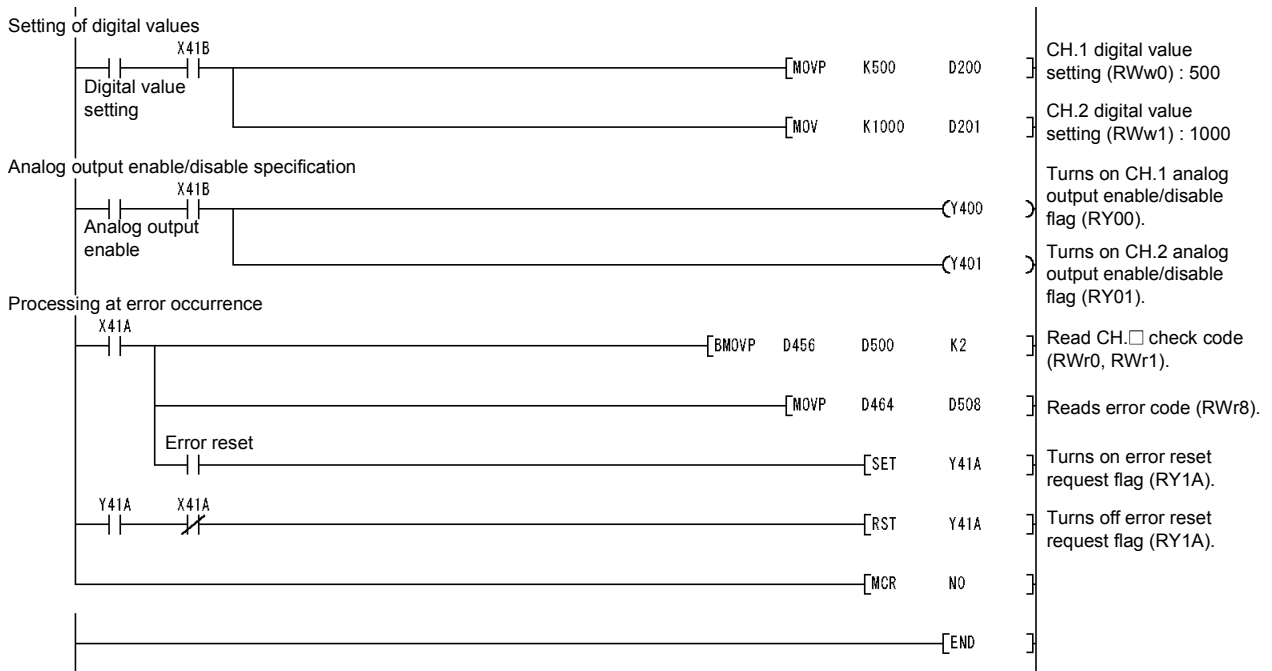


5.2.5 Program Example for Use of the ACPUCPU/QCPU (A mode) (FROM/TO instructions)

A sequence program is used to set the network parameters.

(1) Program example

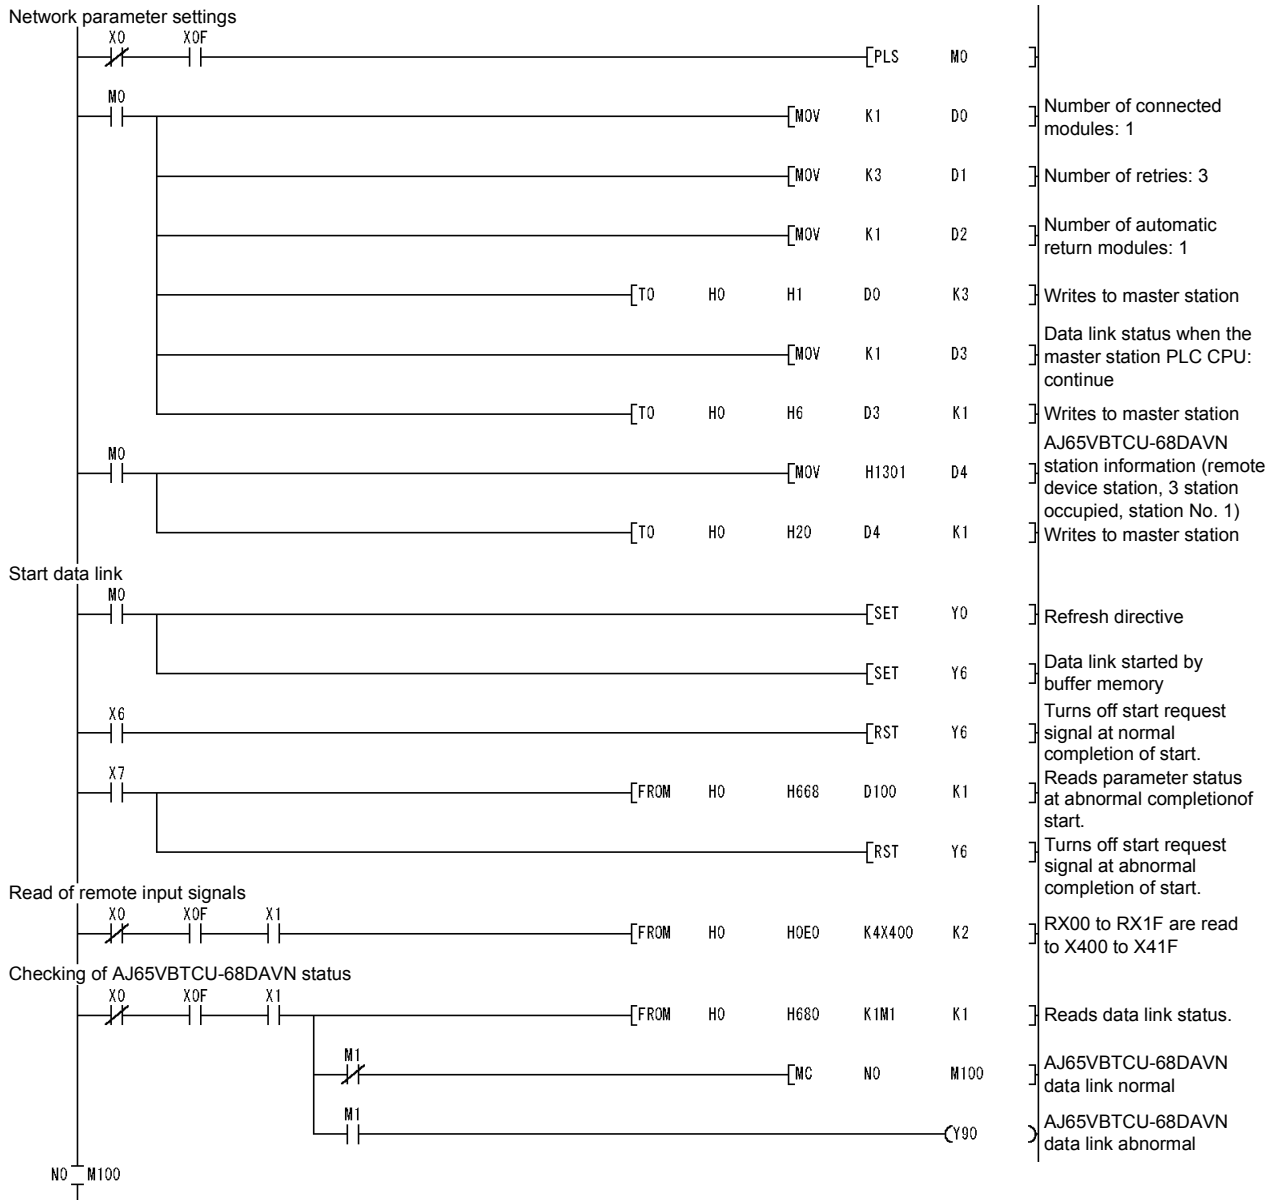

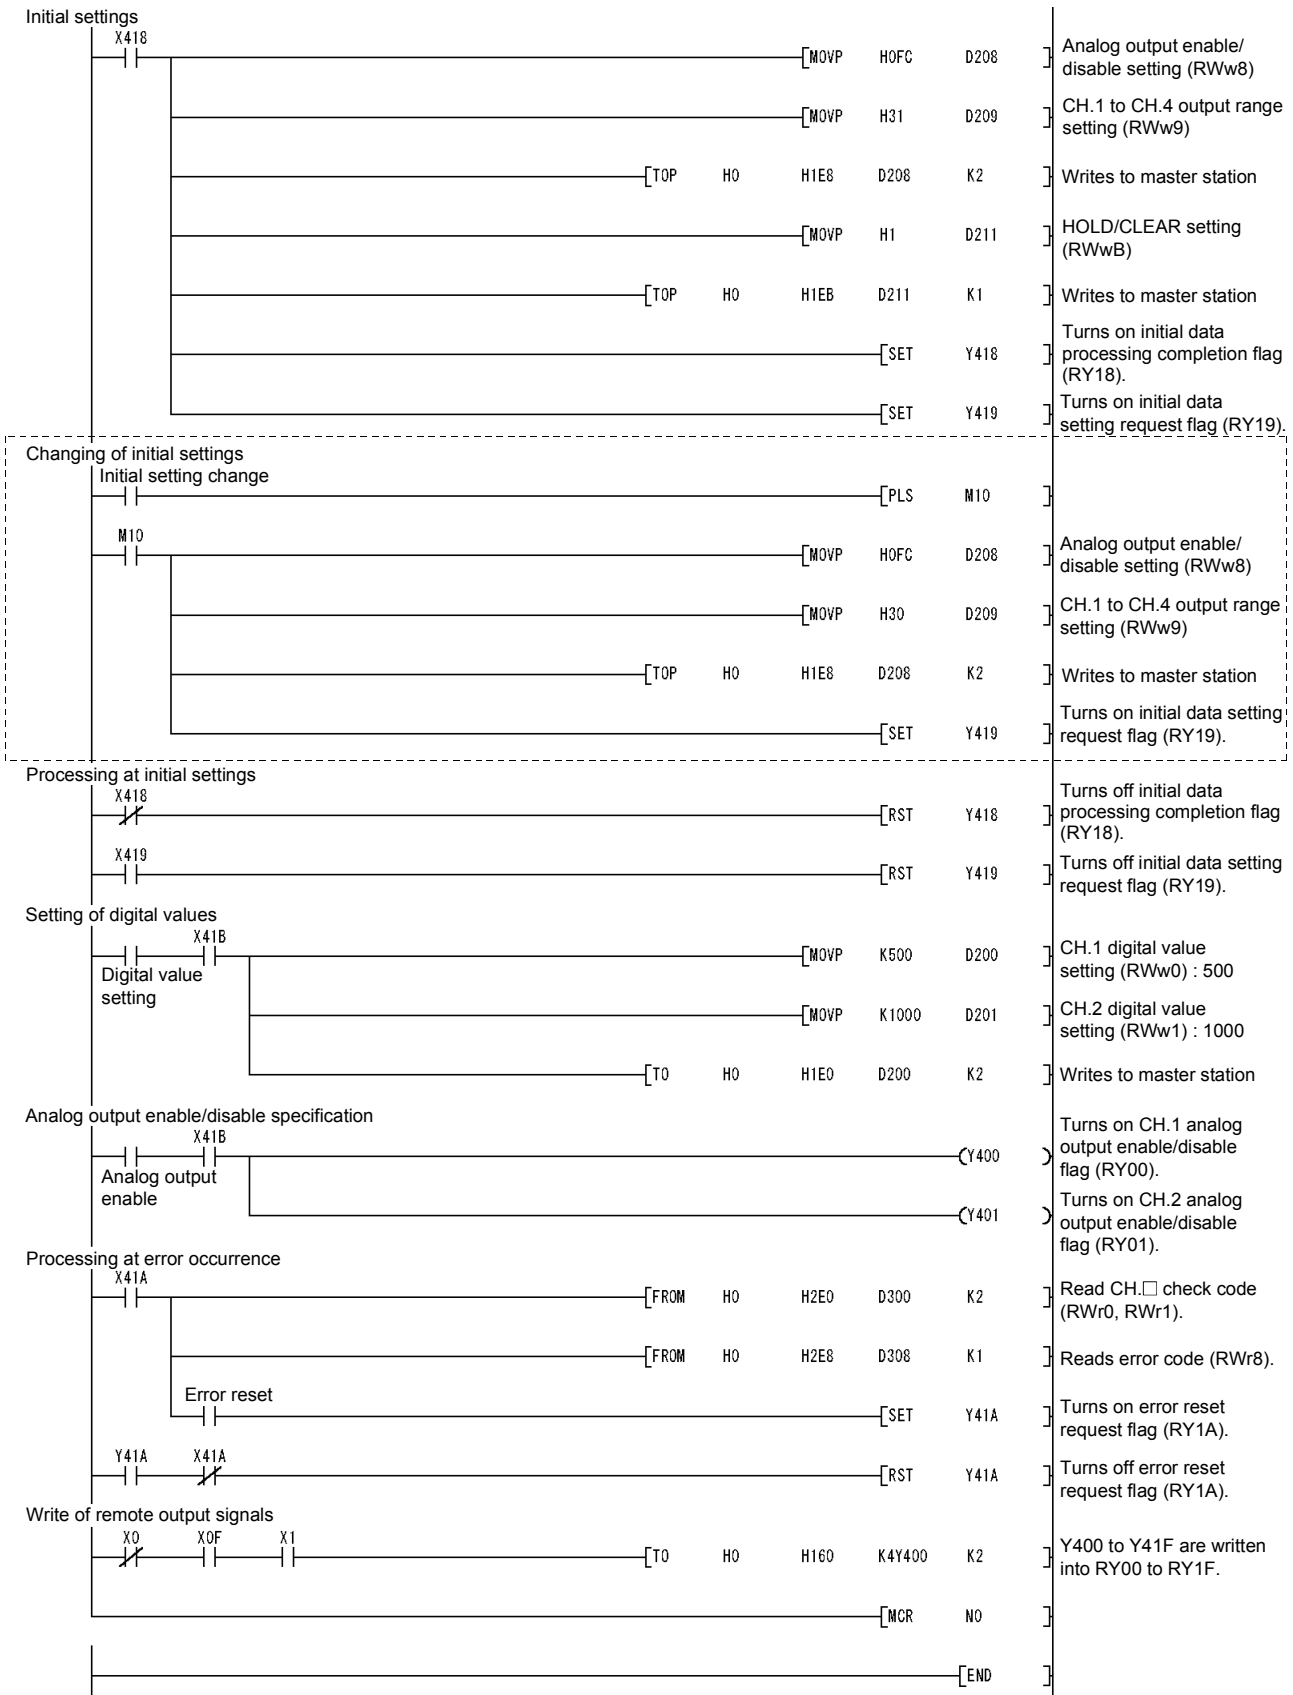


* The program enclosed by the dotted line is necessary only when the initial settings are changed.

5.3 When Remote Net Ver. 2 Mode Is Used

5.3.1 Conditions of program examples


The program examples in this section are created under the following conditions.

(1) System configuration

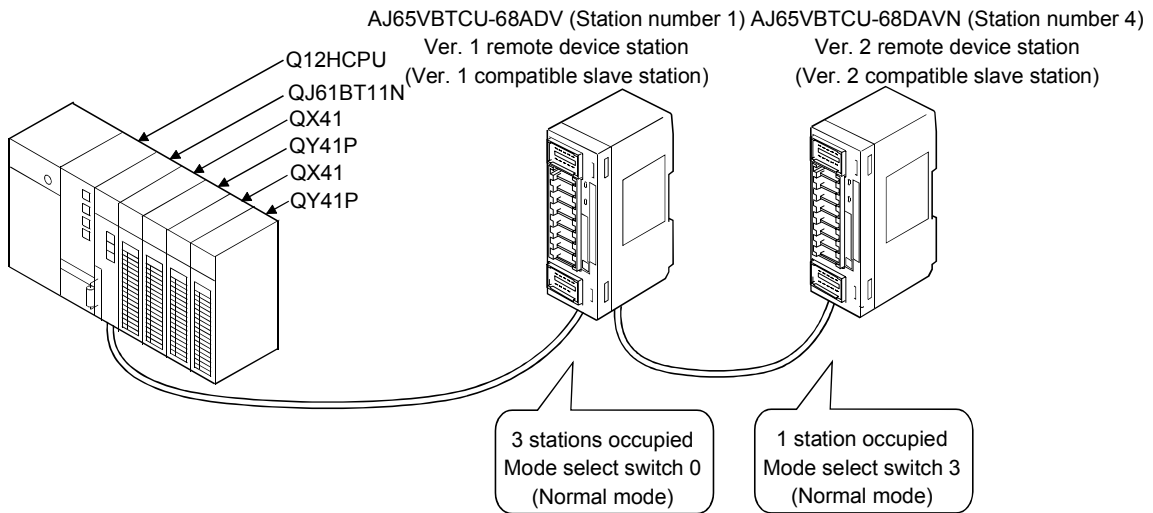


(2) Relationships between PLC CPU, AJ65VBTCU-68ADV and AJ65VBTCU-68DAVN

[Remote input (RX), remote output (RY)]

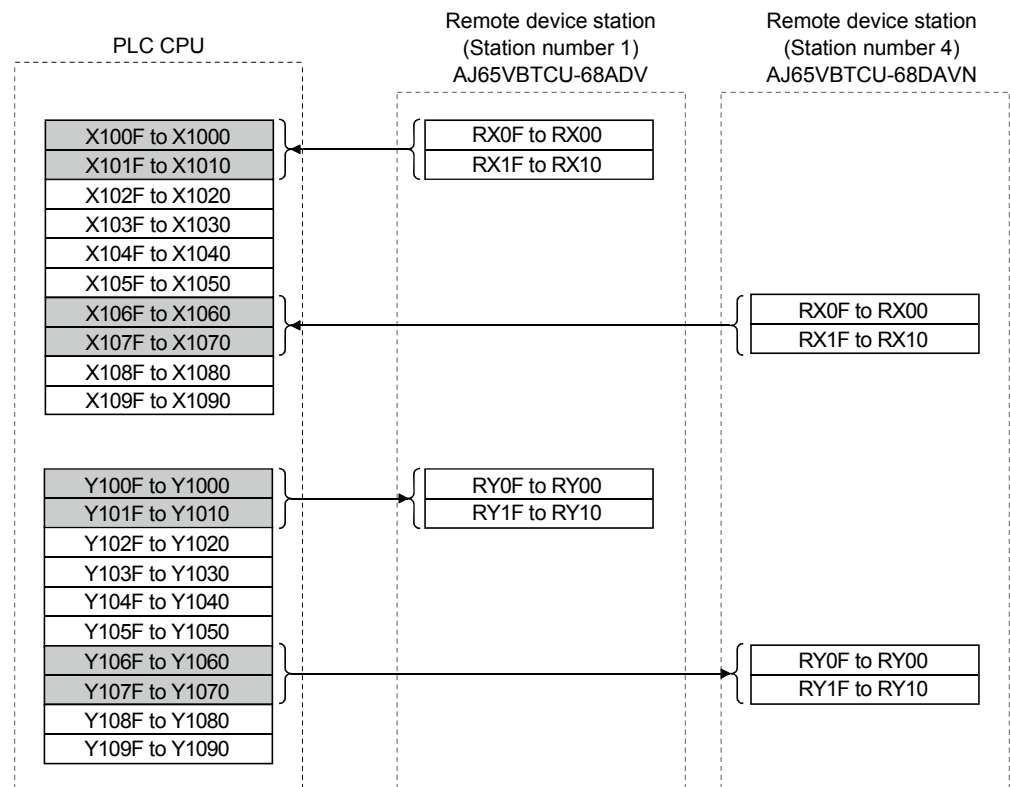

[Remote registers (RWw, RWr)]

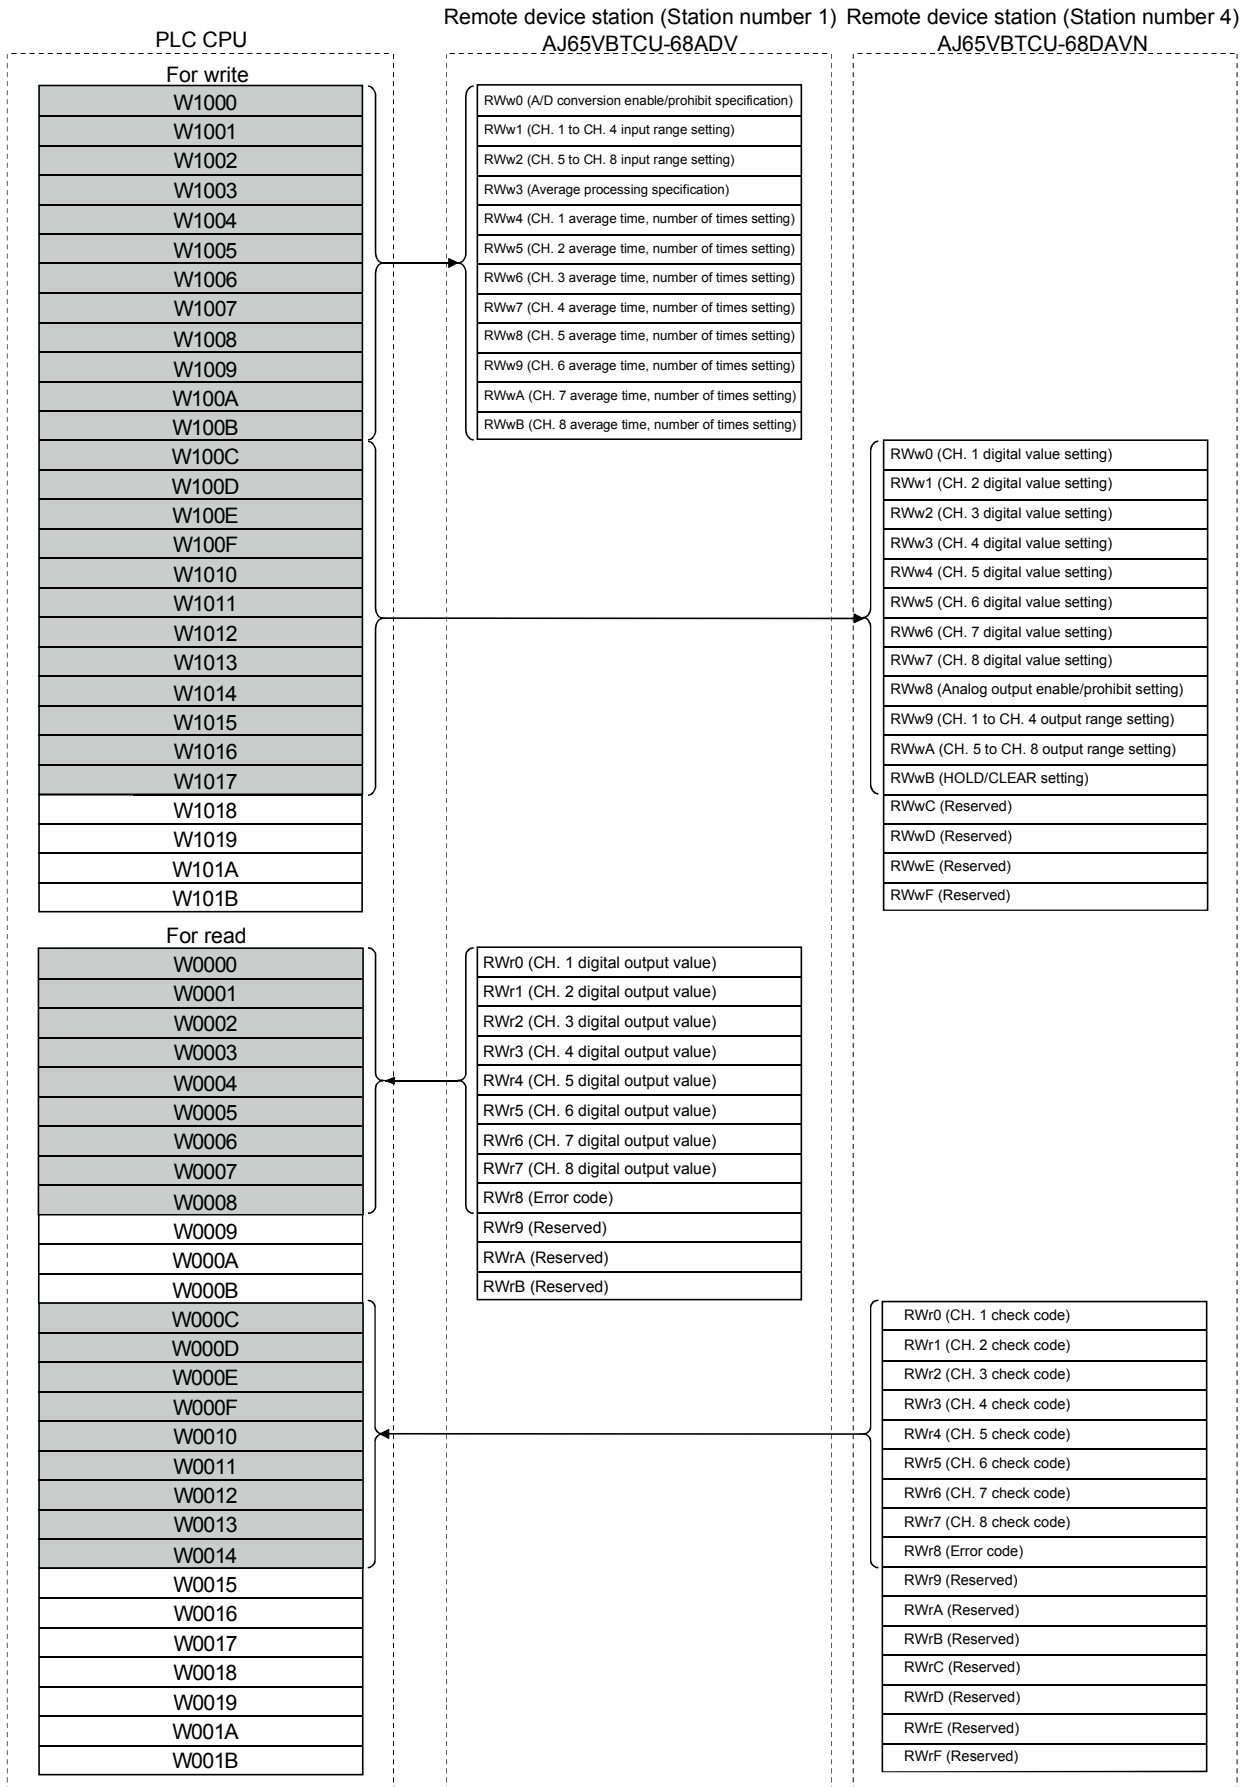

(3) Initial settings

Remote Device Station	Setting Item	Settings
AJ65VBTCU-68ADV	A/D conversion enable/prohibit specification (RWw0)	A/D conversion enable channel: Channel 1, 2
	CH. 1 to CH. 4 input range setting (RWw1)	Channel 1: 0 to 5V Channel 2: User range setting 1
	Average processing specification (RWw3)	Channel 1: Sampling processing Channel 2: Average processing, number of times averaging
	CH. 2 average time, number of times setting (RWw5)	Number of average processing times of channel 2: 16 times
AJ65VBTCU-68DAVN	Analog output enable/disable setting (RWw8)	Channels 1, 2: enable
	CH. 1 to CH. 4 output range setting (RWw9)	Channel 1: 0 to 5V Channel 2: user range setting 1
	HOLD/CLEAR setting (RWwB)	Channels 1, 2: CLEAR

(4) Other settings

Remote Device Station	Setting Item	Settings
AJ65VBTCU-68DAVN	CH. 1 digital value (RWw0)	500
	CH. 2 digital value (RWw1)	1000
	CH. 1 analog output enable/prohibit flag (RY00)	Enable
	CH. 2 analog output enable/prohibit flag (RY01)	Enable

POINT

When using the AJ65VBTCU-68DAVN as the ver. 2 remote device station in the normal mode, set the mode select switch to "3".

5.3.2 Setting of parameters and initialization procedure registration

The network parameters and automatic refresh parameters are set using GX Developer.

Use of the remote device station initialization procedure registration function makes initial setting easy.

(1) Parameter setting

(a) Network parameter setting

1	
Start I/O No	0000
Operational setting	Operational settings
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Ver.2 mode)
All connect count	2
Remote input(RX)	
Remote output(RY)	
Remote register(RW/r)	
Remote register(RW/w)	
Ver.2 Remote input(RX)	
Ver.2 Remote output(RY)	
Ver.2 Remote register(RW/r)	
Ver.2 Remote register(RW/w)	
Special relay(SB)	
Special register(SW)	
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	Station information
Remote device station initial setting	Initial settings
Interrupt setting	Interrupt settings

Station No.	Station type	Expanded cyclic setting	Exclusive station count	Remote station points	Reserve/invalid station select	Intelligent buffer select[word]
1/1	Ver.1 Remote device station	single	Exclusive station 3	96 points	No setting	Send Receive Automatic
2/4	Ver.2 Remote device station	quadruple	Exclusive station 1	64 points	No setting	

(b) Automatic refresh parameter setting

1	
Start I/O No	0000
Operational setting	Operational settings
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Ver.2 mode)
All connect count	2
Remote input(RX)	X1000
Remote output(RY)	Y1000
Remote register(RW/r)	w0
Remote register(RW/w)	w1000
Ver.2 Remote input(RX)	
Ver.2 Remote output(RY)	
Ver.2 Remote register(RW/r)	
Ver.2 Remote register(RW/w)	
Special relay(SB)	SB0
Special register(SW)	SW0
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	Station information
Remote device station initial setting	Initial settings
Interrupt setting	Interrupt settings

POINT

When setting X, Y, B, W, SD and SW as refresh devices, make setting so that their device numbers do not overlap the device numbers used on the other networks, etc.

(2) Initial setting by remote device station initialization procedure registration function

(a) Setting of target station numbers

Set the station numbers to which initial setting will be made.

Set the target station numbers to "1" and "4".

	Target station No.	No. of registered procedures		Target station No.	No. of registered procedures	
1	1	0	Regist procedure	9		Regist procedure
2	4	0	Regist procedure	10		Regist procedure
3			Regist procedure	11		Regist procedure

(b) Selection of procedure registration (part 1)

Make setting for the AJ65VBTCU-68ADV.

Click Procedure registration of target station number "1".

(c) Setting of procedure registration (part 1)

Set the conditions and execution for the AJ65VBTCU-68ADV.

When the initial data processing request flag (RX18) turns ON and Remote device station initialization procedure registration (SB0D) is set, the following data are registered to the AJ65VBTCU-68ADV.

Procedure Execution Condition in AJ65VBTCU-68ADV	Execution Data
Initial data processing request flag (RX18) turns ON	A/D conversion enable/prohibit specification: Channel 1, 2: Enable (RWw0: 0003 _H)
	CH. 1 to CH. 4 input range setting : Channel 1: 0 to 5V : Channel 2: User range setting 1 (RWw1: 31 _H)
	Average processing specification : Channel 1: Sampling processing : Channel 2: Average processing, number of times averaging (RWw3: 200 _H)
	CH. 2 average time, number of times setting: Channel 2: 16 times (RWw5: 10 _H)
	Initial data processing completion flag (RY18) is turned ON. Initial data setting request flag (RY19) is turned ON.
Initial data processing request flag (RX18) turns OFF	Initial data processing completion flag (RY18) is turned OFF.
Initial data setting completion flag (RX19) turns ON	Initial data setting request flag (RY19) is turned OFF.

(d) Setting result (part 1)

The following indicates the setting result of the AJ65VBTCU-68ADV.

Remote device station initial setting: Procedure registration module 1: Target station 1

Input format:

Execute Flag	Operational condition	Executorial condition			Details of execution		
		Condition Device	Device Number	Execute Condition	Write Device	Device Number	Write Data
Execute	Set new	RX	18	ON	RWw	00	0003
Execute	Same as prev.set	RX	18	ON	RWw	01	0031
Execute	Same as prev.set	RX	18	ON	RWw	03	0200
Execute	Same as prev.set	RX	18	ON	RWw	05	0010
Execute	Same as prev.set	RX	18	ON	RY	18	ON
Execute	Same as prev.set	RX	18	ON	RY	19	ON
Execute	Set new	RX	18	OFF	RY	18	OFF
Execute	Set new	RX	19	ON	RY	19	OFF

- (e) Selection of procedure registration (part 2)
 Make setting for the AJ65VBTCU-68DAVN.
 Click Procedure registration of target station number "4".

- (f) Setting of procedure registration (part 2)
 Set the conditions and execution for the AJ65VBTCU-68DAVN.

When the initial data processing request flag (RX18) turns ON and Remote device station initialization procedure registration (SB0D) is set, the following data are registered to the AJ65VBTCU-68DAVN.

Procedure Execution Condition in AJ65VBTCU-68DAVN	Execution Data
Initial data processing request flag (RX18) turns ON	Analog output enable/prohibit setting: Channel 1, 2: Enable (RWw8: 00FC _H)
	CH. 1 to CH. 4 input range setting : Channel 1: 0 to 5V : Channel 2: User range setting 1 (RWw9: 0031 _H)
	HOLD/CLEAR setting: Channel 1, 2: CLEAR (RWwB: 0 _H)
	Initial data processing completion flag (RY18) is turned ON. Initial data setting request flag (RY19) is turned ON.
Initial data processing request flag (RX18) turns OFF	Initial data processing completion flag (RY18) is turned OFF.
Initial data setting completion flag (RX19) turns ON	Initial data setting request flag (RY19) is turned OFF.

- (g) Setting result (part 2)
 The following indicates the setting result of the AJ65VBTCU-68DAVN.

Remote device station initial setting: Procedure registration module 1: Target station 4


Input format:

Execute Flag	Operational condition	Executorial condition			Details of execution		
		Condition Device	Device Number	Execute Condition	Write Device	Device Number	Write Data
Execute	Set new	RX	18	ON	RWw	08	00FC
Execute	Same as prev.set	RX	18	ON	RWw	09	0031
Execute	Same as prev.set	RX	18	ON	RWw	0B	0000
Execute	Same as prev.set	RX	18	ON	RY	18	ON
Execute	Same as prev.set	RX	18	ON	RY	19	ON
Execute	Set new	RX	18	OFF	RY	18	OFF
Execute	Set new	RX	19	ON	RY	19	OFF


POINT
<p>(1) If the remote device station initialization procedure registration command (SB000D) is turned OFF after initial processing, all RY signals that turned ON in the initial procedure registration turn OFF. Hence, turn ON "CH. □ analog output enable/prohibit flag (RYn0 to RYn7)" in the sequence program.</p> <p>(2) When the initial setting (analog output enable/prohibit setting (RWwn+8), CH. □ output range setting (RWwn+9, RWwn+A), HOLD/CLEAR setting (RWw+B)), the remote device station initialization procedure registration function cannot be used. Change the initial setting in the sequence program.</p> <p>(3) When the remote device station initialization procedure registration function is not used but a sequence program is used to make setting, refer to the user's manual of the used master module.</p>

5.3.3 Program example

Confirmation of AJ65VBTCU-68ADV, AJ65VBTCU-68DAVN status

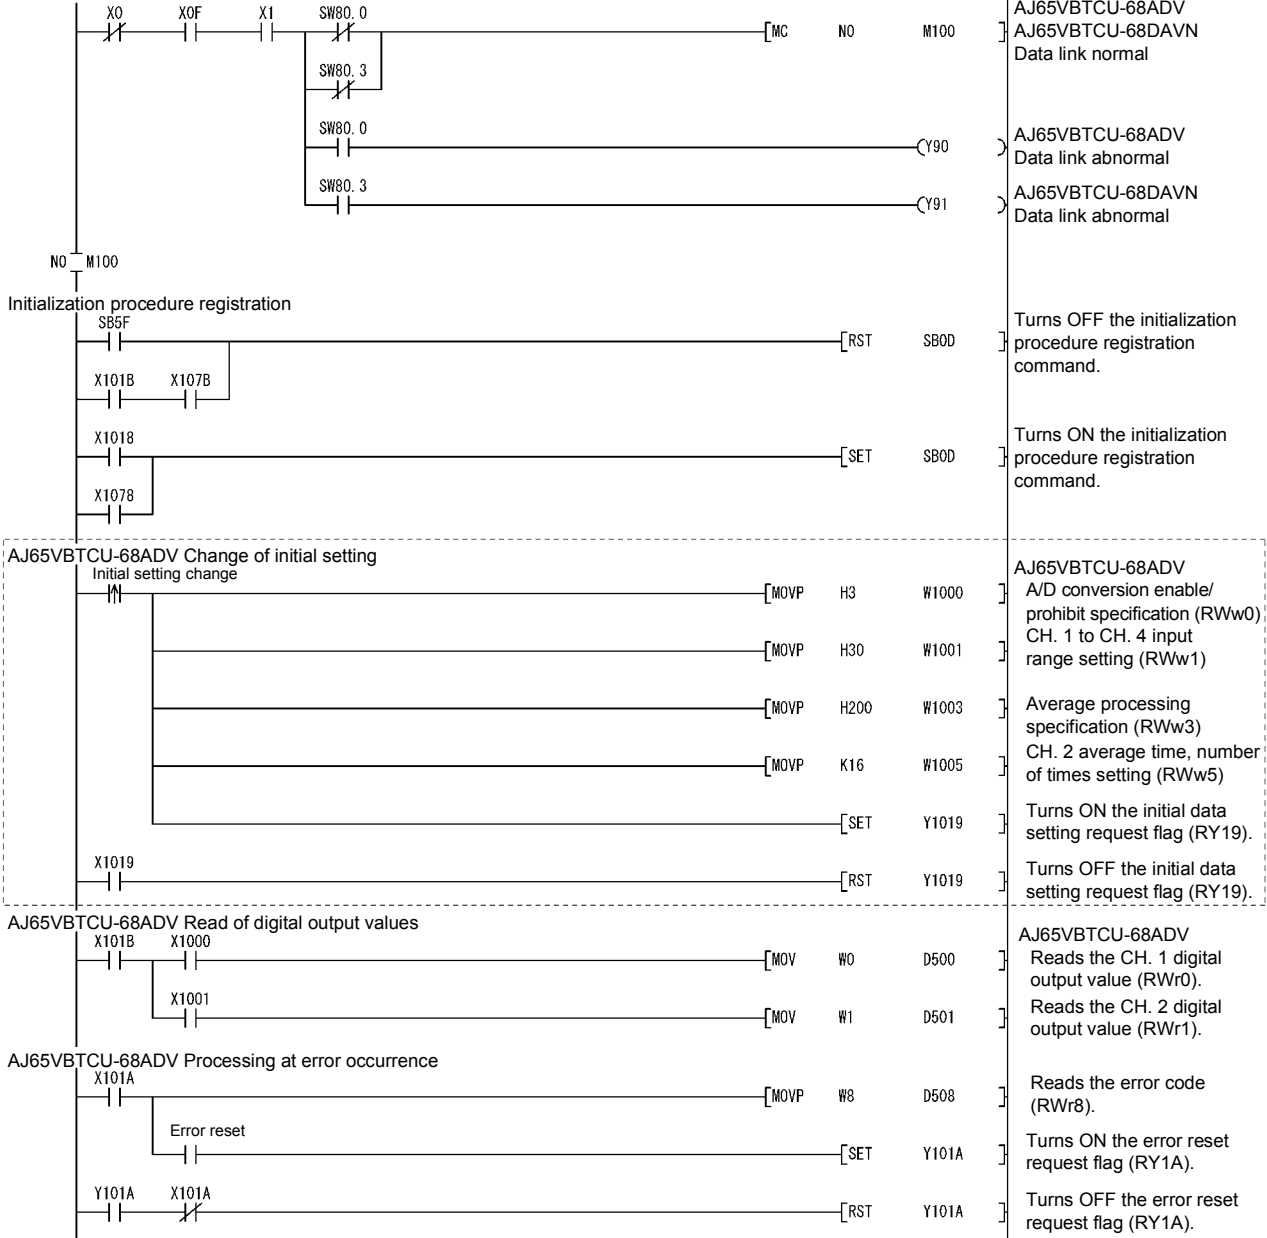

* The program part enclosed by the dotted line is required only when the initial setting is changed.

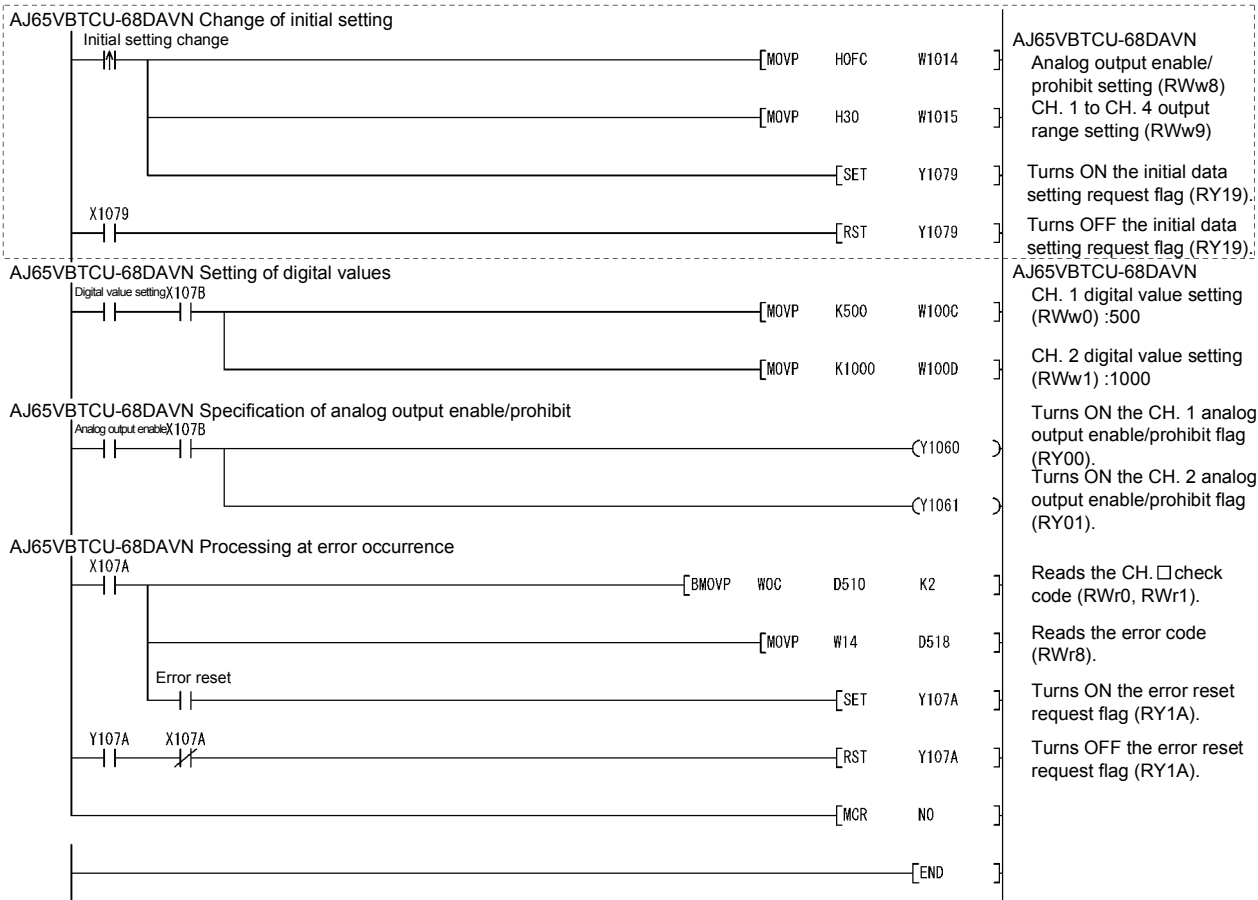


* The program part enclosed by the dotted line is required only when the initial setting is changed.

5.4 When Remote Net Additional Mode Is Used

5.4.1 Conditions of program examples


The program examples in this section are created under the following conditions.

(1) System configuration

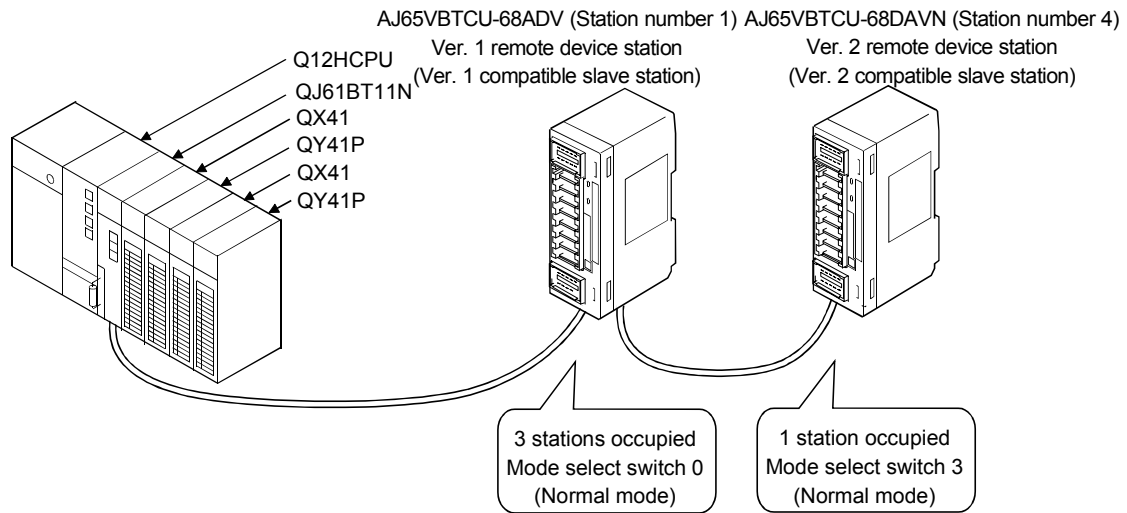


(2) Relationships between PLC CPU, AJ65VBTCU-68ADV and AJ65VBTCU-68DAVN

[Remote input (RX), remote output (RY)]

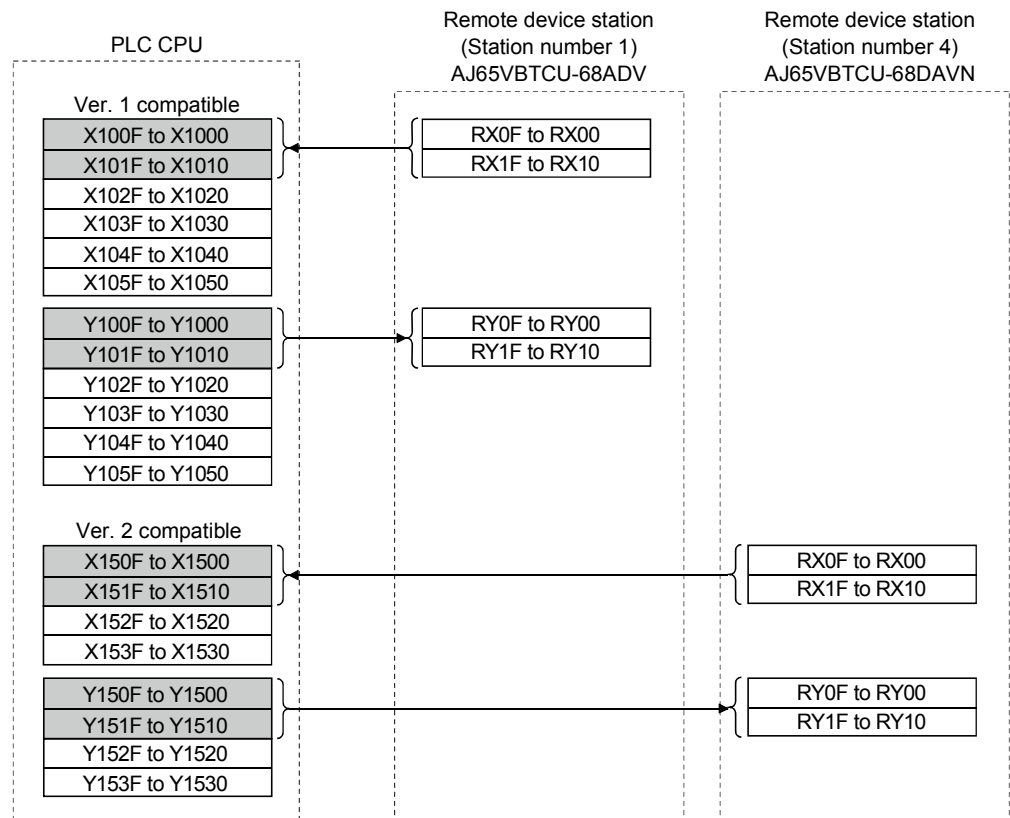

[Remote registers (RWw, RWr)]

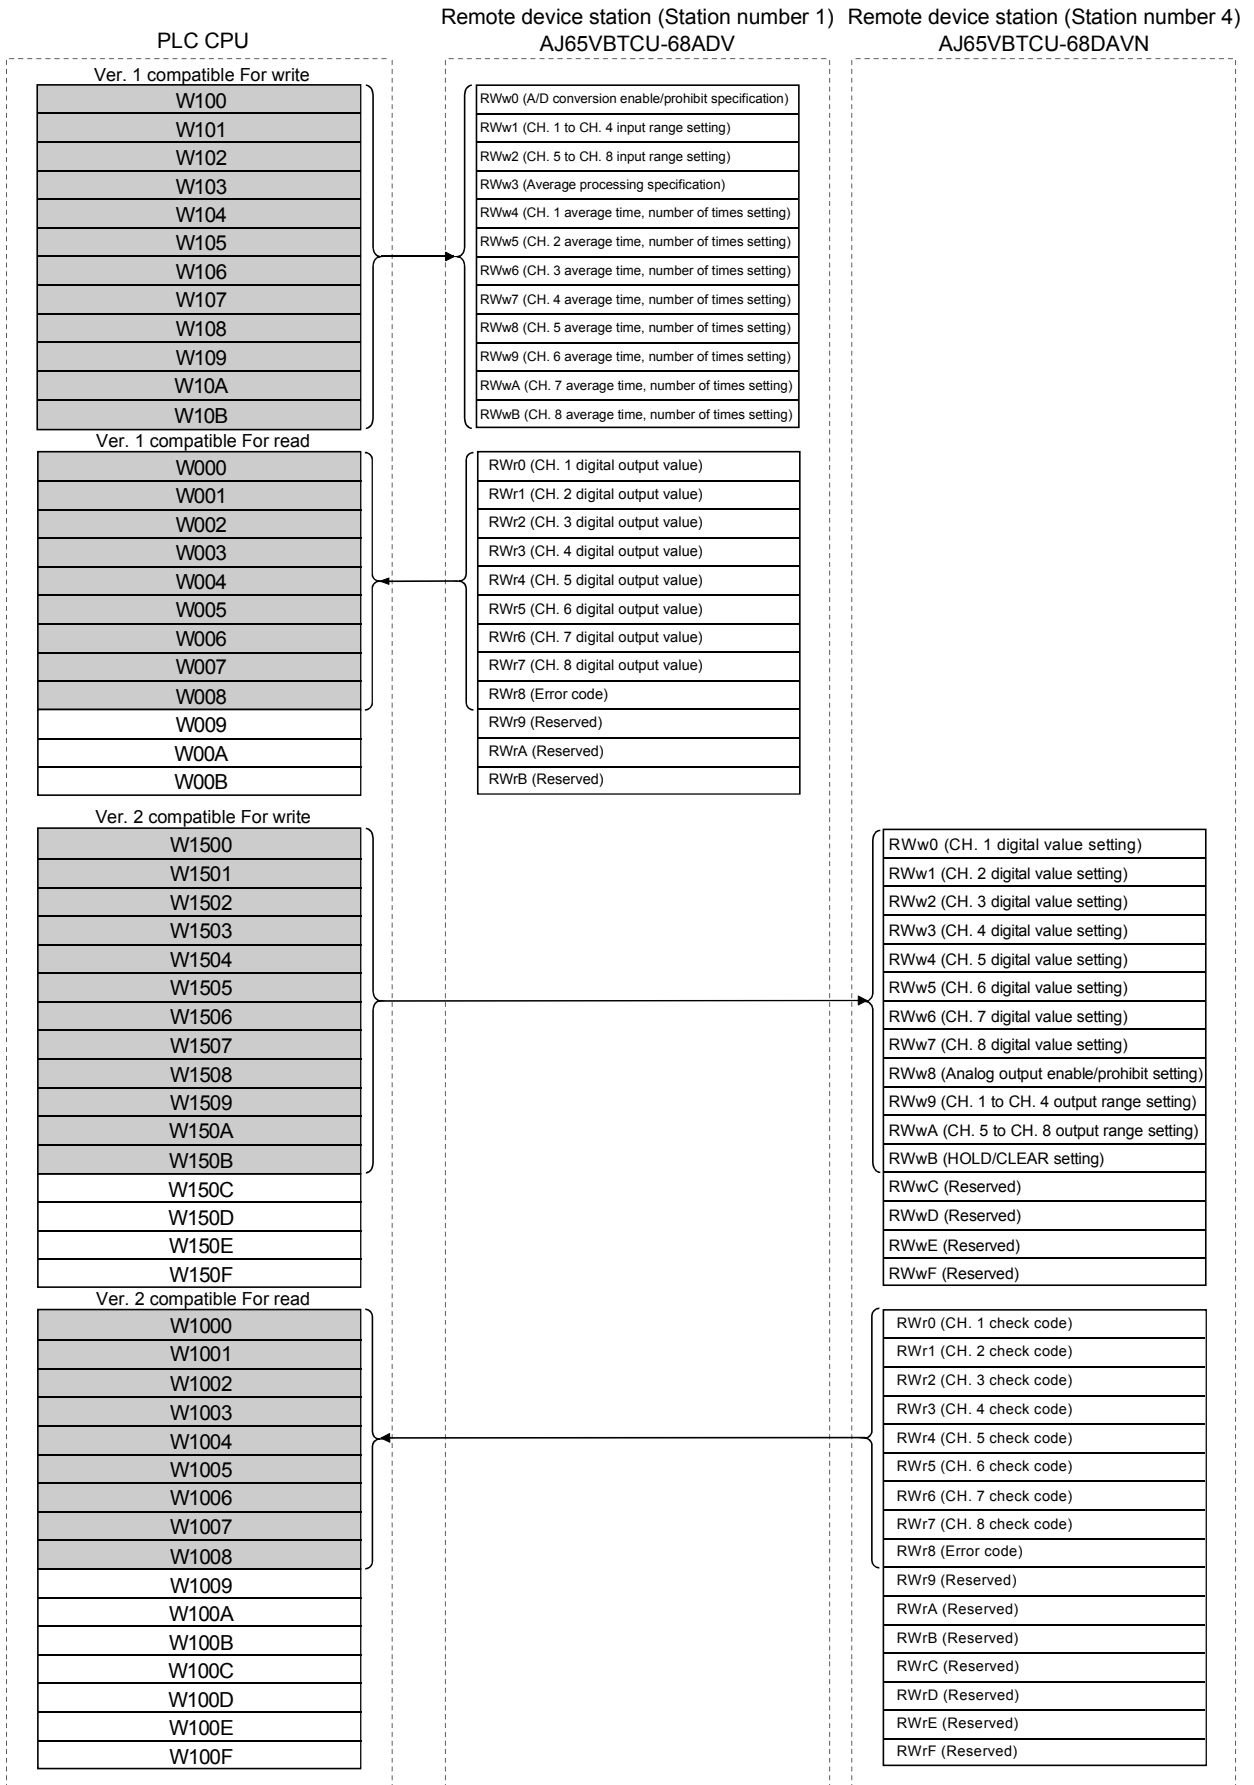

(3) Initial settings

Remote Device Station	Setting Item	Settings
AJ65VBTCU-68ADV	A/D conversion enable/prohibit specification (RWw0)	A/D conversion enable channel: Channel 1, 2
	CH. 1 to CH. 4 input range setting (RWw1)	Channel 1: 0 to 5V Channel 2: User range setting 1
	Average processing specification (RWw3)	Channel 1: Sampling processing Channel 2: Average processing, number of times averaging
	CH. 2 average time, number of times setting (RWw5)	Number of average processing times of channel 2: 16 times
AJ65VBTCU-68DAVN	Analog output enable/prohibit setting (RWw8)	Channel 1, 2: Enable
	CH. 1 to CH. 4 output range setting (RWw9)	Channel 1: 0 to 5V Channel 2: User range setting 1
	HOLD/CLEAR setting (RWwB)	Channel 1, 2: CLEAR

(4) Other settings

Remote Device Station	Setting Item	Settings
AJ65VBTCU-68DAVN	CH. 1 digital value (RWw0)	500
	CH. 2 digital value (RWw1)	1000
	CH. 1 analog output enable/prohibit flag (RY00)	Enable
	CH. 2 analog output enable/prohibit flag (RY01)	Enable

POINT

When using the AJ65VBTCU-68DAVN as the ver. 2 remote device station in the normal mode, set the mode select switch to "3".

5.4.2 Setting of parameters and initialization procedure registration

The network parameters and automatic refresh parameters are set using GX Developer.

Use of the remote device station initialization procedure registration function makes initial setting easy.

(1) Parameter setting

(a) Network parameter setting

1	
Start I/O No	0000
Operational setting	
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Additional mode)
All connect count	2
Remote input(RX)	
Remote output(RY)	
Remote register(RW/r)	
Remote register(RW/w)	
Ver.2 Remote input(RX)	
Ver.2 Remote output(RY)	
Ver.2 Remote register(RW/r)	
Ver.2 Remote register(RW/w)	
Special relay(SB)	
Special register(SW)	
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	
Remote device station initial setting	
Interrupt setting	

Station No.	Station type	Expanded cyclic setting	Exclusive station count	Remote station points	Reserve/invalid station select	Intelligent buffer select(word)		
						Send	Receive	Automatic
1/1	Ver.1 Remote device station	single	Exclusive station 3	96 points	No setting			
2/4	Ver.2 Remote device station	quadruple	Exclusive station 1	64 points	No setting			

(b) Automatic refresh parameter setting

1	
Start I/O No	0000
Operational setting	
Type	Master station
Master station data link type	PLC parameter auto start
Mode	Remote net(Additional mode)
All connect count	2
Remote input(RX)	X1000
Remote output(RY)	Y1000
Remote register(RW/r)	w0
Remote register(RW/w)	w100
Ver.2 Remote input(RX)	X1500
Ver.2 Remote output(RY)	Y1500
Ver.2 Remote register(RW/r)	w1000
Ver.2 Remote register(RW/w)	w1500
Special relay(SB)	SB0
Special register(SW)	SW0
Retry count	3
Automatic reconnection station count	1
Stand by master station No.	
PLC down select	Stop
Scan mode setting	Asynchronous
Delay information setting	0
Station information setting	
Remote device station initial setting	
Interrupt setting	

POINT

When setting X, Y, B, W, SD and SW as refresh devices, make setting so that their device numbers do not overlap the device numbers used on the other networks, etc.

(2) Initial setting by remote device station initialization procedure registration function

(a) Setting of target station numbers

Set the station numbers to which initial setting will be made.

Set the target station numbers to "1" and "4".

	Target station No.	No. of registered procedures		Target station No.	No. of registered procedures	
1	1	0	Regist procedure	9		Regist procedure
2	4	0	Regist procedure	10		Regist procedure
3			Regist procedure	11		Regist procedure

(b) Selection of procedure registration (part 1)

Make setting for the AJ65VBTCU-68ADV.

Click Procedure registration of target station number "1".

(c) Setting of procedure registration (part 1)

Set the conditions and execution for the AJ65VBTCU-68ADV.

When the initial data processing request flag (RX18) turns ON and Remote device station initialization procedure registration (SB0D) is set, the following data are registered to the AJ65VBTCU-68ADV.

Procedure Execution Condition in AJ65VBTCU-68ADV	Execution Data
Initial data processing request flag (RX18) turns ON	A/D conversion enable/prohibit specification: Channel 1, 2: Enable (RWw0: 0003 _H)
	CH. 1 to CH. 4 input range setting: Channel 1: 0 to 5V : Channel 2: User range setting 1 (RWw1: 31 _H)
	Average processing specification : Channel 1: Sampling processing : Channel 2: Average processing, number of times averaging (RWw3: 200 _H)
	CH. 2 average time, number of times setting: Channel 2: 16 times (RWw5: 10 _H)
	Initial data processing completion flag (RY18) is turned ON. Initial data setting request flag (RY19) is turned ON.
Initial data processing request flag (RX18) turns OFF	Initial data processing completion flag (RY18) is turned OFF.
Initial data setting completion flag (RX19) turns ON	Initial data setting request flag (RY19) is turned OFF.

(d) Setting result (part 1)

The following indicates the setting result of the AJ65VBTCU-68ADV.

Remote device station initial setting: Procedure registration module 1: Target station 1

Input format:

Execute Flag	Operational condition	Executorial condition			Details of execution		
		Condition Device	Device Number	Execute Condition	Write Device	Device Number	Write Data
Execute	Set new	RX	18	ON	RWw	00	0003
Execute	Same as prev.set	RX	18	ON	RWw	01	0031
Execute	Same as prev.set	RX	18	ON	RWw	03	0200
Execute	Same as prev.set	RX	18	ON	RWw	05	0010
Execute	Same as prev.set	RX	18	ON	RY	18	ON
Execute	Same as prev.set	RX	18	ON	RY	19	ON
Execute	Set new	RX	18	OFF	RY	18	OFF
Execute	Set new	RX	19	ON	RY	19	OFF

- (e) Selection of procedure registration (part 2)
Make setting for the AJ65VBTCU-68DAVN.
Click Procedure registration of target station number "4".

- (f) Setting of procedure registration (part 2)
Set the conditions and execution for the AJ65VBTCU-68DAVN.

When the initial data processing request flag (RX18) turns ON and Remote device station initialization procedure registration (SB0D) is set, the following data are registered to the AJ65VBTCU-68DAVN.

Procedure Execution Condition in AJ65VBTCU-68DAVN	Execution Data
Initial data processing request flag (RX18) turns ON	Analog output enable/prohibit setting: Channel 1, 2: Enable (RWw8: 00FC _H)
	CH. 1 to CH. 4 input range setting : Channel 1: 0 to 5V : Channel 2: User range setting 1 (RWw9: 0031 _H)
	HOLD/CLEAR setting: Channel 1, 2: CLEAR (RWwB: 0 _H)
	Initial data processing completion flag (RY18) is turned ON.
	Initial data setting request flag (RY19) is turned ON.
Initial data processing request flag (RX18) turns OFF	Initial data processing completion flag (RY18) is turned OFF.
Initial data setting completion flag (RX19) turns ON	Initial data setting request flag (RY19) is turned OFF.

- (g) Setting result (part 2)
The following indicates the setting result of the AJ65VBTCU-68DAVN.


Remote device station initial setting: Procedure registration module 1: Target station 4

Input format:


Execute Flag	Operational condition	Executorial condition			Details of execution		
		Condition Device	Device Number	Execute Condition	Write Device	Device Number	Write Data
Execute	Set new	RX	18	ON	RWw	08	00FC
Execute	Same as prev.set	RX	18	ON	RWw	09	0031
Execute	Same as prev.set	RX	18	ON	RWw	0B	0000
Execute	Same as prev.set	RX	18	ON	RY	18	ON
Execute	Same as prev.set	RX	18	ON	RY	19	ON
Execute	Set new	RX	18	OFF	RY	18	OFF
Execute	Set new	RX	19	ON	RY	19	OFF

POINT
<p>(1) If the remote device station initialization procedure registration command (SB000D) is turned OFF after initial processing, all RY signals that turned ON in the initial procedure registration turn OFF. Hence, turn ON "CH. □ analog output enable/prohibit flag (RYn0 to RYn7)" in the sequence program.</p> <p>(2) When the initial setting (analog output enable/prohibit setting (RWwn+8), CH. □ output range setting (RWwn+9, RWwn+A), HOLD/CLEAR setting (RWw+B)), the remote device station initialization procedure registration function cannot be used. Change the initial setting in the sequence program.</p> <p>(3) When the remote device station initialization procedure registration function is not used but a sequence program is used to make setting, refer to the user's manual of the used master module.</p>

5.4.3 Program example

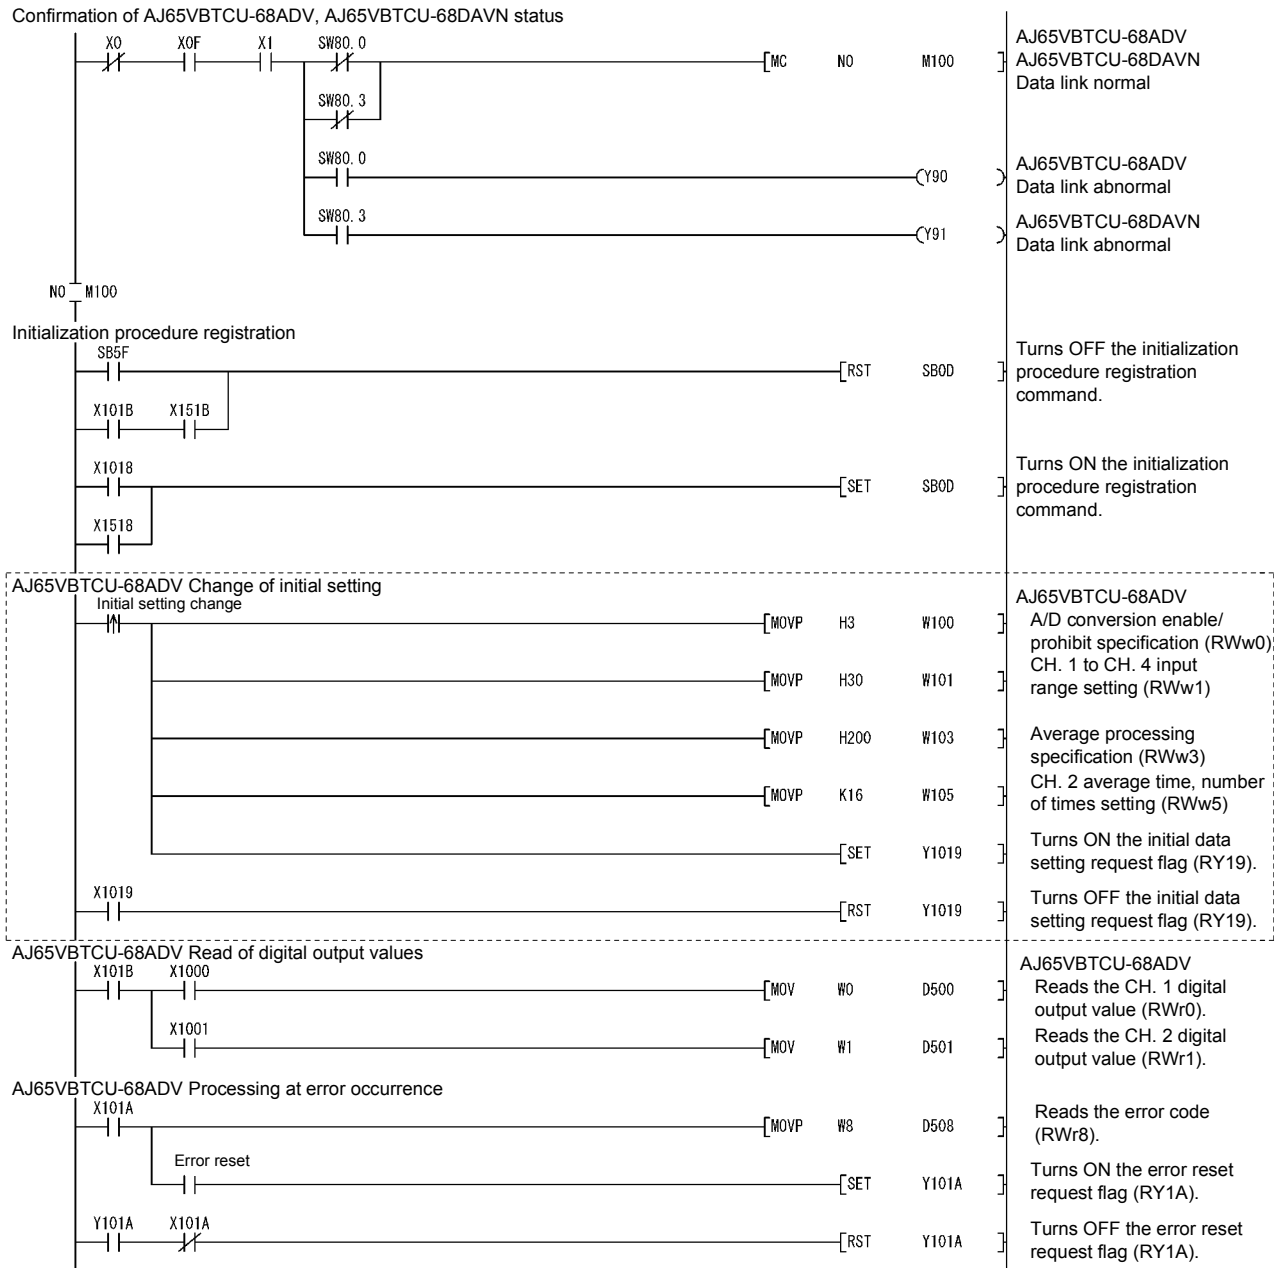

* The program part enclosed by the dotted line is required only when the initial setting is changed.

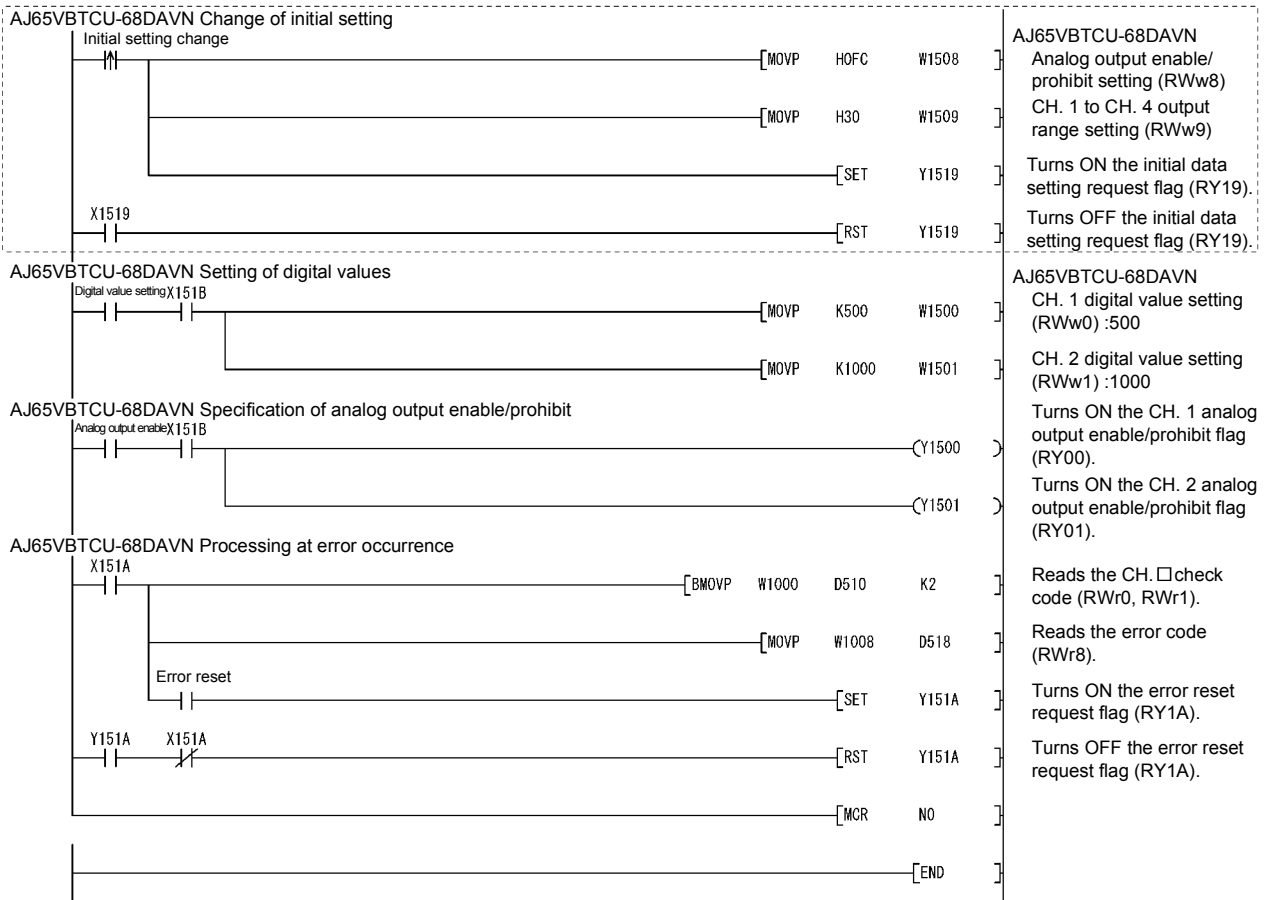

* The program part enclosed by the dotted line is required only when the initial setting is changed.

6 TROUBLESHOOTING

The details of the errors which may occur when using the AJ65VBTCU-68DAVN and troubleshooting are described.

6.1 Error Code List

When the data is written from the PLC CPU to the master module, and an error occurs (AJ65VBTCU-68DAVN "RUN" LED flashes), the error code is stored to the AJ65VBTCU-68DAVN remote register RWrn+8.

Table 6.1 Error Code List (Errors Detected by AJ65VBTCU-68DAVN)

Error Code (Hexadecimal).	Cause	Corrective Action
11 □	The set digital value is outside the setting range.	Correct the digital value to within the setting range.
20 □	The output range setting is outside the setting range.	Correct the output range setting to within the setting range.

The □ indicates the channel number where the error occurred.

- (1) For the digital value setting error, the "RUN" LED flickers at intervals of 0.5s and D/A conversion is performed using the upper or lower limit value.
For the output range setting error, the "RUN" LED flickers at intervals of 0.1s and D/A conversion is not performed on all channels.
- (2) When multiple errors occurred, the error code of the first error is stored, but the other errors are not stored.
- (3) The error code reset is performed by turning on the error reset request flag (RY (n+1) A).

6.2 Using the LED Indications to Check Errors

This section explains how to check errors using the LED indications of the AJ65VBTCU-68DAVN.

Refer to the PLC CPU and master module user's manual for issues regarding the PLC CPU and master module.

(1) When the AJ65VBTCU-68DAVN "POWER" LED is off

Check Item	Corrective Action
Is 24VDC power on?	Check the external power supply.
Is the voltage of the 24VDC power supply within the specified value?	Set the voltage value to within the range 20.4 to 26.4V.

(2) When the AJ65VBTCU-68DAVN "RUN" LED flickers

Check item		Corrective action
Is the LED flickering at 0.1s intervals in the normal mode?	When used as the ver. 1 remote device station (ver. 1 compatible slave station)	<ol style="list-style-type: none"> 1. Check that the mode select switch is not set to other than 0. (When the module is used as the ver. 1 remote device station, set the mode select switch to "0".) 2. Check the error code (RWm+8) to confirm the channel where the output range setting error occurred. 3. Correct the sequence program or GX Developer setting.
	When used as the ver. 2 remote device station (ver. 2 compatible slave station)	<ol style="list-style-type: none"> 1. Check that the mode select switch is not set to other than 3. (When the module is used as the ver. 2 remote device station, set the mode select switch to "3".) 2. Check the error code (RWm+8) to confirm the channel where the output range setting error occurred. 3. Correct the sequence program or GX Developer setting.
Is the LED flickering at 0.5s intervals in the normal mode?		<ol style="list-style-type: none"> 1. Check that the mode select switch has not been moved from the position at power-on. (When the switch is returned to the original setting, the flickering LED is lit.) 2. Using the error code (RWm+8), check the channel at which the digital value setting error has occurred. 3. Check the check code (RWm to RWm+7) of the channel at which the error has occurred. 4. Make correction to the sequence program.
Is the LED flickering at 0.1s intervals in the test mode?		Check that the mode select switch is not outside the setting range.
Is the LED flickering at 0.5s intervals in the test mode?		Change the offset/gain adjustment to within the available setting range.

(3) When the AJ65VBTCU-68DAVN "RUN" LED is off

Check item	Corrective action
Is an attempt made to perform operation in the normal mode with the mode select switch set in the test mode?	Switch power on again after setting the mode select switch to the normal mode.
Has the watchdog timer error occurred?	Using the link special registers (SW0084 to SW0087) of the master module, check the watchdog timer error and power on the AJ65VBTCU-68DAVN again. If the "RUN" LED is not lit after power is switched on again, the possible cause is a hardware fault. Contact your nearest Mitsubishi representative.

(4) When the AJ65VBTCU-68DAVN "L RUN" LED is off

Communications are broken.

For details, refer to troubleshooting in the user's manual of the master module used.

(5) When the AJ65VBTCU-68DAVN "L ERR." LED flickers at fixed intervals

Check item	Corrective action
Has the station number or transmission speed setting switch position been changed during normal operation?	After correcting the setting switch setting, switch power on again.
Is the station number or transmission speed setting switch faulty?	If the "L ERR." LED has begun flickering though switch setting change was not made during operation, the possible cause is a hardware fault. Contact your nearest Mitsubishi representative.


(6) When the AJ65VBTCU-68DAVN "L ERR." LED flickers at unfixed intervals


Check item	Corrective action
Have you forgotten fitting the terminating resistor?	Check whether the terminating resistor is fitted. If it is not connected, connect it and switch power on again.
Is the module or CC-Link dedicated cable affected by noise?	Earth both ends of the shield wire of the CC-Link dedicated cable to the protective earth conductor via SLD and FG of the corresponding module. Earth the FG terminal of the module without fail. When carrying out wiring in piping, earth the pipe without fail.

(7) When the AJ65VBTCU-68DAVN "L ERR." LED is on

Check item	Corrective action
Are the station number and transmission speed correct?	Set the correct station number and transmission speed.

6.3 Troubleshooting for the Case where the "ERR." LED of the Master Station Flickers

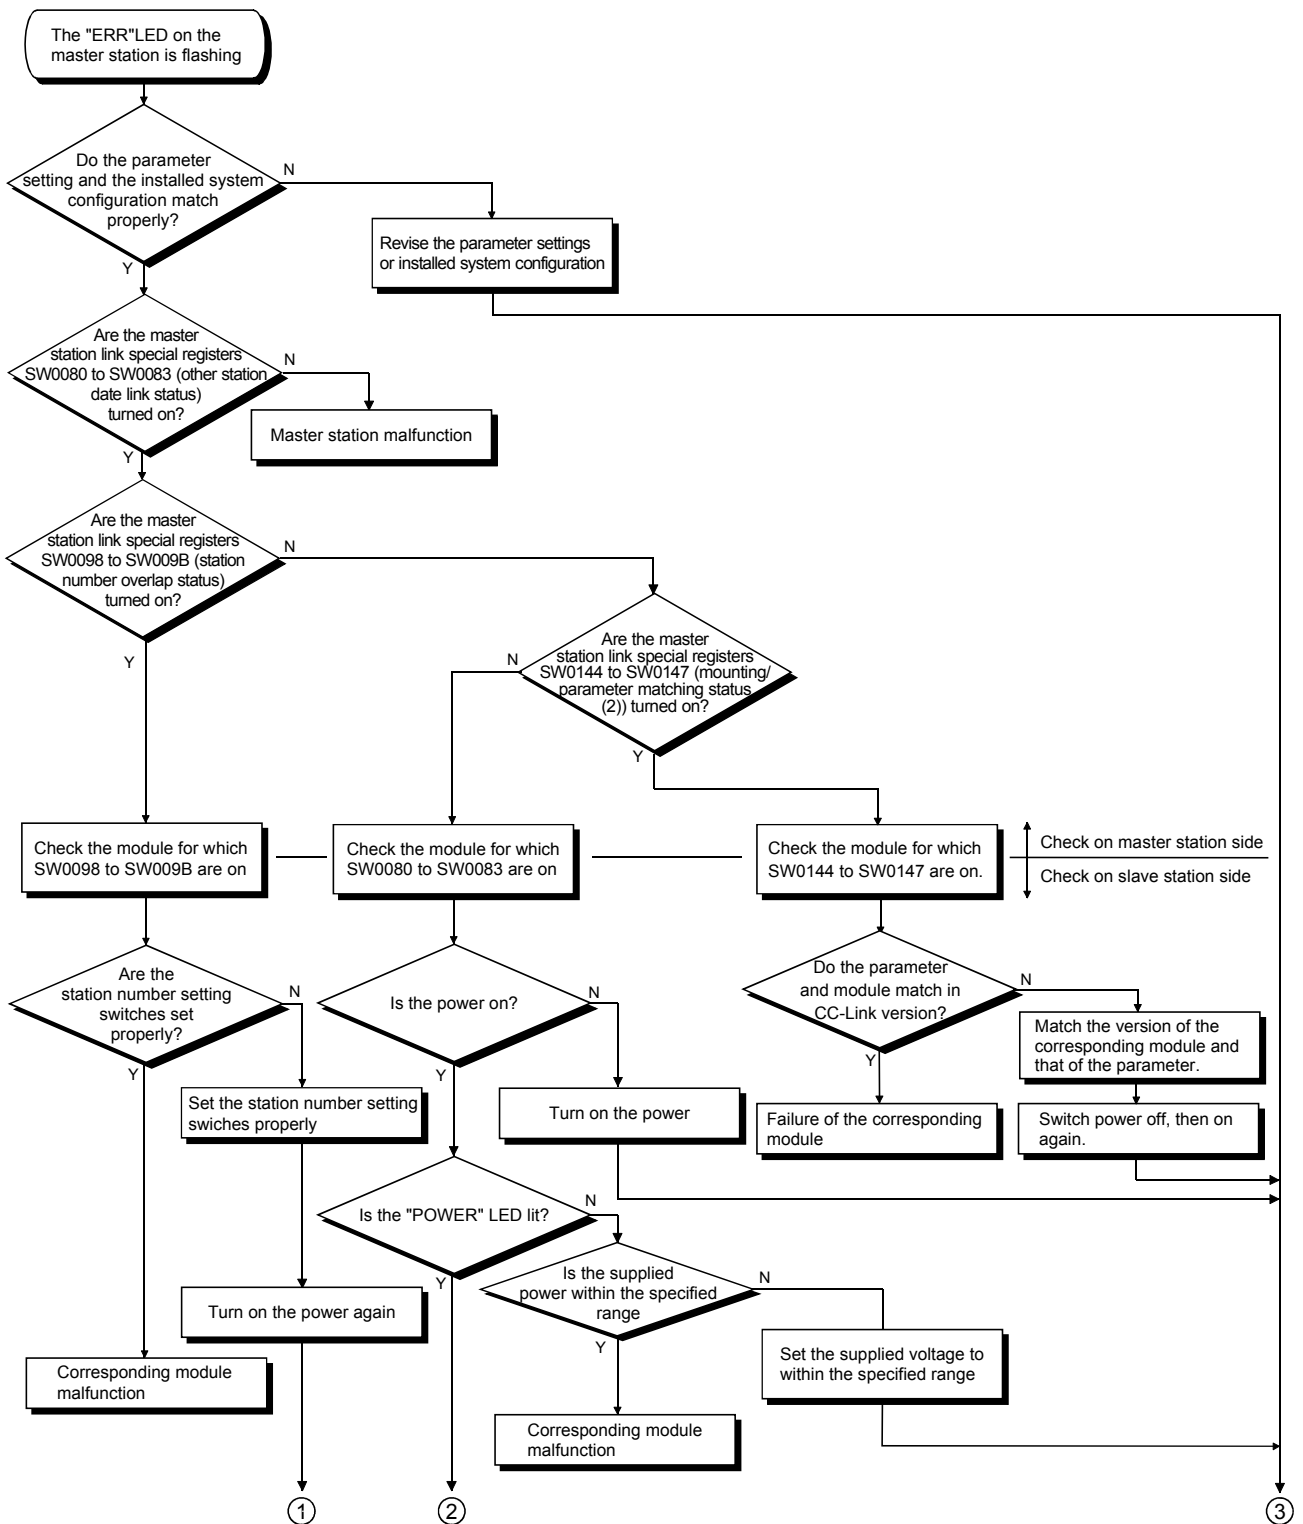

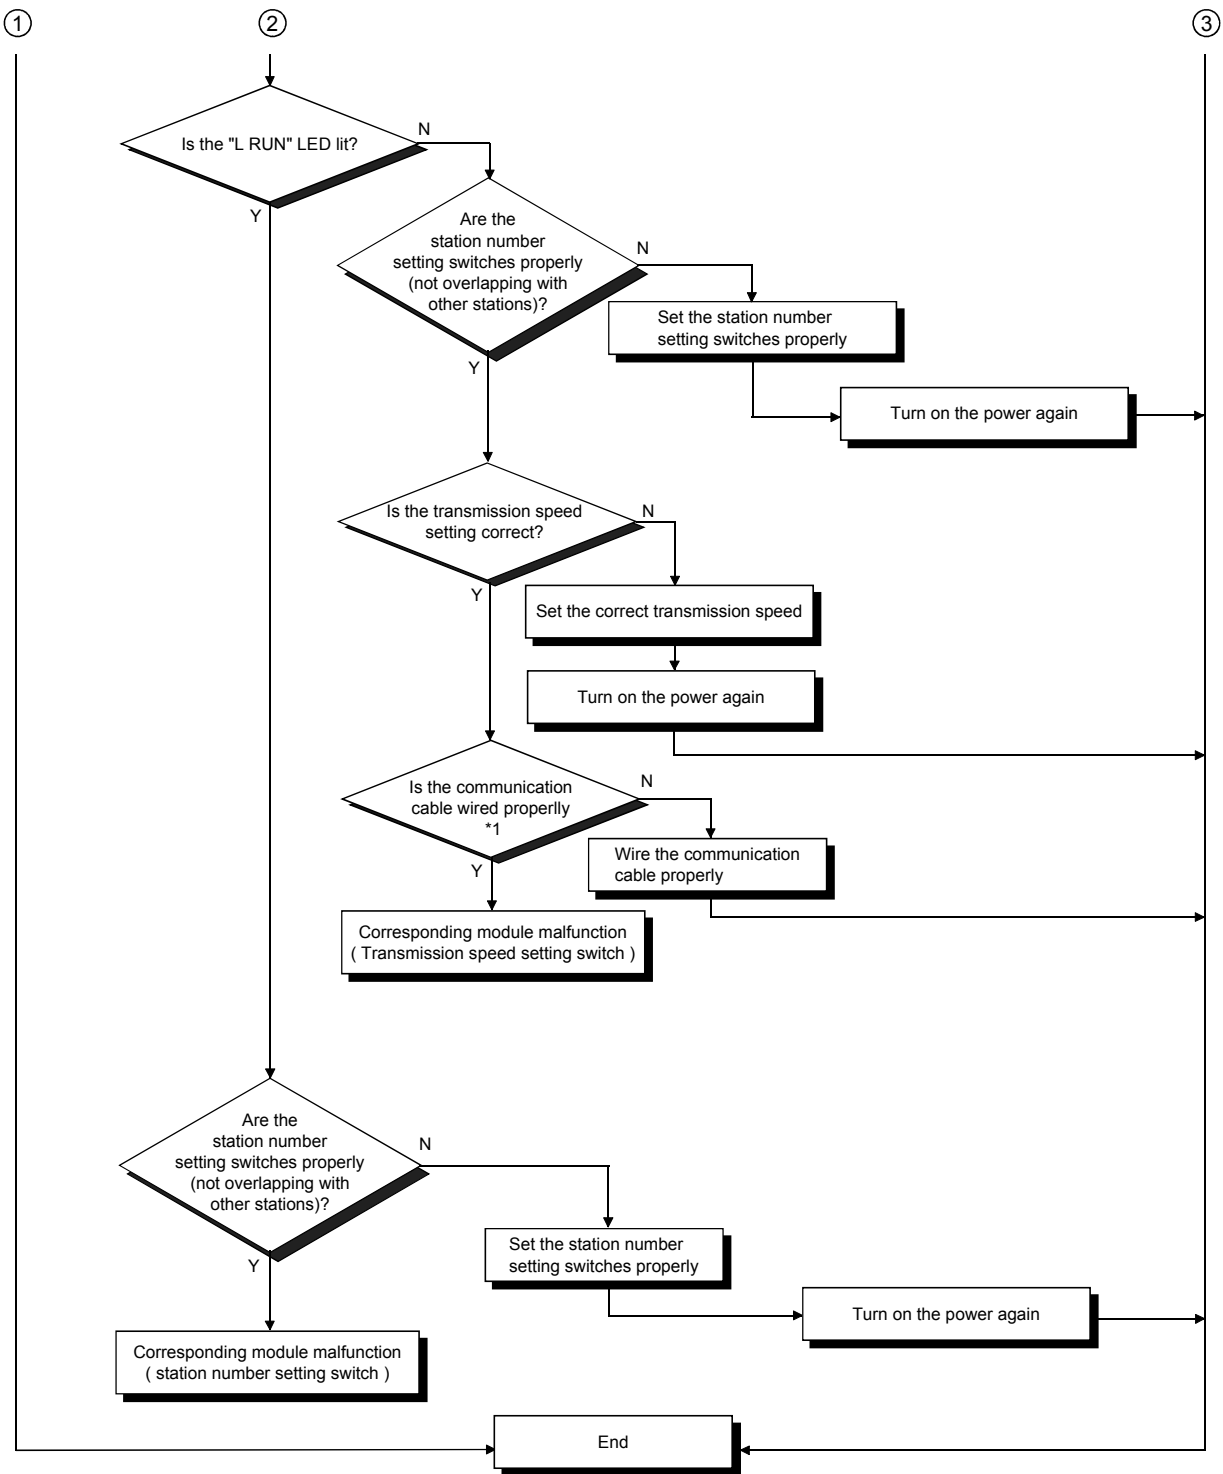

*1Check for a short, reversed connection, wire breakage, terminal resistor, FG connection, overall distance and station-to-station distance.

APPENDIX

Appendix 1 Comparison, Differences and Compatibility between New and Conventional Models

(1) Comparison between AJ65VBTCU-68DAV and AJ65VBTCU-68DAVN

The following table indicates the comparison between the AJ65VBTCU-68DAV and AJ65VBTCU-68DAVN.

Comparison between AJ65VBTCU-68DAV and AJ65VBTCU-68DAVN

Item	AJ65VBTCU-68DAV		AJ65VBTCU-68DAVN	
System compatibility (Station type, mode)	Ver. 1 remote device station (ver. 1 compatible slave station) or remote device station		<ul style="list-style-type: none"> • Ver. 1 remote device station (ver. 1 compatible slave station) or remote device station • Ver. 2 remote device station (ver. 2 compatible slave station) 	
	Remote net ver. 1 mode or remote net mode		<ul style="list-style-type: none"> • Remote net ver. 1 mode or remote net mode • Remote net ver. 2 mode • Remote net additional mode 	
Number of occupied stations	3 stations (RX/RV 32 points each, RWr/RVw 12 points each)		Ver. 1 remote device station (ver. 1 compatible slave station) setting: 3 stations (RX/RV 32 points each, RWr/RVw 12 points each) Ver. 2 remote device station (ver. 2 compatible slave station) setting: 1 station (RX/RV 32 points each, RWr/RVw 16 points each)	
Operation status indicator LED/RUN LED	Normal mode	On : During normal operation Flicker : 0.1s intervals Input range setting error, mode select switch setting error 0.5s intervals Digital value setting error Off : 24VDC power off or watchdog timer error	Normal mode	On : During normal operation Flicker : 0.1s intervals Input range setting error, mode select switch setting error, or when this module is set as the ver. 2 remote device station (ver. 2 compatible slave station) and used with the remote net ver. 1 mode selected in the mode setting of the network parameter. 0.5s intervals Digital value setting error, or when the mode select switch setting is changed after power-on. Off : 24VDC power off or watchdog timer error
Mode select switch (factory setting "0")	AJ65VBTCU-68DAV		AJ65VBTCU-68DAVN	
	0: Normal mode 1: Test mode (user range setting 1) 2: Test mode (user range setting 2) 3 to 7: Reserved		Ver. 1 remote device station (Ver. 1 compatible slave station)	0: Normal mode 1: Test mode (user range setting 1) 2: Test mode (user range setting 2)
			Ver. 2 remote device station (Ver. 2 compatible slave station)	3: Normal mode 4: Test mode (user range setting 1) 5: Test mode (user range setting 2)
			–	6 to 7: Reserved



(2) Differences between AJ65VBTCU-68DAV and AJ65VBTCU-68DAVN

The AJ65VBTCU-68DAVN can be handled according to the system. (Refer to Section 4.4 for details.)

For the AJ65VBTCU-68DAV, the number of stations occupied by the module was 3 stations.

For the AJ65VBTCU-68DAVN, the number of stations occupied by the module can be handled as 1 station by setting the mode select switch of the module to the ver. 2 remote device station.

Further, for the AJ65VBTCU-68DAVN, the number of stations occupied by the module can also be handled as 3 stations, like the AJ65VBTCU-68DAV, by setting the mode select switch of the module to the ver. 1 remote device station.

In the system where the maximum number of connected stations of the master station exceeds 64 stations when the number of stations occupied by the AJ65VBTCU-68DAVN is handled as 3 stations, use of the AJ65VBTCU-68DAVN in the above setting can increase the number of connected remote device stations.

(3) Compatibility between AJ65VBTCU-68DAV and AJ65VBTCU-68DAVN

There is compatibility when the AJ65VBTCU-68DAVN is used as the ver. 1 remote device station in the existing system. (Refer to Section 4.4 for details.)

When the AJ65VBTCU-68DAV is replaced by the AJ65VBTCU-68DAVN in the existing system, the replacement can be made without the programs being modified since the remote I/O signals, remote registers, etc. are the same.

Set the mode select switch of the module to the ver. 1 remote device station and use the same station number.


POINT

To handle the AJ65VBTCU-68DAVN according to the system, the mode select switch of the module must be set, and at the same time, "mode setting" and "station information (station type)" in the network parameters of GX Developer must also be set.

Set the network parameters of GX Developer according to the system.

Appendix 2 External dimension diagram

The outline dimension drawing of the AJ65VBTCU-68DAVN is shown below.

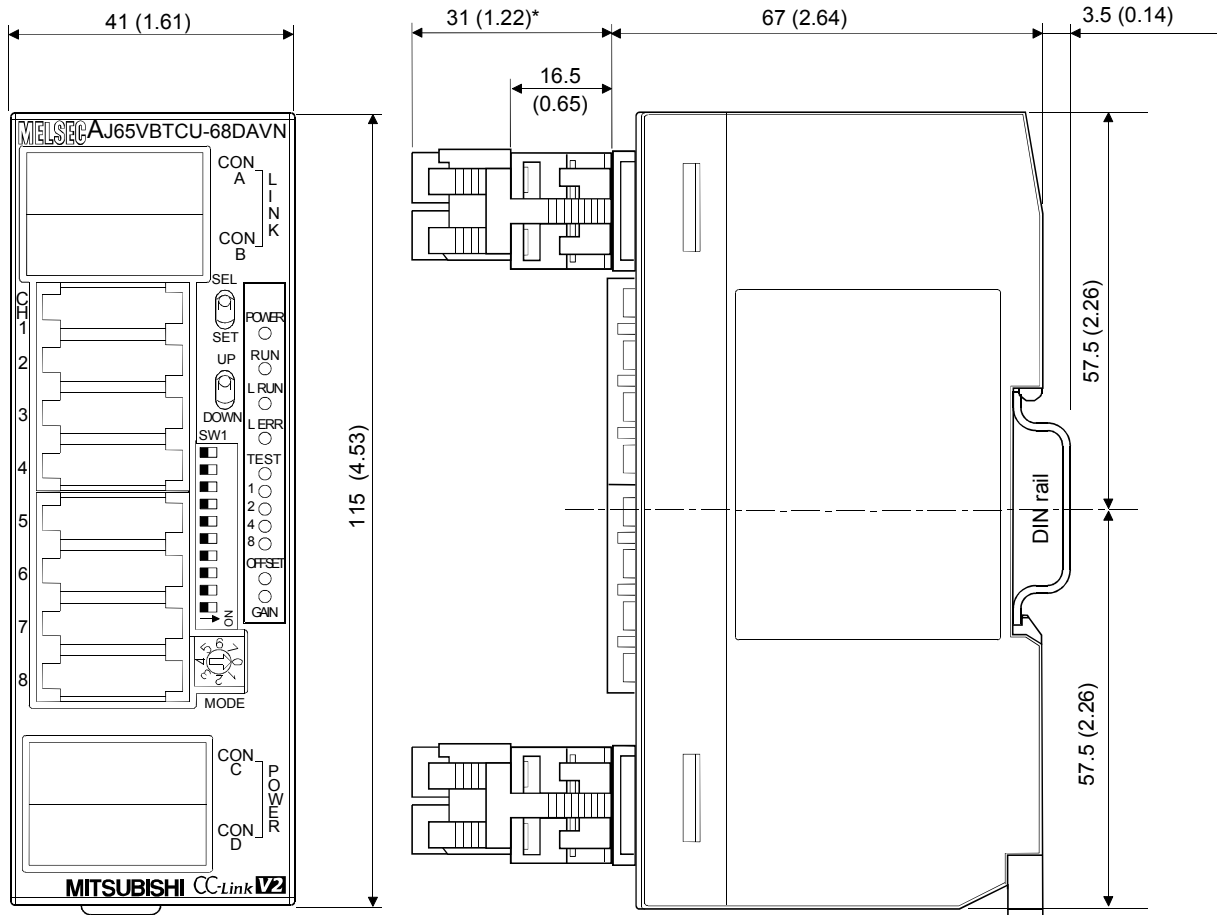

*:This section should be 14.5mm (0.57inch) when an online connector is not installed.

Unit : mm (inch)

INDEX

[A]

- Absolute maximum output 3-2
- Accuracy 3-2,3-5
- Allocation of the remote register 3-14
- Analog output 3-2
- Analog output enable/disable flag 3-13
- Analog output enable/disable setting 3-16
- Analog output status combination list 3-8
- Analog output value 3-5
- Applicable master module 2-3

[C]

- CC-Link dedicated cable 4-11,4-12
- CC-Link dedicated instruction 2-4
- Check code 3-18
- Comparison, differences and compatibility
between new and conventional models App-1
- Conversion speed 3-6
- Current consumption 3-2
- Cyclic transmission 1-1

[D]

- D/A conversion enable/disable function 3-7
- D/A output enable/disable function 3-7
- Data link cable wiring 4-11
- Digital input 3-2
- Digital value setting 3-16
- DIN rail 3-2,4-2,4-5

[E]

- E²PROM write error flag 3-12
- Error code 3-18,6-1
- Error reset request flag 3-13
- Error status flag 3-12
- Expanded cyclic transmission 1-1
- External dimension diagram App-3
- External supply power 3-2

[F]

- Facing direction of the module installation ... 4-10
- Function list 3-7
- Function to specify hold or clear of the
analog output when the PLC CPU is in the
STOP status (HOLD/CLEAR setting) 3-7

[G]

- Gain value 3-3
- General specification 3-1

[H]

- HOLD/CLEAR setting 3-17

[I]

- I/O conversion characteristic 3-3
- Initial data processing complete flag 3-13
- Initial data processing request flag 3-12
- Initial data setting complete flag 3-12
- Initial data setting request flag 3-13
- Isolation specifications 3-2

[M]

- Maintenance and inspection 4-23
- Maximum resolution 3-2
- Mode select switch 4-4
- Mode setting 2-3,4-6,4-7

[N]

- Name of each part 4-3
- Number of analog output points 3-2
- Number of occupied stations 3-2

[O]

- Offset value 3-3
- Offset/gain adjusting LED 4-4
- Offset/gain setting 4-8
- One-touch connector for analog I/O 4-5
- One-touch connector for communication 4-5
- One-touch connector for power supply/FG 4-5
- Operation status display LED 4-4
- Output range changing function 3-7
- Output range setting 3-17
- Output short-circuit protection 3-2

[P]

- Performance specification 3-2
- Pre-Operation procedure 4-1
- Precautions when handling 4-1
- Program example for use of the ACPUCPU/QCPU
(A mode)(dedicated instructions) 5-9

Program example for use of the ACPU/QCPU
(A mode)(FROM/TO instructions)..... 5-12
Program example for use of the QCPU(Q mode)
(when remote net ver. 1 mode is used)..... 5-4
Program example for use of the QnACPU 5-7
Programming procedure 5-1

[R]
Remote device station..... 2-1,2-2,2-3,3-2
Remote I/O signal list 3-9
Remote net additional mode
..... 1-3,2-2,2-3,4-7,5-22
Remote net ver. 1 mode 1-3,2-1,2-3,4-7,5-2
Remote net ver. 2 mode 1-3,2-2,2-3,4-7,5-14
Remote READY 3-12
Resolution..... 3-5

[S]
SELECT/SET switch 4-4
Station information2-3,4-6,4-7
Station number setting 4-10
Station number setting switch..... 4-5

[T]
Transmission speed setting switch..... 4-4
Troubleshooting..... 6-1
Troubleshooting for the case where the
"ERR." LED of the master station flickers 6-4

[U]
UP/DOWN switch..... 4-4
User range setting 3-4,4-4

[V]
Ver. 1 remote device station
.....2-3,3-2,3-9,4-4,4-6,4-8
Ver. 2 remote device station
.....2-3,3-2,3-9,4-4,4-6,4-8
Voltage output characteristic..... 3-4

[W]
Weight..... 3-2
Wiring..... 4-14
Wiring of module with external equipment ... 4-15

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

(1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.

Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.

(2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi MELSEC programmable controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the programmable controller applications.

In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable controller range of applications.

However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Digital-Analog Converter Module Type AJ65VBTCU-68DAVN

User's Manual

MODEL	AJ65V-68DAN-U-SY-E
MODEL CODE	13JR66
SH(NA)-080402E-D(0612)MEE	



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.