Model F3SJ-A (Version 2)

SAFETY LIGHT CURTAIN

INSTRUCTION SHEET

Please read and understand this instruction sheet before storing, installing, programming, operating, maintaining, disposing of the products. Please consult your OMRON representative if you have any questions or comments.

Please refer to the User's Manual for detailed instructions

OMRON EUROPE B.V. (Representative in EU) Wegalaan 67-69. 2132 JD Hoofddorp The NETHERLANDS



© OMRON Corporation 2005-2014 All Rights Reserved.

LEGISLATION AND STANDARDS

- Application of a F3SJ sensor alone cannot receive type approval provided by Article 44-2 of the Labour Safety and Health Law of Japan. It is necessary to apply it in a system. Therefore, when using the F3SJ in Japan as a "safety system for pressing or shearing machines" prescribed in Article 42 of that law, the system must receive type approval.

 The F3SJ is electro-sensitive protective equipment (ESPE) in accordance with European Union (EU) Machinery Directive Index Annex V, Item 2.

 EC Declaration of Conformity
 OMRON declares that F3SJ is in conformity with the requirements of the following EC Directives:

- OMRON declares that F351 is in conformity with the requirements of the following EC Directives:

 Machinery Directive 2006/42/EC
 EMC Directive 2004/108/EC
 4. F3S1 is in conformity with the following standards:
 (1) European standards
 EN61496-1 (Type 4 ESPE), CLC/TS 61496-2 (Type 4 AOPD), EN61508-1 through -3 (SIL3), EN ISO 13849-1:2008 (Category 4, PL e)
 (2) International standards

 EN61496-1 (Type 4 ESPE), EC61496-2 (Type 4 AOPD), EC61508-1
 - International standards IEC61496-1 (Type 4 ESPE), IEC61496-2 (Type 4 AOPD), IEC61508-1 through -3 (SIL3), ISO 13849-1:2006 (Category 4, PL e)
- (3) JIS standards JIS B 9704-1 (Type 4 ESPE), JIS B 9704-2 (Type 4 AOPD)

- (4) North American Standards:

 (4) North American Standards:

 (4) North American Standards:

 (5) UL61496-1(Type 4 ESPE), UL61496-2(Type 4AOPD), UL508, UL1998, CAN/CSA C22.2 No.14, CAN/CSA C22.2 No.0.8

 5. The F3S1 received the following approvals from the EU accredited body, TÜV SÜD Product Service GmbH:

 *EC Type-Examination in accordance with the EU Machinery Directive, Type 4 ESPE (EN61496-1), Type 4 AOPD (CLC/TS 61496-2), TUV SÜD Product Service Type 4 AOPD (CLC/TS 61496-2), TUV SÜD Product Service Type 4 AOPD (CLC/TS 61496-2), SIL1, 2, 3 (EN61508-1 through -3), EN ISO 13849-1:2008 (Category 4, Pl. e)

 6. The F3S1 received the certificates of UL listing for US and Canadian safety standards from the Third Party Assessment Body UL.

 *Both are: Type 4 ESPE (UL61496-1), Type 4 AOPD (UL61496-2)

 7. The F3S1 is designed according to the standards listed below. To make sure that the final system complies with the following standards and regulations, you are asked to design and use it in accordance with all other related standards, laws, and regulations. If you have any questions, consult with specialized organizations such as the body responsible for prescribing and/or enforcing and regulations. If you have any questions, consult with specialized organizations such as the body responsible for prescribing and/or enforcing machinery safety regulations in the location where the equipment is to be used "European Standards: EN415-4, EN692, EN693".
 U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.212".
 U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.217".
 American National Standards: ANSI B11.1 to B11.19".
 American National Standards: ANSI/RIA 15.06".
 Canadian Standards Asociation CSA Z142, Z432, Z434
 SEMI Standards SEMI S2. ere the equipment is to be used

- •Ministry of Health, Labour and Welfare "Guidelines for Comprehensive Safety Standards of Machinery", Standard Bureau's Notification No. 501 dated June 1, 2001

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards codes or regulationswhich apply to the combination of the Product in the Buyer s application or use of the Product. At Buyer's request, Omron will provide s application or use of the Product. At Buyer's Feducia, Ontion Win provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases. responsibility in all cases. NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING


NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PRECAUTIONS ON SAFETY

Regarding the alert symbols and meanings used for the safe uses In order for our customers to use the F3SJ in safety, precautions are indicated in this manual with the alert symbols and statements such as the followings. Those safety precautions relate to the important descriptions that must be obeyed for the safe uses and operations. Be sure to obey the precautions. The following indictions and symbols are used for the description.



Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

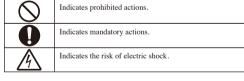

Alert Statements in this Manual

⚠ WARNING

The F3SJ must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. An unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury.

When changes are made to each function using the setting tool (F39-GWUM or F39-MC21), the administrator must manage the details of the changes and perform the changes. Accidental functional setting change may cause failure of human body detection, resulting in a serious injury.

For Machines

⚠ WARNING

Do not use this sensor for machines that cannot be stopped by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.

Do not use the auxiliary output or external indicator output for safety applicati Human body may not be detected when F3SJ fails, resulting in serious injury.

For Installation

⚠ WARNING

Make sure to test the operation of the F3SJ after installation to verify that the F3SJ operates as intended. Make sure to stop the machine until the test is complete. Unintended function settings may cause a person to go undetected, resulting in serious injury. 0

Make sure to install the F3SJ at the safe distance from the hazardous part of the equipment. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury. 0

person reaches the nazardous part, resulting in serious injury.

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous areas. If a person is able step into the hazardous area of a machine and remain behind the F3SJ's detection zone, configure the system with an interlock function that prevents the machine from being restarted. Failure to do so may result in serious injury.

Install the interlock reset switch in a location that provides a clear view of the entire hazardous area and where it cannot be activated from within the hazardous area.

The F3SI cannot protect a person from an object flying from a hazardous area. Install protective cover(s) or fence(s). 0

To prevent personnel approach to dangerous part of the machine through an area disabled by the fixed blanking function, you must install a protective structure to cover the whole disabled area. Failure to do so may cause failure of human body detection, resulting in a serious injury.

You must ensure that a test rod is detected for all detection areas except where fixed blanking function is used. Failure to do so may cause failure of human body detection, resulting in a serious injury.

Detection capability gets larger when fixed/floating blanking function is used. You must use the detection capability for fixed and floating blanking functions. Failure to do so may cause failure of machine stop before reaching the machine's dangerous part, resulting in a serious injury. You must ensure that the system works as you intended after configuring floating blanking. Failure to do so may result in serious injury. 0 Warning zone output is non-safety output. You must not include it to calculation of safety distance. Otherwise safety distance may be reduced, resulting in serious injury.

A warning zone CANNOT be used for safety applications. Always install your system so that a detection zone should be passed before reaching a source of danger.

The muting and override functions disable the safety functions of the device. You must ensure safety using other method when these functions are operating. Install muting sensors so that they can distinguish between the object that is b allowed to pass through the detection zone and a person. If the muting function activated by the detection of a person, it may result in serious injury. Muting lamps (external indicators) that indicate the state of the muting and override functions must be installed where they are clearly visible to

workers from all the operating positions. Muting related time must be properly configured for its application by a sufficiently trained and qualified person, and the person must have responsibilit for settings, especially when setting the muting time limit to infinite.

Use independent 2 input devices for muting inputs. You must install F3SJ, muting sensor, and physical barrier, and configure time settings for muting so that an operator should not enter hazardous zone. $\ensuremath{\P}$ A switch to activate the override function must be a hold-to-run device such

as a spring return key switch and must be installed in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous area before activating the override function. Install the sensor system so that it is not affected by the reflective surface of the F3SJ.

When using more than 1 set of F3SJ, install them so that mutual interference does not occur, such as by configuring series connections or using physical barriers between adjacent sets. Make sure that the F3SJ is securely mounted and its cables and connectors are properly connected. 0 Make sure that foreign material such as water, oil, or dust does not enter 0

the F3SJ or the connector while the cap is removed. Do not use the sensor system with mirrors in a retro-reflective configuration. Doing so may hinder detection. It is possible to use mirrors to "bend" the detection zone to a 90-degree angle.

Perform an inspection for all F3SJ as described in "Chapter 6 Checklists" User's manual. When using series connections, perform inspections for every connected F3SJ.

0

For Wiring

⚠ WARNING

Connect the load between the output and 0V line (PNP output). Connecting the load between the output and +24V line will result in a dangerous condition because operation is reversed to ON when blocked.

Do not short-circuit the output line to the +24V line. Otherwise, the output is always ON. Also, the 0V of the power supply must be grounded so that output does not turn ON due to grounding of the output line.

Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category. Do not connect each line of F3SJ to a DC power supply of more than 24VDC+20%. Also, do not connect to an AC power supply. Failure to do

so may result in electric shock.

For the F3SJ to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy all of the following conditions:

must satisty all of the following conditions: • Must be within the rated power voltage (24V DC \pm 20%) • Must have tolerance against the total rated current of devices if it is connected to

• Must have tolerance against the total rated current of devices if it is connected to multiple devices

• Must comply with EMC directives (industrial environment)

• Double or reinforced insulation must be applied between the primary and secondary circuits

• Automatic recovery of overcurrent protection characteristics (reversed L sagging)

• Output holding time must be 20ms or longer

• Must satisfy output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL508

• Must comply with laws and regulations, regarding EMC and electrical equipment safety, of the country or region where the F3SJ is used (Ex: In EU, the power supply must comply with the EMC Directive and the Low Voltage Directive.)

Double or reinforced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock. Extension of the cable must be within a specified length. If it isn't, safety function may not work properly, resulting in danger.

0

 \Diamond

To use the F3SJ in PSDI mode (Reinitiation of cyclic operation by the protective equipment), you must configure an appropriate circuit between the F3SJ and the machine. For details about PSDI, refer to OSHA1910.217 Do not try to disassemble, repair, or modify this product. Doing so may cause the safety functions to stop working properly. \Diamond

Do not use the F3SJ in environments where flammable or explosi gases are present. Doing so may result in explosion.

Perform daily and 6-month inspections for the F3SJ. Otherwise, the system may fail to work properly, resulting in serious injury.

PRECAUTIONS FOR SAFE USE

Make sure to observe the following precautions that are necessary for

ensuring safe use of the product.

• Thoroughly read this manual and understand the installation procedures, operation check procedures, and maintenance procedures before using the

Not short-circuited
Not used with a current that is higher than the rating

Do not drop the product.
 Dispose of the product in accordance with the relevant rules and regulations of the country or area where the product is used.

PRECAUTIONS FOR CORRECT USE

Observe the precautions described below to prevent operation failure,

Installation environment

Do not install the F3SJ in the following types of environments:

•Areas exposed to intense interference light, such as direct sunlight
•Areas with high humidity where condensation is likely to occur

•Areas where corrosive gases are present
•Areas exposed to vibration or shock levels higher than in the specification

Areas where the product may come into contact with water

Areas where the product may get wet with oil that can solve adhesive Do not use radio equipment such as cellular phones, walkie-talkies, or transceivers near the F3SL.

trainsceivers near the F553.
This is a class A product. In residential areas it may cause radio interference. in which case the Responsible Person may be required to take adequate measures to reduce interference.

measures to reduce interterence.

Wiring and installation

Make sure to perform wiring while the power supply is OFF. Otherwise, the F3SJ may fail to operate due to the diagnosis function.

Do not short-circuit output lines to +24V line. Otherwise a fault of F3SJ may

RATINGS

•When extending the communication line with a cable (twisted-pair wire) other than the dedicated cable (F39-JC**), use a cable with the same or superior specification. Connect the shield to the 0V line.
•When replacing the cable connectors with other types of connectors, use connectors that provide a protection grade of IP54 or higher.
•Properly perform the wiring after confirming the signal names of all the terminals.

•Do not operate the control system until 2 seconds or more (2.2 seconds or bot operate the control system until 2 seconds or more (2.2 seconds or bot operate the control system on the power of the F3SI.

more in case of series connection) after turning ON the power of the F3SJ.

Be sure to route the F3SJ cable separate from high-potential power lines or the power to be carefully the power lines or the po

through an exclusive conduit.

When using a commercially available switching regulator power supply, make sure to ground the FG terminal (frame ground terminal).

Install the emitter and receiver so that their vertical direction should match. If the protective height is 600 mm or more, use intermediate mounting brackets of specified quantities and locations according to the dimensions. If the brackets described above are not used, ratings and performance cannot

Do not use thinner, benzene, or acetone for cleaning, because they affect the product's resin parts and paint on the case.

Object detection

The F3SJ cannot detect transparent and/or translucent objects.

through an exclusive conduit.

Cleaning

n the type names i	ii this table, the	**** contain the 4 digits	F3SJ-A****P20	height (mm). F3SJ-A***P25	F3SJ-A****P30	F3SJ-A****P55		
Detection capabi	lity	Opaque objects	Opaque objects	Opaque objects	Opaque objects	Opaque objects		
Beam gap		Diameter 14mm 9mm	Diameter 20mm 15mm	Diameter 25mm 20mm	Diameter 30mm 25mm	Diameter 55mm 50mm		
Number of beam		26 to 234	16 to 166	13 to 125	10 to 100	6 to 50		
Protective height Lens diameter		245 to 2,117mm Diameter 5mm	245 to 2,495mm	260 to 2,500mm	245 to 2,495mm	270 to 2,470mm		
Operating range		0.2 to 9m (for protecti 0.2 to 7m (for protecti	we height up to 1649 mm) we height 1655 mm or greater reduced to 0.5m through	ater)				
Response time				40ms to 110ms max.	when incidence is stable).			
Startup waiting ti	ime	Refer to the reverse side 2s max. (2.2s max in c	de for details. ase of series connection)					
Power supply v	oltage(Vs)	24VDC ± 20% (ripple						
Current consumption (no load)	Emitter	beams: 153 mA max.,	201 to 234 beams: 165 m.	A max.	150 beams: 130 mA max., 1:			
	Receiver			A max.	50 beams: 111 mA max.,151	16 200		
Light source Effective apertur	e angle (FAA)	Infrared LED (870nm Within +2.5 ° for the 6		etection distance of at	least 3 m according to IEC61	496-2		
Safety outputs(O		PNP transistor outputs to cable extension)(inc	x 2, Load current 300mA	. max, Residual voltag Maximum capacity lo	e 2V max. (except for voltage ad 2.2 μF, Leakage current	e drop due		
Auxiliary output	1 (Non-safety	PNP transistor output	1 ,	, ,	e 2V max. (except for voltage	e drop due		
output) Auxiliary output output, afunction		PNP transistor output		r less, Residual voltag	e 2V or less (excluding influ	ence by		
system) External indicato	r output	Connectable external i	ndicator					
(Non-safety outp		- Incandescent lamp : : - LED lamp : Load cu Leakage current 1mA	24VDC, 3 to 7W rrent 10 to 300mA max.	F39-JJ3N or F39-A01I	PAC is required when usin	g an		
Output operation	mode	external indicator.) Safety outputs: ON w	hen receiving light					
		Auxiliary output 1 : R	everse output of safety out		an be changed by the setting			
		by the setting tool)			sses (operation mode can be			
			out 1: Reverse output of sa	fety output (for basic	system), ON during muting/o	verride (for		
		(Operation mode can be	be changed by the setting t		to a constant of the second			
			out 2: ON in lockout (for be changed by the setting to		ng muting/override (for mut	ing system)		
Input voltage		Test input, interlock so	election input, reset input,	and muting input are	all:			
		OFF voltage: 0 to 1.5		1.A.)				
		External device monit ON voltage: 9 to 24V(oring input is: Vs) (sink current 5mA ma	ax.)				
* P	P!	OFF voltage: 0 to 1.5V	, or open					
Indicators	Emitter		licators (green LED x 2, o (red LED x 3): Blink to in		ased on the amount of incide	ent light		
		Power indicator (green	LED x 1): ON while pov	ver is ON	oon in laakaut			
		Interlock indicator (yellow LED x 1): ON when in interlock/Blinks when in lockout External device monitoring indicator [muting input 1 indicator], Blanking/ Test indicator [muting input 2 indicator] (green LED x2): ON/Blink according to function						
Receiver		indicator] (green LED x2): ON/Blink according to function Incident light level indicators (green LED x 2, orange LED x 3): ON based on the amount of incident light						
		Incident light level indicators (green LED x 2, orange LED x 3): ON based on the amount of incident light Error mode indicators (red LED x 3): Blink to indicate error details OFF-state indicator (red LED x 1): ON when safety outputs are OFF/ Blinks when in lockout						
		ON-state indicator (green LED x 1): ON when safety outputs are ON						
Mutual interferer	nce prevention	Muting error indicator, Blanking/Test indicator (green LED x 2): ON/Blink according to function Interference light avoidance algorithm, Operating range change function						
function				range enange runcu				
Series connection	n	Time division emissio - Number of connection	n by series connection ons: Up to 4 sets					
		- Total number of bear	ns: Up to 400	15m				
Test function		- Maximum cable length between 2 sets of sensors: 15m - Self-test (After power ON, and during operation) - External test (light emission stop function by test input) - Start interlock, restart interlock (The setting tool is required when muting function is used)						
Safety-related fur	nations							
Salety-related ful	nctions	- External device mon	itoring					
			np breakage detection and iguration by the setting to		39-CN6 key cap for muting is	s required)		
C	. 1	- Floating blanking (co Connector method (M	onfiguration by the setting	tool is required)				
Connection meth Protection circuit			otection, and power suppl	y reverse polarity pro	ection			
Ambient tempera			to 55°C (without freezing					
Ambient humidit Ambient light int			o 85%RH (no condensation of the condensation o		to 95%RH Sunlight: receiving-surface li	ght intensity		
Insulation resista		of 10,000 Ix max. 20MΩ or higher (500)				- •		
Dielectric strengt	th voltage	1,000VAC,50/60Hz,						
Degree of protect Vibration resistant		IP65 (IEC60529) Malfunction: 10 to 55	Hz. Multiple amplitude of	0.7mm, 20 sweeps an	ch in X, Y, and Z directions			
Shock resistance		Malfunction: 100m/s2	, 1,000 times each in X, Y	, and Z directions				
Connection cable connection cable	e, Series (F39-JJR*L,	Dia. 6 mm, 8-wire (0.)	5mm2 x 8) with braided s	shield, Allowable bene	ling radius R5mm			
JJR3W)		Di- 66) 22 4D	0.050	A mildle hand to the territory	-bl-		
Extension cable (F39-JC*A,JC*B	3,JC*C)	bending radius of R36	mm.		n), with braided shield, Allow			
			e an equivalent or higher-p as that for high-voltage ca		isted-pair wire), and do not	use the		
		For details about exter	sion lengths (Power Cab	le Length), refer to ne				
Material		Casing (including met Cap: ABS resin	al parts on both ends): Alu	ıminum, zinc die-cast				
		Optical cover: PMMA Cable: Oil resistant PV	resin (acrylic)					
Weight (package	d)	- F3SJ-A***P14						
- * *		Weight (g)=(protective	e height) x 1.7+ α J-A****P25/F3SJ-A****	:P30				
		Weight (g)=(protective		1 30				
		- F3SJ-A****P55 Weight (g)=(protective	e height) x 1.4+ α					
		The values for α are	as follows:	a -1100				
		When protective heigh	ntis between 245 and 596n tis between 600 and 1130	$\alpha = 1500$				
		When protective heigh	atis between 1136 and 165 atis between 1660 and 218	$8 \text{mm}, \ \alpha = 2000$				
			itis between 1660 and 218 itis between 2195 and 250					
Accessories	_		and bottom mounting brack	kets, intermediate mor	unting brackets *1, error			
		mode label, user's man *1 The number of inte	nual (CD-ROM) rmediate mounting bracke	ets depends on the total	l length of the F3SI			
			rmediate mounting brackers rom 600 to 1,130mm: 1 se	*	-			
		 F3SJ total length is f 	rom 1136 to 1,658mm: 2 s	sets for each the emitte	er and receiver are included			
					er and receiver are included r and receiver are included			
Applicable stand	ards		6-1, UL61496-1 Type 4ES			ces) IEC61509		
					to-electronic Protective Devi 1-1:2006 (Category 4, PL e)	ces) IEC01308,		
		,	,- 8	Γ		strial Automation Company		
						/w.ia.omron.com		



The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388


t, CA 94555-3605 U.S.A. 510-608-3400/Fax: (1) 510-744-1442 OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road # 05-05/08 (Lobby 2),

Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower,


Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, Chin Tel: (86) 21-5037-2222/Fax: (86) 21-5037-22

E@ Sep, 2013

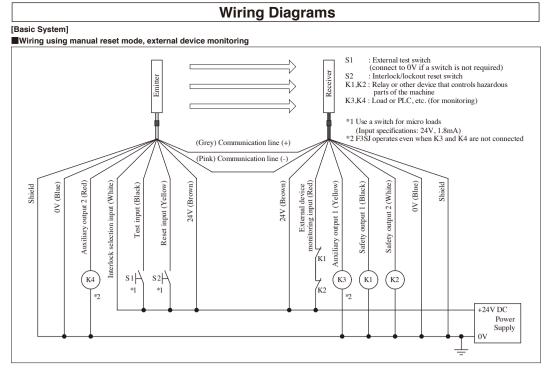


■ Wiring for auto reset mode

Wiring when external device monitoring function is not used

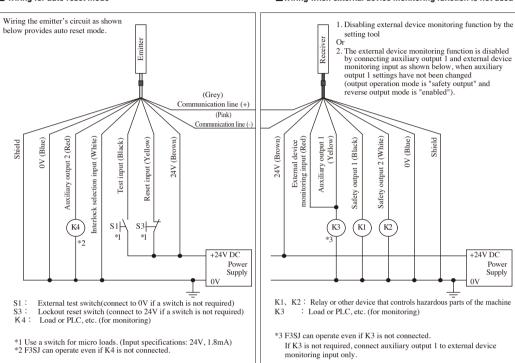

[Muting System]

■Wiring when using muting and external device monitoring functions

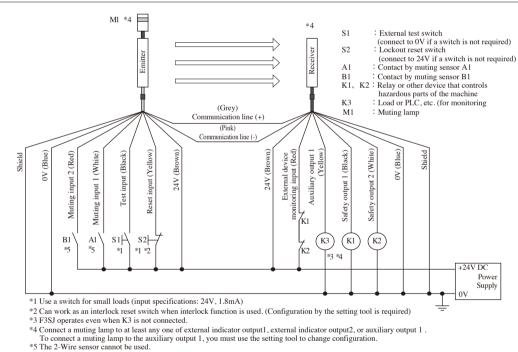

Indication


■ Wiring when external device monitoring function is not required Wiring diagram is the same as that for "Wiring when external device monitoring function is not used" of the basic system.

Input/Output Circuit

Input/output circuit

The numbers in white circles indicate the connector's pin numbers.


The black circles indicate connectors for series connection. The black circles indicate connectors for series conne

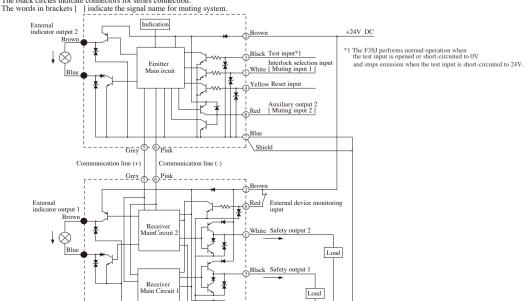

Load

Shield

Indicator Display Patterns

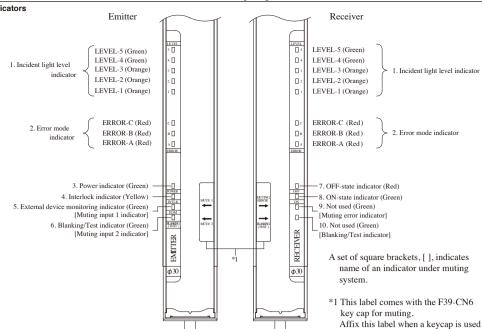

No.	Indicators		ON/Blinking	Description
1	Incident light level indicator	LEVEL-1 to 5	ON	Indication status of LEVEL-1 to 5 shows the incident light level status of the F3SJ.
2	Error mode indicator	ERROR-A to C	ON/Blinking	Turns ON or blinks only when the F3SJ enters lockout, and the cause of the error is indicated by the status of ERROR-A to C indicators. When F3SJ are series-connected, the error mode indicator lamps turn ON or blink according to the details of each error. Affix the error mode label (included) near the F3SJ to allow for quick trouble shooting when errors occur. For details about error mode, refer to " Indication patterns of error mode indicator".
3	Power indicator	POWER	ON	Turns ON while the power is ON.
			Blinking	Blinks under maintenance status.
4	Interlock indicator	INTLK	ON	Turns ON when F3SJ is in interlock state.
			Blinking	Blinks when in lockout.
5	External device monitoring indicator	EDM	ON	Turns ON when an input is given to external device monitoring input.
6	Blanking/Test indicator	BLANKING /TEST	ON	Turns ON when the blanking function and warning zone function are enabled.
			Blinking	Blinks when external test is being performed.
7	OFF-state indicator	OFF	ON	Turns ON when safety outputs are OFF.
			Blinking	Blinks at following states;
				-Lockout state
				-One or more beams are blocked during the maintenance status
8	ON-state indicator	ON	ON	Turns ON when safety outputs are ON.
			Blinking	Blinks when no beams are blocked during the maintenance status.
9	-	_	_	_
10	_	_	_	_

■Indicator display patterns for a muting system (Indicator display different from a basic system are described.)

No.	Indicators		ON/Blinking	Description
5	Muting input 1 indicator MUTE1		ON	Turns ON when an input is given to muting input 1.
			Blinking	Blinks under muting/override.
6	Muting input 2 indicator	uting input 2 indicator MUTE2		Turns ON when an input is given to muting input 2.
			Blinking	Blinks under muting/override.
9	Muting error indicator	MUTING ERROR	ON	Turns ON during a muting error.
10	Blanking/Test indicator	BLANKING	ON	Turns ON when the blanking function is enabled.
		/TEST	Blinking	Blinks when external test is being performed.

■Indication patterns of the incident light level indicator

ON OFF	
1 2 3 4 5	Incident light level
还过过过过	170% or higher of safety output ON level
→ 五 五 五 上	From 130 to less than 170% of safety output ON level
五 五 五 五	From 100 to less than 130% of safety output ON level
□ ■ □ □ □	From 75 to less than 100% of safety output ON level
□■■■	From 50 to less than 75% of safety output ON level
	Less than 50% of safety output ON level

Operation is possible with incident light level of 100% or more, but to ensure stability, operate when all incident light level indicators

■ Indication patterns of error mode indicator

Blinking

OFI

/ / / / / / / / / / / / / / / / / / / /	
А В С	Main cause of error
浜■浜	Mutual interference or disturbance light.
江美江	Power supply voltage of F3SJ is out of rated range. Insufficient current capacity of power supply.
	Light incidence to a blanking beam.
	Breakage, incorrect wiring of communication line, disconnection of series-connection cable, influence of noise, or other errors.
XXX	The models of the emitter and receiver in a set are different.
	Function setting value configured by the setting tool is out of valid range.
英过过	End cap is not attached. Failure of internal circuit of F3SJ.
<u>- ж - </u>	Relay is welded or recovery time is too long. Incorrect wiring or breakage of external device monitoring line.
ж	Incorrect wiring or breakage of interlock selection input line or reset input line.
** -	Incorrect wiring or breakage of reset input line for a muting system.
×	Incorrect wiring of safety output 1 or 2. Failure of safety output circuit.
- **	Incorrect wiring or breakage of series-connection cable.
東浜=	Incorrect wiring or circuit breakage of external indicator output.
ガガガ	Auxiliary output 1 is detached or broken.
其=其	Broken series connection cable.
□ ■ ■	Incorrect wiring or breakage of communication line.
	Effect of paice, E3SI Failure of internal circuit

Refer to F3SJ User's manual for details

Response Times/Power Cable Length

■ Response times

F3SJ-A****P14			
Protective	Number of	Response time	Response time
height	beams	(ON to OFF)	(OFF to ON)
[mm]		[ms]	[ms]
245~272	26~29	11	44
281~389	30~42	12	48
398~506	43~55	13	52
515~614	56~67	14	56
623~731	68~80	15	60
740~1019	81~112	17.5	70
1028~1307	113~144	20	80
1316~1595	145~176	22.5	90
1604~1883	177~208	25	100
1802~2117	200~-224	27.5	110

F3SJ

Protective height [mm]	Number of beams	Response time (ON to OFF) [ms]	Response time (OFF to ON) [ms]
245	16	10	40
260~440	17~29	11	44
455~635	30~42	12	48
650~830	43~55	13	52
845~1010	56~67	14	56
1025~1205	68~80	15	60
1220~1685	81~112	17.5	70
1700~2165	113~144	20	80
2180~2495	145~166	22.5	90

F3SJ-A****P25

1 33J-A 1 23			
Protective	Number of	Response time	Response time
height	beams	(ON to OFF)	(OFF to ON)
[mm]		[ms]	[ms]
260~320	13~16	10	40
340~580	17~29	11	44
600~840	30~42	12	48
860~1100	43~55	13	52
1120~1340	56~67	14	56
1360~1600	68~80	15	60
1620~2240	81~112	17.5	70
2260~2500	113~125	20	80

F3SJ-A****P30

Protective height [mm]	Number of beams	Response time (ON to OFF) [ms]	Response time (OFF to ON) [ms]
245~395	10~16	10	40
420~720	17~29	11	44
745~1045	30~42	12	48
1070~1370	43~55	13	52
1395~1670	56~67	14	56
1695~1995	68~80	15	60
2020~2495	81~100	17.5	70

1303-11 133			
Protective height [mm]	Number of beams	Response time (ON to OFF) [ms]	Response time (OFF to ON) [ms]
270~770	6~16	10	40
820~1420	17~29	11	44
1470~2070	30~42	12	48
2120 - 2470	1250	12	50

Extension of power cable must be the length shown below or shorter: In case F3SJ is directly connected to external power supply, or connected to G9SA-300-SC

Condition	Single	2 connected	3 connected	4 connected
Incandescent display lamps are used by auxiliary output	45m	40m	30m	20m
and/or external indicator output				
Incandescent display lamps are not used	100m	60m	45m	30m
-				

When connected to F3SP-B1P

Condition	Single	2 connected	3 connected	4 connected
Incandescent display lamps are - used by external indicator output 2	40m	30m	25m	20m
Incandescent display lamps are - used by external indicator output 1 and/or, - used by auxiliary output 1	60m	45m	30m	20m
Incandescent display lamps are not used	100m	60m	45m	30m

For series connections, use the calculations below. When 2 sets are series-connested Response time (ON to OFF):
Response time (ON to OFF):
Response time of 1st unit + Response time of 2nd unit -1 (ms) Response time (OFF to ON):
Response time from the above calculation x 4 (ms)

Response time from the above calculation x 4 (ms)
When 3 sets are series-connested
Response time (ON to OFF);
Response time of 1st unit + Response time of 2nd unit
+ Response time of 3nd unit - 5 (ms)
Response time (OFF to ON);
Response time from the above calculation x 5 (ms)
When 4 sets are series-connested
Response time (ON to OFF);
Response time of 3nd unit + Response time of 4nd unit
+ Response time of 1st unit + Response time of 4nd unit
+ Response time of 5nd unit + Response time of 5nd unit
+ Response time of 5nd unit + Response time of 5nd unit
+ Response time of 5nd unit + Response time of 5nd unit
+ Response time of 5nd unit + Response time of 5nd unit
- 8 (ms)