

**MITSUBISHI** *Changes for the Better*  
 PROGRAMMABLE CONTROLLERS  
 MELSEC-F

**FX3U-USB-BD**

**USER'S MANUAL**

Manual Number	JY997D13501
Revision	F
Date	May 2008

This manual describes the part names, dimensions, mounting, and specifications of the product. Before use, read this manual and the manuals of all relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. Store this manual in a safe place so that it can be taken out and read whenever necessary. Always forward it to the end user. Registration: The company and product names described in this manual are registered trademarks or the trademarks of their respective companies. Effective May 2008. Specifications are subject to change without notice. © 2005 Mitsubishi Electric Corporation

**Safety Precaution** (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

**⚠ DANGER** and **⚠ CAUTION**.

<b>⚠ DANGER</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
<b>⚠ CAUTION</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on the circumstances, procedures indicated by **⚠ CAUTION** may also cause severe injury. It is important to follow all precautions for personal safety.

**Associated Manuals**

Manual name	Manual No.	Description
FX3U Series User's Manual - Hardware Edition	JY997D16501 MODEL CODE: 09R516	Explains FX3U Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3UC Series User's Manual - Hardware Edition	JY997D28701 MODEL CODE: 09R519	Explains FX3UC Series PLC specifications for I/O, wiring, installation, and maintenance.
FX-USB-AW / FX3U-USB-BD User's Manual - USB Driver Installation Edition	JY997D32601	Explains procedures for installing the USB driver software for the FX-USB-AW or FX3U-USB-BD.
FX Series User's Manual - Data Communication Edition	JY997D16901 MODEL CODE: 09R715	Explains N:N network, Parallel Link, Computer Link, Non-Protocol communication by RS and RS2 instructions/FX2N-232IF.

**How to obtain manuals**

For product manuals or documents, consult with the Mitsubishi Electric dealer from who you purchased your product.

**Applicable standards**

FX3U-USB-BD units made in June, 2005 or later comply with the EC Directive (EMC Directive). Further information can be found in the following manual. However, the FX3UC-32MT-LT does not comply with the EC Directive (EMC Directive).

→ Refer to the FX3U Series Hardware Manual (Manual No. JY997D18801)

**1. Outline**


The FX3U-USB-BD (hereinafter called USB-BD) is an expansion board equipped with an USB port (MINI B plug, female) for USB communication. By connecting the USB-BD and a personal computer with USB ports, program transfer to a PLC main unit and monitoring can be performed.

**1.1 Incorporated Items**

Verify that the following product and items are included in the package:

Product	Quantity
USB communication expansion board FX3U-USB-BD	1
M3 tapping screws	2
USB driver software (CD-ROM)	1
USB cable (3m (118.1"))	1
User's Manual (this manual)	1

**1.2 External Dimensions and Part Names**

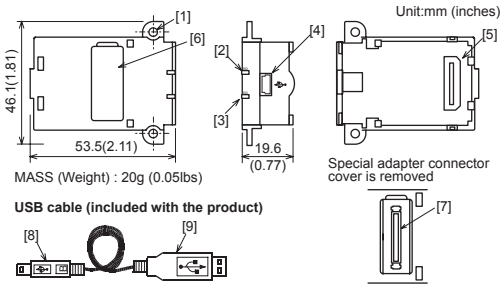

- [1] Mounting holes (2-φ3.2)
- [2] RD LED:Lighting while receiving data. (LED color: red)
- [3] SD LED:Lighting while sending data. (LED color: red)
- [4] USB Connector MINI B plug female
- [5] Main unit connector
- [6] Special adapter connector cover
- [7] Special adapter connector
- [8] USB Connector (To FX3U-USB-BD) MINI B plug male
- [9] USB Connector (To personal computer) A plug male

**2. Installation**

**INSTALLATION PRECAUTIONS** **⚠ DANGER**

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.

**INSTALLATION PRECAUTIONS** **⚠ CAUTION**


- Use the product within the generic environment specifications described in PLC main unit manual (Hardware Edition). Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl<sub>2</sub>, H<sub>2</sub>S, SO<sub>2</sub> or NO<sub>2</sub>), flammable gas, vibration or impacts, or exposed to high temperature, condensation, or rain and wind. If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.
- Use screwdrivers carefully when performing installation work, thus avoiding accident or product damage.
- When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.
- Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.
- Connect expansion board securely to their designated connectors. Loose connections may cause malfunctions.

The following section describes the installation method for the FX3U/FX3UC-32MT-LT Series PLC (FX3U Series PLC is used for the following example). For more details on installation and removal, refer to the PLC main unit manual.

→ Refer to the FX3U Series User's Manual - Hardware Edition  
 → Refer to the FX3UC Series User's Manual - Hardware Edition

**2.1 Installation Method**

- Power off the PLC. Disconnect all the cables connected to the PLC. Demount the PLC from the DIN rail.
- Using a flat head screwdriver as shown in the figure on the right, lift the dummy expansion board cover (fig. A) making sure not to damage the circuit board or electronic parts.
- Remove the dummy expansion board cover (fig. A) perpendicularly away from the main unit.
- Make sure the expansion board (fig. B) is in parallel with the main unit (fig. C) and attach it to the expansion board connector.
- Fix the expansion board (fig. B) to the main unit using the provided M3 tapping screws (fig. D). Tighten to a torque of 0.3 to 0.6 N·m.

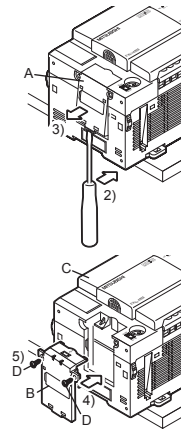

**3. Specifications**

**3.1 Applicable PLC**

Model name	Applicability
FX3U Series PLC	Ver.2.20 or later (from first production)
FX3UC-32MT-LT	Ver.1.00 or later (from first production)

- The expansion board cannot be connected to FX3UC Series PLCs other than the FX3UC-32MT-LT.
- Only one expansion board can be used per main unit. additional expansion boards such as the FX3U-232-BD, FX3U-422-BD or FX3U-485-BD cannot be installed/used together with the FX3U-USB-BD.

For details on the system configuration, refer to the following manual.  
 → Refer to the FX Series User's Manual - Data Communication Edition

**3.2 General Specifications**

The general specifications are equivalent to the PLC main unit. For general specifications, refer to the following manuals. However, please do not perform any dielectric withstand voltage tests or insulation resistance tests to this product.  
 → Refer to the FX3U Series User's Manual - Hardware Edition  
 → Refer to the FX3UC Series User's Manual - Hardware Edition

**3.3 Power Supply Specification**

Item	Specification
Current consumption	<ul style="list-style-type: none"> <li>15mA / DC 5V (5V DC power is supplied from the main unit)</li> <li>30mA / DC 5V (5V DC power is supplied from the USB connector of personal computer)</li> </ul>

**3.4 Communication Specifications**

Item	Specification
Transmission standard	USB2.0 (For full speed)
Isolation	Photocoupler isolation (Between communication line and CPU)
Maximum transmission distance	5m (196.9") at most (Included cable is 3m (118.1").)
Baud Rate	9600/19200/38400/57600/115200 bps
Port	USB (MINI B plug female)

**3.5 System Requirements**

Item	Specification
OS	Microsoft® Windows® 98 <sup>1</sup> , Windows® 98SE <sup>1</sup> Microsoft® Windows® Millennium Edition (Windows® Me) <sup>1</sup> Microsoft® Windows® 2000 <sup>1</sup> Microsoft® Windows® XP <sup>1</sup> Microsoft® Windows Vista® <sup>2</sup>
Software <sup>3</sup>	SW□D5C-GPPW-E (GX Developer), FX-PCS/WIN-E


<sup>1</sup> The USB driver for Windows® 98, Windows® 98SE, Windows® Millennium Edition, Windows® 2000 and Windows® XP included in the USB driver software Ver. 1.10 is used. This USB driver is the same driver as the USB driver for software previous to Ver.1.10.

<sup>2</sup> Use the USB driver for Windows Vista® from the USB driver software Ver.1.10.

<sup>3</sup> GX Developer Ver. 8.23Z or later is applicable to the FX3U Series PLC. Its Ver. 8.13P or later is applicable to the FX3UC-32MT-LT Series PLC. For further details concerning alternative inapplicable programming tool setting, refer to the following manual.  
 → Refer to the FX3U Series User's Manual - Hardware Edition  
 → Refer to the FX3UC Series User's Manual - Hardware Edition

**4. System Configuration**

**Connected equipment and connected cable**

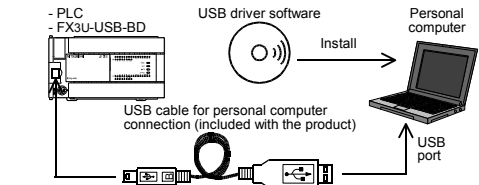

For details of the programming communication, refer to the following manual.  
 → Refer to the FX Series User's Manual - Data Communication Edition

**5. Connecting Procedure**

- Power off the PLC.
- Connect the USB (MINI B plug male) connector of the USB cable to the FX3U-USB-BD.
- Connect the USB (A plug male) connector of the USB cable to the personal computer.
- Turn ON the power supply of the PLC.
- Turn ON the power supply of the personal computer.

**6. Driver Installation**

When the USB cable is connected to the personal computer, the Found New Hardware Wizard screen is displayed. Install USB driver software from the included CD-ROM.

**Caution**


The driver is not installed properly when canceled during the installation. To complete the installation, uninstall the driver, and install again. For the uninstallation procedure of the driver, refer to the following manual.  
 → FX-USB-AW/FX3U-USB-BD User's Manual - USB Driver Installation Edition

Note: This product requires USB Driver Installation for each USB port to be connected. To use multiple USB ports, connect this product to each port, and install the driver individually. (With Windows Vista®, Driver installation will occur automatically. In other OS, depending on the PC environment, Driver installation may occur automatically.)

**USB driver software folder structure**

The folder structure is as follows according to the USB driver software version.

**Ver. 1.10 or higher**

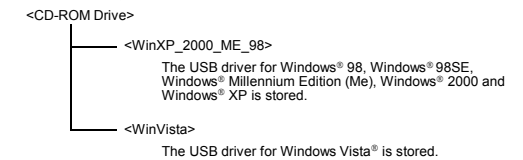

**Versions previous to Ver. 1.10**

The USB driver for software previous to Ver. 1.10 does not have a folder structure. The USB driver is stored in the main directory of the CD-ROM drive.

## 6.1 Windows® 98, Windows® 98SE, Windows® Millennium Edition, Windows® 2000, and Windows® XP

Please install the driver by the following procedure.

The installation procedure is explained when connecting to a personal computer with Windows® XP.

- Windows® 98, Windows® 98SE, Windows® Millennium Edition, and Windows® 2000, the installation method will vary.

1) When the USB cable is connected to the personal computer, the following screen is displayed.



Insert the included CD-ROM into the personal computer's CD-ROM drive. Click [ Next > ].

The installation of the USB driver software will begin.

- If using Windows® 98 and Windows® 98SE

A window to select the location of the installation files will appear. Specify the USB driver software version as follows:

**Ver. 1.10 or higher**  
Please select the "Include this location in the search", and install by specifying the "WinXP\_2000\_ME\_98" directory from the CD-ROM drive.

**Versions previous to Ver. 1.10**  
Please select the CD-ROM drive.


- If using Windows® Millennium Edition, and Windows® 2000  
A window to select the location of the installation files will appear. Please select the CD-ROM drive.

2) The following screen is displayed. (Only in Windows® XP)



Click [ Continue Anyway ].

3) The following screen is displayed.

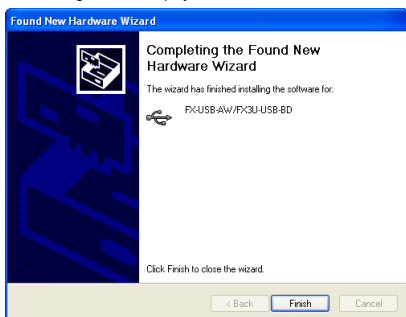

Click [ Finish ].  
If using Windows® 2000 or Windows® XP, proceed to step 4).

- If Windows® 98, Windows® 98SE or Windows® Millennium Edition is used, installation of the USB Serial Port software begins, and ends automatically. The CD-ROM can be removed from the personal computer at this time. The installation of the USB driver software is finished.

4) The following screen is displayed.



Click [ Next > ].

The installation of the USB Serial Port software will begin.


- If using Windows® 2000, a screen to select the location of the installation files is displayed.

Please select the CD-ROM drive.

5) The screen of 2) is displayed. (Only in Windows® XP)

Click [ Continue Anyway ].

6) The following screen is displayed.

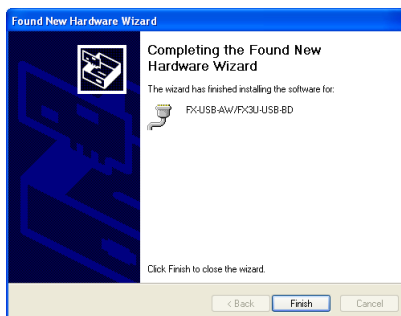

Click [ Finish ].

The installation of the USB Serial Port software will finish.

The CD-ROM (USB driver software) can be removed from the personal computer at this time.

## 6.2 Windows Vista®

For the installation procedure of the driver, refer to the following manual.

→ **FX-USB-AW/FX3U-USB-BD User's Manual**  
- **USB Driver Installation Edition**

## 7. Installation Confirmation of Driver

Procedure for confirming the installation of the driver is described below.

Windows® XP example follows.

- In Windows® XP, click [ Start ] → [ Control Panel ] → [ Performance and Maintenance ] → [ System ] → [ Hardware ] → [ Device Manager ] and the window below will be displayed.

Please confirm the COM number to which the driver is allocated (COM and LPT).

- If using Windows® 98, Windows® 98SE, Windows® Millennium Edition or Windows® 2000

A screen that is equivalent to the one below is displayed by clicking [ My Computer ] → [ Control Panel ] → [ System ] → [ Device Manager ] in the menu of the personal computer.


- If using Windows Vista®

A screen that is equivalent to the one below is displayed by clicking [ Start ] → [ Control Panel ] → [ Hardware and Sound ] → [ Device Manager ] in the menu of the personal computer.


**When user account control is enabled**

Only when user account control is enabled will the "user account control" screen be displayed.

Click [ Continue ], when displayed.

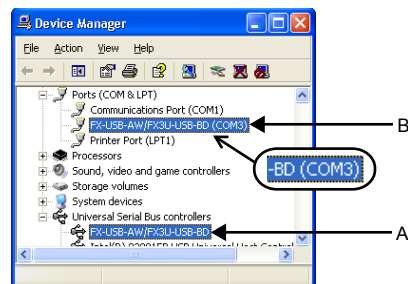

Check following:

- FX-USB-AW/FX3U-USB-BD is indicated at A).
- FX-USB-AW/FX3U-USB-BD (COM \*) is indicated at B).
- \* indicates the COM number used in FX3U-USB-BD.
- Install the driver again when  is displayed.

Select the programming software COM number as the COM number currently assigned on the screen above.

**Setting GX Developer:**

Double-click [ Online ] → [ Transfer setup ] → [ Serial ] of personal computer side I/F. Select the same COM number as the COM number of the personal computer when the personal computer side I/F serial setting Dialog Box appears.

Click [ OK ] of [ Connection Setup ] screen to end.





## 8. Uninstalling Driver

For the uninstallation procedure of the driver, refer to the following manual.

→ **FX-USB-AW/FX3U-USB-BD User's Manual**  
- **USB Driver Installation Edition**

## 9. Caution on use

<b>STARTUP AND MAINTENANCE PRECAUTIONS</b>	 <b>DANGER</b>
<ul style="list-style-type: none"> <li>• Before a program or setting on-line or off-line change is performed, please read all relevant manuals and confirm safety aspects.</li> <li>Incorrect operation may damage the product or cause an accident.</li> </ul>	

<b>STARTUP AND MAINTENANCE PRECAUTIONS</b>	 <b>CAUTION</b>
<ul style="list-style-type: none"> <li>• Do not disassemble or modify the unit. Doing so may cause failure, malfunction or fire.</li> <li>* For repair, contact your local Mitsubishi Electric distributor.</li> <li>• Do not drop the product or do not exert strong impact, doing so may cause damage.</li> </ul>	

<b>DISPOSAL PRECAUTIONS</b>	 <b>CAUTION</b>
<ul style="list-style-type: none"> <li>• Please contact a company certified in the disposal of electronic waste for environmentally safe recycling and disposal of the product.</li> </ul>	

<b>TRANSPORT AND STORAGE PRECAUTIONS</b>	 <b>CAUTION</b>
<ul style="list-style-type: none"> <li>• During transportation avoid any impact as the product is a precision instrument. Check the operation of the product after transportation.</li> </ul>	

- The expansion board cannot be connected to FX3UC Series PLC other than FX3UC-32MT-LT.
- Only one expansion board can be used per main unit. Additional expansion boards such as the FX3U-232-BD, FX3U-422-BD or FX3U-485-BD cannot be installed/used together with the FX3U-USB-BD.
- FX3U-USB-BD and a personal computer are connected and the PLC is turned on, and then an operations such as write, read, and monitor are tried for the first time using a programming tool, a communication error message may be displayed. In such a case, clear the message and try the operations again.
- If a communication error message is indicated while operating the programming tool (when executing "Write to PLC", "Read from PLC", or "Monitor"), disconnect the USB cable once (from either the personal computer or the FX3U-USB-BD) and connect it again. Then clear the error message and choose Write, Read, or Monitor again.
- The programming tool may not be operated properly due to a contact failure at connectors or wire breakage. Make sure to save the program before transferring or changing it.

## 10. Troubleshooting

- If communication cannot be established between the PLC and a personal computer using FX3U-USB-BD, confirm the following status by checking SD LED and RD LED in FX3U-USB-BD.

**The status of SD LED and RD LED**


The status of SD LED and RD LED.	Contents
Blinking	Communicating correctly
SD Extinguished	<ul style="list-style-type: none"> <li>• Confirm that the power is supplied to the personal computer.</li> <li>• Confirm the personal computer and the PLC are connected properly with the specified cable.</li> <li>• Confirm that the communication settings and connected PLC are correctly set in the software. Refer to the software manual.</li> </ul>
Blinking	Data receiving
RD Extinguished	<ul style="list-style-type: none"> <li>• Confirm that the power is supplied to PLC.</li> <li>• The PLC will not operate when a configuration that exceeds the DC 5V or DC 24V capacity is used. It will also be impossible to communicate normally.</li> <li>• Confirm that the specified cable is used to connect the personal computer and PLC.</li> <li>• Confirm that the communication settings and connected PLC are correctly set in the software. Refer to the software manual.</li> </ul>

- When driver installation is required after already establishing USB communication. → This product requires USB Driver Installation for each USB port to be connected. Connect the product to a driver-installed USB port, or install the driver to the current port.

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

### Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; opportunity loss or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

 <b>For safe use</b>
<ul style="list-style-type: none"> <li>• This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.</li> <li>• Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.</li> <li>• This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.</li> </ul>

**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
HIMEJI WORKS : 840, CHIYODA CHO, HIMEJI, JAPAN

MITSUBISHI PROGRAMMABLE CONTROLLERS FX3U-USB-BD USER'S MANUAL. Includes product details, manual number (JY997D13501), and date (May 2008).

Safety Precaution. DANGER: Indicates that incorrect handling may cause hazardous conditions. CAUTION: Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury.

Depending on the circumstances, procedures indicated by CAUTION may also cause severe injury. It is important to follow all precautions for personal safety.

Associated Manuals

Table listing associated manuals: FX3U Series User's Manual, FX3UC Series User's Manual, FX-USB-AW/FX3U-USB-BD User's Manual, and FX Series User's Manual - Data Communication Edition.

How to obtain manuals

For product manuals or documents, consult with the Mitsubishi Electric dealer from who you purchased your product.

Applicable standards

FX3U-USB-BD units made in June, 2005 or later comply with the EC Directive (EMC Directive). Further information can be found in the following manual. However, the FX3UC-32MT-LT does not comply with the EC Directive (EMC Directive).

1. Outline


The FX3U-USB-BD (hereinafter called USB-BD) is an expansion board equipped with an USB port (MINI B plug, female) for USB communication. By connecting the USB-BD and a personal computer with USB ports, program transfer to a PLC main unit and monitoring can be performed.

1.1 Incorporated Items

Verify that the following product and items are included in the package:

Table listing included items: USB communication expansion board FX3U-USB-BD (1), M3 tapping screws (2), USB driver software (CD-ROM) (1), USB cable (3m (118.1")) (1), and User's Manual (this manual) (1).

1.2 External Dimensions and Part Names

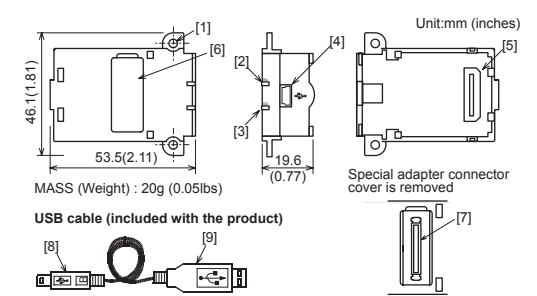

- List of part numbers and descriptions: [1] Mounting holes, [2] RD LED, [3] SD LED, [4] USB Connector, [5] Main unit connector, [6] Special adapter connector cover, [7] Special adapter connector, [8] USB Connector, [9] USB Connector.


2. Installation

Installation Precautions section containing DANGER and CAUTION warnings. DANGER: Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. CAUTION: Use the product within the generic environment specifications described in PLC main unit manual.

The following section describes the installation method for the FX3U/FX3UC-32MT-LT Series PLC (FX3U Series PLC is used for the following example). For more details on installation and removal, refer to the PLC main unit manual.

2.1 Installation Method

- 1) Power off the PLC. Disconnect all the cables connected to the PLC. Dismount the PLC from the DIN rail. 2) Using a flat head screwdriver as shown in the figure on the right, lift the dummy expansion board cover (fig. A) making sure not to damage the circuit board or electronic parts. 3) Remove the dummy expansion board cover (fig. A) perpendicularly away from the main unit. 4) Make sure the expansion board (fig. B) is in parallel with the main unit (fig. C) and attach it to the expansion board connector. 5) Fix the expansion board (fig. B) to the main unit using the provided M3 tapping screws (fig. D). Tighten to a torque of 0.3 to 0.6 N·m.

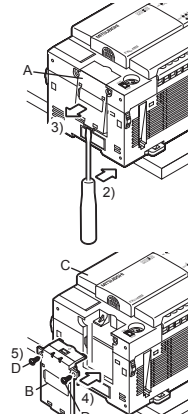

3. Specifications

3.1 Applicable PLC

Table showing applicable PLC models and their versions: FX3U Series PLC (Ver.2.20 or later), FX3UC-32MT-LT (Ver.1.00 or later).

- The expansion board cannot be connected to FX3UC Series PLCs other than the FX3UC-32MT-LT. Only one expansion board can be used per main unit. For details on the system configuration, refer to the following manual.

3.2 General Specifications

The general specifications are equivalent to the PLC main unit. For general specifications, refer to the following manuals. However, please do not perform any dielectric withstand voltage tests or insulation resistance tests to this product.

3.3 Power Supply Specification

Table showing power supply specifications: Current consumption (15mA / DC 5V, 30mA / DC 5V), Transmission standard (USB2.0), Isolation (Photocoupler isolation), Maximum transmission distance (5m), Baud Rate (9600/19200/38400/57600/115200 bps), Port (USB (MINI B plug female)).

3.4 Communication Specifications


Table showing communication specifications: Item and Specification details for Transmission standard, Isolation, Maximum transmission distance, Baud Rate, and Port.

3.5 System Requirements

Table showing system requirements for OS and Software. OS includes Microsoft Windows 98, Windows 98SE, Windows Millennium Edition, Windows XP, Windows 2000, and Windows Vista. Software includes SWD5C-GPPW-E (GX Developer) and FX-PCSWIN-E.

- 1) The USB driver for Windows 98, Windows 98SE, Windows Millennium Edition, Windows 2000 and Windows XP included in the USB driver software Ver. 1.10 is used. 2) Use the USB driver for Windows Vista from the USB driver software Ver.1.10. 3) GX Developer Ver. 8.23Z or later is applicable to the FX3U Series PLC.

4. System Configuration

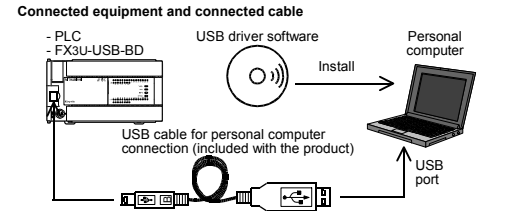

For details of the programming communication, refer to the following manual. Refer to the FX Series User's Manual - Data Communication Edition.

5. Connecting Procedure

- 1) Power off the PLC. 2) Connect the USB (MINI B plug male) connector of the USB cable to the FX3U-USB-BD. 3) Connect the USB (A plug male) connector of the USB cable to the personal computer. 4) Turn ON the power supply of the PLC. 5) Turn ON the power supply of the personal computer.


6. Driver Installation

When the USB cable is connected to the personal computer, the Found New Hardware Wizard screen is displayed. Install USB driver software from the included CD-ROM.

CAUTION: The driver is not installed properly when canceled during the installation. To complete the installation, uninstall the driver, and install again. For the uninstallation procedure of the driver, refer to the following manual.

Note: This product requires USB Driver Installation for each USB port to be connected. To use multiple USB ports, connect this product to each port, and install the driver individually.

USB driver software folder structure

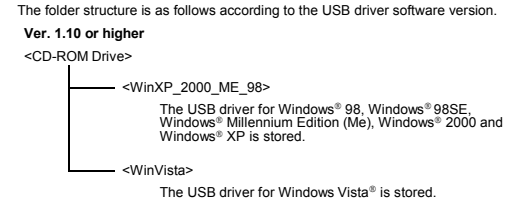

Versions previous to Ver. 1.10: The USB driver for software previous to Ver. 1.10 does not have a folder structure. The USB driver is stored in the main directory of the CD-ROM drive.

6.1 Windows 98, Windows 98SE, Windows Millennium Edition, Windows 2000, and Windows XP

Please install the driver by the following procedure. The installation procedure is explained when connecting to a personal computer with Windows XP.

- 1) When the USB cable is connected to the personal computer, the following screen is displayed.



Insert the included CD-ROM into the personal computer's CD-ROM drive. Click [ Next > ]. The installation of the USB driver software will begin. If using Windows 98 and Windows 98SE, specify the USB driver software version as follows. Ver. 1.10 or higher: Please select the 'Include this location in the search' and install by specifying the 'WinXP\_2000\_ME\_98' directory from the CD-ROM drive.


4) The following screen is displayed.



Click [ Next > ]. The installation of the USB Serial Port software will begin. If using Windows 2000, a screen to select the location of the installation files is displayed. Please select the CD-ROM drive.

5) The screen of 2) is displayed. (Only in Windows XP) Click [ Continue Anyway ].

6) The following screen is displayed.

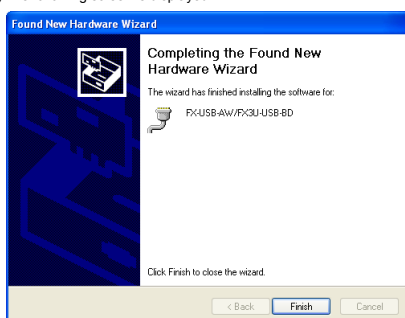

Click [ Finish ]. The installation of the USB Serial Port software will finish. The CD-ROM (USB driver software) can be removed from the personal computer at this time.

6.2 Windows Vista

For the installation procedure of the driver, refer to the following manual. Refer to the FX-USB-AW/FX3U-USB-BD User's Manual - USB Driver Installation Edition.

7. Installation Confirmation of Driver


Procedure for confirming the installation of the driver is described below. Windows XP example follows.

- In Windows XP, click [ Start ] -> [ Control Panel ] -> [ Performance and Maintenance ] -> [ System ] -> [ Hardware ] -> [ Device Manager ] and the window below will be displayed. Please confirm the COM number to which the driver is allocated (COM and LPT). If using Windows 98, Windows 98SE, Windows Millennium Edition or Windows 2000, the PLC that is equivalent to the one below is displayed by clicking [ My Computer ] -> [ Control Panel ] -> [ System ] -> [ Device Manager ] in the menu of the personal computer. If using Windows Vista, a screen that is equivalent to the one below is displayed by clicking [ Start ] -> [ Control Panel ] -> [ Hardware and Sound ] -> [ Device Manager ] in the menu of the personal computer. When user account control is enabled: Only when user account control is enabled will the 'user account control' screen be displayed. Click [ Continue ], when displayed.

3) The following screen is displayed.



Click [ Finish ]. If using Windows 2000 or Windows XP, proceed to step 4). If using Windows 98, Windows 98SE or Windows Millennium Edition is used, installation of the USB Serial Port software begins, and ends automatically. The CD-ROM can be removed from the personal computer at this time. The installation of the USB driver software is finished.

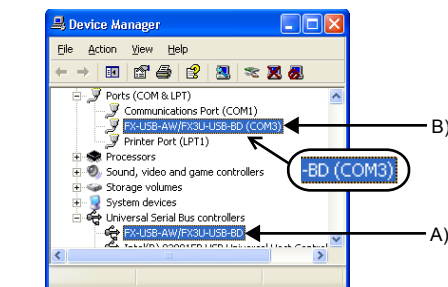

- Check following: FX-USB-AW/FX3U-USB-BD is indicated at A). FX-USB-AW/FX3U-USB-BD (COM \*) is indicated at B). \* indicates the COM number used in FX3U-USB-BD. - Install the driver again when ! is displayed.

Select the programming software COM number as the COM number currently assigned on the screen above. Setting GX Developer: Double-click [ Online ] -> [ Transfer setup ] -> [ Serial ] of personal computer side I/F. Select the same COM number as the COM number of the personal computer when the personal computer side I/F serial setting Dialog Box appears. Click [ OK ] of [ Connection Setup ] screen to end.

8. Uninstalling Driver

For the uninstallation procedure of the driver, refer to the following manual. Refer to the FX-USB-AW/FX3U-USB-BD User's Manual - USB Driver Installation Edition.

9. Caution on use

DANGER: Before a program or setting on-line or off-line change is performed, please read all relevant manuals and confirm safety aspects. Incorrect operation may damage the product or cause an accident.

CAUTION: Do not disassemble or modify the unit. Doing so may cause failure, malfunction or fire. For repair, contact your local Mitsubishi Electric distributor. Do not drop the product or do not exert strong impact, doing so may cause damage.

CAUTION: Please contact a company certified in the disposal of electronic waste for environmentally safe recycling and disposal of the product.

CAUTION: During transportation avoid any impact as the product is a precision instrument. Check the operation of the product after transportation.

- The expansion board cannot be connected to FX3UC Series PLC other than FX3UC-32MT-LT. Only one expansion board can be used per main unit. Additional expansion boards such as the FX3U-232-BD, FX3U-422-BD or FX3U-485-BD cannot be installed/used together with the FX3U-USB-BD. FX3U-USB-BD and a personal computer are connected and the PLC is turned on, and then operations such as write, read, and monitor are tried for the first time using a programming tool, a communication error message may be displayed. In such a case, clear the message and try the operations again. If a communication error message is indicated while operating the programming tool (when executing 'Write to PLC', 'Read from PLC', or 'Monitor'), disconnect the USB cable once (from either the personal computer or the FX3U-USB-BD) and connect it again. Then clear the error message and choose Write, Read, or Monitor again. The programming tool may not be operated properly due to a contact failure at connectors or wire breakage. Make sure to save the program before transferring or changing it.

10. Troubleshooting

Troubleshooting table for SD and RD LEDs. It lists the status of the LED (Blinking, Extinguished) and the corresponding contents, such as confirming power supply and communication settings.

When driver installation is required after already establishing USB communication. This product requires USB Driver Installation for each USB port to be connected. Connect the product to a driver-installed USB port, or install the driver to the current port.

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty: Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi, opportunity loss or lost profits caused by faults in the Mitsubishi products, damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use: This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life. Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.